 
Acer LCD Monitor Quick Start Guide (QSG)

Important safety instructions

Please read the following instructions carefully.

- To clean the LCD monitor screen:
 - Turn off the LCD monitor and unplug the power cord.
 - Spray a non-solvent cleaning solution onto a rag and clean the screen gently.
- Do not place the LCD monitor near a window. Exposing the monitor to rain, moisture or sunlight can severely damage it.
- Do not apply pressure to the LCD screen. Excessive pressure may cause permanent damage to the display.
- 4. Do not remove the cover or attempt to service this unit yourself. An authorized technician should perform servicing of any nature.
- Store the LCD monitor in a room with a temperature of -20° to 60° C (-4° to 140° F). Storing the LCD monitor
 outside this range may result in permanent damage.
- Immediately unplug your monitor and call an authorized technician if any of the following circumstances
 occur:
 - Monitor-to-PC signal cable is frayed or damaged.
 - · Liquid spills onto the LCD monitor or the monitor is exposed to rain.
 - The LCD monitor or case is damaged.

Package contents




Attaching the monitor to the base

- Remove the monitor from the packaging.
- 2. Attach the footstand to the base. (for selected models)
- 3. Turn clockwise to lock. Ensure that the base in locked onto the stand. (for selected models)
- Secure the base to the stand by turning the screw using the intergrated tab or a suitable coin. (for selected models)

Connecting your monitor to a computer

- Turn off your computer and unplug your computer's power
- Connect the signal cable to the VGA and/or DVI-D (optional) and /or DP (optional) input socket of the monitor, and the VGA and/or DVI-D (optional) and/or DP (optional) output socket of the graphics card on the computer. Then tighten the thumbscrews on the signal cable connector.
- Optional: Connect the audio input socket (AUDIO IN) of the LCD monitor and the line-out port on the computer with the audio cable.
- Insert the monitor power cable into the power port at the back of the monitor.
- Plug the power cords of your computer and your monitor into a nearby electrical outlet.



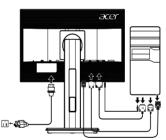

External controls

1&2	Ф	Power button	Turns the monitor on/off. Blue indicates power on. Amber indicates standby/ power saving mode.		
3&4		Minus / Plus	If the OSD is active, press the Minus or Plus buttons to toggle between the OSD options. If the OSD is inactive, press the Minus or Plus buttons to adjust the volume. (Optional)		
5	Menu	OSD functions	Press to view the OSD. Press again to enter a selection in the OSD.		
6	Auto	Auto	If the OSD is active, press Auto to exit the OSD. Once the OSD is inactive, press Auto and the monitor will automatically optimize the display position, focus, and clock of your display.		
7	e	Empowering Key	When the OSD menu is active, this button will act as the exit key (exit OSD menu). When the OSD menu is inactive, press this button to select scenario mode.		

Regulations and safety notices

FCC notices

This device has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This device generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this device does cause harmful interference to radio or television reception, which can be determined by turning the device off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the device and receiver.
- Connect the device into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/television technician for help.

CE declaration of conformity

Hereby, Acer Inc., declares that this LCD monitor is in compliance with the essential requirements and other relevant provisions of EMC Directive 2004/108/EC, Low Voltage Directive 2006/95/EC, and RoHS Directive 2011/65/EU and Directive 2009/125/EC with regard to establishing a framework for the setting of ecodesign requirements for energy-related product.

Notice: Shielded cables

All connections to other computing devices must be made using shielded cables to maintain compliance with EMC regulations.

Notice: Peripheral devices

Only peripherals (input/output devices, terminals, printers, etc.) certified to comply with the Class B limits may be attached to this equipment. Operation with non-certified peripherals is likely to result in interference to radio and TV reception.

Caution

Changes or modifications not expressly approved by the manufacturer could void the user authority, which is granted by the Federal Communications Commission, to operate this product.

Operation conditions

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Notice: Canadian users CAN ICES-3(B)/NMB-3(B)

Disposal of waste equipment by user in private household in the European Union



This symbol on the product or on its packaging indicates that this product must not be disposed of with your other household waste. Instead, it is your responsibility to dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. The separate collection and recycling of your waste equipment at the time of disposal will help to conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment. For more information ab ut where you can drop off your waste equipment for recycling, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

Warning Message for Magnet



Certain electronic devices such as hard drives, USB devices, tablet computers, laptops, cellphones, watches, earphones, speakers, credit cards, magnetic ID cards, etc. are sensitive to magnetic fields and may be damaged permanently or temporarily disabled if exposed to a magnetic field that is too strong. Electronic devices should not be put close to or directly on the magnetic area of monitor base.

SPECIFICATION

	Driving system	TFT Color LCD			
	Size	21.5"W(55cm)			
	Pixel pitch	0.248mm(H) x 0.248mm(V)			
	Brightness	250cd/m²(Typical)			
LCD Panel	Contrast	100,000,000:1Max. (ACM)			
	Viewable angle	170° (H) 160° (V) (CR=10)			
	Response time	5ms (on/off)			
	Panel Type	TN			
	Video	R, G, B Analog Interface			
	H-Frequency	30KHz – 80KHz			
	V-Frequency	55-75Hz			
Display Colors	Tv-Frequency	16.7M Colors			
Dot Clock		180MHz			
Max. Resolution		1920 x 1080@60Hz			
		VESA DDCCI/DDC2B			
Plug & Play	Toning I				
Power consumption	ON Mode	16.5W(typ.)			
@200cd/m ²	Sleep Mode	0.45W(typ.)			
	Off Mode	0.35W(typ.)			
Input Connector		D-Sub DVI-D 24pin (Only Dual-Input Model) DisplayPort 19pin (Only DP Model)			
Input Video Signal		Analog:0.7Vp-p(standard), 75 OHM, Positive Digital signal (Only Dual-Input Model) DP signal (Only D Model)			
Speakers		1W x 2(Only Audio-Input Model)			
Maximum Screen Size		Horizontal:476.6mm Vertical:268.1mm			
Power Source		100-240V~, 50/60Hz			
Environmental		Operating Temp: 5° to 35°C			
Considerations		Storage Temp: -20° to 60°C			
		Operating Humidity: 10% to 85%			
Dimensions		508.0 (W) x 369.8~519.8(H) x 221.2(D)mm			
Weight (N. W.)		5.81kg Unit (net)			
Mechanism spec		Tilt: -5° to +35° (Only at the highest point can 35 degrees of recline be offered for the angle of elevation.) Swivel: +60° to -60° Height adjustment: 0mm to 150mm Pivot: 0° to 90° Detachable foot stand: Detachable foot stand with screw relea:			
	Switch / Buttons	Power Button Auto/ Exit Left(<) /Right(>) E(Empowering) Key MENU/ENTER			
External Controls:	Functions	Contrast RGB Color temperature Brightness Language ACM On\Off OSD position. timeout Focus Auto configuration (only Analog input mode Clock Input signal Selection (only Dual input mode H. Position DDCCI On\Off V. Position Display information (Warm) Color Reset (Cool) Color Exit			
* All specifications are subject to change without notice.					
Regulatory Compliance		C FC (1) (C) C			
R33037 N214 NEST UATRA02					

Find manuals and other documents for your Acer product on the official Acer support website.