

User Guide for Conference Speaker – Specs on last page

Pairing Name: Air Room

<p>Power ON</p>	<p>Press power button for 2S</p>	<p>Press and hold the power button for 2s to power on, there will be a prompt voice "Power on. All LED indicators will be on.</p>	<p>When you Press and hold the power button for 2s to power on, the battery power LED indicator will be on immediately; other indicators will turn on: the volume+ and volume- indicator will be white and stay on until the unit is powered off. Green &amp; red LED light are for the call button. Green &amp; red LED light for Mic. Button( green indicator of call button is on for 1s and then turns off) The red and green light of Bluetooth button flash alternately to automatically pair.</p>
<p>Power OFF</p>	<p>Press power button for 2S</p>	<p>Press and hold the power button for 2s to power off, there will be a prompt voice "Power off". All LED indicators will turn off.</p>	<p>After powering off, all the LED indicators will turn off.</p>
<p>BT pairing or reconnecting</p>	<p>Automatically enter into pairing mode when Power is ON or Press and hold the BT button for around 3S</p>	<p>1. When the conference speaker powers on, the Bluetooth indicator will be green for 1s, and the unit will enter pairing mode. The voice prompt will say "Ready to pair". In Bluetooth pairing mode for your device (mobile phone or computer), find the pairing name "Air Room" to pair the device. After successfully pairing, the green indicator on the Bluetooth button will be on. If it is not paired after 2 minutes, it will enter standby mode. Standby time is 5 minutes. After 5 minutes it will power off automatically.  2. When the device is in the standby mode, the Bluetooth button indicator will be off. To re-enter pairing mode, press the Bluetooth button firmly for 3s; the red and green will flash alternately, and voice prompt will be "ready to</p>	<p>In pairing mode, the Bluetooth indicator flashes alternately red and blue. After pairing successfully the Bluetooth button light will turn Green.</p>

		<p>pair”. The speakerphone will enter pairing mode. Find the pairing name ”Air room” on your mobile phone or computer to connect. After pairing successfully, the green indicator of the Bluetooth button will be on; the voice prompt will say “connected.</p> <p>3. When disconnected manually on the phone, the device will enter pairing mode with the voice prompt “Ready to pair”. If after 2 minutes the device is not paired, the device will enter standby mode for 5 minutes. If not paired during the 5 minutes, it will automatically turn OFF.</p> <p>4. If the conference speaker is too far from the device it is paired with and disconnects, it will try to automatically connect for 1 min. If it can’t connect it will go into standby mode. 5 minutes later, the device will automatically turn OFF. During the 5 minutes, the device can be reconnected by phone manually.</p>	
Receive call	Click call button	When a call comes in, the green indicator on the call button is on. Click the button to answer the call; the green indicator of the call button will still be on. The array mics will turn on automatically, and call noise reduction and echo cancellation will be on.	When a call comes in: The green indicator on the call button will be on. After answering the call: the green call button indicator stays on.
Reject call	Press call button for 2s	When a call comes in, the green indicator of call button will be on. Press the call button for 2s to reject the call. The green indicator on the call button turns off.	Reject incoming call: the call button light turns off.
Hang up a call	Click call button	After answering the call, the green indicator on the call button will be on. When you click the call button to hang up the call, the indicator on the call button turns off.	To end a call: Click call button; the green light on the button turns off.
Redialing	Double click the call button	In Bluetooth connection mode, double click the call button to call the last phone number. The voice prompt says “Redialing”, and the indicator of the call button will turn green	Call indicator turns green.
Voice assistant	Press call button for 2s	In Bluetooth mode, press call button for 2S to activate phone voice assistant and open Mic. to capture voice. Mic indicator will be green. Press the call button again for 2S to turn off the phone voice assistant.	Call indicator turns green.

Mute	Click mic button.	Mute function only works when there is a call. After receiving the call, the light on mic button will be green. Press the green mic button to mute the Mic . The mic button light will turn red.	In mute mode, the Mic indicator light will be red.
Un-mute	Click mic button	In mute mode, the red mic indicator light is on. Click the mic button to turn off the mute. The mic indicator light will turn green.	After unmute, the Mic indicator light will turn green.
Volume+ & -	Click volume+/- button	Click volume+ or volume- to adjust the volume of a call or music. Each click will be accompanied with an audible click.	No effect on indicator lights.
Pause and Play music	Click power button	Click the power button to pause or play music.	No effect on indicator lights.
Reset and Clear memory	Power on the conference speaker and without Bluetooth connection, press the call and volume+ button at the same time firmly for 5s	Under power ON and Bluetooth disconnected status, press and hold Call button and Volume + button for 5S to reset and clear memory for Bluetooth. The voice prompt will be “Reset completed”, and then “Ready to Pair”. The conference speaker will automatically enter into pairing mode.	After reset, the device will enter pairing mode.
Battery Low alarm		When battery power is less than 3.4V, the power light will flash red, and there will be a low power alarm once every 3 minutes. It will turn off when the battery voltage is less than 3.2V.	
Battery Power and charge	Insert Type-c charging cable to charge	When the battery power is between 100%-70%, the white light will be on. When the battery power is 70%-25%, the white light will be on, and will flash once every 30s. With battery power less than 25%, the red light will be on. While charging, the white light will flash. After full charge, the white light will be solid on.	

Specs for Conference Speaker

BT Platform	ATS 2835
BT Version	5.0
Profile	HSP1.2, HFP1.7, A2DP1.3, AVRCP1.6
Decode	SBC, AAC
RF	Class II
Transmission Range (Hz)	2402-2480mHz
BT Range	≥10M Outdoor without block
Antenna	FPC
Compatibility	IOS/Android/Windows
Pairing name	Air Room

Functional Specs

Battery capacity	2600mAh
Charging Time	2.5-3h(5V/2A )
Working Time	Talking time: 13h ( music play: 22h )
Key	6 buttons (power on/power off, Bluetooth, call, volume + , volume-, MIC)
LED/indicator	volume + , volume-: White LED, Answer call/hang up: Green LED, Bluetooth: red & green LED MIC: red & green LED Power: red & white LED
Volume Levels	16 levels and default on level 9 on the first connection
Array Mic	Y 6pcs 360°
ENC	Y
AEC	Y
Voice boot	Y
Power of Speaker	40mm 3W
Frequency Response:	20Hz-20,000Hz
Meeting members	5-10
Range	Radius 13' to 16' (4M-5M)
Charge Port	Type-C
Connection Mode	Type-c /BT