

Simple User Guide




BN68-24294G-00

1. List of Parts

- Simple User Guide
 - *Warranty Card / Regulatory Guide
 - *Remote Control & Batteries
 - *Power Cord
 - *Data Cable
 - *Antenna adapter
- *: Some of the items specified above may not be included in the package, depending on the model or geographical area.
- Contact the vendor where you purchased the product if any components are missing.

 2. Installing batteries into the Remote Control

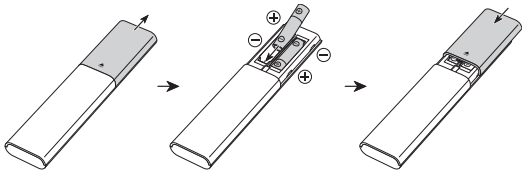


- The images, buttons, and functions of the remote control may differ with the model or geographical area.
- If you use the remote control that comes with your TV to control another TV, some functions may not operate normally.

3. Wall Mount Kit Specifications (VESA)

Install your wall mount on a solid wall, perpendicular to the floor. When attaching to other building materials, please contact your nearest dealer. If installing on a ceiling or slanted wall, TV may fall and result in severe personal injury.

- The wall mount kit is not supplied, but sold separately.
- Standard dimensions for wall mount kits are shown in the table below.
- Samsung wall mount kits contain a detailed installation manual. All parts necessary for assembly are provided.

 
- ⚠ Do not install your wall mount kit while your TV is turned on. This may result in personal injury from electric shock.**
- Do not use screws that are longer than the standard dimension or do not comply with the VESA standard screw specifications. Screws that are too long may cause damage to the inside of the TV set.
 - For wall mounts that do not comply with the VESA standard screw specifications, the length of the screws may differ depending on the wall mount specifications.
 - Do not fasten the screws too firmly. This may damage the product or cause the product to fall, leading to personal injury. Samsung is not liable for these kinds of accidents.
 - Samsung is not liable for product damage or personal injury when a non-VESA or non-specified wall mount is used or when the consumer fails to follow the product installation instructions.
 - Do not mount the TV at more than a 15 degree tilt.
 - Always have two people mount the TV onto a wall.
 - For 82 inch or larger models, have four people mount the TV onto a wall.

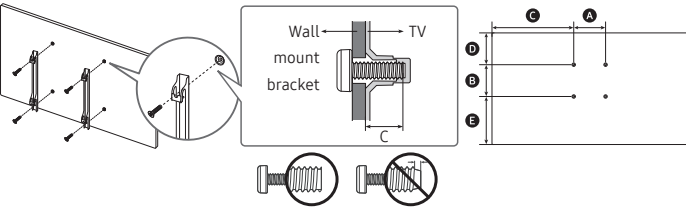

- The Product shape may differ depending on the model.

TV size in inches	VESA screw hole specs (A * B) in millimetres	C (mm)	D (mm)	E (mm)	C (mm)	Standard Screw	Quantity
32	200 x 200	266.4	122.7	116	21-23	M8	4

 4. The Connection Panel

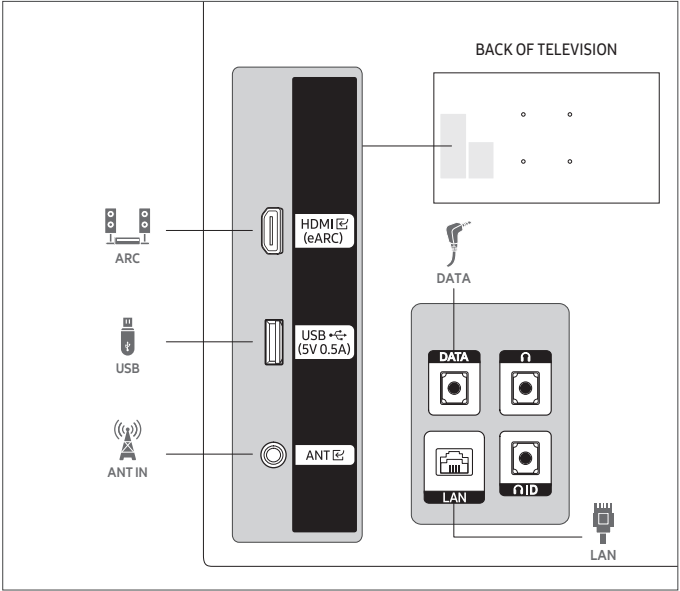

- The colour and shape of the product may differ depending on the model or geographical area.

5. Specifications

Model Name	HG32F800F*
Display Resolution	1920 x 1080
Screen Size	
Measured Diagonally	80 cm
Sound (Output)	10 W
Dimensions (W x H x D)	
Body	73.29 x 43.87 x 7.32 cm
With stand	73.29 x 45.15 x 11.73 cm
Weight	
Without Stand	4.0 kg
With stand	4.1 kg

Environmental Considerations

Operating Temperature	50 °F to 104 °F (10 °C to 40 °C)
Storage Temperature	-4 °F to 113 °F (-20 °C to 45 °C)
Operating Humidity	10 % to 80 %, non-condensing
Storage Humidity	5 % to 95 %, non-condensing

- This device is a Class B digital apparatus.
- Design and specifications are subject to change without prior notice.
- For information about the power supply, and more information about power consumption, refer to the information on the label attached to the product.
 - On most models, the label is attached to the back of the TV. (On some models, the label is inside the cover terminal.)
- To connect a LAN cable, use a CAT 7 (*STP type) cable for the connection. (100/10 Mbps)
 - * Shielded Twisted Pair
- Your TV and its accessories may look different than the product images presented in this manual, depending on the model.
- All drawings are not necessarily to scale. Some dimensions are subject to change without prior notice. Refer to the dimensions before installing your TV. Not responsible for typographical or printed errors.
- Download the User guide from the following Samsung Website for further details. <http://www.samsung.com/business>



THIS PRODUCT SHOULD BE MOUNTED OR ANCHORED TO A WALL OR OTHER SUITABLE SURFACE TO AVOID SERIOUS INJURY.

To help avoid any serious or fatal injury, we strongly recommend that this product be permanently mounted or anchored to the wall or other suitable surface. Anchoring devices are not included since different surface materials require different attachments. Please seek professional advice if you are in doubt about mounting this product or what anchoring device to use.

Serious injury or death can be caused by toppling furniture and TVs.

 
 
Help prevent tip-over:

- Mount or anchor this product to a wall or other suitable surface.
- Check anchors regularly.
- Avoid placing this TV on top of furniture unless both the furniture and the TV are anchored.
- Use drawer locks to prevent children climbing.

6. Installing the LED TV Stand

Assembling the Stand and Components

When installing the stand, use the provided components and parts.




Stand


Screws

Power Cord

 
1

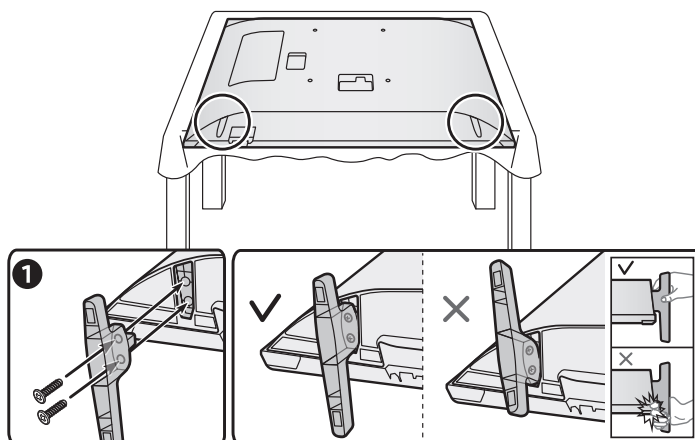


2

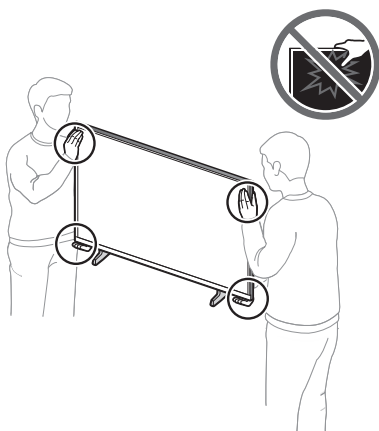 

3

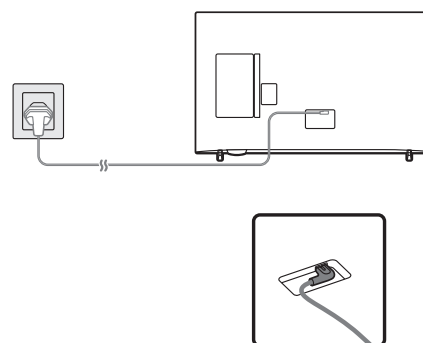 

4

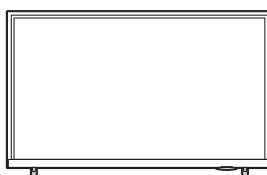 

NOTE

- The colour and shape of parts may differ from what is shown. Specifications are subject to change without notice to improve quality.
- Make sure to distinguish between the front and back of each component when assembling them.
- Make sure that at least two persons lift and move the TV.