



Smart-UPS™ Industrial UPS Filter Assembly Replacement Guide

Package Contents

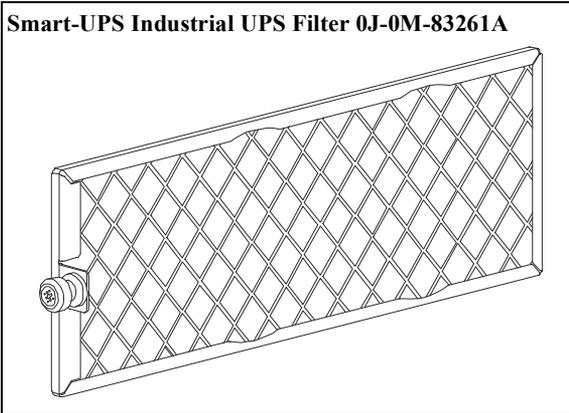


Filter Removal/Replacement

1. Loosen the thumbscrew.
2. Use the thumbscrew on the filter to pull the used filter out of the chassis.

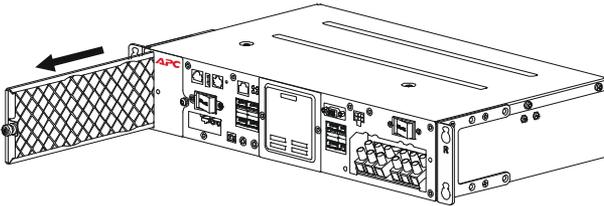

3. Slide the replacement filter into the chassis.
Note: While inserting air filter into the UPS, keep the screw knob towards the display.
4. Tighten the thumbscrew.

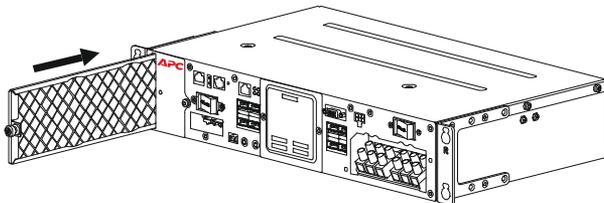

User Documentation Link

Refer the link or scan the QR code to access the user documentation:
<https://d.go2se.com/indups2k>

