

ThinkCentre M80s/M80t




Setup Guide

Lenovo

For Barcode Position Only


Printed in China
PN: XXXXXXXXXX

Initial Setup

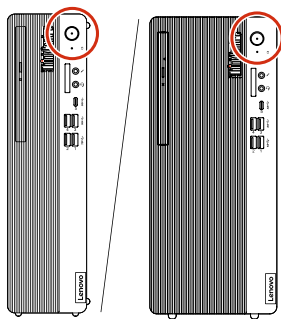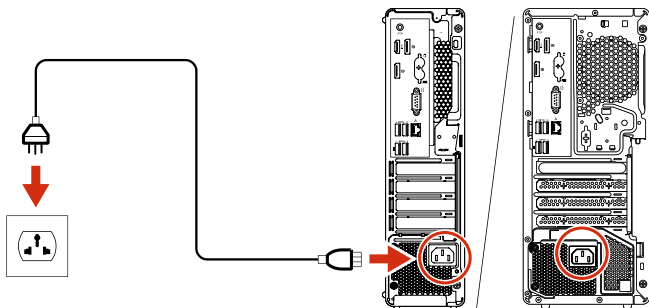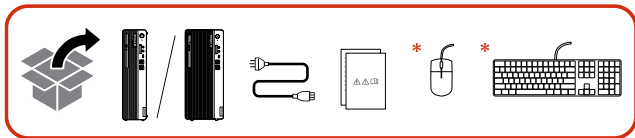


Overview

M80s

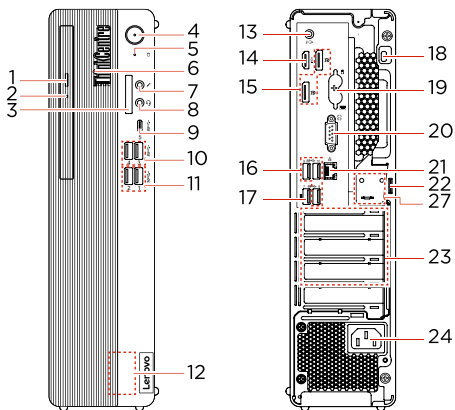

M80t

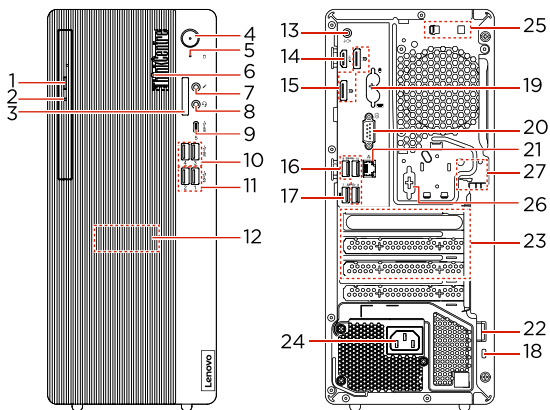

- * 1. Optical drive eject button
- * 2. Optical drive activity indicator
- * 3. SD-card slot
4. Power button
5. Storage drive activity indicator
6. ThinkCentre® LED
7. Microphone connector
8. Headset connector
9. USB-C™ (3.2 Gen 1) connector
10. USB 3.2 connectors Gen 1
11. USB 3.2 connectors Gen 2
12. Internal speaker
13. Audio line-out connector
14. HDMI™ out connector
15. DisplayPort out connectors
16. USB 3.2 connectors Gen 1
17. USB 3.2 connector Gen 1
18. Security-lock slot
- * 19. PS/2 keyboard and mouse connectors
20. Serial connector
21. Ethernet connector
22. Padlock loop
23. PCI-Express card area
24. Power cord connector
- * 25. Smart cable clip slots
- * 26. Serial connector
- * 27. E-lock slots

 Read the statement on USB transfer rate in the *User Guide*. Refer to the *Safety and Warranty Guide* for accessing the *User Guide*.

Customer Replaceable Units (CRUs)

- Power cord
- * • Keyboard
- * • Mouse
- Computer cover
- Front bezel
- Memory module
- * • Optical drive
- * • Optical drive bracket
- * • Primary storage drive
- * • Primary storage drive bracket
- * • Secondary storage drive
- * • Secondary storage drive bracket
- * • Storage converter
- * • Heat sink (for the M.2 solid-state drive)
- * • M.2 solid-state drive
- * • M.2 solid-state drive bracket
 - Power supply assembly
 - Coin-cell battery
- * • PCI-Express card
- * • PCI-Express connector cable
- * • E-lock
- * • Vertical stand
- * • Smart cable clip

Refer to the *User Guide* for CRU definition.

Additional information

European Union – compliance with the Radio Equipment Directive

Hereby, Lenovo (Singapore) Pte. Ltd., declares that the radio equipment types ThinkCentre M80s and ThinkCentre M80t are in compliance with Directive 2014/53/EU.

The full text of the system EU declaration of conformity is available at the following Internet address:

<https://www.lenovo.com/us/en/compliance/eu-doc>

This radio equipment operates with the following frequency bands and maximum radio-frequency power:

Technology	Frequency band [MHz]	Maximum transmit power
WLAN 802.11b/g/n/ax	2400 - 2483.5	< 20 dBm
WLAN 802.11a/n/ac/ax	5150 - 5725	< 23 dBm
WLAN 802.11a/n/ac/ax	5725 - 5875	< 13.98 dBm
Bluetooth BR/EDR/LE	2400 - 2483.5	< 20 dBm

Usage of all the radio devices is limited to indoor in the band 5150 MHz to 5350 MHz (channels 36, 40, 44, 48, 52, 56, 60, 64).

M80s



M80t



First Edition (April 2020)

© Copyright Lenovo 2020.

LIMITED AND RESTRICTED RIGHTS NOTICE: If data or software is delivered pursuant to a General Services Administration "GSA" contract, use, reproduction, or disclosure is subject to restrictions set forth in Contract No. GS-35F-05925.

Reduce | Reuse | Recycle

