 


Mini

 
IPX7 Waterproof
Wireless Bluetooth Speaker

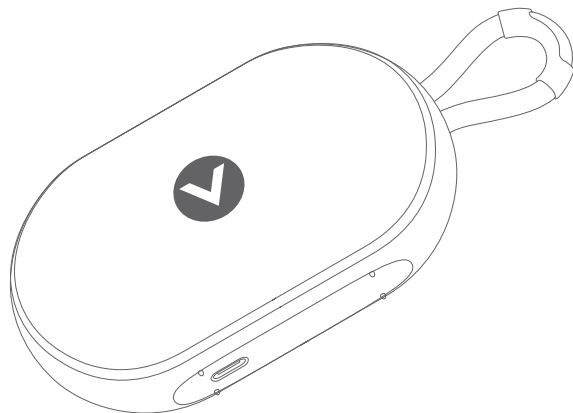


Quick Start Guide

CONTENTS


- A:** VisionTek Audio Mini Wireless Speaker
B: USB-C charging cable
C: Quick Start Guide

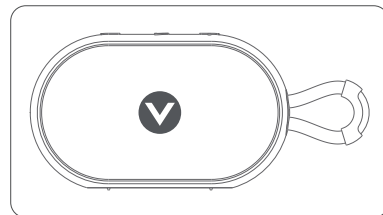

A

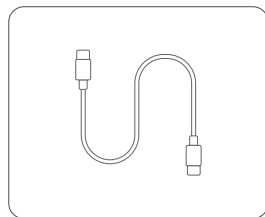 


B

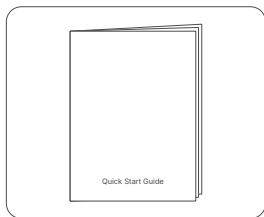 

C

 BASIC FUNCTION

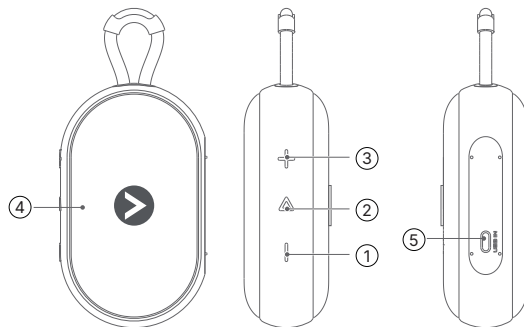

- ① — Short press 1x: Volume Down
Long press 2s: Last song
- ② ▷ Long press 2s: Power on / Power off
Short press: Pause / Play/ Pick up / Hang up the call
Short press 2x: Protect call privacy/ Reject Call / TWS connect / TWS disconnect
Short press 3x: Bluetooth disconnect
- ③ + Short press 1x: Volume Up
Long press 2s: Next song
- ④ 💡 Indicator Light
- ⑤ Type-C charging port

 
OPERATION GUIDE

1. Power on/off

Long press "▷" for 2 seconds for power on, long press again for 2 seconds to power off.

2. Bluetooth Mode

After power on, the speaker is in Bluetooth mode and automatically enters Bluetooth pairing status. The indicator light flashes blue. Turn on the Bluetooth device and searching for **VTK Audio Mini** and connect. You will hear a voice prompt once it is connected, and the blue indicator light will stay on. Now you can start to play your music. Short press "▷" button 3 times to disconnect the Bluetooth.

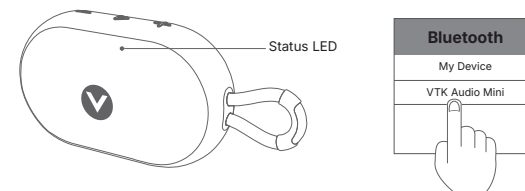

3. Operation on playing status

While in Bluetooth mode, short press the "▷" button to pause your music, short press again to resume playback.

Volume Control:

Short press the "+" button to increase the volume. Each press increases the volume by one level. A "beep~beep" tone will indicate that the volume has been set to maximum. Short press the "—" button to turn the volume down, each press decreases the volume by one level.

 
Last /Next Song Control:

Long press "+" to the next song, Long press "—" to the last song.

OPERATION GUIDE

4. TWS connection


The speaker supports syncing 2 speakers for True Wireless Stereo. Power on the speaker, don't connected to Bluetooth, double-click "▷" button of both two "Mini" speakers to turn on TWS pairing. There will be a voice prompt for successful pairing. The master speakers LED will flash blue, sub speakers LED will be solid blue. Pair the master speaker to your Bluetooth device. You will hear a prompt when connected.

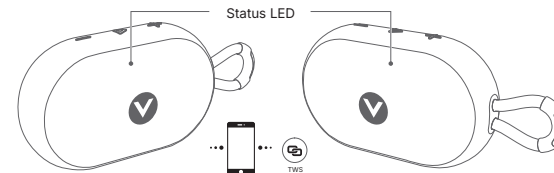

5. Call function

When there is an incoming call, the speaker will enter into hands-free mode automatically when connected. Short press "▷" button to answer the call and short press it again to hang up. Short press "▷" button for 2 times to reject the call.

 Short press "▷" button for 2 times to transfer the call from the speaker to your phone.

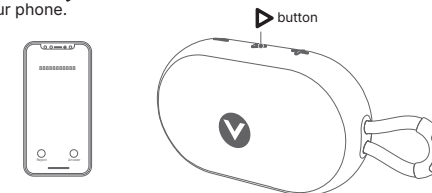

OPERATION GUIDE

6. Power Saving

Auto-Off: If no device is connected via Bluetooth within 10 minutes, the speaker will automatically turn off to preserve battery life.

7. Charging/Power Supply

Adapter Requirements:

- For your safety, only use power adapters with official safety certifications. We recommend using a 5V/1A (or higher) adapter.

Low Battery Alert:

Please charge the speaker when you hear the "low battery" alert.

 
LED Status:

Flashing Red: Low Battery

Solid Red: Charging in progress

Light Off: Fully charged

Blue: Bluetooth Mode

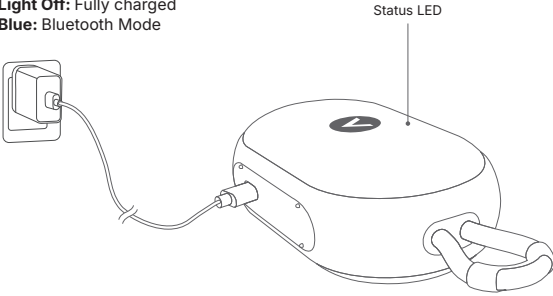

SPECIFICATIONS

Product Name	VisionTek Audio Mini
Bluetooth Version	5.3
Battery Capacity	3.7V / 1500mAh
Working Time	10-12 hrs (50% volume)
Charging Time	3 hrs
Charging Voltage	5V / 0.8A
Waterproof Rating	IPX7
Wireless Range	10m / 33ft
Speaker	6W
Product size	73×122×45mm
Product Weight	206.5g
FCC ID	2AP7W-901797

FC CE RoHS

MADE IN CHINA

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must withstand any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio / TV technician for help.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

FCC RF Exposure Statement

This equipment complies with FCC Radiation exposure limits set forth for an uncontrolled environment. The device is installed and operated without restriction.

FREQUENTLY ASKED QUESTIONS

Q1: What kind of charger should we use for the speaker?

A: Any standard USB-C charger will work. For the best and fastest charging experience, we recommend using a 5V/1A (or higher) power adapter.

Q2: Why is the audio cutting out or crackling?

A: The speaker has a Bluetooth range of up to 10 meters (33 feet) in an open area. If you move beyond this distance or if there are physical obstructions (like walls or large objects) between the speaker and your device, you may experience interference.

Q3: Why does the speaker turn off by itself when not in use?

A: To save battery life, the speaker will automatically shut down if it doesn't connect to a Bluetooth device within 10 minutes.

Q4: Why won't my speaker reconnect to my paired phone?

A: To fix this, go to your phone's Bluetooth settings, "Forget" or remove the speaker from your paired devices list, and then pair them again.

Q5: What should I do if the speaker won't turn on?

A: First, plug it into a charger and wait a few minutes before trying again. If it still won't turn on, try a hard reset by pressing and holding the power button for 10 to 20 seconds.

Smart Tek. Real Support.

Contact Us - Email: support@visiontek.com - Phone: 1-866-883-5411
VisionTek Products, LLC. | 3 W. College Dr Arlington Heights IL 60004, USA

OPERATING SAFETY GUIDELINESS

Notes:

1. Please read this manual carefully before use, keep for future reference.
2. Fully charge the battery before first use.
3. Use only power adapters that comply with national safety standards.
4. For long-term storage, charge the device at least once per month to prevent deep discharge and maintain optimal battery health.
5. Standard operating temperature range is 5°C to 35°C. Operating the device outside this range may trigger an automatic shutdown to protect internal circuitry.
6. Charging in high-temperature environments will automatically suspend the charging cycle to protect the battery cell from thermal degradation.
7. Storage environment temperature: -5-35°C Relative Humidity (RH)<70% (recommended 25°C±5).

Important safety instructions:

1. Do not disassemble or repair this speaker personally, otherwise it may cause product damage or personal injury.
2. Do not use in dusty, humid, dry, and high-temperature environment.
3. Do not place this product near a heat source, or a place with direct sunlight, a lot of dust, or mechanical vibration.
4. In order to reduce the risk of fire, please do not cover this product with newspapers, tablecloths, curtains etc., during use.
5. If the product has a waterproof feature, please do not exceed the nominal parameter range when using it.
6. When the product is damaged such as the power cord or plug is damaged, liquid enters or objects fall into the device, unable to operate normally or falls, it must be repaired.
7. When the product is fully charged, do not connect it to the charger for further long time charging.
8. The maximum ambient temperature should not exceed 40°C.

*This speaker supports mobile phones/ tablets/ PCs etc. The Quick Start Guide is illustrated base on use with mobile phones.