

Getting Started

HP Notebook

© Copyright 2011 Hewlett-Packard
Development Company, L.P.

Bluetooth is a trademark owned by its proprietor and used by Hewlett-Packard Company under license. Microsoft and Windows are U.S. registered trademarks of Microsoft Corporation. SD Logo is a trademark of its proprietor.

The information contained herein is subject to change without notice. The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

First Edition: April 2011

Document Part Number: 647229-001

Product notice

This guide describes features that are common to most models. Some features may not be available on your computer.

Software terms

By installing, copying, downloading, or otherwise using any software product preinstalled on this computer, you agree to be bound by the terms of the HP End User License Agreement (EULA). If you do not accept these license terms, your sole remedy is to return the entire unused product (hardware and software) within 14 days for a refund subject to the refund policy of your place of purchase.

For any further information or for requesting a full refund of the computer, please contact your local point of sale (the seller).

Safety warning notice

-
- ⚠ **WARNING!** To reduce the possibility of heat-related injuries or of overheating the computer, do not place the computer directly on your lap or obstruct the computer air vents. Use the computer only on a hard, flat surface. Do not allow another hard surface, such as an adjoining optional printer, or a soft surface, such as pillows or rugs or clothing, to block airflow. Also, do not allow the AC adapter to come into contact with the skin or a soft surface, such as pillows or rugs or clothing, during operation. The computer and the AC adapter comply with the user-accessible surface temperature limits defined by the International Standard for Safety of Information Technology Equipment (IEC 60950).
-

Table of contents

1 Welcome	1
Finding information	2
2 Getting to know your computer	4
Top	5
TouchPad	5
Lights	6
Buttons	7
Keys	8
Right side	9
Left side	10
Display	12
Bottom	13
3 Networking	14
Using an Internet service provider (ISP)	15
Connecting to a wireless network	15
Connecting to an existing WLAN	15
Setting up a new WLAN network	16
Configuring a wireless router	17
Protecting your WLAN	17
4 Keyboard and pointing devices	18
Using the keyboard	19
Using the action keys	19
Using keypads	20
Using an optional external numeric keypad	20
Using pointing devices	21
Setting pointing device preferences	21
Using the TouchPad	21
Turning the TouchPad off and on	21
Navigating	22
Selecting	23

Using TouchPad gestures	24
Scrolling	25
Pinching/Zooming	25
5 Maintenance	26
Inserting or removing the battery	26
Replacing or upgrading the hard drive	28
Removing the hard drive	28
Installing a hard drive	29
Adding or replacing memory modules	30
Updating programs and drivers	35
6 Backup and recovery	36
Restore	37
Creating restore media	37
Performing a system restore	38
Restoring using the dedicated recovery partition (select models only)	38
Restoring using the restore media	39
Changing the computer boot order	40
Backing up and recovering your information	40
Using Windows Backup and Restore	41
Using Windows system restore points	42
When to create restore points	42
Create a system restore point	42
Restore to a previous date and time	42
7 Customer support	43
Contacting customer support	44
Labels	45
8 Specifications	46
Input power	47
Operating environment	48
Index	49

1 Welcome

- [Finding information](#)

After you set up and register the computer, it is important to take the following steps:

- **Connect to the Internet**—Set up your wired or wireless network so that you can connect to the Internet. For more information, refer to [Networking on page 14](#).
- **Update your antivirus software**—Protect your computer from damage caused by viruses. The software is preinstalled on the computer and includes a limited subscription for free updates. For more information, refer to the *HP Notebook Reference Guide*. For instructions on accessing this guide, refer to [Finding information on page 2](#).
- **Get to know your computer**—Learn about your computer features. Refer to [Getting to know your computer on page 4](#) and [Keyboard and pointing devices on page 18](#) for additional information.
- **Create recovery discs or a recovery flash drive**—Recover the operating system and software to factory settings in case of system instability or failure. For instructions, refer to [Backup and recovery on page 36](#).
- **Find installed software**—Access a list of the software preinstalled on the computer. Select **Start > All Programs**. For details about using the software included with the computer, refer to the software manufacturer's instructions, which may be provided with the software or on the manufacturer's Web site.

Finding information

The computer comes with several resources to help you perform various tasks.

Resources	For information about
<i>Quick Setup</i> poster	<ul style="list-style-type: none">• How to set up the computer• Help to identify computer components
<i>Getting Started</i>	<ul style="list-style-type: none">• Computer features
To access this guide:	<ul style="list-style-type: none">• How to connect to a wireless network
Select Start > Help and Support > User Guides .	<ul style="list-style-type: none">• How to use the keyboard and pointing devices
– or –	<ul style="list-style-type: none">• How to replace or upgrade the hard drive and memory modules
Select Start > All Programs > HP > HP Documentation .	<ul style="list-style-type: none">• How to perform a backup and recovery• How to contact customer support• Computer specifications
<i>HP Notebook Reference Guide</i>	<ul style="list-style-type: none">• Power management features
To access this guide:	<ul style="list-style-type: none">• How to maximize battery life
Select Start > Help and Support > User Guides .	<ul style="list-style-type: none">• How to use the multimedia features of the computer
– or –	<ul style="list-style-type: none">• How to protect the computer
Select Start > All Programs > HP > HP Documentation .	<ul style="list-style-type: none">• How to care for the computer• How to update the software
Help and Support	<ul style="list-style-type: none">• Operating system information
To access Help and Support, select Start > Help and Support .	<ul style="list-style-type: none">• Software, driver, and BIOS updates
NOTE: For country- or region-specific support, go to http://www.hp.com/support , select your country or region, and follow the on-screen instructions.	<ul style="list-style-type: none">• Troubleshooting tools• How to access technical support
<i>Regulatory, Safety and Environmental Notices</i>	<ul style="list-style-type: none">• Regulatory and safety information
To access this guide:	<ul style="list-style-type: none">• Battery disposal information
Select Start > Help and Support > User Guides .	
– or –	
Select Start > All Programs > HP > HP Documentation .	

 
Resources	For information about
<p><i>Safety & Comfort Guide</i></p> <p>To access this guide:</p> <p>Select Start > Help and Support > User Guides.</p> <p>– or –</p> <p>Select Start > All Programs > HP > HP Documentation.</p> <p>– or –</p> <p>Go to http://www.hp.com/ergo.</p>	<ul style="list-style-type: none"> • Proper workstation setup, posture, health, and work habits • Electrical and mechanical safety information
<p><i>Worldwide Telephone Numbers</i> booklet</p> <p>This booklet is provided with your computer.</p>	<p>HP support telephone numbers</p>
<p>HP Web site</p> <p>To access this Web site, go to http://www.hp.com/support.</p>	<ul style="list-style-type: none"> • Support information • Ordering parts and finding additional help • Software, driver, and BIOS updates • Accessories available for the device
<p><i>Limited Warranty*</i></p> <p>To access the warranty:</p> <p>Select Start > Help and Support > User Guides > View Warranty Information.</p> <p>– or –</p> <p>Select Start > All Programs > HP > HP Documentation > View Warranty Information.</p> <p>– or –</p> <p>Go to http://www.hp.com/go/orderdocuments.</p>	<p>Warranty information</p>
<p>*You may find the expressly provided HP Limited Warranty applicable to your product located with the electronic guides on your computer and/or on the CD/DVD provided in the box. Some countries/regions may provide a printed HP Limited Warranty in the box. In countries/regions where the warranty is not provided in printed format, you may request a printed copy at http://www.hp.com/go/orderdocuments or write to:</p> <ul style="list-style-type: none"> • North America: Hewlett-Packard, MS POD, 11311 Chinden Blvd, Boise, ID 83714, USA • Europe, Middle East, Africa: Hewlett-Packard, POD, Via G. Di Vittorio, 9, 20063, Cernusco s/Naviglio (MI), Italy • Asia Pacific: Hewlett-Packard, POD, P.O. Box 200, Alexandra Post Office, Singapore 911507 <p>Please include your product number, warranty period (found on your serial number label), name, and postal address.</p>	

2 Getting to know your computer

- [Top](#)
- [Right side](#)
- [Left side](#)
- [Display](#)
- [Bottom](#)


Top

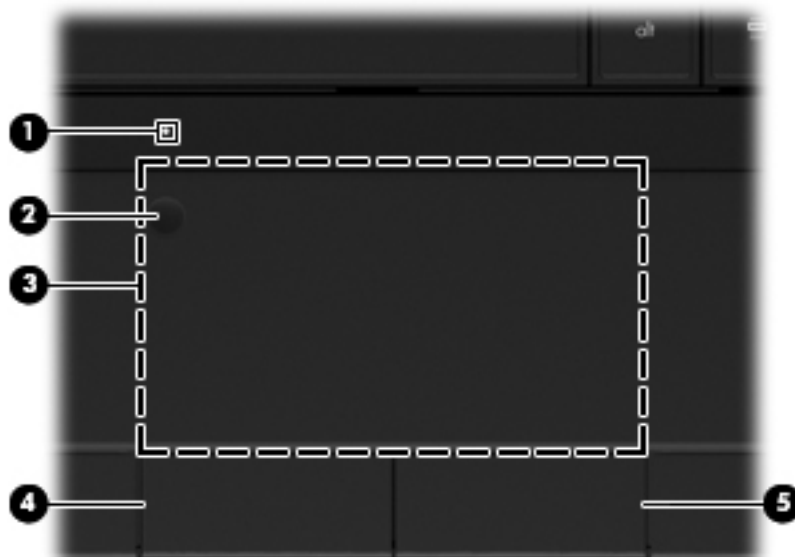

TouchPad



Component		Description
(1)	TouchPad light	<ul style="list-style-type: none">• Off: The TouchPad is on.• Amber: The TouchPad is off.
(2)	TouchPad on/off button	Turns the TouchPad on and off.
(3)	TouchPad zone	Moves the pointer and selects or activates items on the screen.
(4)	Left TouchPad button	Functions like the left button on an external mouse.
(5)	Right TouchPad button	Functions like the right button on an external mouse.

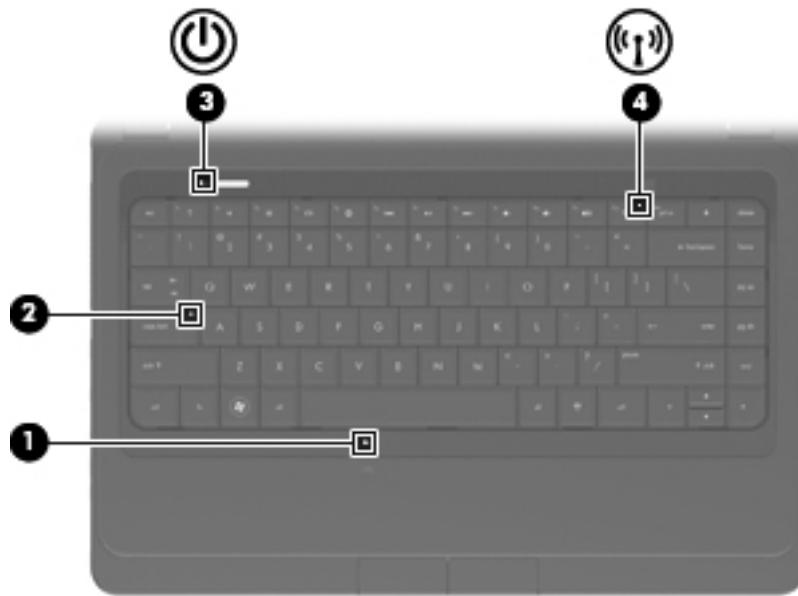 
Lights




Component		Description
(1)	TouchPad light	<ul style="list-style-type: none">• Off: The TouchPad is on.• Amber: The TouchPad is off.
(2)	Caps lock light	On: Caps lock is on.
(3)	 Power light	<ul style="list-style-type: none">• On: The computer is on.• Blinking: The computer is in the Sleep state.• Off: The computer is off or in Hibernation.
(4)	 Wireless light	<ul style="list-style-type: none">• White: An integrated wireless device, such as a wireless local area network (WLAN) device and/or a Bluetooth® device, is on.• Amber: All wireless devices are off.



Buttons




Component	Description
 Power button	<ul style="list-style-type: none">• When the computer is off, press the button to turn on the computer.• When the computer is on, press the button briefly to initiate Sleep.• When the computer is in the Sleep state, press the button briefly to exit Sleep.• When the computer is in Hibernation, press the button briefly to exit Hibernation. <p>If the computer has stopped responding and Windows® shutdown procedures are ineffective, press and hold the power button for at least 5 seconds to turn off the computer.</p> <p>To learn more about your power settings, select Start > Control Panel > System and Security > Power Options, or refer to the <i>HP Notebook Reference Guide</i>.</p>

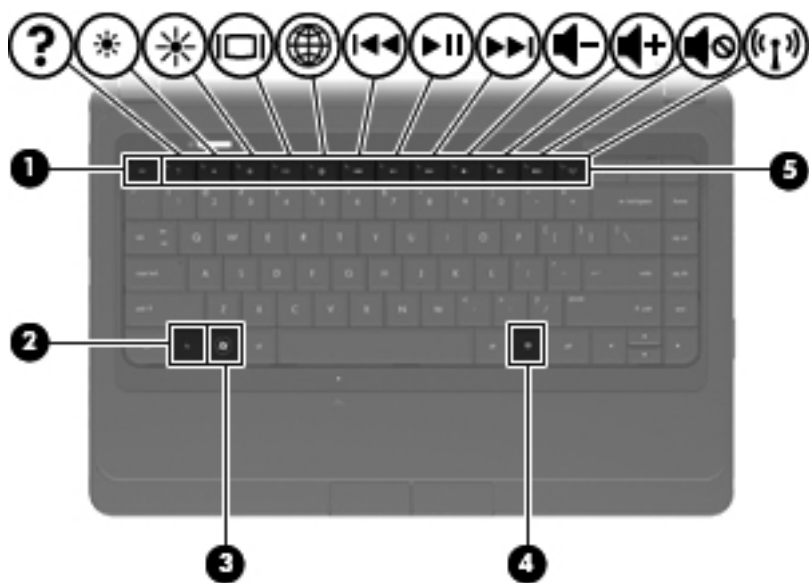 


Keys




Component		Description
(1)	esc key	Displays system information when pressed in combination with the fn key.
(2)	fn key	Displays system information when pressed in combination with the esc key.
(3)	 Windows logo key	Displays the Windows Start menu.
(4)	 Windows applications key	Displays a shortcut menu for items beneath the pointer.
(5)	Action keys	Execute frequently used system functions.

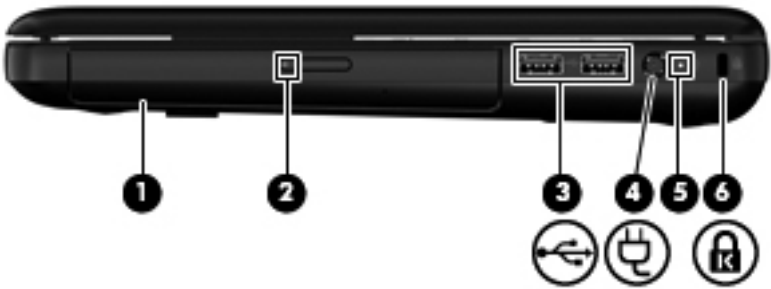 





Right side

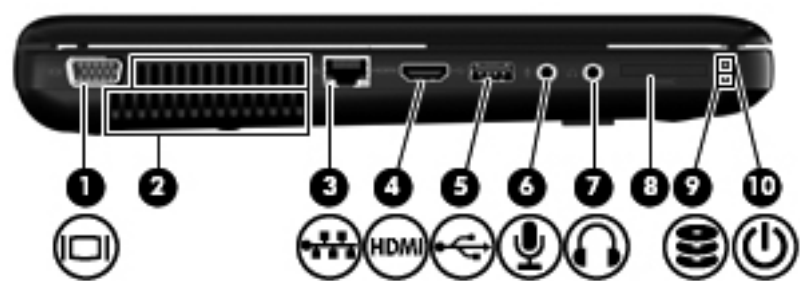 



Component		Description
(1)	Optical drive	Reads and writes (select models only) to an optical disc.
(2)	Optical drive light	<ul style="list-style-type: none">Green: The optical drive is being accessed.Off: The optical drive is idle.
(3)	 USB ports (2)	Connect optional USB devices.
(4)	 Power connector	Connects an AC adapter.
(5)	Battery/AC adapter light	<ul style="list-style-type: none">White: The computer is connected to external power and the battery is fully charged.Amber: A battery is charging.Blinking amber: The battery has reached a low battery level, or there is a battery error. When a battery reaches a critical battery level, the battery light begins blinking rapidly.
(6)	 Security cable slot	Attaches an optional security cable to the computer. NOTE: The security cable is designed to act as a deterrent, but it may not prevent the computer from being mishandled or stolen.


Left side



Component		Description
(1)		External monitor port Connects an external VGA monitor or projector.
(2)		Vents (2) Enable airflow to cool internal components. NOTE: The computer fan starts up automatically to cool internal components and prevent overheating. It is normal for the internal fan to cycle on and off during routine operation.
(3)		RJ-45 (network) jack Connects a network cable.
(4)		HDMI port (select models only) Connects an optional video or audio device, such as a high-definition television, or any compatible digital or audio component.
(5)		USB port Connects an optional USB device.
(6)		Audio-in (microphone) jack Connects an optional computer headset microphone, stereo array microphone, or monaural microphone.
(7)		Audio-out (headphone) jack Produces sound when connected to optional powered stereo speakers, headphones, ear buds, a headset, or television audio. WARNING! To reduce the risk of personal injury, adjust the volume before putting on headphones, earbuds, or a headset. For additional safety information, refer to the <i>Regulatory, Safety and Environmental Notices</i> . NOTE: When a device is connected to the headphone jack, the computer speakers are disabled.
(8)		Digital Media Slot Supports the following digital card formats: <ul style="list-style-type: none">Secure Digital (SD) Memory CardSecure Digital Extended Capacity (SDxC) Memory CardSecure Digital High Capacity (SDHC) Memory CardMultiMediaCard (MMC)

Component			Description
(9)		Hard drive light	<ul style="list-style-type: none"> • Blinking white: The hard drive is being accessed. • Off: The hard drive is idle.
(10)		Power light	<ul style="list-style-type: none"> • White: The computer is on. • Blinking white: The computer is in the Sleep state. • Off: The computer is off or in Hibernation.

 
Display

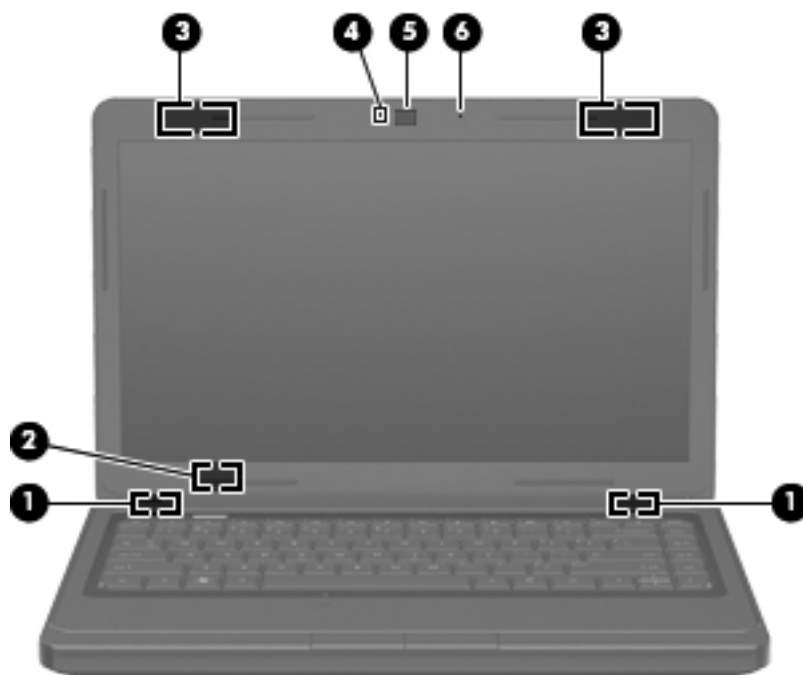




Component		Description
(1)	Speakers (2)	Produce sound.
(2)	Internal display switch	Turns off the display or initiates Sleep if the display is closed while the power is on. NOTE: The display switch is not visible from the outside of the computer.
(3)	WLAN antennas (2)* (select models only)	Send and receive wireless signals to communicate with wireless local area networks (WLAN).
(4)	Webcam light	On: The webcam is in use.
(5)	Webcam	Records video and captures still photographs. To use the webcam, select Start > All Programs > CyberLink YouCam > CyberLink YouCam .
(6)	Internal microphone	Records sound.

 *The antennas are not visible from the outside of the computer. For optimal transmission, keep the areas immediately around the antennas free from obstructions. To see wireless regulatory notices, refer to the section of the *Regulatory, Safety and Environmental Notices* that applies to your country or region. These notices are located in Help and Support.

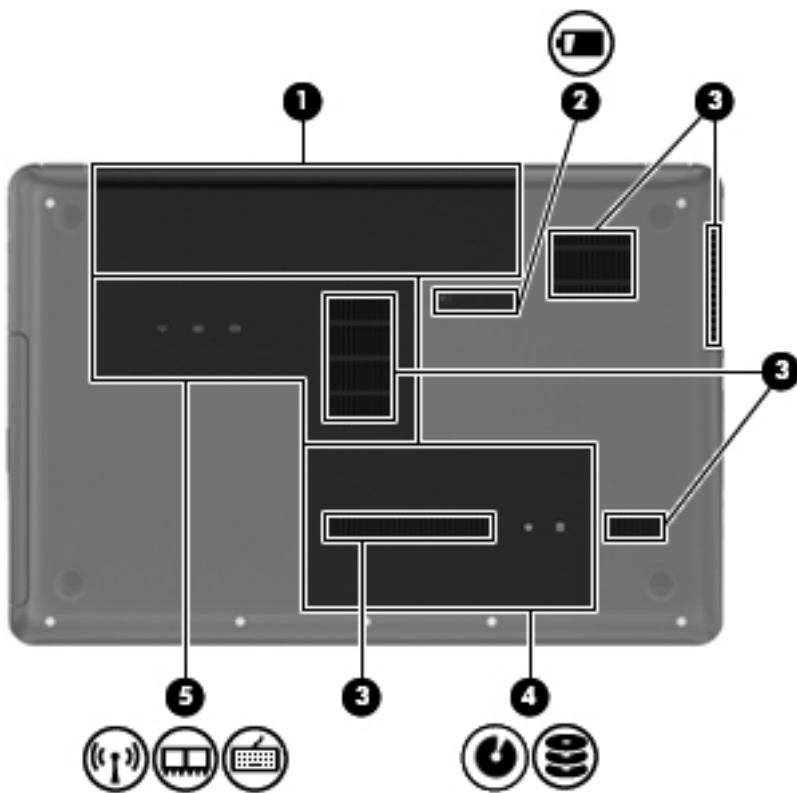Bottom



Component		Description
(1)	Battery bay	Holds the battery.
(2)	 Battery release latch	Releases the battery from the battery bay.
(3)	Vents (5)	Enable airflow to cool internal components. NOTE: The computer fan starts up automatically to cool internal components and prevent overheating. It is normal for the internal fan to cycle on and off during routine operation.
(4)	 Hard drive bay	Holds the hard drive.
(5)	 Memory module compartment	Contains the wireless LAN (WLAN) device and the memory module slots. CAUTION: To prevent an unresponsive system, replace the wireless module only with a wireless module authorized for use in the computer by the governmental agency that regulates wireless devices in your country or region. If you replace the module and then receive a warning message, remove the module to restore computer functionality, and then contact technical support through Help and Support.

3 Networking

- [Using an Internet service provider \(ISP\)](#)
- [Connecting to a wireless network](#)




NOTE: Internet hardware and software features vary depending on computer model and your location.

Your computer may support one or both of the following types of Internet access:

- **Wireless**—For mobile Internet access, you can use a wireless connection. Refer to [Connecting to an existing WLAN on page 15](#) or [Setting up a new WLAN network on page 16](#).
- **Wired**—You can access the Internet by connecting to a wired network. For information on connecting to a wired network, refer to the *HP Notebook Reference Guide*.

Using an Internet service provider (ISP)


Before you can connect to the Internet, you must establish an ISP account. Contact a local ISP to purchase Internet service and a modem. The ISP will help set up the modem, install a network cable to connect your wireless computer to the modem, and test the Internet service.

 **NOTE:** Your ISP will give you a user ID and password to access the Internet. Record this information and store it in a safe place.

The following features will help you set up a new Internet account or configure the computer to use an existing account:

- **Internet Services & Offers (available in some locations)**—This utility assists with signing up for a new Internet account and configuring the computer to use an existing account. To access this utility, select **Start > All Programs > Online Services > Get Online**.
- **ISP-provided icons (available in some locations)**—These icons may be displayed either individually on the Windows desktop or grouped in a desktop folder named Online Services. To set up a new Internet account or configure the computer to use an existing account, double-click an icon, and then follow the on-screen instructions.
- **Windows Connect to the Internet Wizard**—You can use the Windows Connect to the Internet Wizard to connect to the Internet in any of these situations:
 - You already have an account with an ISP.
 - You do not have an Internet account and want to select an ISP from the list provided within the wizard. (The list of ISP providers is not available in all regions.)
 - You have selected an unlisted ISP, and the ISP has provided you with information such as a specific IP address and POP3 and SMTP settings.

To access the Windows Connect to the Internet Wizard and instructions for using it, select **Start > Control Panel > Network and Internet > Network and Sharing Center**.

 **NOTE:** If you are prompted within the wizard to choose between enabling or disabling Windows Firewall, choose to enable the firewall.

Connecting to a wireless network

Wireless technology transfers data across radio waves instead of wires. Your computer may be equipped with one or more of the following wireless devices:

- Wireless local area network (WLAN) device
- HP Mobile Broadband Module, a wireless wide area network (WWAN) device
- Bluetooth device

For more information on wireless technology and connecting to a wireless network, refer to the *HP Notebook Reference Guide* and information and Web site links provided in Help and Support.

Connecting to an existing WLAN


1. Turn on the computer.
2. Be sure that the WLAN device is on.

3. Click the network icon in the notification area, at the far right of the taskbar.
4. Select a network to connect to.
5. Click **Connect**.
6. If required, enter the security key.

Setting up a new WLAN network

Required equipment:

- A broadband modem (either DSL or cable) **(1)** and high-speed Internet service purchased from an Internet service provider (ISP)
- A wireless router (purchased separately) **(2)**
- Your new wireless computer **(3)**

 **NOTE:** Some modems have a built-in wireless router. Check with your ISP to determine what type of modem you have.


The illustration shows an example of a completed WLAN network installation that is connected to the Internet. As your network grows, additional wireless and wired computers can be connected to the network to access the Internet.



Configuring a wireless router

For help in setting up a WLAN, refer to the information provided by your router manufacturer or your ISP.

The Windows operating system also provides tools to help you set up a new wireless network. To use the Windows tools to set up your network, select **Start > Control Panel > Network and Internet > Network and Sharing Center > Set up a new connection or network > Set up a new network**. Then follow the on-screen instructions.

 **NOTE:** It is recommended that you initially connect your new wireless computer to the router by using the network cable provided with the router. When the computer successfully connects to the Internet, you can disconnect the cable, and then access the Internet through your wireless network.

Protecting your WLAN

When you set up a WLAN or access an existing WLAN, always turn on security features to protect your network from unauthorized access.

For information on protecting your WLAN, refer to the *HP Notebook Reference Guide*.

4 Keyboard and pointing devices


- [Using the keyboard](#)
- [Using pointing devices](#)


Using the keyboard

Using the action keys









Action keys are customized actions that are assigned to specific keys at the top of the keyboard. The icons on the **f1** through **f12** keys represent the action key functions.




 
To use an action key, press and hold this key to activate the assigned function.

 **NOTE:** The action key feature is enabled at the factory. You can disable this feature in Setup Utility (BIOS) and revert back to standard settings by pressing the **fn** key and one of the function keys to activate the assigned function. Refer to the “Setup Utility (BIOS) and System Diagnostics” chapter in the *HP Notebook Reference Guide* for instructions.

 **CAUTION:** Use extreme care when making changes in Setup Utility. Errors can prevent the computer from operating properly.



Icon	Key	Description
	f1	Opens Help and Support, which provides information about your Windows operating system and computer, answers to questions and tutorials, and updates to your computer. Help and Support also provides automated troubleshooting and links to support specialists.
	f2	Decreases the screen brightness level incrementally when you hold down this key.
	f3	Increases the screen brightness level incrementally when you hold down this key.
	f4	Switches the screen image among display devices connected to the system. For example, if a monitor is connected to the computer, pressing this key alternates the screen image from computer display to monitor display to simultaneous display on both the computer and the monitor. Most external monitors receive video information from the computer using the external VGA video standard. The switch screen image key can also alternate images among other devices that are receiving video information from the computer.
	f5	Opens the default Web browser. NOTE: Until you set up your Internet or network services, this key opens the Internet Connection Wizard.
	f6	Plays the previous track of an audio CD or the previous section of a DVD or a BD.
	f7	Plays, pauses, or resumes a track of an audio CD or a section of a DVD or a BD.
	f8	Plays the next track of an audio CD or the next section of a DVD or a BD.

Icon	Key	Description
	f9	Decreases speaker volume incrementally when you hold down this key.
	f10	Increases speaker volume incrementally when you hold down this key.
	f11	Mutes or restores speaker sound.
	f12	Turns the wireless feature on or off. NOTE: This key does not establish a wireless connection. To establish a wireless connection, a wireless network must also be set up.

Using keypads

The computer supports an optional external numeric keypad or an optional external keyboard that includes a numeric keypad.

Using an optional external numeric keypad

Keys on most external numeric keypads function differently according to whether num lock is on or off. (Num lock is turned off at the factory.) For example:


- When num lock is on, most keypad keys type numbers.
- When num lock is off, most keypad keys function like the arrow, page up, or page down keys.

When num lock on an external keypad is turned on, the num lock light on the computer is turned on. When num lock on an external keypad is turned off, the num lock light on the computer is turned off.

To turn num lock on or off on an external keypad as you work:

- ▲ Press the **num lk** key on the external keypad, not on the computer.

Using pointing devices

 **NOTE:** In addition to the pointing devices included with your computer, you can use an external USB mouse (purchased separately) by connecting it to one of the USB ports on the computer.

Setting pointing device preferences

Use Mouse Properties in Windows to customize settings for pointing devices, such as button configuration, click speed, and pointer options.

 
To access Mouse Properties, select **Start > Devices and Printers**. Then right-click the device representing your computer, and select **Mouse settings**.

Using the TouchPad

To move the pointer, slide one finger across the TouchPad in the direction you want the pointer to go. Use the left and right TouchPad buttons like the buttons on an external mouse.


Turning the TouchPad off and on

To turn the TouchPad off and on, quickly double-tap the TouchPad on/off button.

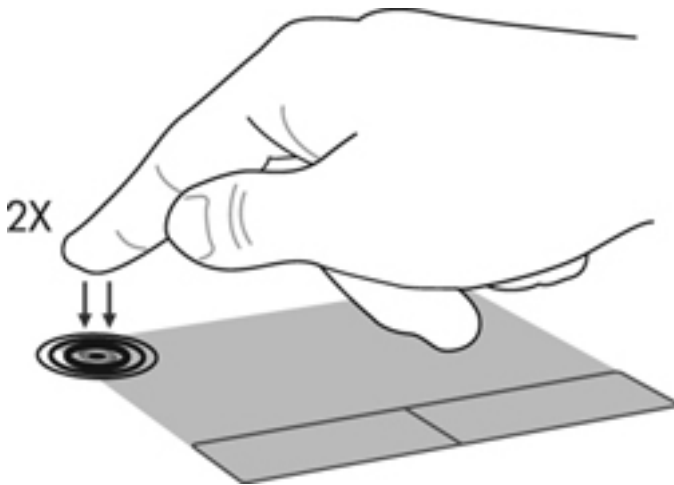


Navigating

 To move the pointer, slide one finger across the TouchPad in the direction you want the pointer to go.

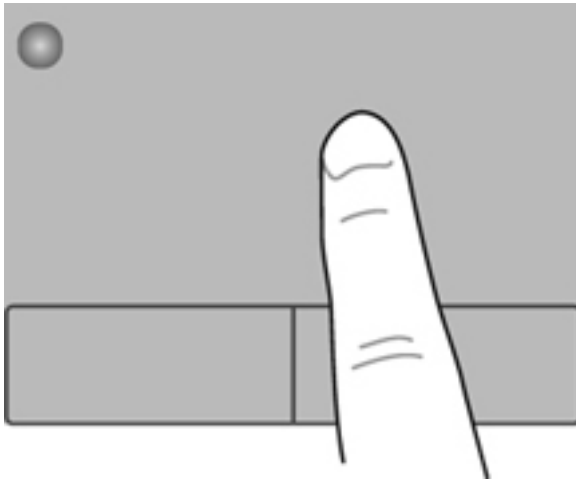


Selecting

 Use the left and right TouchPad buttons like the corresponding buttons on an external mouse.

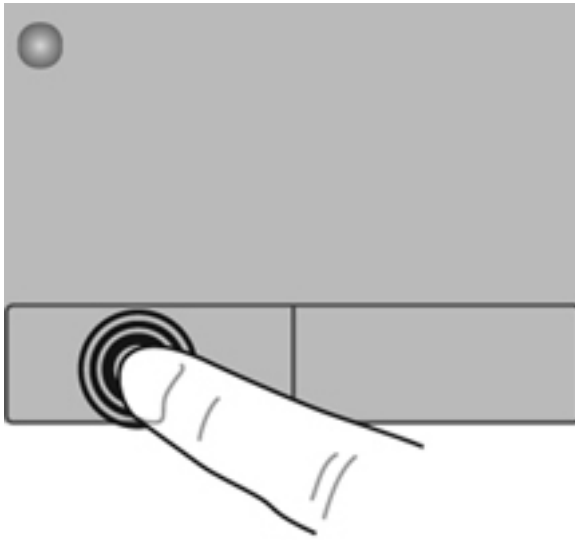


Using TouchPad gestures


The TouchPad supports a variety of gestures. To use TouchPad gestures, place two fingers on the TouchPad at the same time.

 **NOTE:** TouchPad gestures are not supported in all programs.

To view the demonstration of a gesture:


1. Right-click the Synaptics icon  in the notification area, at the far right of the taskbar, and then click **TouchPad Properties**.
2. Click a gesture to activate the demonstration.

To turn the gestures on and off:

 
1. Right-click the Synaptics icon  in the notification area, at the far right of the taskbar, and then click **TouchPad Properties**.
2. Select the gesture that you want to turn on or off.
3. Click **Apply**, and then click **OK**.

Scrolling

Scrolling is useful for moving up, down, or sideways on a page or image. To scroll, place two fingers slightly apart on the TouchPad, and then drag them across the TouchPad in an up, down, left, or right motion.

 **NOTE:** Scrolling speed is controlled by finger speed.


NOTE: Two-finger scrolling is enabled at the factory.

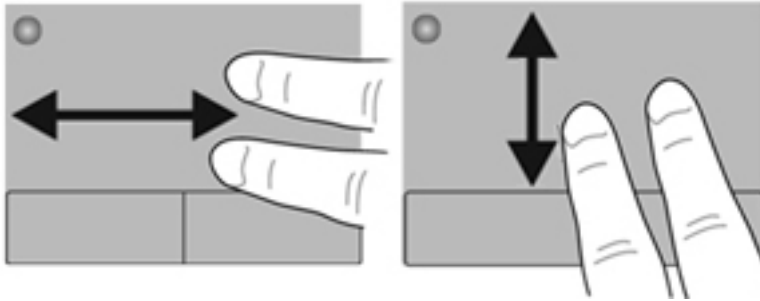


Pinching/Zooming

Pinching allows you to zoom in or out on images or text.

- Zoom in by placing two fingers together on the TouchPad, and then moving them apart.
- Zoom out by placing two fingers apart on the TouchPad, and then moving them together.

 
 **NOTE:** Pinching/zooming is enabled at the factory.

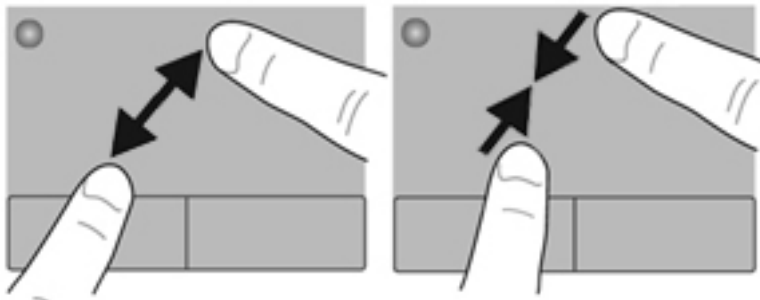

5 Maintenance

- [Inserting or removing the battery](#)
- [Replacing or upgrading the hard drive](#)
- [Adding or replacing memory modules](#)
- [Updating programs and drivers](#)

Inserting or removing the battery

 **NOTE:** For additional information on using the battery, refer to the *HP Notebook Reference Guide*.

To insert the battery:


1. Turn the computer upside down on a flat surface, with the battery bay toward you.
2. Align the battery (1) with the outer edge of the battery bay.
3. Rotate the battery (2) into the battery bay until it is seated. The battery release latch automatically locks the battery into place.



To remove the battery:

△ **CAUTION:** Removing a battery that is the sole power source for the computer can cause loss of information. To prevent loss of information, save your work and initiate Hibernation or shut down the computer through Windows before removing the battery.

1. Turn the computer upside down on a flat surface.
2. Slide the battery release latch (1) to release the battery.

 **NOTE:** The battery release latch automatically returns to its original position.

3. Pivot the battery (2) upward and remove it from the computer (3).



Replacing or upgrading the hard drive

△ **CAUTION:** To prevent information loss or an unresponsive system:

Shut down the computer before removing the hard drive from the hard drive bay. Do not remove the hard drive while the computer is on, in the Sleep state, or in Hibernation.

 
If you are not sure whether the computer is off or in Hibernation, turn the computer on by pressing the power button. Then shut down the computer through the operating system.

Removing the hard drive

1. Save your work and shut down the computer.
2. Disconnect all external devices connected to the computer.
3. Unplug the power cord from the AC outlet and remove the battery.
4. To access the hard drive cover screw, remove the memory module compartment cover.


 **NOTE:** For more information, refer to [Adding or replacing memory modules on page 30](#).

5. Loosen the hard drive cover screw (1).
6. Remove the hard drive cover (2).

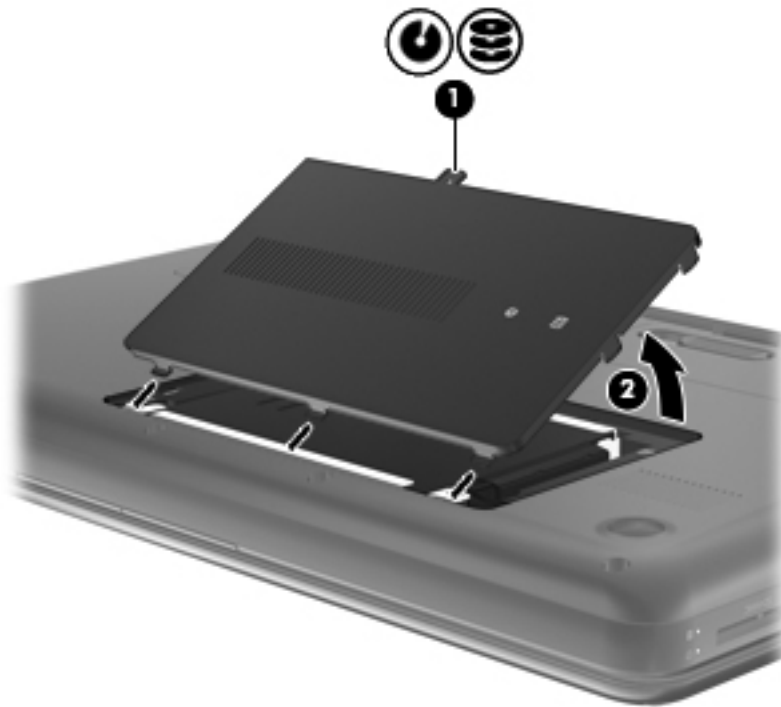


7. Disconnect the hard drive cable (1) from the computer.
8. Remove the 4 hard drive screws (2).

 9. Lift the hard drive **(3)** out of the hard drive bay.

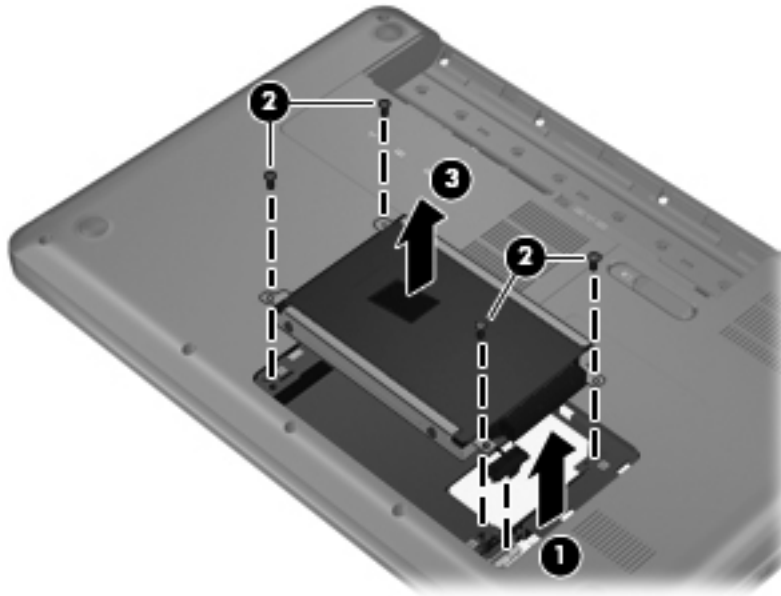


Installing a hard drive

 1. Insert the hard drive **(1)** into the hard drive bay.
2. Replace the 4 hard drive screws **(2)**.
3. Connect the hard drive cable **(3)** to the computer.

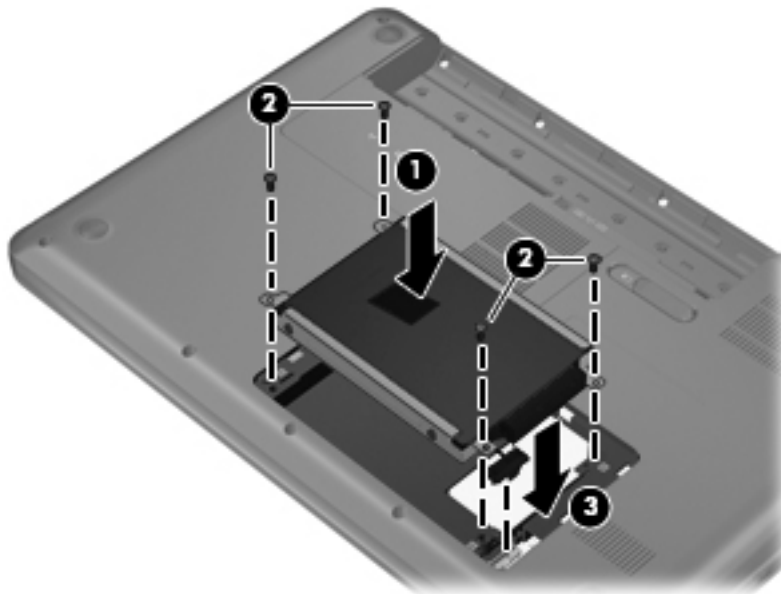

4. Align the tabs on the hard drive cover **(1)** with the notches on the computer.
5. Close the cover **(2)**.

 6. Tighten the hard drive cover screw (3).

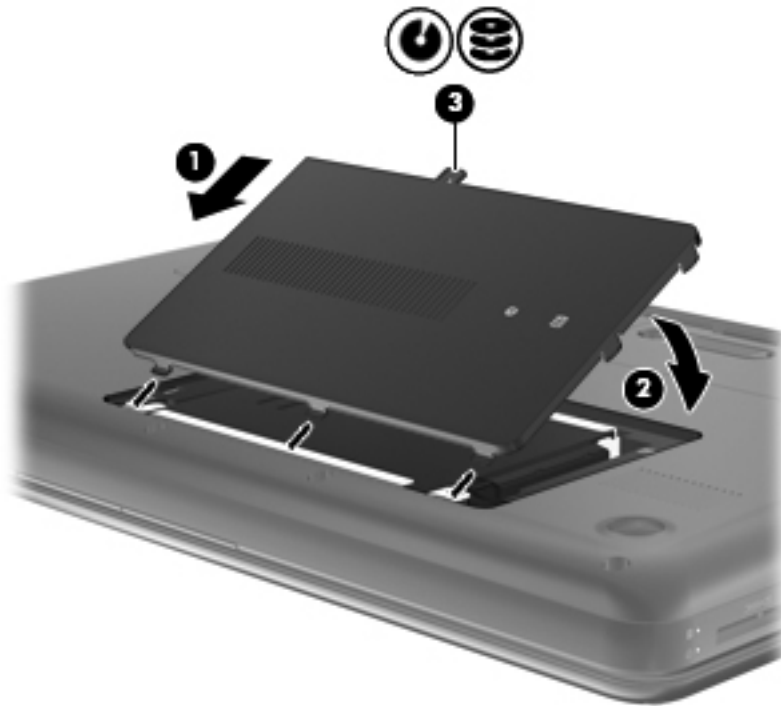


7. Replace the memory module compartment cover.


 **NOTE:** For more information, refer to [Adding or replacing memory modules on page 30](#).


8. Replace the battery.
9. Reconnect external power and external devices.
10. Turn on the computer.

Adding or replacing memory modules

The computer has two memory module slots. The capacity of the computer can be upgraded by adding a memory module to the vacant expansion memory module slot or by upgrading the existing memory module in the primary memory module slot.

 **WARNING!** To reduce the risk of electric shock and damage to the equipment, unplug the power cord and remove all batteries before installing a memory module.

 **CAUTION:** Electrostatic discharge (ESD) can damage electronic components. Before beginning any procedure, ensure that you are discharged of static electricity by touching a grounded metal object.

 **NOTE:** To use a dual-channel configuration when adding a second memory module, be sure that both memory modules are identical.

 
To add or replace a memory module:

△ **CAUTION:** To prevent information loss or an unresponsive system:

Shut down the computer before adding or replacing memory modules. Do not remove a memory module while the computer is on, in the Sleep state, or in Hibernation.


If you are not sure whether the computer is off or in Hibernation, turn the computer on by pressing the power button. Then shut down the computer through the operating system.

1. Save your work and shut down the computer.
2. Disconnect all external devices connected to the computer.
3. Unplug the power cord from the AC outlet and remove the battery.
4. Loosen the memory module compartment cover screw (1).
5. Remove the memory module compartment cover (2).

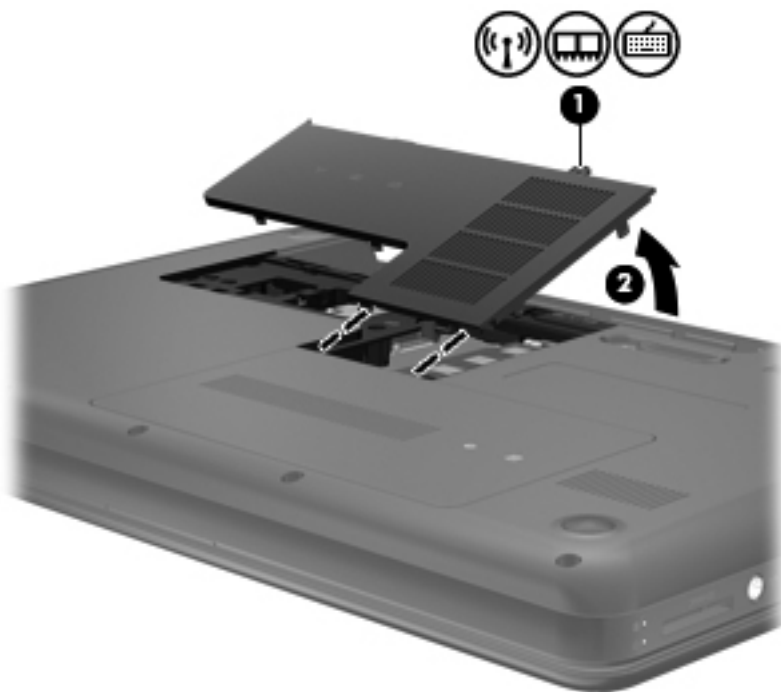

6. If you are replacing a memory module, remove the existing memory module:
 - a. Pull away the retention clips (1) on each side of the memory module.
The memory module tilts up.

 - △ **CAUTION:** To prevent damage to the memory module, hold the memory module by the edges only. Do not touch the components on the memory module.




- △ **CAUTION:** To prevent damage to the memory module, hold the memory module by the edges only. Do not touch the components on the memory module.


- 32 Chapter 5 Maintenance

- c. Gently press the memory module **(3)** down, applying pressure to both the left and right edges of the memory module, until the retention clips snap into place.

 △ **CAUTION:** To prevent damage to the memory module, be sure that you do not bend the memory module.

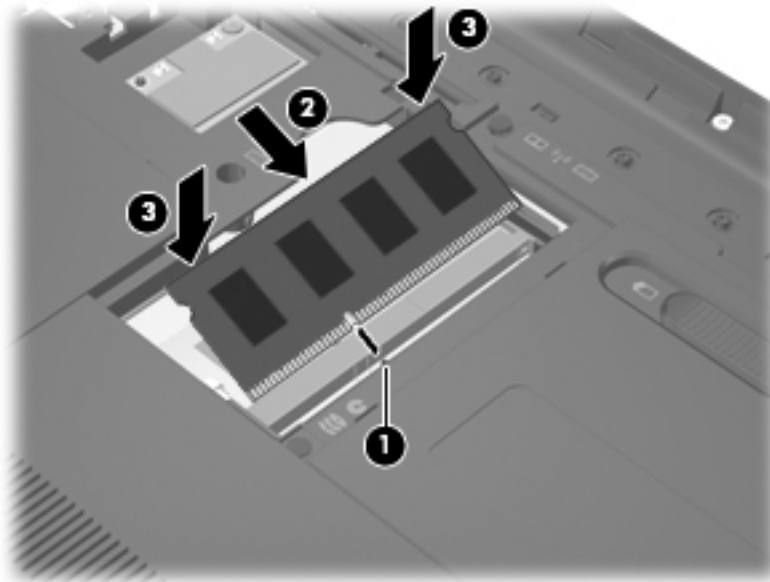

 - 8. Align the tabs on the memory module compartment cover **(1)** with the notches on the computer.
- 9. Close the cover **(2)**.
- 10. Tighten the memory module compartment cover screw **(3)**.

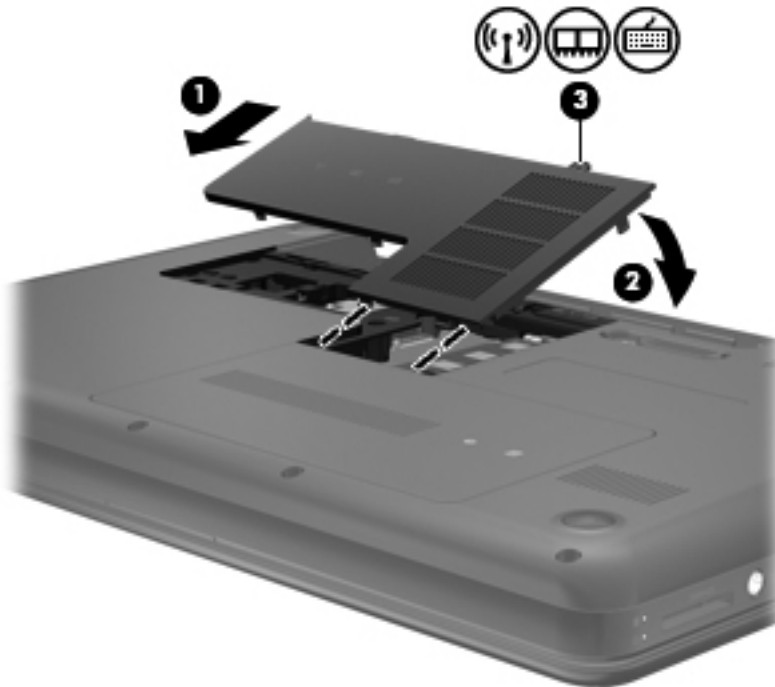

- 11. Replace the battery.

12. Reconnect external power and external devices.
13. Turn on the computer.

Updating programs and drivers

HP recommends that you update your programs and drivers on a regular basis with the latest versions. Go to <http://www.hp.com/support> to download the latest versions. You can also register to receive automatic update notifications when they become available.

6 Backup and recovery

- [Restore](#)
- [Creating restore media](#)
- [Performing a system restore](#)
- [Backing up and recovering your information](#)

Your computer includes tools provided by the operating system and HP to help you safeguard your information and restore it if ever needed.

This chapter provides information on the following topics:

- Creating a set of recovery discs or a recovery flash drive (Recovery Manager software feature)
- Performing a system restore (from the partition, recovery discs, or a recovery flash drive)
- Backing up your information
- Recovering a program or driver

Restore

In the event of hard drive failure, to restore your system to its factory image you will need a set of recovery discs or a recovery flash drive, both of which you can create using HP Recovery Manager. HP recommends that you use this software to create either a set of recovery discs or a recovery flash drive immediately after software setup.

If for some other reason you need to restore your system, this can be achieved using the HP recovery partition (select models only), without the need for recovery discs or a recovery flash drive. To check for the presence of a recovery partition, click **Start**, right-click **Computer**, click **Manage**, and then click **Disk Management**. If the recovery partition is present, a Recovery drive is listed in the window.

△ **CAUTION:** HP Recovery Manager (partition or discs/flash drive) restores only software that was preinstalled at the factory. Software not provided with this computer must be reinstalled manually.

📝 **NOTE:** Recovery discs have been included if your computer does not have a recovery partition.

Creating restore media

HP recommends that you create either a set of recovery discs or a recovery flash drive to ensure that you can restore your computer to its original factory state if the hard drive fails, or if for any reason you cannot restore using the recovery partition tools. Create these discs or the flash drive after setting up the computer for the first time.

📝 **NOTE:** HP Recovery Manager allows the creation of only one set of recovery discs or one recovery flash drive. Handle these discs or the flash drive carefully and keep them in a safe place.

NOTE: If your computer does not include an integrated optical drive, you can use an optional external optical drive (purchased separately) to create recovery discs, or you can purchase recovery discs for your computer from the HP Web site. If you use an external optical drive, it must be connected directly to a USB port on the computer, not to a USB port on an external device, such as a USB hub.

Guidelines:

- Purchase high-quality DVD-R, DVD+R, DVD-R DL, or DVD+R DL discs.

📝 **NOTE:** Read-write discs, such as CD-RW, DVD±RW, double-layer DVD±RW, and BD-RE (rewritable Blu-ray) discs, are not compatible with the Recovery Manager software.

- The computer must be connected to AC power during this process.
- Only one set of recovery discs or one recovery flash drive can be created per computer.

📝 **NOTE:** If you are creating recovery discs, number each disc before inserting it into the optical drive.


- If necessary, you can exit the program before you have finished creating the recovery discs or the recovery flash drive. The next time you open Recovery Manager, you will be prompted to continue the backup creation process.

To create a set of recovery discs or a recovery flash drive:

1. Select **Start > All Programs > Recovery Manager > Recovery Media Creation**.
2. Follow the on-screen instructions.

Performing a system restore

Recovery Manager software allows you to repair or restore the computer to its original factory state. Recovery Manager works from recovery discs, from a recovery flash drive, or from a dedicated recovery partition (select models only) on the hard drive.

 **NOTE:** A system restore needs to be performed if the computer hard drive fails or if all attempts to correct any computer functionality issues fail. A system restore should be used as a final attempt to correct computer issues.

Note the following when performing a system restore:

- You can restore only a system that you have previously backed up. HP recommends that you use HP Recovery Manager to create either a set of recovery discs or a recovery flash drive as soon as you set up the computer.
- Windows has its own built-in repair features, such as System Restore. If you have not already tried these features, try them before using Recovery Manager.
- Recovery Manager restores only software that was preinstalled at the factory. Software not provided with this computer must be downloaded from the manufacturer's Web site or reinstalled from the disc provided by the manufacturer.

Restoring using the dedicated recovery partition (select models only)

When using the dedicated recovery partition, there is an option to back up pictures, music and other audio, videos and movies, recorded TV shows, documents, spreadsheets and presentations, e-mails, and Internet favorites and settings during this process.

To restore the computer from the recovery partition, follow these steps:

1. Access Recovery Manager in either of the following ways:
 - Select **Start > All Programs > Recovery Manager > Recovery Manager**.
 - or –
 - Turn on or restart the computer, and then press **esc** while the “Press the ESC key for Startup Menu” message is displayed at the bottom of the screen. Then, press **f11** while the “F11 (System Recovery)” message is displayed on the screen.
2. Click **System Recovery** in the **Recovery Manager** window.
3. Follow the on-screen instructions.

Restoring using the restore media

1. If possible, back up all personal files.
2. Insert the first recovery disc into the optical drive on your computer or an optional external optical drive, and then restart the computer.

– or –

Insert the recovery flash drive into a USB port on your computer, and then restart the computer.



NOTE: If the computer does not automatically restart in the Recovery Manager, the computer boot order needs to be changed.

3. Press **f9** at system bootup.
4. Select the optical drive or the flash drive.
5. Follow the on-screen instructions.

Changing the computer boot order

To change the boot order for recovery discs:

1. Restart the computer.
2. Press **esc** while the computer is restarting, and then press **f9** for boot options.
3. Select **Internal CD/DVD ROM Drive** from the boot options window.


To change the boot order for a recovery flash drive:

1. Insert the flash drive into a USB port.
2. Restart the computer.
3. Press **esc** while the computer is restarting, and then press **f9** for boot options.
4. Select the flash drive from the boot options window.

Backing up and recovering your information


It is very important to back up your files and keep any new software in a safe place. As you add new software and data files, continue to create backups on a regular basis.

How completely you are able to recover your system depends on how recent your backup is.

 **NOTE:** A recovery from your most recent backup needs to be performed if the computer has a virus attack or if any major system components fail. In order to correct computer issues, a recovery should be attempted first, before a system restore is attempted.

You can back up your information to an optional external hard drive, a network drive, or discs. Back up your system at the following times:

- At regularly scheduled times

 **TIP:** Set reminders to back up your information periodically.

- Before the computer is repaired or restored
- Before you add or modify hardware or software

Guidelines:

- Create system restore points using the Windows® System Restore feature, and periodically copy them to an optical disc or an external hard drive. For more information on using system restore points, refer to [Using Windows system restore points on page 42](#).
- Store personal files in the Documents library and back up this folder periodically.
- Save customized settings in a window, toolbar, or menu bar by taking a screen shot of your settings. The screen shot can be a time-saver if you have to re-enter your preferences.

To create a screen shot:

1. Display the screen you want to save.
2. Copy the screen image:
To copy only the active window, press **alt + prt sc**.
To copy the entire screen, press **prt sc**.
3. Open a word-processing document, and then select **Edit > Paste**. The screen image is added to the document.
4. Save and print the document.

Using Windows Backup and Restore

Guidelines:

- Be sure that the computer is connected to AC power before you start the backup process.
- Allow enough time to complete the backup process. Depending on file sizes, it may take over an hour.

To create a backup:


1. Select **Start > Control Panel > System and Security > Backup and Restore**.
2. Follow the on-screen instructions to schedule and create a backup.



NOTE: Windows® includes the User Account Control feature to improve the security of the computer. You may be prompted for your permission or password for tasks such as installing software, running utilities, or changing Windows settings. Refer to Help and Support for more information.

Using Windows system restore points


A system restore point allows you to save and name a snapshot of your hard drive at a specific point in time. You can then recover back to that point if you want to reverse subsequent changes.

 **NOTE:** Recovering to an earlier restore point does not affect data files saved or e-mails created since the last restore point.

You also can create additional restore points to provide increased protection for your files and settings.

When to create restore points

- Before you add or modify software or hardware
- Periodically, whenever the computer is functioning optimally

 **NOTE:** If you revert to a restore point and then change your mind, you can reverse the restoration.

Create a system restore point

1. Select **Start > Control Panel > System and Security > System**.
2. In the left pane, click **System Protection**.
3. Click the **System Protection** tab.
4. Follow the on-screen instructions.

Restore to a previous date and time

To revert to a restore point (created at a previous date and time), when the computer was functioning optimally, follow these steps:

1. Select **Start > Control Panel > System and Security > System**.
2. In the left pane, click **System Protection**.
3. Click the **System Protection** tab.
4. Click **System Restore**.
5. Follow the on-screen instructions.

7 Customer support

- [Contacting customer support](#)
- [Labels](#)

Contacting customer support


If the information provided in this user guide, in the *HP Notebook Reference Guide*, or in Help and Support does not address your questions, you can contact HP Customer Support at:

<http://www.hp.com/go/contactHP>

 **NOTE:** For worldwide support, click **Contact HP worldwide** on the left side of the page, or go to http://welcome.hp.com/country/us/en/wwcontact_us.html.

Here you can:

- Chat online with an HP technician.

 
 **NOTE:** When technical support chat is not available in a particular language, it is available in English.

- E-mail HP Customer Support.
- Find HP Customer Support worldwide telephone numbers.
- Locate an HP service center.

Labels

The labels affixed to the computer provide information you may need when you troubleshoot system problems or travel internationally with the computer:

- Serial number label—Provides important information, including the following:

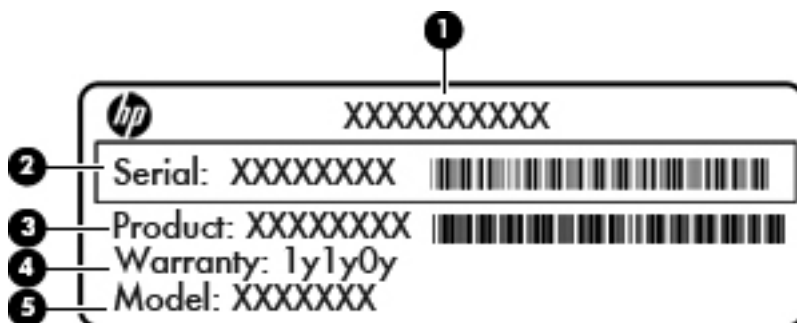

Component	
(1)	Product name
(2)	Serial number (s/n)
(3)	Part number/Product number (p/n)
(4)	Warranty period
(5)	Model description

- Have this information available when you contact technical support. The serial number label is affixed to the bottom of the computer.
- Microsoft® Certificate of Authenticity—Contains the Windows Product Key. You may need the Product Key to update or troubleshoot the operating system. The Microsoft Certificate of Authenticity is located on the bottom of the computer.
- Regulatory label—Provides regulatory information about the computer. The regulatory label is affixed inside the battery bay.
- Wireless certification label or labels (select models only)—Provide information about optional wireless devices and the approval markings of some of the countries or regions in which the devices have been approved for use. If your computer model includes one or more wireless devices, one or more certification labels are included with your computer. You may need this information when traveling internationally. Wireless certification labels are affixed inside the battery bay.

8 Specifications

- [Input power](#)
- [Operating environment](#)


Input power

The power information in this section may be helpful if you plan to travel internationally with the computer.

The computer operates on DC power, which can be supplied by an AC or a DC power source. The AC power source must be rated at 100–240 V, 50–60 Hz. Although the computer can be powered from a standalone DC power source, it should be powered only with an AC adapter or a DC power source supplied and approved by HP for use with this computer.

The computer can operate on DC power within the following specifications.

Input power	Rating
Operating voltage and current	18.5 V dc @ 3.5 A – 65 W or 19 V dc @ 4.74 A – 90 W

 **NOTE:** This product is designed for IT power systems in Norway with phase-to-phase voltage not exceeding 240 V rms.

NOTE: The computer operating voltage and current can be found on the system regulatory label.

Operating environment

Factor	Metric	U.S.
Temperature		
Operating (writing to optical disc)	5°C to 35°C	41°F to 95°F
Nonoperating	-20°C to 60°C	-4°F to 140°F
Relative humidity (noncondensing)		
Operating	10% to 90%	10% to 90%
Nonoperating	5% to 95%	5% to 95%
Maximum altitude (unpressurized)		
Operating	-15 m to 3,048 m	-50 ft to 10,000 ft
Nonoperating	-15 m to 12,192 m	-50 ft to 40,000 ft

Index

A

action keys
 decrease screen brightness 19
 Help and Support 19
 identifying 8
 increase screen brightness 19
 next track 19
 play, pause, resume 19
 previous track 19
 switch screen image 19
 volume down 20
 volume mute 20
 volume up 20
 Web browser 19
 wireless 20
audio-in (microphone) jack 10
audio-out (headphone) jack 10

B

backing up
 customized window, toolbar,
 and menu bar settings 40
 personal files 40
battery bay 13, 45
battery release latch 13
battery, replacing 26
battery/AC adapter light 9
Bluetooth label 45
buttons
 left TouchPad 5
 power 7
 right TouchPad 5
 TouchPad on/off 5

C

caps lock light, identifying 6
Certificate of Authenticity label 45
components
 bottom 13

display 12

 left side 10

 right side 9

 top 5

connector, power 9

D

Digital Media Slot, identifying 10

E

esc key, identifying 8

external monitor port 10

F

f11 38

fn key, identifying 8

H

hard drive

 installing 29

 removing 28

hard drive bay, identifying 13

hard drive light 11

HDMI port, identifying 10

I

input power 47

integrated webcam light,
 identifying 12

internal display switch 12

internal microphone, identifying
 12

Internet connection setup 16

ISP, using 15

J

jacks

 audio-in (microphone) 10

 audio-out (headphone) 10

network 10

RJ-45 (network) 10

K

keypad, external

 num lock 20

 using 20

keys

 action 8

 esc 8

 fn 8

 Windows applications 8

 Windows logo 8

L

labels

 Bluetooth 45

 Microsoft Certificate of
 Authenticity 45

 regulatory 45

 serial number 45

 wireless certification 45

 WLAN 45

latch, battery release 13

lights

 battery/AC adapter 9

 caps lock 6

 hard drive 11

 optical drive 9

 power 6, 11

 webcam 12

 wireless 6

M

memory module

 inserting 32

 removing 31

 replacing 30

- memory module compartment
 - cover
 - removing 31
 - replacing 33
- memory module compartment, identifying 13
- Microsoft Certificate of Authenticity label 45
- mouse, external
 - setting preferences 21

N

- network jack, identifying 10
- num lock, external keypad 20

O

- operating environment 48
- operating system
 - Microsoft Certificate of Authenticity label 45
 - Product Key 45
- optical drive light, identifying 9
- optical drive, identifying 9

P

- pinching TouchPad gesture 25
- pointing devices, setting preferences 21
- ports
 - external monitor 10
 - HDMI 10
 - USB 9, 10
- power button, identifying 7
- power connector, identifying 9
- power light, identifying 6, 11
- Product Key 45
- product name and number, computer 45

R

- recovering from the dedicated recovery partition 38
- recovering from the recovery discs 39
- recovery discs 37
- Recovery Manager 38
- recovery, system 38
- regulatory information
 - regulatory label 45
 - wireless certification labels 45
- restore points 42

- RJ-45 (network) jack, identifying 10

S

- scrolling TouchPad gesture 25
- security cable slot, identifying 9
- serial number 45
- serial number, computer 45
- setup of WLAN 16
- slots
 - Digital Media 10
 - security cable 9
- speakers, identifying 12
- supported discs 37
- system recovery 38
- system restore points 42

T

- TouchPad
 - buttons 5
 - using 21
- TouchPad gestures
 - pinching 25
 - scrolling 25
 - zooming 25
- TouchPad light 5
- TouchPad on/off button 5
- TouchPad zone, identifying 5
- traveling with the computer 45

U

- USB ports, identifying 9, 10
- using system restore 42

V

- vents, identifying 10, 13

W

- webcam light, identifying 12
- webcam, identifying 12
- Windows applications key, identifying 8
- Windows logo key, identifying 8
- wireless certification label 45
- wireless light 6
- wireless network (WLAN), equipment needed 16
- wireless network, connecting 15
- wireless router, configuring 17
- wireless set up 16

WLAN

- connecting 15
- protecting 17
- WLAN antennas, identifying 12
- WLAN device 45
- WLAN label 45

Z

- zooming TouchPad gesture 25