 


ZONE WIRED 2


Setup Guide

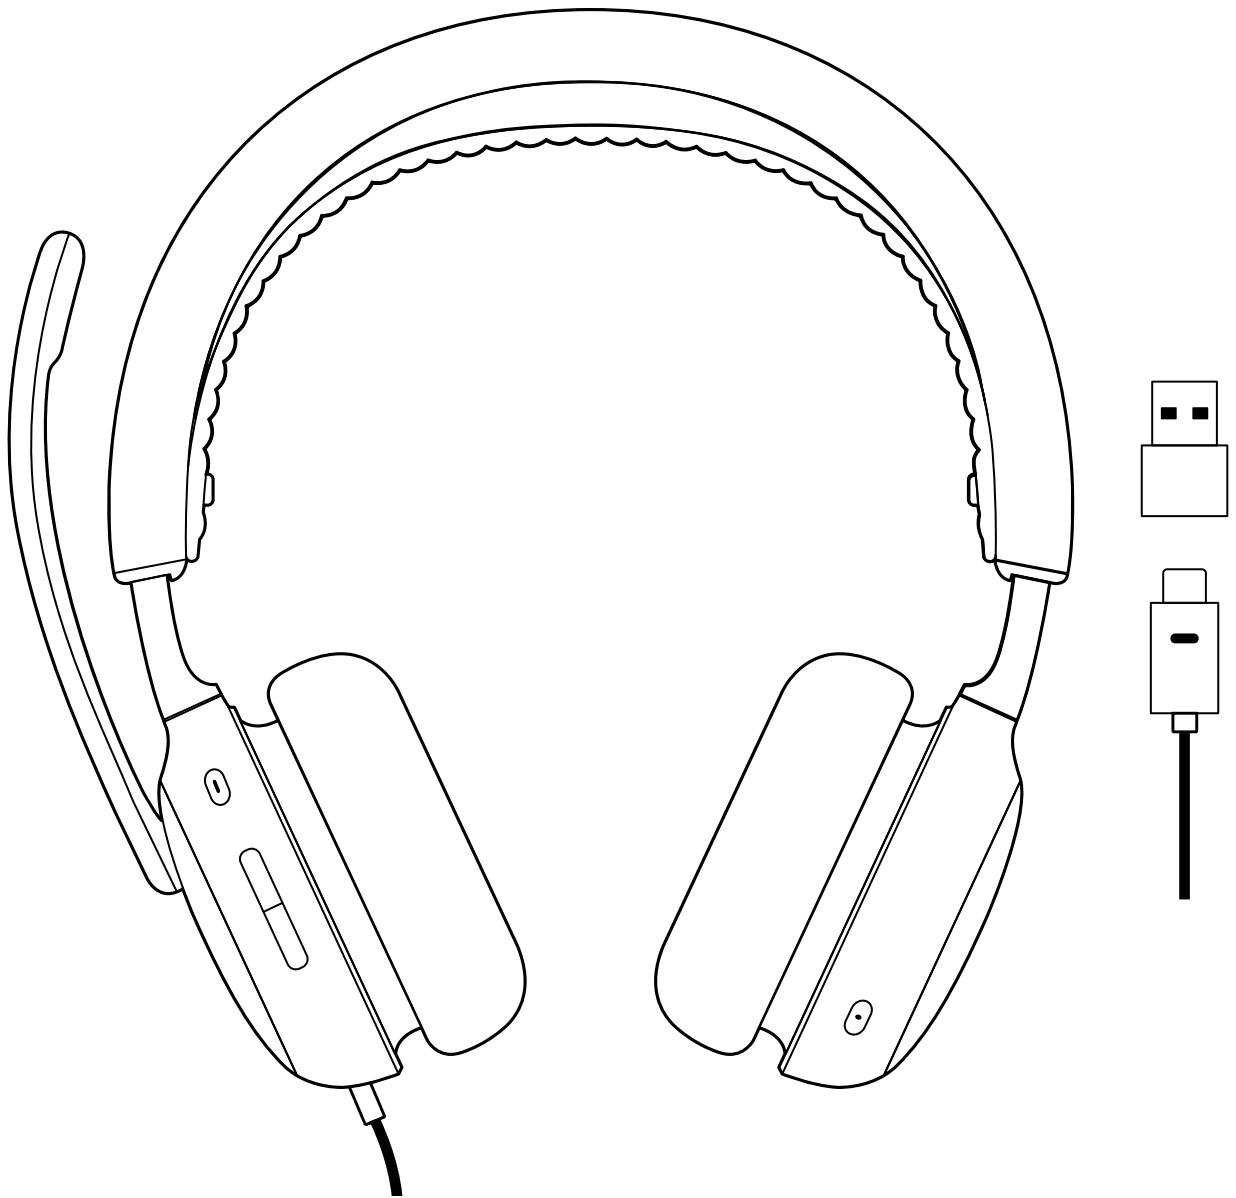


CONTENTS

English	3
-------------------	---

 KNOW YOUR PRODUCT

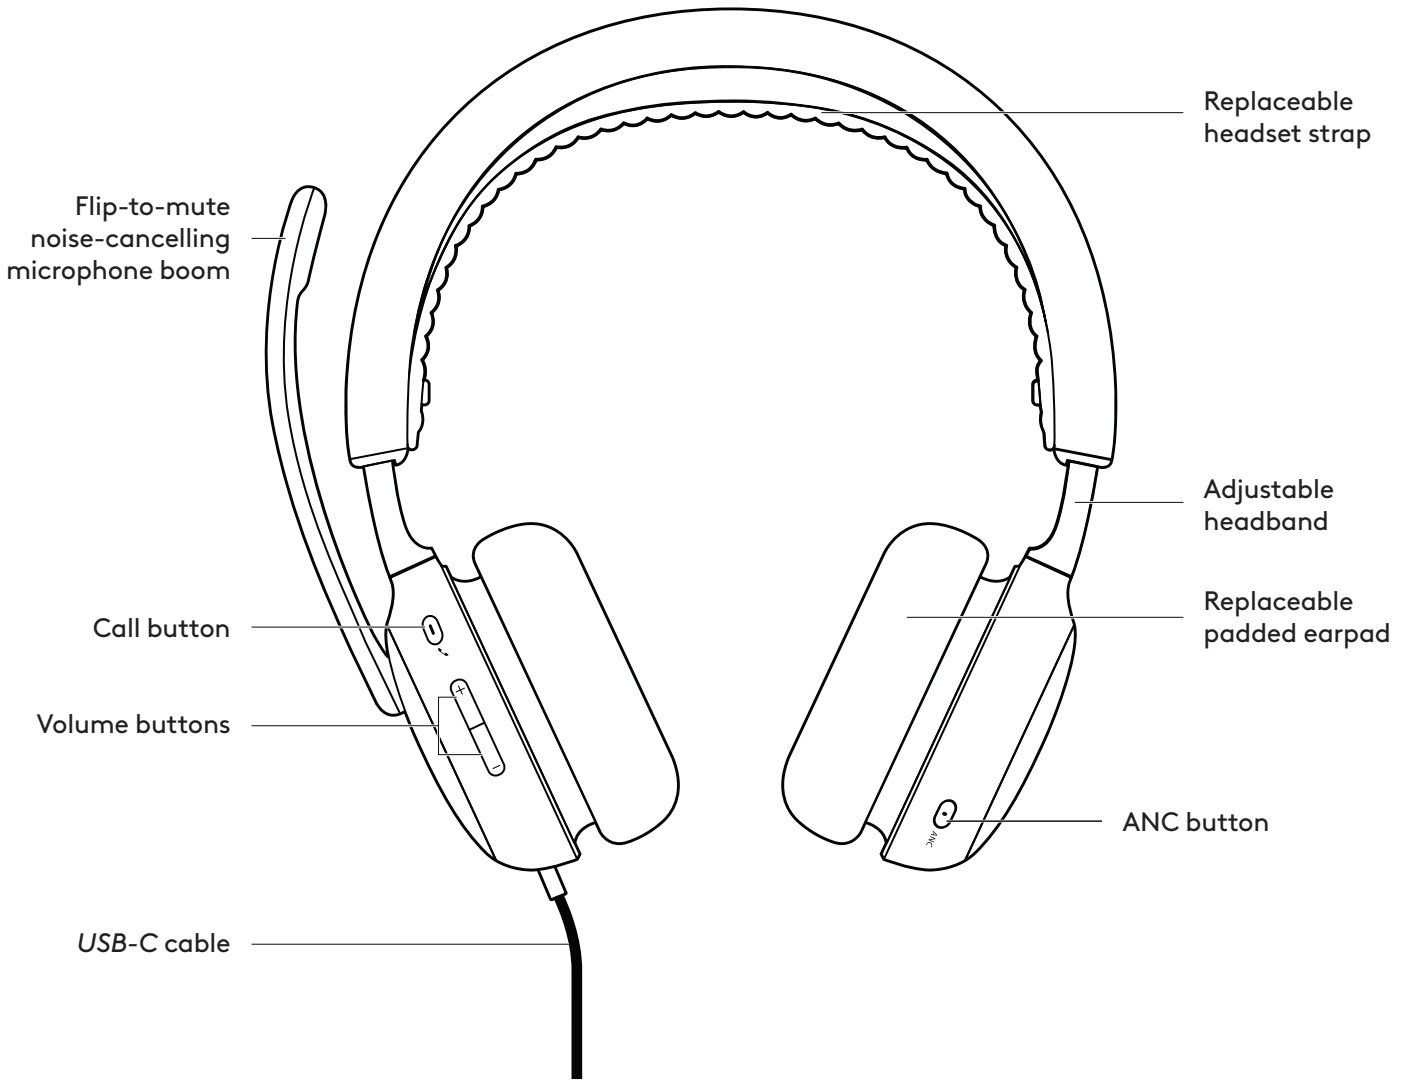


USB PLUG AND ADAPTER

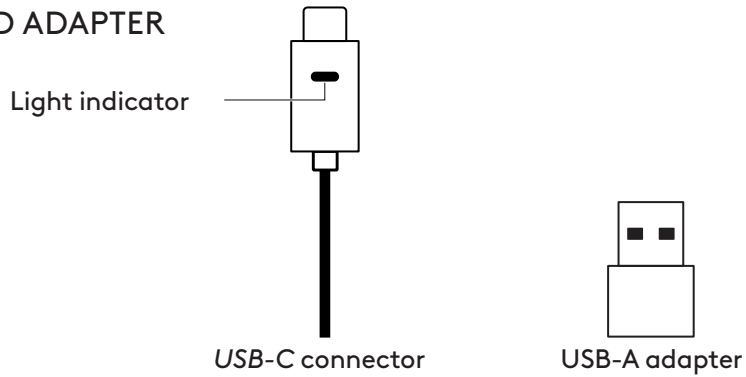 

WHAT'S IN THE BOX

 
1. Headset
2. USB-A adapter
3. Travel bag
4. User documentation

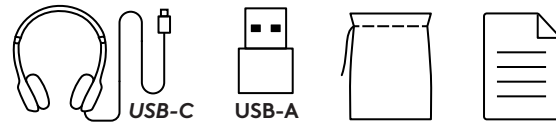

CONNECT YOUR HEADSET


Plug the *USB-C* connector into the computer *USB-C* port. Or use the provided *USB-A* adapter to plug the headset into the computer *USB-A* port.

 Note: Only use the *USB-A* adapter with the provided headset.

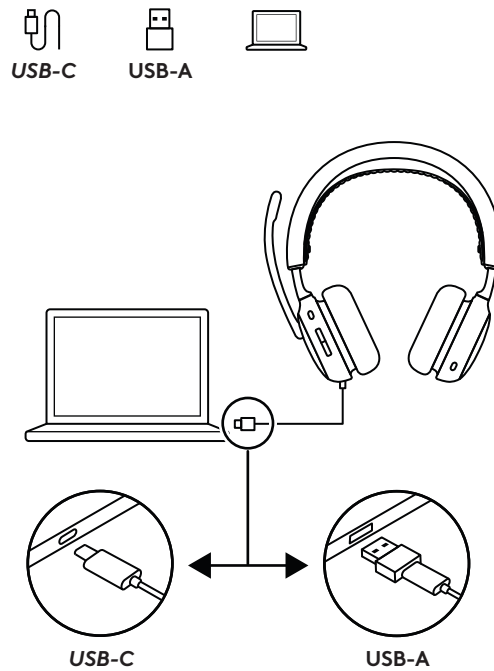


ADJUSTING HEADSET

 1. Adjust the headset by sliding earcups up and down the headband.
2. Swivel earcups to fit on your ear.
3. It may be easier to adjust the headset on your head. Move the earcups up and down the headband until they sit comfortably on your ears.

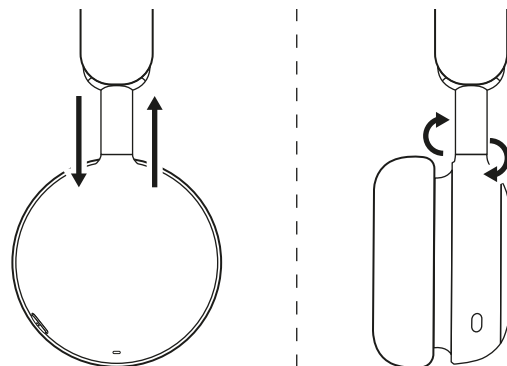


ADJUSTING THE MICROPHONE BOOM




 
The microphone boom rotates 270 degrees. Wear it on either the left or right side. The audio channel will switch automatically, depending on the direction you are wearing the microphone.

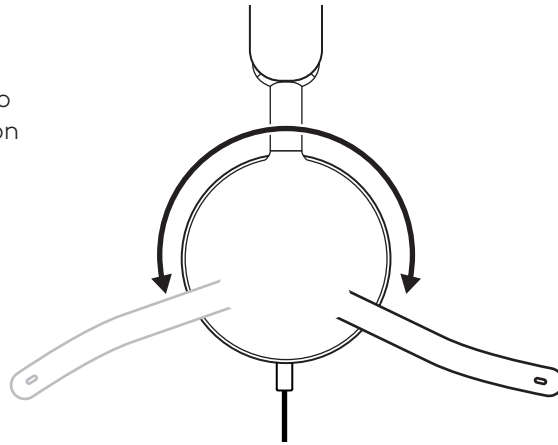

 Mic boom should be placed close or next to your mouth, aligned with the corner of the mouth.

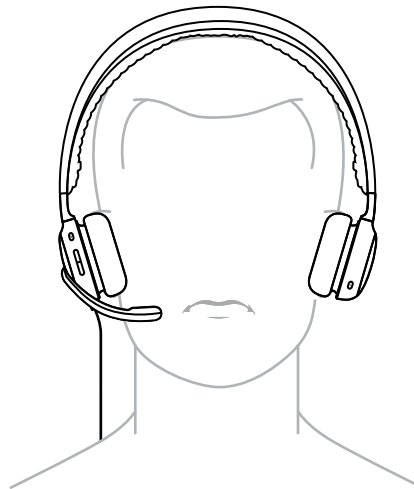

HEADSET CONTROLS

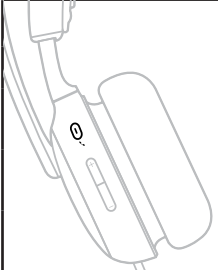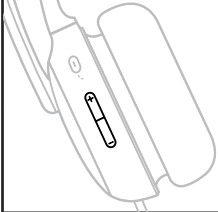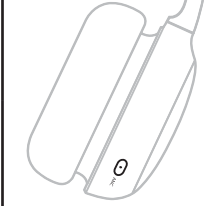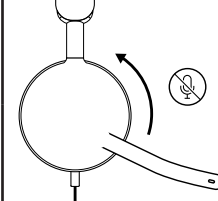    Button	Usage		Action
	Call controls¹	Answer / End call	Short press
		Reject call	2 seconds press
	Media controls (Enable with Logi Tune)	Play / Pause	Short press
		Next track	Double press
		Previous track	Triple press
	Volume controls	Volume up	Short press "+"
		Volume down	Short press "-"
	ANC controls¹	Toggle between ANC and Transparency On	Short press
		ANC off	2 seconds press
	Mute	Mute on	Mic boom flip up
		Mute off	Mic boom flip down

 
Note:

- Voice prompts indicate when the mic is mute on/off.²

ACTIVE NOISE CANCELLATION (ANC)

ANC blocks out the noise around you to help you concentrate on the task at hand.


- Press the ANC button on the side of the earcup to toggle between ANC and Transparency mode.
- There will be voice prompts when switching between modes.²

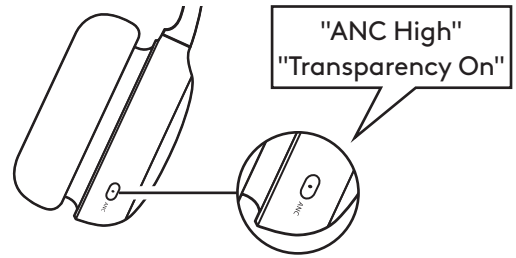

Note: ANC button can be customized to cycle through up to 5 different modes on Logi Tune app.

CONNECTOR LIGHT INDICATOR

Light		Status
White	Solid	Ongoing call
	Flashing	Incoming call
Red	Solid	Mute on
Purple and White	Blinking	Headset firmware updating

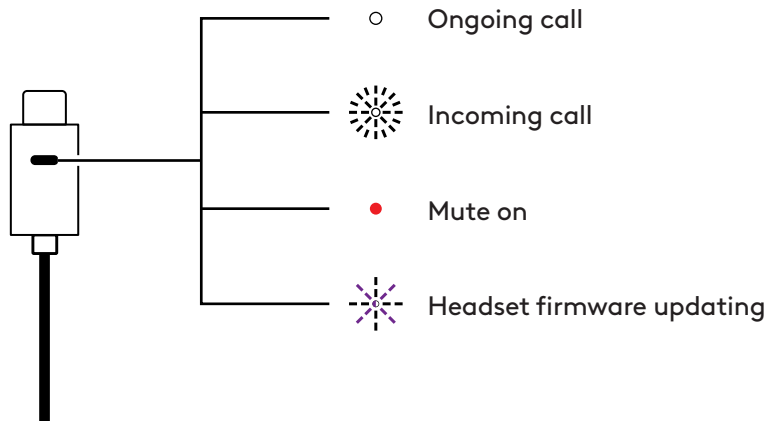 

LOGI TUNE

Logi Tune helps boost your headset performance with periodic software and firmware updates. Learn more and download Logi Tune at logitech.com/tune.



ADJUSTING SIDETONE

Sidetone lets you hear your own voice while speaking so you are aware of how loud you are talking. In Logi Tune app, select the sidetone feature, wear your headset, adjust the setting while speaking.

- A higher number means you hear more external sound.
- A lower number means you hear less external sound.

MIC EQ

Customize Mic EQ in Logi Tune to adjust your voice to sound brighter or deeper.

HEARING PROTECTION

Zone Wired 2 provides three types of protection to help you hear safely.

Peak limiting: Audio volume is always limited at 100dBA to prevent hearing damages.

Anti-startle protection: It limits sudden audio spikes to avoid acoustic shocks as per Australian G616 guideline. This can be enabled on the Logi Tune app and applies to call activities only.

Noise exposure over time: It monitors the average daily noise levels in calls not to exceed time-weighted average of 85dBA as per Australian G616 guideline. This can be enabled on the Logi Tune app and applies to call activities only.

ENABLE EQ FOR CALLS

Logi Tune now lets you apply equalizer settings to call audio in addition to music. Customize the sound you hear in calls with deeper bass, crisper treble, or any other preferred settings.

Turn on the "Enable EQ for calls" toggle in Logi Tune to use your customized equalizer settings for calls.

POWER SAVING MODE

Activate Power Saving Mode in Logi Tune to lower power usage from the device your headset is connected to.

When enabled, the headset will automatically turn off Active Noise Cancellation (ANC) and the light indicator after 30 minutes of inactivity to save power.

To wake up the headset, simply start using the headset by joining a call, listening to music or pressing any button.

UPDATE YOUR HEADSET

We recommend updating your headset to ensure optimal performance. To do so, download Logi Tune from logitech.com/tune and check for available firmware updates.

DIMENSIONS

Headset:

Height x Width x Depth:

185.2 x 183.6 x 73.0 mm

Weight:

223.5 g

Adapter:

Height x Width x Depth:

24.5 x 15.4 x 8.7 mm

SYSTEM REQUIREMENTS

Works with common calling applications across almost all platforms and operating systems. Works with *Windows*, *Mac*, or *Chrome*-based computer³ via *USB-C* or *USB-A*.

TECHNICAL SPECIFICATIONS

Microphone type: 2 noise-canceling mics with AI-based algorithm and Mic EQ

Frequency response (headset): 20 Hz – 20 kHz (music mode), 100 Hz – 8 kHz (talk mode)

Frequency response (microphone): 100 Hz – 8 kHz

Cable length: 1.9 m

Audio compliance: EN 50332-2 compliant

FOOTNOTE

¹ Customize the button in Logi Tune. Check Logi Tune compatibility on logi.com/tune.

² The headset currently supports voice prompts in the following languages with the Logi Tune desktop app: English, French, German and Spanish. You can choose your preferred language in the app.

³ Device basic functions will be supported for operating systems that do not support Logi Tune.

www.logitech.com/support/zonewired2

© 2025 Logitech. Logitech, Logi, Zone, and the Logitech logo are trademarks or registered trademarks of Logitech Europe S.A. and/or its affiliates in the U.S. and other countries.

Windows is a trademark of the Microsoft group of companies. *macOS* is a trademark of Apple Inc. *Google*, *ChromeOS*, and *Chrome* are trademarks of Google LLC. *USB-C* is a trademark of USB Implementers Forum. All other third party trademarks are the property of their respective owners. Logitech assumes no responsibility for any errors that may appear in this manual. Information contained herein is subject to change without notice.

WEB-621-002785 00A