


## 4-Port USB 3.0 Over Cat6a Extender - USB-A 5Gbps - 100m (328ft)

### Product ID


C10043-USB-EXTENDER

### Transmitter

#### Front

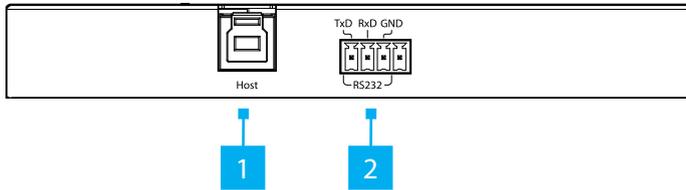


#### Rear

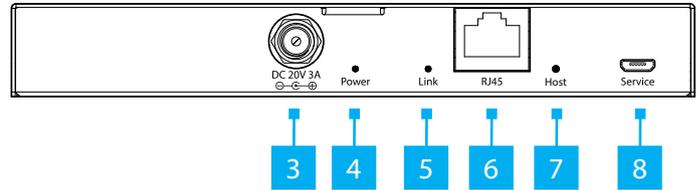


### Receiver

#### Front

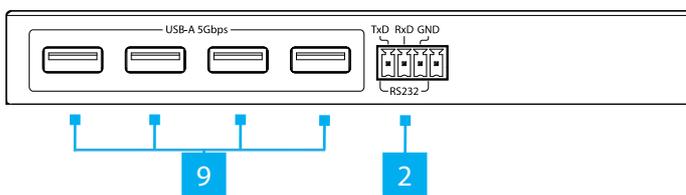

#### Rear

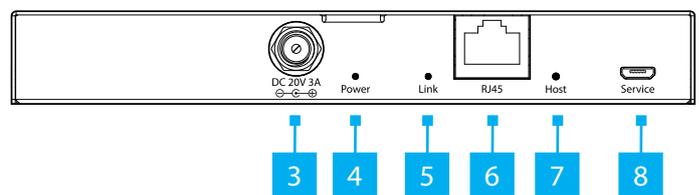

\*Product may vary from image

	Feature	Function
1	USB Host Port	<ul style="list-style-type: none"> <li>Connect to a <b>Host Computer</b> with the included <b>USB-A to B Cable</b></li> </ul>
2	Terminal Block RS232 Pass-through	<ul style="list-style-type: none"> <li>Use the included <b>Terminal Block</b> to enable <b>RS232 Serial Pass-through</b> between the <b>Transmitter</b> and <b>Receiver</b></li> <li>Supports <b>Baud Rates</b> up to 115200bps</li> </ul>
3	DC IN Power Port (Screw-on)	<ul style="list-style-type: none"> <li>Connect the included <b>Power Adapter</b> (20V 3A)</li> </ul> <p><b>Note:</b> Only one Power Adapter is required to power the Transmitter and Receiver. The unit that is being powered will power the second unit via Power over HDBaseT (PoH)</p>
4	Power Indicator	<ul style="list-style-type: none"> <li><b>ON:</b> Indicates the <b>Transmitter</b> or <b>Receiver</b> is receiving power</li> <li><b>OFF:</b> Indicates the <b>Transmitter</b> or <b>Receiver</b> is not receiving power</li> </ul>
5	Link Indicator	<ul style="list-style-type: none"> <li><b>ON: Transmitter</b> or <b>Receiver</b> is connected via <b>Ethernet Cable</b></li> <li><b>Flashing Green</b> or <b>OFF:</b> Indicates no connection or a link error between the <b>Transmitter</b> and <b>Receiver</b></li> </ul>
6	RJ45 Port	<ul style="list-style-type: none"> <li>Used to connect the <b>Transmitter</b> and <b>Receiver</b> with an <b>Ethernet Cable</b></li> </ul>
7	USB Host Indicator	<ul style="list-style-type: none"> <li><b>ON: Extender</b> is connected to the <b>Host Computer</b></li> <li><b>OFF:</b> Not connected to the <b>Host Computer</b></li> </ul>
8	Service Port	<ul style="list-style-type: none"> <li>For StarTech.com use only</li> </ul>
9	USB Ports	<ul style="list-style-type: none"> <li>Connect up to four <b>USB-A Peripherals</b></li> <li>Supports up to USB 5Gbps</li> </ul>

### Package Contents

- Transmitter (Local Unit) x 1
- Receiver (Remote Unit) x 1
- Mounting Kit (includes M2.5x5mm screws) x 1
- Universal Power Adapter (NA/JP, AU/NZ, UK, EU) x 1
- Terminal Block x 2
- USB-A to B Cable 6ft (1.8m) x 1
- Product Documentation x 1

## Requirements

For the latest manuals, product information, technical specifications, and declarations of conformance, please visit:

[www.StarTech.com/C10043-USB-EXTENDER](http://www.StarTech.com/C10043-USB-EXTENDER)


- Cat6a or higher rated Ethernet cable
- (Optional) Mounting screws for desk or wall installation
- (Optional) Phillips head screwdriver

## Warning!


- Before wiring, disconnect the power from all devices that are going to be used
- This device is point-to-point and cannot operate through networking devices such as routers, switches, or network hubs

## Installation

### Transmitter and Receiver Typical Installation

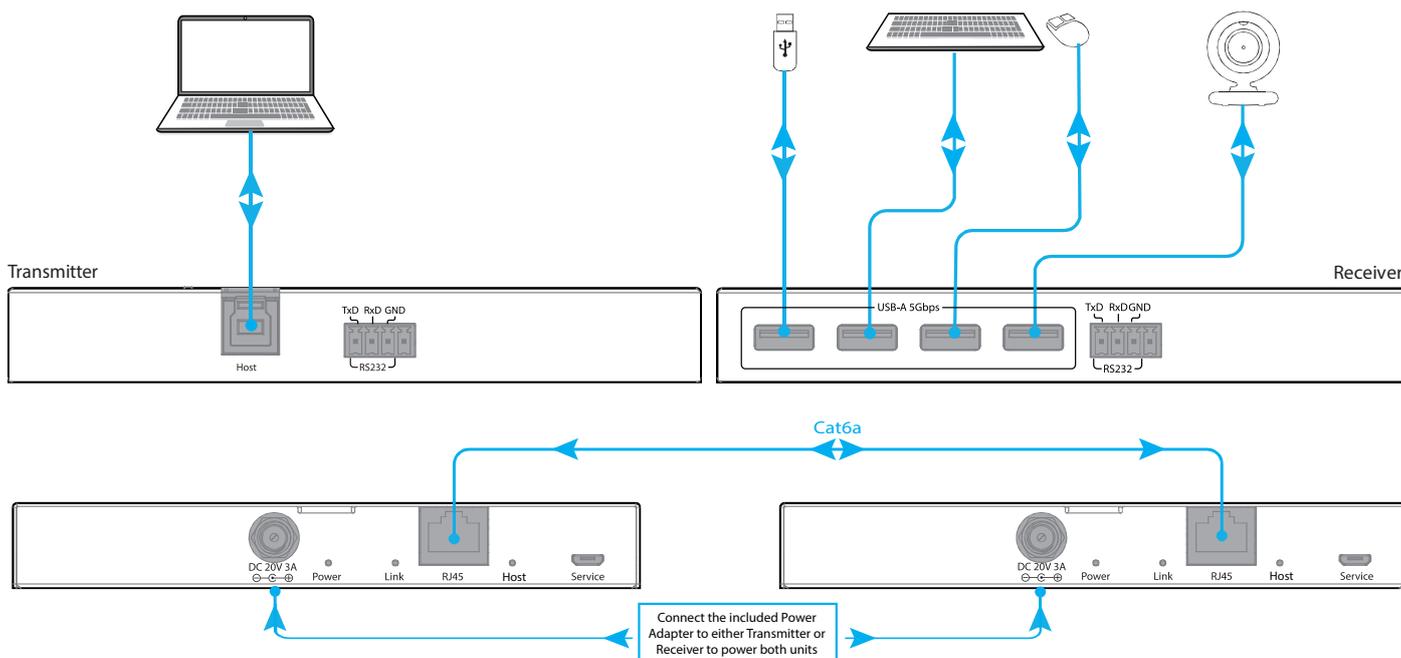

### (Optional) Surface Mounting

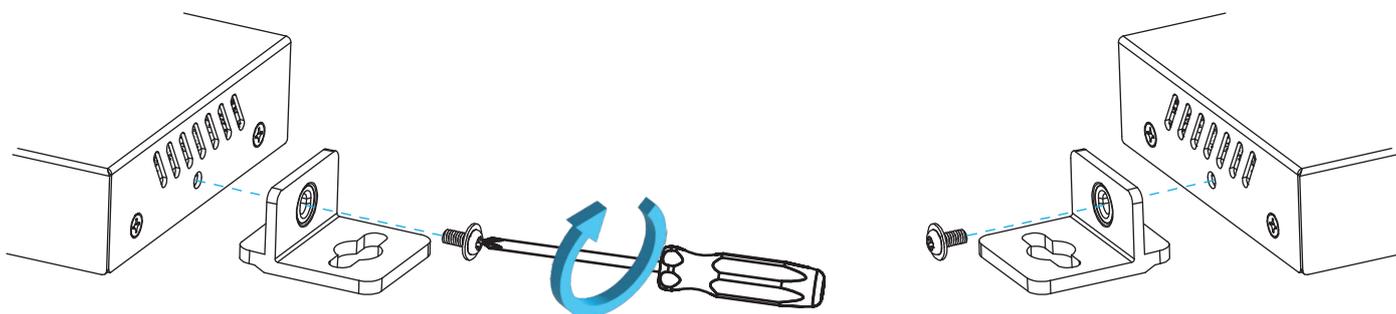

**HQ Contact:**

StarTech.com Ltd.  
45 Artisans Crescent,  
London, ON N5V 5E9,  
Canada

**US Contact:**

StarTech.com USA LLP  
4490 South Hamilton Rd,  
Groveport, OH 43125,  
United States

**UK Contact:**

StarTech.com Ltd.  
15 Gowerton Rd,  
Northampton, NN4 7BW,  
United Kingdom

**EU Contact:**

StarTech.com Ltd.  
Siriusdreef 17-27  
2132 WT Hoofddorp  
The Netherlands

**JP Contact:**

StarTech.com K.K.  
Atelier Yours Ogawamachi 7F  
1-10-2 Kanda Ogawamachi  
Chiyoda-ku, Tokyo 101-0052  
Japan

FR: startech.com/fr  
DE: startech.com/de  
ES: startech.com/es  
NL: startech.com/nl  
IT: startech.com/it  
JP: startech.com/jp