

Quick Reference Guide



Samsung Care

Samsung Premium Care

Get more than just protection for your device. Pick the time and place, and a team member will meet you to set up, troubleshoot, repair or replace your product.

Enroll at samsung.com/us/support/premium-care

GET TO KNOW YOUR PRODUCT:

- Access user manuals, troubleshooting, and more at samsung.com/us/support

ASK THE COMMUNITY:

- Ask questions and share solutions with other Samsung customers at us.community.samsung.com

CONTACT US FOR SUPPORT:

- Get hardware or software support, at samsung.com/us/support/contact or call us at 1.800.SAMSUNG
- Find a service location near you at samsung.com/us/support/service/locations


1 About your phone



Images shown are of the Galaxy S10+ and are for reference only.

2 Set up your phone

 
Your SIM card may be pre-installed.

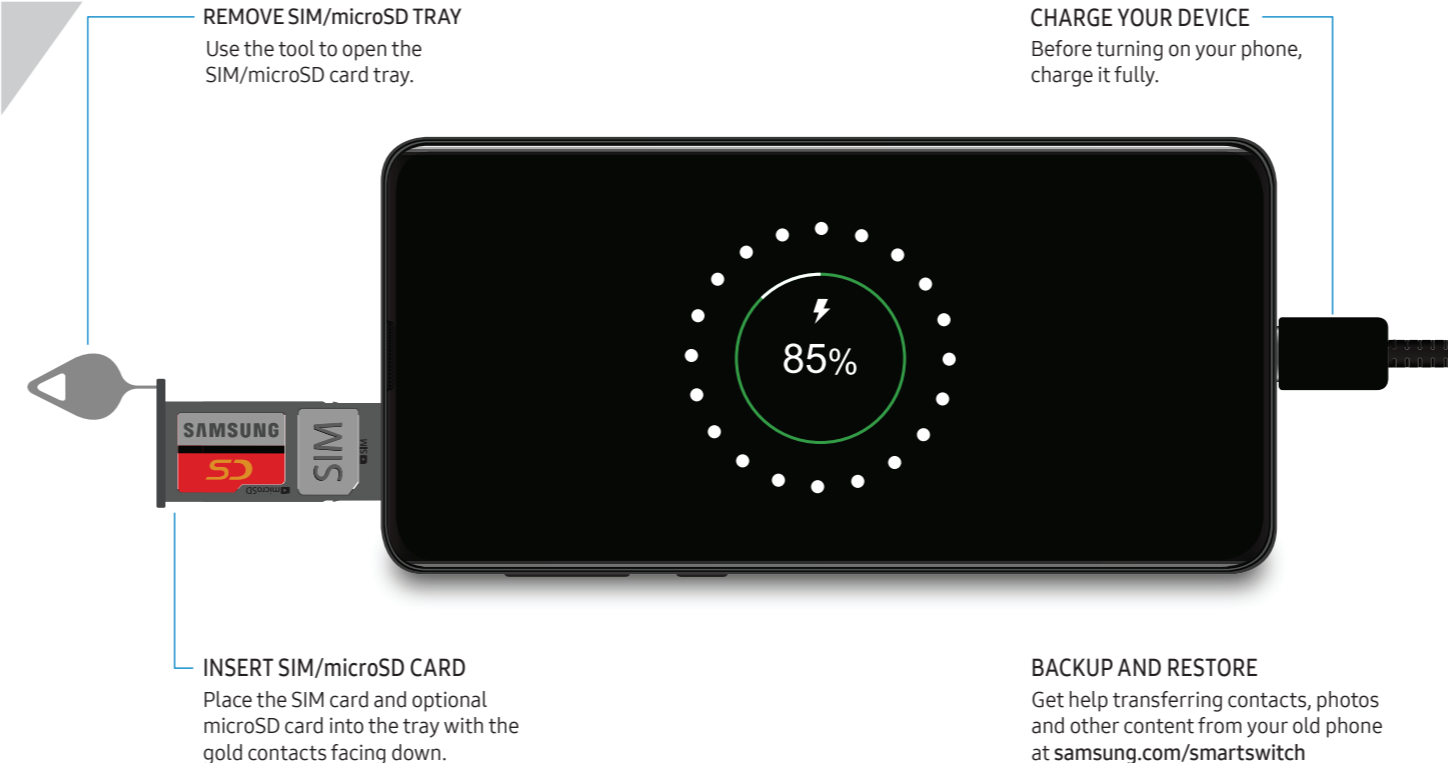

Note: Use only Samsung-approved charging devices and accessories. Samsung accessories are designed for your device to maximize battery life. Using other accessories may void your warranty and may cause damage.

3 Search

 From the Home screen swipe up and search for apps, settings, contacts, and more.

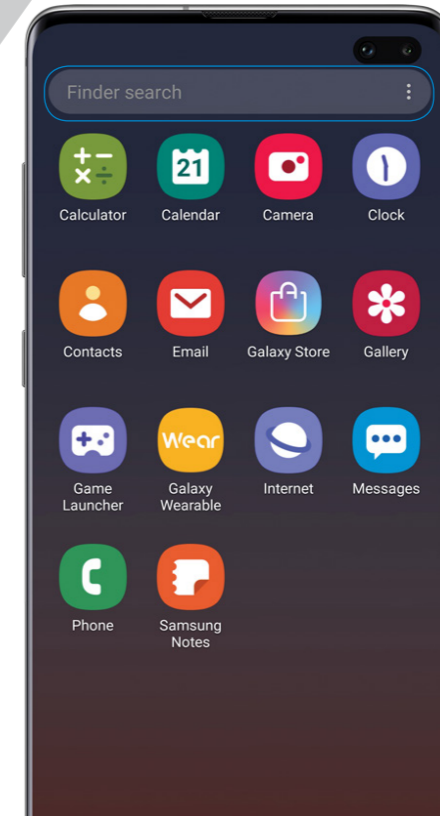

Customize your phone

From the Home screen, swipe up, and then tap Settings to customize, connect and personalize your phone:

- CONNECTIONS
Connect to a Wi-Fi™ network, Bluetooth device and other connection options.
- SOUNDS AND VIBRATION
Set device volume and sounds.
- DISPLAY
Customize the Home screen, navigation gestures, and display brightness.
- WALLPAPERS AND THEMES
Make the device your own with fun and unique wallpapers and themes.
- DIGITAL WELLBEING
Configure usage limits on your device.
- LOCK SCREEN
Select a screen lock type and set security options.
- BIOMETRICS AND SECURITY
Set facial or fingerprint security options.

Learn more

The Help feature gives access to the user manual and useful information on how to use your device.



To open, from Settings tap Help .

- Make a call
- Send and receive texts
- Manage contacts
- Explore health & fitness
- Utilize accessibility settings

Performance



Bixby Routines

Create custom routines that change your phone settings based on your location or activity. For example, while driving you can create a routine to automatically read notifications aloud.

1. Drag the Status bar down to display the Notification panel.
2. Touch and drag  to access all Quick Settings options.
3. Tap **Bixby Routines** . Then touch and hold to set up.

Wireless PowerShare

Wirelessly charge compatible devices right from your phone.

1. Drag the Status bar down to display the Notification panel.
2. Touch and drag  to access all Quick Settings options.
3. Tap **Wireless PowerShare** .
4. With the phone face down, place the device on the back of the phone to charge.



Wireless PowerShare works with most Qi-Certified devices. Requires minimum 30% battery to share. Speed and power efficiency of charge varies by device. May not work with some accessories, covers, or other manufacturer's devices. If you have trouble connecting or charging is slow, remove any cover from each device. May affect call reception or data services, depending on your network environment.

Camera



Features

- **Dual Pixel:** Focus in a blink.
- **Dual Aperture:** Adapt to bright light and super low light automatically.
- **Ultra wide:** Capture more of the scene.
- **High Dynamic Range (HDR) 10+ recording:** Ensure bright colors are bright, while keeping dark colors dark.
- **Scene optimizer:** Recognize and optimize scenes and colors for brilliant photos.
- **Artistic Live Focus:** Blur the background of a photo to make the subject stand out.
- **Zoom:** Get a closer view of faraway subjects.
- **Hyperlapse:** Create a motion shot while recording a time-lapse video.
- **Super slow-mo:** Capture motion at 960 frames per second.
- **Slow motion:** Capture motion at 245 frames per second.

BIXBY VISION

Identify objects and locations.

TOOLS PANEL

Swipe left or right to select effects.

CAMERA MODES

Swipe left or right to select a mode.

GALLERY

View photos.

CAPTURE

Capture images.



TOGGLE CAMERAS

Switch between the back and front cameras.







Create an AR Emoji

 
Turn your selfie into an emoji.

1. From the Home screen, tap **Camera**  > **AR Emoji** > **Create My Emoji**.
2. Tap  to capture your photo and customize and save your emoji.




Personalize messages with an emoji

1. Tap **Messages**  > **New message**  > **Enter message field**.
2. Tap **Stickers**  to add a GIF or your very own emoji or sticker, and then tap **Send** .




Recent apps

Enjoy the new full-screen view of recent apps.



 Tap **Recents**  to view a list of recently opened apps.

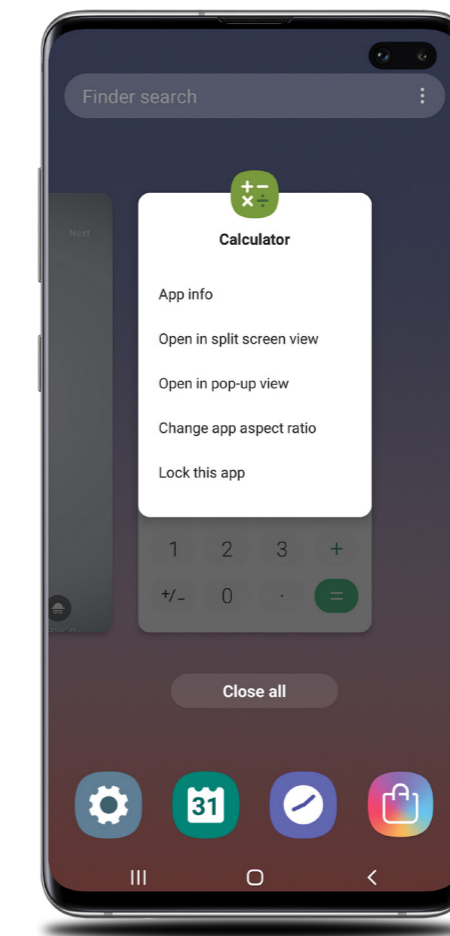- Tap an app icon to view options.
- Swipe up to close.
- Swipe down to open.



Gestures

Customize the Home, Back and Recents keys or remove them and use gestures instead to increase screen space.

1. From **Settings** , tap **Display**  > **Navigation bar**.
2. Tap one of the following Navigation types:
 - Navigation buttons (default)
 - Full screen gestures
 - Button order
 - Gesture hints (Displays only when full screen gestures is selected)