Always there to help you

Register your product and get support at www.philips.com/support

AJT5300





User manual



Contents

1	Important	2
	Safety	2
2	Your clock radio	4
	Introduction	4
	What's in the box	4
	Overview of the clock radio	5
3	Get started	6
	Install battery	6
	Connect power	6
	Turn on	6
4	Set time and alarm	7
	Set time	7
	Set alarm timer	7
5	Listen to FM radio	8
	Prepare FM antenna	8
	Tune to FM radio stations	8
	Store FM radio stations automatically	8
	Store FM radio stations manually	8
	Select a preset radio station	8
6	Har Diseased desires	
0	Use Bluetooth devices Connect a device	9
		,
	Play audio from Bluetooth-enabled de Control your phone call	10
	Control your priorie call	10
7	Other features	11
	Charge your phone	11
	Listen to an external device	11
	Set sleep timer	11
	Adjust volume	12
	Adjust display brightness	12

8	Product information Specifications	13 13
9	Troubleshooting General About Bluetooth device	14 14 14
10	Notice	15

Important

Know these safety symbols



This 'bolt of lightning' indicates uninsulated material within your unit may cause an electrical shock. For the safety of everyone in your household, please do not remove product covering.

The 'exclamation point' calls attention to features for which you should read the enclosed literature closely to prevent operating and maintenance problems.

WARNING: To reduce the risk of fire or electric shock, this apparatus should not be exposed to rain or moisture and objects filled with liquids, such as vases, should not be placed on this apparatus.

CAUTION: To prevent electric shock, match wide blade of plug to wide slot, fully insert.



Warning

- · Never remove the casing of this product.
- · Never lubricate any part of this product.
- Never place this product on other electrical equipment.
- · Keep this product away from direct sunlight, naked flames or heat.
- · Make sure that you always have easy access to the power cord, plug or adaptor to disconnect the product from the power.
- Make sure that there is enough free space around the product for ventilation.
- Only use attachments or accessories specified by the manufacturer.

- Battery usage CAUTION To prevent battery leakage which may result in bodily injury, property damage, or damage to the product:
 - Install the batteries correctly, + and as marked on the product,
 - Do not mix batteries (old and new or carbon and alkaline, etc.).
 - Remove the batteries when the product is not used for a long time.
 - The batteries shall not be exposed to excessive heat such as sunshine, fire or the like
- The product shall not be exposed to dripping or splashing.
- Do not place any sources of danger on the product (e.g. liquid filled objects, lighted candles).
- Where the plug of the Direct Plug-in Adapter is used as the disconnect device, the disconnect device shall remain readily operable.



Note

The type plate is located on the bottom of the product.

2 Your clock radio

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

Introduction

With this clock radio, you can

- play audio from Bluetooth-enabled devices, or other external devices;
- listen to FM radio:
- · charge your mobile devices; and
- set two alarms to ring at different time.

What's in the box

Check and identify the contents of your package:








- Clock radio
- Printed materials

Overview of the clock radio

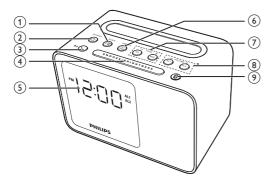

(1) SCAN/zZ

- Press to set sleep timer.
- Press and hold for two seconds to store radio stations automatically.

② O SOURCE

- Turn on the clock radio.
- · Switch to standby mode.
- Select a source: Bluetooth, FM, or Aux.

(3) ****/▶Ⅱ

- In Bluetooth mode, press to start, pause, or resume play.
- Press to answer an incoming call.
- Press and hold for two seconds to reject an incoming call.
- During a call, press to end the current call.

4 SNOOZE/BRIGHTNESS

- Snooze the alarm.
- · Adjust display brightness.

5 Display panel


Show current status.

6 PRESET/SET TIME

- Store radio stations manually.
- Select a preset radio station.
- Set time.

7 HR/MIN/-TUNE +

- Tune to FM radio stations.
- Set hour and minute.

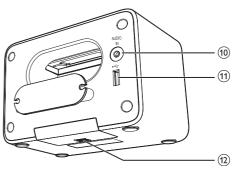

(8) AL1/AL2/- VOLUME +

- Set alarm.
- Adjust volume.

9 8

• Press and hold for two seconds to enter pairing mode.

(10) AUDIO IN

Connect an external audio device.

(11) DC 5V = 1A

· Charge your phone.

(12) Battery compartment

· Install battery.

3 Get started

Always follow the instructions in this chapter in sequence.


Install battery

The batteries can only back up clock and alarm settings when AC power is disconnected.



Caution

- The batteries contain chemical substances, so they should be disposed of properly.
- 1 Open the battery compartment.
- 2 Insert 2 AA batteries with correct polarity (+/-) as illustrated.

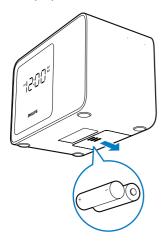

3 Close the battery compartment.



Гір

- When there is no battery inserted or the battery level is low, the low battery indicator is displayed.
- The display backlight is off when AC power is disconnected.


Connect power



Caution

- Risk of product damage! Make sure that the power voltage corresponds to the voltage printed on the back or underside of the clock radio.
- Risk of electric shock! When you unplug the AC adapter, always pull the plug from the socket. Never pull the cord.

Connect the AC power adaptor to the wall socket.

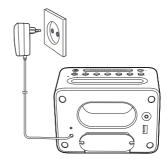

Turn on

Press & to turn on the clock radio.

- → The clock radio switches to FM tuner source.
- To select another source, press of repeatedly to switch to Bluetooth, FM, or Aux mode

Switch to standby mode

Press & repeatedly to switch to standby mode.



Tip

 If the system is idle for 15 minutes, this product switches to standby mode automatically.

4 Set time and alarm

Set time



Note

- · You can only set time in standby mode.
- 1 Press and hold **SET TIME** for two seconds to activate time setting mode.
 - → The hour and minute digits blink.
- 2 Press HR repeatedly to set hour.
- **3** Press MIN repeatedly to set minute.
- 4 Press **SET TIME** to confirm.
 - → The set time is displayed.



Note

 If the clock radio is idle for 10 seconds, it exits time setting mode automatically.

Set alarm timer

You can set two alarms to ring at different time.



Note

- · You can only set the alarm in standby mode.
- · Make sure that you have set the clock correctly.
- Press and hold AL1 or AL2 for two seconds to activate alarm setting mode.
 - → The hour and minute digits blink.
- 2 Press HR repeatedly to set the hour.
- 3 Press MIN repeatedly to set the minute.
- 4 Press AL1 or AL2 to confirm.

- 5 Press HR or MIN to select an alarm source: FM radio or buzzer.
- 6 Press AL1 or AL2 again to confirm the alarm settings.



Note

 If the clock radio is idle for 10 seconds, it exits alarm setting mode automatically.

Activate or deactivate the alarm timer

Press AL1 or AL2 repeatedly to activate or deactivate the alarm timer.

- → If the alarm timer is activated, [BUZZ] or [FM] icon is displayed.
- → If the alarm timer is deactivated, the alarm icon disappears,
- To stop the ringing alarm, press the corresponding AL1/AL2.
- → The alarm repeats itself in subsequent days.



Note

 The alarm volume is not adjustable, but it will go up gradually to gently wake you up.

Snooze the alarm

When the alarm goes off, press **SNOOZE**.

→ The alarm snoozes and repeats ringing nine minutes later.

5 Listen to FM radio

Prepare FM antenna

For better reception, fully extend and adjust the position of the pig-tail antenna.





Note

 To prevent interference, position the antenna as far as possible from any other electrical appliances,

Tune to FM radio stations

- 1 Press **SOURCE** repeatedly to switch to FM tuner mode.
- 2 Press and hold TUNE or TUNE + for two seconds.
 - → The clock radio tunes to a station with strong reception automatically.
- Repeat step 2 to tune to more radio stations.

To tune to a station manually:

In tuner mode, press **TUNE** - or **TUNE** + repeatedly to select a frequency.

Store FM radio stations automatically

In FM tuner mode, press and hold **SCAN** for two seconds.

- → All available FM radio stations are stored automatically.
- → The first stored radio station broadcasts

Store FM radio stations manually

You can store up to 20 FM radio stations.

- 1 Tune to an FM radio station.
- 2 Press and hold **PRESET** for two seconds.
 - → The preset number begins to blink.
- 3 Press TUNE or TUNE + to select a number:
- 4 Press PRESET again to confirm.
- 5 Repeat steps 1 to 4 to store other stations.



Tip

• To remove a pre-stored station, store another station in its place.

Select a preset radio station

In tuner mode, press **PRESET** repeatedly to select a preset station.

6 Use Bluetooth devices

With this clock radio, you can listen to audio from Bluetooth-enabled devices and control the incoming call through Bluetooth.

Connect a device



Note

- Make sure that your Bluetooth device is compatible with this product.
- Before pairing a device with this product, read its user manual for Bluetooth compatibility.
- This product can memorize a maximum of 4 paired devices. The fifth paired device will replace the first one.
- Make sure that Bluetooth function is enabled on your device, and your device is set as visible to all other Bluetooth devices.
- The operational range between this product and a Bluetooth device is approximately 10 meters (30 feet).
- Any obstacle between this product and a Bluetooth device can reduce the operational range.
- Keep away from any other electronic device that may cause interference.
- 1 Press **SOURCE** repeatedly to select Bluetooth mode.
 - → [BT] (Bluetooth) flashes on the display.
- 2 On your Bluetooth device, enable Bluetooth and search for Bluetooth devices (refer to the user manual of the device).
- When [Philips AJT5300] is displayed on your device, select it to start pairing and connection. If necessary, enter default password "0000".



- If you cannot find [Philips AJT5300] for pairing, press and hold of for two seconds to enter pairing mode, and then try again.
- → After successful pairing and connection, [BT] (Bluetooth) stops flashing, and the clock radio beeps twice.

To disconnect the Bluetooth-enabled device:

- Press and hold 8 for two seconds;
- Disable Bluetooth on your device; or
- Move the device beyond the communication range.

To connect another Bluetooth-enabled device:

- 1 Press and hold 8 for two seconds to disconnect the currently connected device.
 - → The clock radio enters Bluetooth pairing mode.
- 2 Connect another Bluetooth device.

Bluetooth icon behavior	Description
Flashing quickly	Waiting for pairing
Flashing slowly	Connecting
Solid on	Connected

Play audio from Bluetoothenabled device

After successful Bluetooth connection, play audio on the Bluetooth device.

- → Audio streams from your Bluetooth device to the clock radio.
- You can press ►II to start, pause or resume play.

Control your phone call

After Bluetooth connection, you can control your incoming phone call with this product.

Button	Function
•	Press to answer an incoming call.
	During a call, press to end the current call.
	Press and hold for two seconds to
	reject an incoming call.



Note


• Music play pauses when there is an incoming call, and resumes when the call ends.

7 Other features

Charge your phone

With this clock radio, you can charge your phone through the USB socket.

1 Connect your phone and the clock radio with the charging cable of your phone (not supplied), as illustrated below.

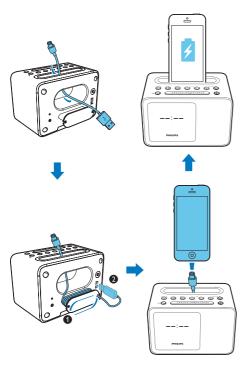


2 Connect the clock radio to AC power.

→ The phone begins to charge.

Listen to an external device

With this clock radio, you can also listen to an external audio device such as an MP3 player.


- Connect an audio input cable (not supplied) with a 3.5 mm connector on both ends to
 - the AUDIO IN socket on the clock radio, and
 - the headphone socket on the external device.

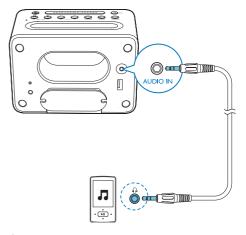

- 2 Press **SOURCE** repeatedly to select AUX source.
- 3 Play audio on the external device (refer to its user manual).

Set sleep timer

- 1 Turn on the clock radio.
- Press zZ repeatedly to select a period (in minutes).
 - → The clock radio switches to standby mode automatically after the preset period.

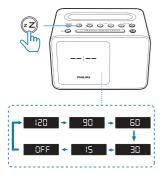

To deactivate the sleep timer:

• Press **zZ** repeatedly until **[OFF]** (off) appears.



 If you press ZZ in standby mode, the clock radio will switch to FM tuner mode.

Adjust volume

While listening, press - **VOLUME** + to adjust volume.

Adjust display brightness

Press **BRIGHTNESS** repeatedly to select different brightness levels:

- High
- Medium
- Low

8 Product information

Note

• Product information is subject to change without prior

Specifications

Amp	lifier

Total Output Power

Tuner (FM)

(1.1)	
Tuning Range	87.5-108 MHz
Tuning Grid	50 KHz
Sensitivity	
- Mono, 26 dB S/N Ratio	<22 dBf
Total Harmonic Distortion	<3%
Signal to Noise Ratio	>50 dBA

Bluetooth

Bluetooth Version	V2.1 + EDR	
Supported Profiles	HFP, A2DP, AVRCP	
Bluetooth Operation	10 m (Free space)	
Range		

General information		
AC Power (Power Adapter)	Brand name: PHILIPS;	
	Model:Y12FE-050- 2000G;	
	Input: 100-240V~, 50-60 Hz, 0.35 A;	
	Output: 5 V == 2000 mA	
USB Port	5V == 1 A	
Operation Power Consumption	10 W	
Standby Power Consumption	<1 W	
Dimensions - Main Unit (W x H x D)	182 × 100 × 111 mm	
Weight - Main Unit	0.5 kg	

9 Troubleshooting



Warning

· Never remove the casing of this device.

To keep the warranty valid, never try to repair the system yourself.

If you encounter problems when using this device, check the following points before requesting service. If the problem remains unsolved, go to the Philips Web page (www. philips.com/support). When you contact Philips, make sure that the device is nearby and the model number and serial number are available.

General

No power

- Make sure that the AC power adaptor of the unit is connected properly.
- Make sure that there is power at the AC outlet.

No sound

- Adjust volume on the clock radio.
- Adjust volume on the Bluetoothconnected device.

No response from the unit

 Disconnect and reconnect the AC power plug, then turn on the unit again.

Cannot charge your phone

- Make sure that your phone is connected with the clock radio properly.
- Make sure that the clock radio is powered on.

Poor radio reception

- Keep the clock radio away from other electronic devices to avoid radio interference.
- Fully extend and adjust the position of the pig-tail antenna.

Alarm does not work

Set the clock/alarm correctly.

Clock/alarm setting erased

- Power has been interrupted or the power plug has been disconnected.
- Reset the clock/alarm.

About Bluetooth device

The audio quality is poor after connection with a Bluetooth-enabled device.

 The Bluetooth reception is poor. Move the device closer to this product or remove any obstacle between them.

Cannot connect with the device.

- The Bluetooth function of the device is not enabled. Refer to the user manual of the device for how to enable the function.
- This product is already connected with another Bluetooth-enabled device.
 Disconnect that device and then try again.
- Press and hold 9 for two seconds to enter pairing mode, and then try again.

The paired device connects and disconnects constantly.

- The Bluetooth reception is poor. Move the device closer to this product or remove any obstacle between them.
- For some devices, Bluetooth connection may be deactivated automatically as a power-saving feature. This does not indicate any malfunction of this product.

10 Notice

Any changes or modifications made to this device that are not expressly approved by Gibson Innovations may void the user's authority to operate the equipment.

C€0890

Hereby, Gibson Innovations declares that this product is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. You can find the Declaration of Conformity on www.philips.com/ support.

Disposal of your old product



Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.



This symbol on a product means that the product is covered by European Directive 2012/19/EU. Inform yourself about the local separate collection system for electrical and electronic products. Follow local rules and never dispose of the product with normal household waste. Correct disposal of old products helps prevent negative consequences for the environment and human health.

Environmental information

All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), polystyrene foam (buffer) and polyethylene (bags, protective foam sheet.)

Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.



This is CLASS II apparatus with double insulation, and no protective earth provided.



The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Gibson Innovations Limited is under license. Other trademarks and trade names are those of their respective owners.



Specifications are subject to change without notice. 2016 © Gibson Innovations Limited. All rights reserved.

This product has been manufactured by, and is sold under the responsibility of Gibson Innovations Ltd., and Gibson Innovations Ltd. is the warrantor in relation to this product.

Philips and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used under license from Koninklijke Philips N.V.

