

Hard-to-find made easy®

16 Outlet PDU Power Distribution Unit 125V 15A (12A UL)

RKPW161915

DE: Bedienungsanleitung - de.startech.com

FR: Guide de l'utilisateur - fr.startech.com

ES: Guía del usuario - es.startech.com

IT: Guida per l'uso - it.startech.com

NL: Gebruiksaanwijzing - nl.startech.com

PT: Guia do usuário - pt.startech.com

Packaging Contents

- RKPW161915 Power Distribution Unit
- Installation Guide

System Requirements

- 19" front/rear mounting rack/cabinet (EIA 310-D compliant)
- 125VAC power source

Installation

- 1. The power distribution unit takes up 1U of rack space, so locate an appropriate location on the rack and mount it against the front or rear mounting posts.
- 2. Using the mounting hardware (screws, nuts, etc.) provided with your rack or from your rack manufacturer, secure the unit to the posts.
- 3. Connect the power cable from the distribution unit to a 125VAC power source.

Note: It is recommended that the unit be connected directly to a main source and not another distribution unit.

- 4. Toggle the "Reset" switch on the front of the unit to the 'on' position to energize the unit.
- 5. The "Power" and "Surge" LEDs should light up to indicate surge protection is active. The "Ground" LED should light up to indicate proper grounding is present.


Note: If the "SURGE" LED indicator is off, the surge protection circuit is compromised. Power cycle the power strip by toggling the power switch to the "OFF" position and back to the "ON" position. If a power cycle does not remedy the issue, it is likely the power strip has absorbed a power surge. Please contact your authorized StarTech.com reseller to purchase a replacement, or StarTech.com if you require additional support.

6. You may now attach your 125VAC compatible devices to the distribution unit.

Note: Combined power draw from all devices should not exceed 15A, otherwise the built-in circuit breaker will trip.

- 7. In the event of an overload scenario, the built-in circuit breaker will be tripped and power to all outlets will be stopped.
- 8. Disconnect the problem device or all devices from the distribution unit and toggle the "Reset" switch to turn the ports back on.



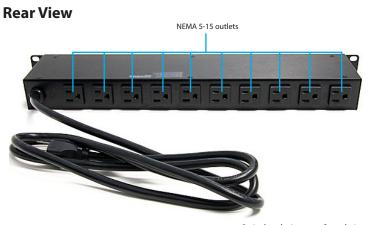

*actual product may vary from photos

Specifications

Number of Power Outlets	16
Connectors	16 x NEMA 5-15 female
Electrical Rating	125VAC / 15A
LEDs	1 x Ground (green) 1 x Surge (red) 1 x Power (yellow)
Operating Temperature	-5°C to 45°C (23°F to 113°F)
Storage Temperature	-25°C to 65°C (-13°F to 149°F)
Dimensions	482.6mm x 95.5mm x 42.7mm
Weight	2360g



FCC Compliance Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Use of Trademarks, Registered Trademarks, and other Protected Names and Symbols

This manual may make reference to trademarks, registered trademarks, and other protected names and/or symbols of third-party companies not related in any way to StarTech.com. Where they occur these references are for illustrative purposes only and do not represent an endorsement of a product or service by StarTech.com, or an endorsement of the product(s) to which this manual applies by the third-party company in question. Regardless of any direct acknowledgement elsewhere in the body of this document, StarTech.com hereby acknowledges that all trademarks, registered trademarks, service marks, and other protected names and/or symbols contained in this manual and related documents are the property of their respective holders.

Technical Support

StarTech.com's lifetime technical support is an integral part of our commitment to provide industry-leading solutions. If you ever need help with your product, visit www.startech.com/support and access our comprehensive selection of online tools, documentation, and downloads.

For the latest drivers/software, please visit www.startech.com/downloads

Warranty Information

This product is backed by a two year warranty.

In addition, StarTech.com warrants its products against defects in materials and workmanship for the periods noted, following the initial date of purchase. During this period, the products may be returned for repair, or replacement with equivalent products at our discretion. The warranty covers parts and labor costs only. StarTech.com does not warrant its products from defects or damages arising from misuse, abuse, alteration, or normal wear and tear.

Limitation of Liability

In no event shall the liability of StarTech.com Ltd. and StarTech.com USA LLP (or their officers, directors, employees or agents) for any damages (whether direct or indirect, special, punitive, incidental, consequential, or otherwise), loss of profits, loss of business, or any pecuniary loss, arising out of or related to the use of the product exceed the actual price paid for the product. Some states do not allow the exclusion or limitation of incidental or consequential damages. If such laws apply, the limitations or exclusions contained in this statement may not apply to you.