

Smart-UPS[™] Industrial UPS XU2K0LLXXRCC Quick Start Guide

General

For Safety related messages pertaining to each of the below steps, refer to the respective section in the user manual.

Installation

- 1. Install the Smart-UPS Industrial UPS either as a flush rack-mount or as a recessed rack-mount installation.
 - Refer "Installation" section in the user manual for details.
- 2. Rotate the LCD Display, if the Smart-UPS Industrial UPS is being mounted vertically in the cabinet.
 - Refer "Display Rotation" section in the user manual for details .
- 3. Hardwire Input/Output.

 Refer "Input/Output Hardwire" section in the user manual for details.

Connect Equipment

- 1. Connect equipment to the Smart-UPS Industrial UPS
- 2. Connect the Smart-UPS Industrial UPS to the cabinet utility power.
- Close the AC and battery circuit breakers.
 Refer "Connect Equipment" section in the user manual for details on all the above steps.

Operation

- 1. Turn ON the Smart-UPS Industrial UPS.
- 2. Configure the UPS Startup settings.

When the UPS is turned on for the first time, the Setup wizard screen will open. On each menu screen, select the desired setting. Press OK after each UPS setting is selected.

Note: The UPS will not turn on until all the Startup settings have been configured.

Startup configurations are

- a. Language
- b. Charger temperature compensation setting
- c. Battery AH capacity
- d. Input AC Qualification Setting

Refer "UPS Settings" section in the user manual for details.

Note: If Service Bypass Panel (SBP) is installed, refer "Install/Service of UPS with SBP" section in the user manual for details.

Customer Support

Visit APC by Schneider Electric Website www.apc.com for Customer Support contact details.

User Documentation Link

Refer the link to access the user documentation: https://d.go2se.com/indups2k

