

Quick Setup


IMPORTANT: Before using the projector, make sure you read these instructions and the safety instructions in the online *User's Guide*.

- Note:**
- *Product availability varies by country and region.*
 - *The illustrations show the EB-L210W model, but the steps are the same for all models, unless otherwise specified.*

Connect the projector

Computer

Choose from the following connections. See the sections below or the online *User's Guide* for details.

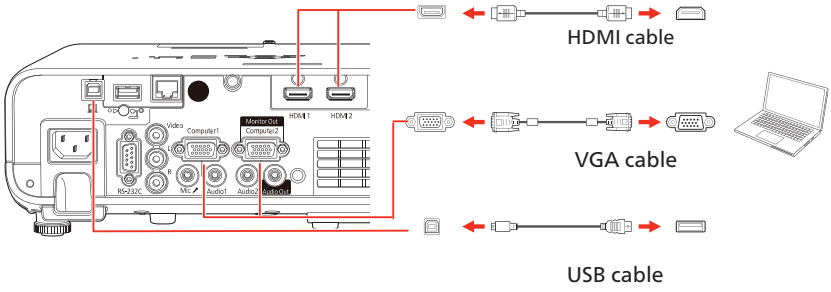

HDMI™ port

Connect one end of an HDMI cable to one of the projector's **HDMI** ports and the other end to an HDMI port on your computer.

Computer port

Connect one end of a VGA cable to one of the projector's **Computer** ports, and the other end to your computer's monitor port. If you are using a laptop, switch it to external display (see "Troubleshooting"). You can also connect an audio cable.

Note: *To use the projector's Computer2 port, change the Monitor Out Port setting in the Signal I/O menu. See the online User's Guide for details.*

USB port

Connect the square end of a USB cable to the projector's **USB-B** (square) port. Connect the flat end of the cable to any USB port on your computer.

Windows® 7 or later: After turning on the projector, follow the on-screen instructions to install the Epson® USB Display software (**EMP_UDSE.EXE**; only on first connection). If the software screen does not display automatically, open **My Computer**, **Computer**, or **This PC**, then double-click **EPSON_PJ_UD**.

OS X 10.8.x or higher: After turning on the projector, the setup folder for USB Display appears in the Finder. Double-click **USB Display Installer** and follow the on-screen instructions to install the Epson USB Display software (only on first connection). If the software screen does not display automatically, double-click **EPSON_PJ_UD**, then double-click **USB Display Installer**.

Screen mirroring


You can use Miracast® to send images to your projector from supported smartphones, tablets, and laptops. See the online *User's Guide* for details. To mirror your screen with the EB-L270F, you need to install the optional wireless LAN module (V12H005A02). See "Install the optional LAN module (EB-L270F)."

External monitor and speakers

You can connect an external monitor and external speakers to your projector to enhance your presentations. See the online *User's Guide* for details.


Wired network

Connect the projector to your network using an Ethernet cable. See "Wired network configuration" for more information.

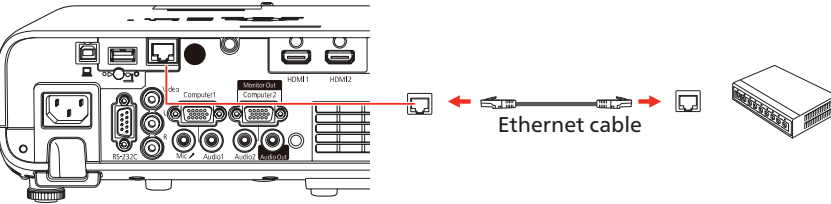


Microphone (EB-L210W/EB-L260F/EB-L270F)

Connect a dynamic microphone to the **Mic** port, using a 3.5 mm mini-jack cable.

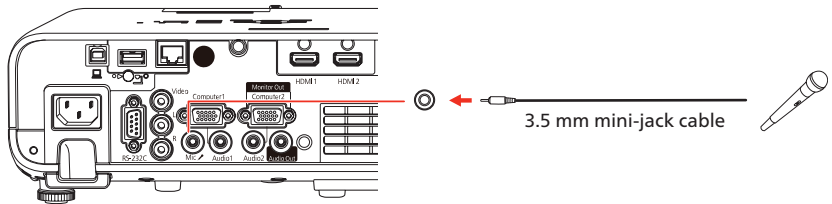

Video device


Connect multiple video devices and use the **Source Search** button on the projector or remote control to switch between them. For more information on playing sound through the projector, see the online *User's Guide*.

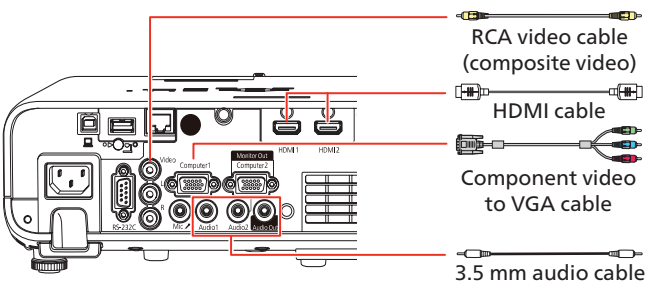

Note: *If you are connecting a streaming device, you can also connect it to the projector's USB-A (flat) port for power.*

Camera, USB device, or document camera


Connect a digital camera, USB flash drive, USB storage device, or Epson DC-07 document camera to the projector's **USB-A** (flat) port.

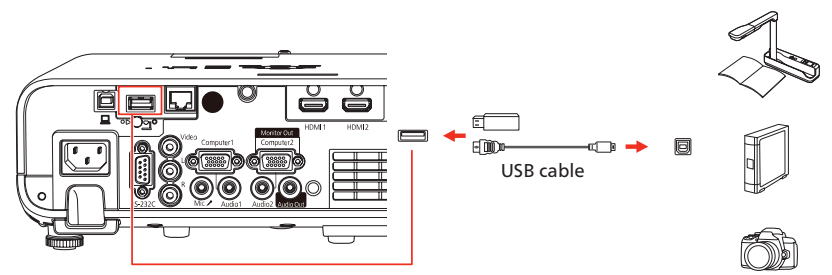

If you connect a digital camera, USB flash drive, or USB storage device, you can use the projector's PC Free feature. You can also connect other Epson document cameras to the projector. See the online *User's Guide* for details.

Using the remote control

Install the two AA batteries as shown.

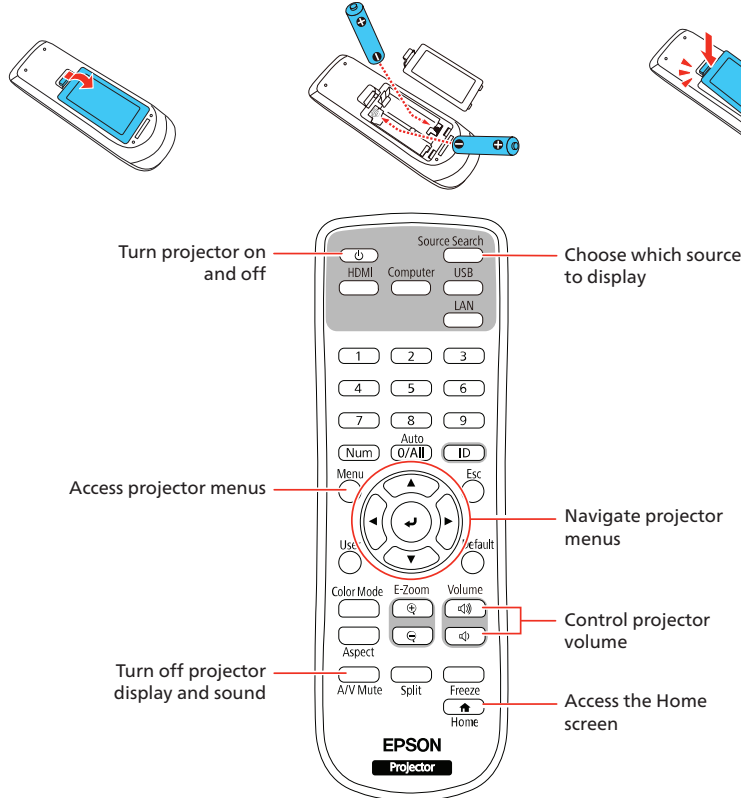




For more information on using the remote control, see the online *User's Guide*.

Turn on your equipment


- 1 Turn on your computer or video source.
- 2 Make sure the power cord is connected and plugged into an electrical outlet.
- 3 Open the projector's lens cover.
- 4 Press the power button on the projector or remote control. The projector beeps, and the Status light flashes blue and then stays on.
Note: *To shut down the projector, press the power button twice.*
- 5 Follow the on-screen instructions to set up your projector. If you see a screen displaying 123, select the upright option and press on the remote control to continue.
Note: *To change these settings, see the online User's Guide.*
- 6 If you don't see an image, do one of the following:
- 7 Press the **Source Search** button on the remote control to select the image source.
- 8 Press the **Home** button on the remote control. Use the arrow buttons to highlight any of the options on the Home screen, then press to select it.
Note: *If you still see a blank screen or have other display problems, see the troubleshooting tips on the back of this sheet.*
- 9 The default language of the menu system is English. To select another language, press the **Menu** button on the remote control. Select **Management** and press . Select **Language** and press . Select your language and press . Press the **Menu** button to exit the menu system.

Adjust the image

- 1 To raise the image, press the foot release button and lift the front of the projector. Release the button to lock the foot in position.
- 2 To reduce or enlarge the image, rotate the zoom ring.
- 3 To sharpen the image, turn the focus ring.

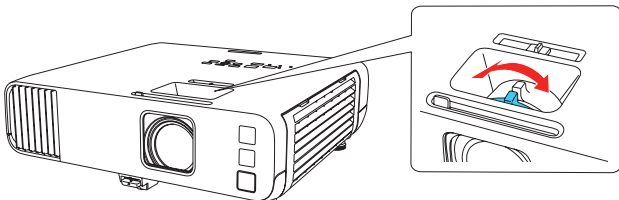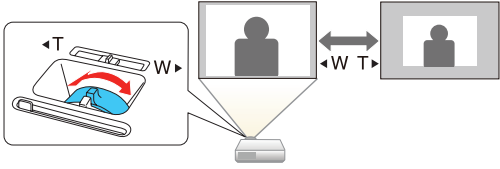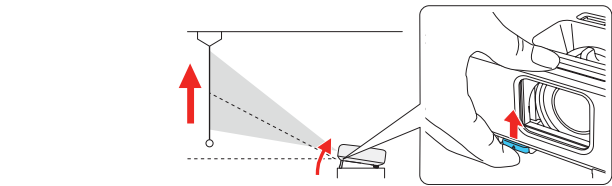

- 4 If your image looks like or , you may have placed the projector off to one side of the screen at an angle. Place the projector directly in front of the center of the screen, facing the screen squarely. If you can't move the projector, use the horizontal keystone slider on the projector to correct the image shape.

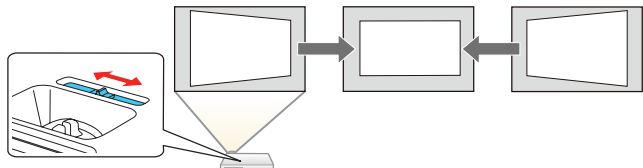

- 5 Your projector automatically adjusts an image that looks like or , but if necessary you can press the or button on the projector to correct it.




Setting up a wireless connection

Follow these steps to set up the projector for a wireless network connection.

Install the optional LAN module (EB-L270F)

To project wirelessly with the EB-L270F, you need to install the optional wireless LAN module (V12H005A02). You don't need the wireless LAN module for the EB-L210W/EB-L260F/EB-L265F since the wireless functionality is built-in and can skip to "Select wireless network settings" for these models.

- 1 Remove the wireless LAN module cover screw.
- 2 Insert the wireless LAN module into the **USB-A** port.
- 3 Attach the included wireless LAN module cover and secure it using the screw you removed.

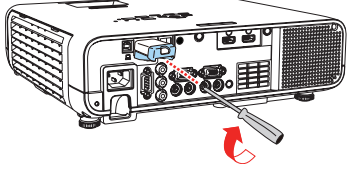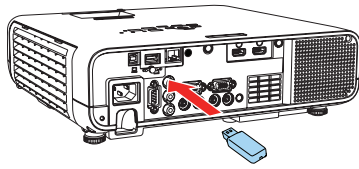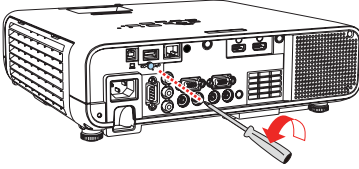

Note: *The light on the wireless LAN module turns on when the module is installed and operating. The light flashes when the module is communicating over the network.*

Select wireless network settings


- 1 Press the **Menu** button on the remote control.
- 2 Select the **Management** menu and press .
- 3 Select **On** as the **Wireless LAN Power** setting.
- 4 Select the **Network** menu and press .
- 5 Select **Network Settings** and press .
- 6 Select **Wireless LAN** as the **Priority Control Interface** setting.
- 7 Select one of the following as the **Simple AP** setting:
 - **On** for a direct connection to a computer, tablet, or smartphone.
 - **Off** to connect your projector to a router or access point.
Note: *If you directly connect to the projector, you can only project locally stored content.*
- 8 Select any other wireless settings, as necessary. See the online *User's Guide* for details.
- 9 When you are finished, return to the Network Settings menu and select **Set** to apply your settings.
- 10 Press the **Menu** button to exit the menu system.



Wired network configuration

Follow these steps to set up your projector for a wired network connection.

- Press the **Menu** button on the remote control, select the **Network** menu, then press ↵.
- Choose **Network Settings** and press ↵.
- Select **Wired LAN** as the **Priority Control Interface** setting.
- Select the **Wired LAN** menu and press ↵.

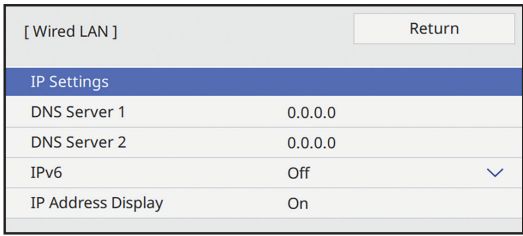

- Choose **IP Settings** and press ↵.
- If your network assigns addresses automatically, make sure the **DHCP** setting is on. If not, make sure DHCP is off and enter the projector's **IP Address**, **Subnet Mask**, and **Gateway Address**, as needed. Then press **Esc**.
- To prevent the IP address from appearing on the network standby screen, set the **IP Address Display** setting to **Off**.
- When you are finished, return to the Network Settings menu and select **Set** to apply your settings.
- Press the **Menu** button to exit the menu system.

Install the optional software


You can use the Epson iProjection™ software to display wirelessly from a computer to your networked projector. Download the software and operation guide from your product's support page (see "Where to get help") and install the program on each computer that will project over the network.

To monitor and control your projector over the network, download and install the Epson Projector Management software (Windows only) and operation guide from your product's support page (see "Where to get help").

Project over a network

If you need to configure the projector for a wired network, see "Wired network configuration."

- Press the **LAN** button on the remote control. You see a screen like this:

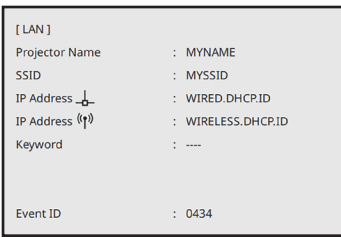

- Start Epson iProjection on your computer.

Windows 11: Select  > **All Apps** > **EPSON Projector** > **Epson iProjection Ver. X.XX**.


Windows 10: Select  > **EPSON Projector** > **Epson iProjection Ver. X.XX**.

Windows 8.x: Navigate to the **Apps** screen and select **Epson iProjection Ver. X.XX**.

Windows 7: Select  or **Start** > **Programs** or **All Programs** > **EPSON Projector** > **Epson iProjection** > **Epson iProjection Ver X.XX**.

macOS: Double-click the **Epson iProjection** icon in the Applications folder.

- Select **Advanced Connection Mode** and click **OK**.

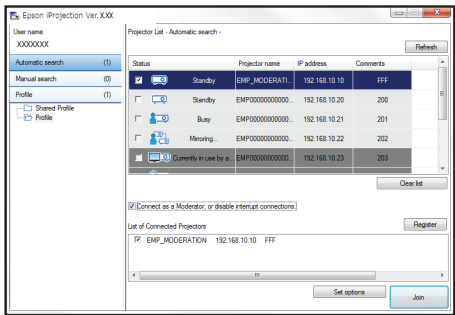

- Select the projector you want to connect to, then click **Join**.

If you don't see the projector you want, click the **Automatic search** button to find the projector automatically, click the **Manual search** button to enter the projector's IP address, or click the **Profile** button to find the projector based on a previously saved profile.

- If you see a message asking for a keyword, enter the four digits that appear on the LAN standby screen and click **OK**.

Your computer image is projected, with a floating toolbar:



When you're done presenting, click **Leave** on the toolbar.

Using the Epson iProjection app

You can project wirelessly from a mobile device (iOS, Android™, or Chromebook™) using the Epson iProjection app and a QR code.

- Scan the following QR code to download and install the Epson iProjection app.
- If you connected the projector to a network wirelessly, make sure to connect your mobile device to the same network.
- Press the **LAN** button on the remote control to display a QR code on the projector screen.
- Start Epson iProjection on your mobile device.
- Use the QR code reader feature to read the QR code displayed.



Your device and the projector are connected.


For more information on setting up and using this app, visit <https://epson.com/projectorapp> (U.S.), <https://epson.ca/projectorapp> (Canada), or <https://latin.epson.com/iprojection> (Latin America).

Using web remote

You can use a standard web browser to control the projector through the network. A virtual remote control on your computer screen lets you perform many of the same functions as you can with the physical remote control.

- Open your web browser and enter the IP address of the projector you want to monitor in the browser's address bar. The Epson Web Control menu opens.
- Select **Basic Control** or **Remote**. If you see a login screen, enter **EPSONWEB** as the user name. If a password was created, enter the password.

- Use the on-screen buttons to operate the projector, as you would using the remote control. See the online *User's Guide* for details.

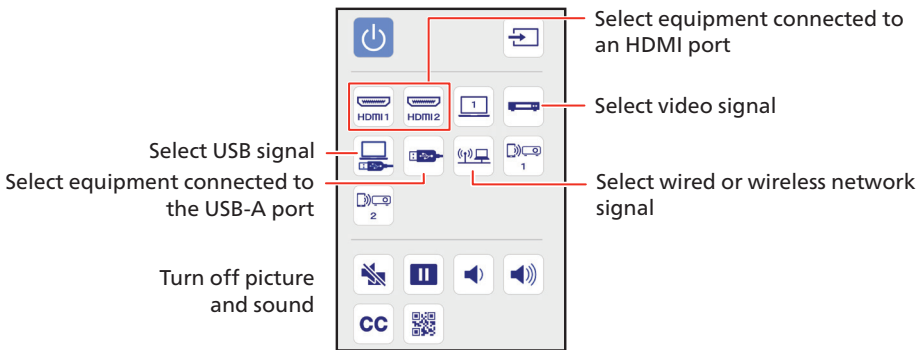

Managing content (L260F/EB-L265F/EB-L270F)

You can manage content from your computer using the Epson Projector Content Manager software, or over the network using a web browser (Epson Web Control) or the Epson iProjection app.

Using the Epson Projector Content Manager software

The Epson Projector Content Manager software allows you to add images and movies to playlists and load them easily and directly to your projector via USB for playback.

Note: Download and install the *Epson Projector Content Manager software* from your product's support page (see "Where to get help"). For more information, see the online *Epson Projector Content Manager Operation Guide* or the online *User's Guide*.

Troubleshooting

- If you see a blank screen, check the following:
 - Make sure your computer or video device is properly connected.
 - Make sure the Status light on the projector is blue and not flashing.
 - Press the  power button or the **A/V Mute** button on the remote control to wake the projector from standby or sleep mode, if necessary.
 - Make sure the lens cover is opened all the way.
- If you see a blank screen when a computer is connected, check the following:
 - On Windows, hold down the Windows key and press **P** at the same time, then click **Duplicate**.
 - If you are using a Mac laptop with macOS 13 or newer, select **System Settings** > **Displays**. Select the projector, then choose the mirror option for your display from the Use as pop-up menu.
 - On macOS 12, select **System Preferences** > **Displays** > **Display Settings**. Select the projector, then choose the mirror option for your display from the drop-down menu.
 - On macOS 11 and older, open **System Preferences** and select **Displays**. Click the **Arrangement** tab and select the **Mirror Displays** checkbox.
- If the projector does not respond to remote control commands, make sure the batteries in the remote control are installed correctly. Replace the batteries, if necessary.
- If you are unable to project using a wireless connection, make sure the projector and your device are on the same network. See the online *User's Guide* for more information.

Registration

Scan the QR code to register for product updates and exclusive offers.



Where to get help

Manuals

For more information about using the projector, you can view or download the online manuals from the Epson website, as described below.

Internet support

Visit <https://support.epson.com> and search for your product to download software and utilities, view manuals, get FAQs and troubleshooting advice, or contact Epson.

Telephone support

To use the Epson PrivateLine® Support service, call (800) 637-7661 (U.S. and Canada). This service is available for the duration of your warranty period. You may also speak with a support specialist by calling (562) 276-4394 (U.S.) or (905) 709-3839 (Canada).

Support hours are 7 a.m. to 4 p.m., Pacific Time, Monday through Friday. Days and hours of support are subject to change without notice. Toll or long distance charges may apply.

In Latin America, see the online *User's Guide* for technical support information.

Optional accessories

For a list of optional accessories, see the online *User's Guide*.

You can purchase screens or other accessories from an Epson-authorized reseller. To find the nearest reseller in the U.S. and Canada, call 800-GO-EPSON (800-463-7766). Or you can purchase online at <https://epsonstore.com> (U.S. sales) or <https://epsonstore.ca> (Canadian sales).

To find the nearest reseller in Latin America, go to <https://latin.epson.com>.

EPSON®



EPSON and the 3LCD logo are registered trademarks and Epson iProjection is a trademark of Seiko Epson Corporation.

PrivateLine is a registered trademark of Epson America, Inc.

Mac, macOS, and OS X are trademarks of Apple Inc., registered in the U.S. and other countries.

Android and Chromebook are trademarks of Google LLC.

Windows is a trademark of the Microsoft group of companies.

Miracast® is a registered trademark of Wi-Fi Alliance®.

General Notice: Other product names used herein are for identification purposes only and may be trademarks of their respective owners. Epson disclaims any and all rights in those marks.

This information is subject to change without notice.

© 2026 Epson America, Inc., 3/26
Printed in XXXXXX