



SMART Board® QX (V2) Pro

series interactive displays

Installation and maintenance guide

QX265-V2-P | QX275-V2-P | QX286-V2-P



Was this document helpful?
smarttech.com/docfeedback/171961

SMART®

Important information

Before installing or using a SMART Board® QX (V2) Pro series interactive display, review the important information included with the display. If you cannot find this information, it is available online.

See > docs.smarttech.com/kb/171931

Learn more

This guide and other resources for the SMART Board QX (V2) Pro series interactive display are available in the Support section of the SMART website (smarttech.com/support). Scan this QR code to view these resources on your mobile device.



ENERGY STAR is the government-backed symbol for energy efficiency, providing simple, credible, and unbiased information that consumers and businesses rely on to make well-informed decisions. ENERGY STAR-certified products are the simple choice for energy efficiency, making it easy for consumers and businesses to make purchases that save them money and protect the environment. The U.S. EPA ensures that each product that earns the label is independently certified to deliver the quality, performance, and savings that users have come to expect.

As shipped, your display delivers ENERGY STAR performance and savings. However, changing some settings may increase energy consumption beyond the limits required for ENERGY STAR certification. For example, increased brightness and contrast will increase power consumption.

Please consider the environment when you choose non-ENERGY STAR settings.



License

The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.



Trademark notice

SMART Board, smarttech, the SMART logo and all SMART taglines are trademarks or registered trademarks of SMART Technologies ULC in the U.S. and/or other countries. All third-party product and company names may be trademarks of their respective owners.

Copyright notice

© 2024 SMART Technologies ULC. All rights reserved. No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system or translated into any language in any form by any means without the prior written consent of SMART Technologies ULC. Information in this manual is subject to change without notice and does not represent a commitment on the part of SMART.

This product and/or use thereof is covered by one or more of the following U.S. patents:

www.smarttech.com/patents

October 1, 2024

Contents

| | |
|--|-----------|
| Contents | 3 |
| About this guide | 5 |
| About the display | 6 |
| More information | 9 |
| Chapter 2 Installing and maintaining the display | 10 |
| Is this the first time you've installed or maintained a SMART Board interactive display? | 10 |
| Installing the display | 11 |
| Installing SMART OPS modules | 12 |
| Connecting to a network | 12 |
| Connecting power and turning on the display for the first time | 13 |
| Adjusting the display's settings | 15 |
| Updating iQ system software | 15 |
| Chapter 3 Connecting computers and other devices | 16 |
| Installing SMART software | 16 |
| Connecting room computers and guest laptops | 17 |
| Connecting other devices | 23 |
| Connector diagrams | 28 |
| Chapter 4 Troubleshooting | 31 |
| Troubleshooting the display and related SMART products | 31 |
| Contacting your reseller for additional support | 31 |
| Appendix A Managing the display using RS-232 | 32 |
| Configuring the serial interface settings | 33 |
| Commands and responses | 34 |
| Power state commands | 36 |
| Input commands | 37 |
| Brightness commands | 37 |
| Room commands | 37 |
| Freeze commands | 38 |
| Screen shade commands | 38 |
| Volume commands | 38 |
| Mute commands | 38 |
| Firmware version commands | 39 |
| Model number commands | 39 |
| Serial number commands | 39 |

Contents

Part number commands 39

Asynchronous messages 39

Appendix B Enrolling the display in SMART Remote Management 41

Certification and compliance 42

Chapter 1 **Welcome**

| | |
|-------------------------|---|
| About this guide | 5 |
| About the display | 6 |
| More information | 9 |

The SMART Board® QX (V2) interactive display is the hub of your classroom.

About this guide

This guide explains how to install and maintain a SMART Board QX (V2) Pro interactive display. It includes the following information:

- How to install the display and maintain it for years of use
- How to connect devices
- How to update the display
- Where to find troubleshooting information


In addition, this guide includes information about the display's support for RS-232 management and SMART Remote Management.

This guide is intended for those who install and maintain displays in their organizations. Other documentation and resources are available for those who use displays.

See > *More information* on page 9

About the display

If you need to install or maintain the display, take this tour to familiarize yourself with its components:

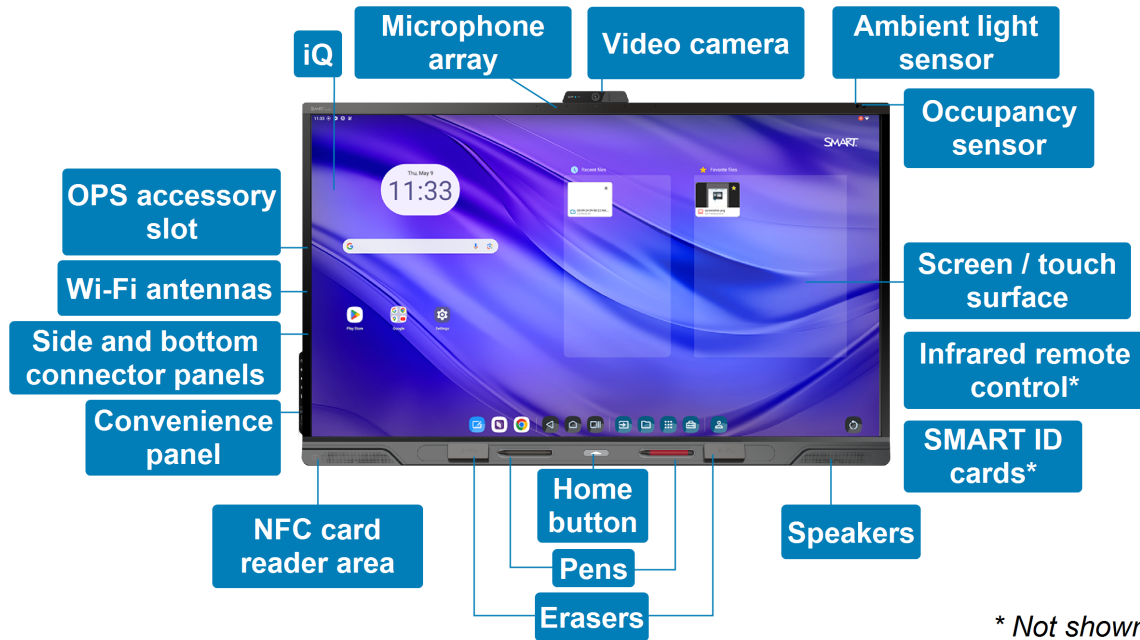

| Component | Description | In this guide |
|------------------|---|--------------------------------|
| iQ | iQ is the SMART Board QX (V2) Pro interactive display's embedded Android operating system. iQ runs on Android 13 (or later) with EDLA-licensed by Google™. When you turn on the display for the first time, you're prompted to configure iQ. By default, the display downloads and installs iQ updates automatically. You can also download and install updates manually. | See > Page 13 See > Page 15 |
| Microphone array | The display's built-in microphone array can be used with a conferencing app or in place of a connected computer's microphone. | |
| Video camera | The SMART HD camera is available for use with the display. You can use this video camera while using a conferencing app on the display. You can also use the display's video camera in place of a connected computer's camera. | |

| Component | Description | In this guide |
|-------------------------|---|---------------|
| Ambient light sensor | <p>The ambient light sensor is located in the top-right corner of the display's frame. It's the sensor in the middle.</p> <p>The ambient light sensor detects the room's brightness and adjusts the brightness of the screen accordingly.</p> | |
| Occupancy sensor | <p>The occupancy sensor is located in the top-right corner of the display's frame. It's the sensor on the right.</p> <p>The occupancy sensor can detect people up to approximately 16' (5 m) away when the display is in an energy saving mode.</p> <p>When the occupancy sensor detects people in the room, the display turns on, depending on how it's configured.</p> <p>If the room is empty for a specified period, the display returns to an energy saving mode.</p> <p>Notes</p> <ul style="list-style-type: none"> • The occupancy sensor responds when the display is in the standby and networked standby power states. • The sensor can detect people through glass. Consider this when finding a location for the display. Don't position the display so that the sensor faces a window. | |
| Screen / touch surface | <p>The display comes in the following screen sizes:</p> <ul style="list-style-type: none"> • 65" • 75" • 86" <p>The display's HyPr Touch® with Advanced IR technology supports up to 40 touch points (depending on the connected device's operating system).</p> | |
| Infrared remote control | <p>When you first install and configure the display, you can use the infrared remote control to turn the display on or off, switch inputs, and view and change settings.</p> <p>After installation and configuration, you can give the remote to users for use with the display.</p> | |

| Component | Description | In this guide |
|----------------------------------|---|---------------|
| Speakers | <p>The display includes two integrated speakers and a sub woofer, designed to provide sound at the front of a room.</p> <p>As an alternative to using these integrated speakers, you can connect an external audio system.</p> | See > Page 26 |
| Home button | Users can press the Home button to return to the iQ home screen at any time. | |
| Pens | <p>The display comes with two multi-color pens, which users can use to write or draw on the screen.</p> <p>Replace a pen if its nib becomes worn to prevent damage to the screen or impairment of pen and finger detection.</p> | |
| Erasers | The display includes two erasers, which you can use in addition to your palm or fist to remove digital ink. | |
| OPS accessory slot | You can install a SMART OPS appliance, such as a SMART OPS PC module, in the OPS accessory slot. | See > Page 12 |
| Wi-Fi antennas | The display comes with Wi-Fi 6e antennas. You can use Wi-Fi or Ethernet to connect the display to your organization's network. The display requires internet access to download updates to iQ, as do Google services and some apps. | |
| Convenience panel | The convenience panel provides buttons for turning the display on and off, controlling the volume, freezing and unfreezing the screen, and muting and unmuting the microphone. It also includes connectors for USB peripherals and a computer or other input. | See > Page 29 |
| Side and bottom connector panels | The side and bottom connector panels include connectors for multiple computers, peripherals, and other devices. They are typically used for room computers, peripherals, and other devices that are connected to the display all the time. | See > Page 28 |
| NFC card reader area | Users can sign in to their SMART Accounts by holding the provided SMART ID cards to the NFC card reader area. | |

| Component | Description | In this guide |
|----------------|---|---------------|
| SMART ID cards | The display comes with two SMART ID cards, which users can use with the NFC card reader area to sign in to their SMART Accounts on the display. | |

More information

In addition to this guide, SMART provides other documents for the display in the Support section of the SMART website (smarttech.com/support).

Scan the QR code on page 2 to view links to SMART Board QX V2 Pro series interactive display documents and other support resources.

Chapter 2 Installing and maintaining the display

| | |
|--|----|
| Is this the first time you've installed or maintained a SMART Board interactive display? | 10 |
| Installing the display | 11 |
| Installing SMART OPS modules | 12 |
| Connecting to a network | 12 |
| Connecting power and turning on the display for the first time | 13 |
| Adjusting the display's settings | 15 |
| Updating iQ system software | 15 |

Is this the first time you've installed or maintained a SMART Board interactive display?

If you haven't installed or maintained a SMART Board interactive display before, refer to the SMART Board interactive display installation and maintenance hub for general instructions and best practices for installing and maintaining a display, including:

- Moving the display to the installation site
- Mounting the display on a wall, floor stand, or mobile stand
- Configuring the display after installation
- Regularly cleaning and maintaining the display to keep it in the best possible condition

! **Important**

Before you clean the display's screen, shut down or disconnect the computer. Otherwise, you may scramble the desktop icons or inadvertently activate applications when you wipe the screen.



See also > *SMART Board interactive display installation and maintenance best practices*
(docs.smarttech.com/kb/171035)

Installing the display

SMART recommends that only trained installers install SMART Board interactive displays.

Warning

Improper installation of a display can result in injury and product damage.

Caution

- Avoid setting up and using the display in an area with excessive levels of dust, humidity, or smoke.
- Make sure an electrical socket is near the display and remains easily accessible during use.
- The display should be used only with European TN and TT power distribution systems.

It is not suitable for older, IT-type power distribution systems found in some European countries. This system (IT-type) is widely used isolated from earth, in some installations in France, with impedance to earth, at 230/400V, and in Norway, with voltage limiter, neutral not distributed, at 230V line-to-line.

Contact qualified personnel if you're uncertain of the type of power system available where you're installing the display.

Important

- There are critical software updates for the display that you need to install to ensure the display is fully functional and provides the best experience. Connect the display to a network with internet access to automatically download and apply these updates as well as future updates.
- Refer to the display's specifications for its normal operating power requirements, additional requirements, and other information.

Note

For users in Australia and New Zealand: SMART does not provide stands for use in Australia and New Zealand, nor can we provide recommendations for stands from other vendors.

Refer to the illustrated installation instructions included with the display for specific information about installing it. If you've misplaced these instructions, they're also available online.


See > *SMART Board QX (V2) illustrated installation instructions* (docs.smarttech.com/kb/171959)


Installing SMART OPS modules

The display includes an OPS accessory slot in which your organization can install a SMART OPS PC module.

See > support.smarttech.com/accessories/computing-modules-and-appliances

Caution

- Only SMART-provided OPS appliances are supported in SMART Board interactive displays. Third-party OPS appliances are not supported, and their use can lead to poor performance or damage to the display.
- Do not install or remove the OPS appliance while the display is turned on. First make sure the power switch on the back of the display beside the AC power inlet is in the OFF (O) position. If you can't reach the power switch, use the front control panel's power button  to put the display in Standby mode, and then unplug the display's power cable from the power outlet.
- After you have turned the display's power switch off or unplugged it, wait at least 30 seconds before removing the appliance to allow its internal power supplies to discharge completely. You might also wait five minutes to give the appliance the opportunity to cool, if necessary.
- Make sure the OPS appliance is secured to the display with screws through the two anchor points. Inadequately secured appliances can damage the display. (An OPS appliance's anchoring screws are typically captive, although some simply include separate anchoring screws.)

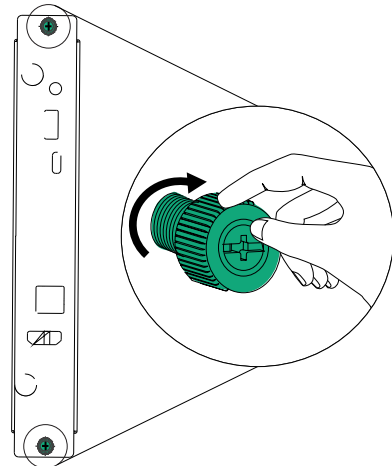


Connecting to a network

Before connecting the display, your organization's network administrators need to configure the network to allow users to update the display's firmware automatically and to use all the iQ features.


See > support.smarttech.com/docs/iq4networksetup

The display requires an internet connection for downloading software and firmware updates, and a number of the iQ apps require a network connection as well. You can connect to the network with Wi-Fi or with an Ethernet cable attached to one of the RJ45 jacks.

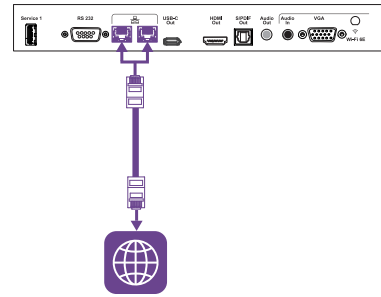

Tip

If you're using one of the display's RJ45 jacks to connect to a network, you can connect a computer to the other RJ45 jack to provide network access for the computer. This is particularly useful if only one wired network connection is available in the room. Network access is available when Networked Standby (sleep) is enabled in Settings but not when Standby (shutdown) is enabled.

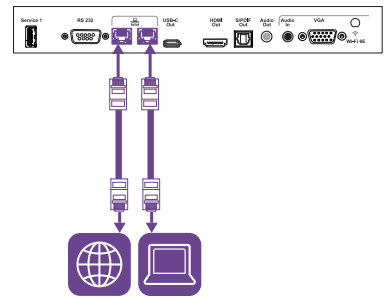


See > [Connecting a SMART Board display with iQ to a network](#)

Connecting power and turning on the display for the first time

The final step in installing and configuring the display is to connect power, turn the display on, and configure iQ following the steps in the wizard.

To connect the display to power

Connect the supplied power cable from the AC power inlet on the back of the display to a power outlet.

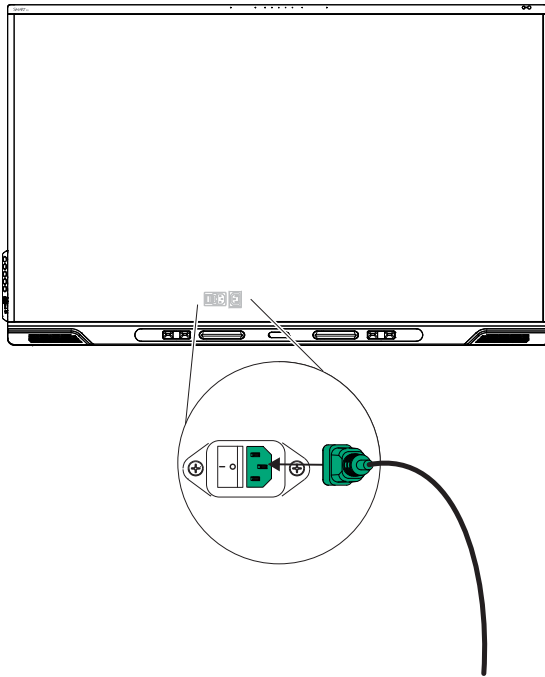

Note

Refer to the display's specifications for power requirements and power consumption information.

To turn on the display for the first time and configure iQ

! Important

The display needs an internet connection for downloading and installing important updates. Ask the network administrator to confirm that the network has been correctly configured for iQ.

See > *Connecting to a network* on page 12

1. Flick the switch beside the AC power inlet to the ON (I) position.
2. Follow the steps in the wizard to configure iQ.

See > support.smarttech.com/docs/iq4setup

Adjusting the display's settings

You might need to adjust the display's settings when you initially install it or while maintaining it.

See > support.smarttech.com/docs/iq4settings

Updating iQ system software

SMART periodically releases updates to iQ system software. Depending on how you configure iQ, these updates download and install automatically or need to be downloaded and installed manually.

See > support.smarttech.com/docs/iq4updates

Chapter 3 Connecting computers and other devices

- Installing SMART software 16
- Connecting room computers and guest laptops 17
 - Viewing a connected computer’s input 21
 - Setting a connected computer’s resolution and refresh rate 22
- Connecting other devices 23
 - Connecting USB drives, peripherals, and other devices 23
 - Connecting a second SMART Board interactive display 25
 - Connecting an external display 25
 - Connecting an external video source 25
 - Connecting an external audio system 26
 - Connecting room control systems 26
- Connector diagrams 28
 - Side and bottom connector panels 28
 - Convenience panel 29
 - Other connectors 30

 **Warning**

Ensure that any cables that cross the floor to the display are properly bundled and marked to avoid a trip hazard.

Installing SMART software

The display comes with SMART software that you can install on connected room computers and guest laptops or access online. Other SMART software is optional.

Included



SMART Meeting Pro



SMART Product Drivers
and Ink

**SMART
Remote
Management**

SMART Remote
Management¹

Optional



SMART TeamWorks Room


See > smarttech.com/downloads

Connecting room computers and guest laptops

You can connect cables for room computers and guest laptops. By installing cables in advance, you make use of connectors that might not be accessible after the display is wall-mounted. You can then run the cables across floors or behind walls as needed.

¹Subscription for the length of the warranty


- **USB-C 1**

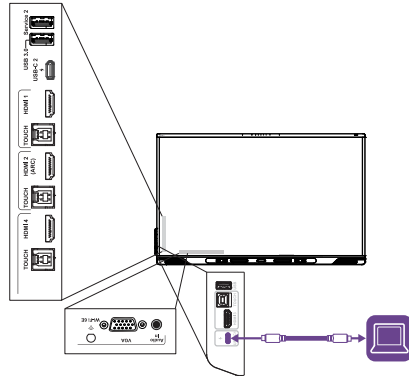

Video/audio/touch

| | |
|------------------|--|
| Connector | USB-C 1 |
| Standard | USB 3.2 Gen 1×1 (as DFP) Display Port 1.2.4-lane (as UFP) |


- **USB-C 2**

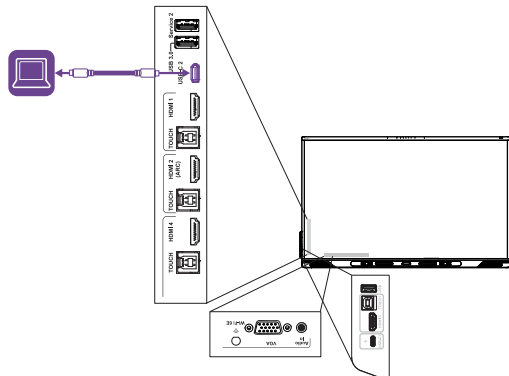

Video/audio/touch

| | |
|------------------|--|
| Connector | USB-C 2 |
| Standard | USB 3.2 Gen 1×1 (as DFP) Display Port 1.2.4-lane (as UFP) |

- **HDMI 1**

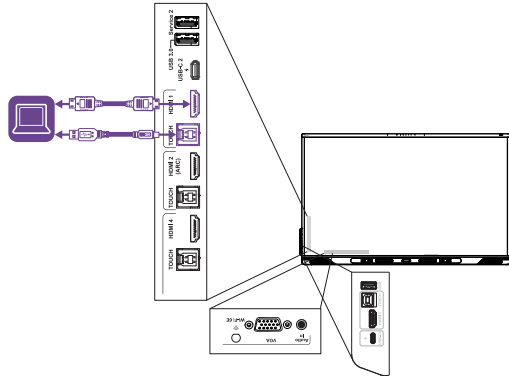

Video/audio

Connector HDMI 1


Standard HDMI 2.1

Touch

Connector Touch (USB Type-B)

Standard USB 3.2 Gen 1

- **HDMI 2**

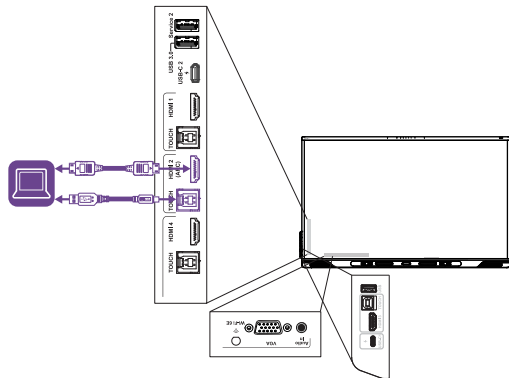

Video/audio

Connector HDMI 2


Standard HDMI 2.1

Touch

Connector Touch (USB Type-B)

Standard USB 3.2 Gen 1

- **HDMI 3**

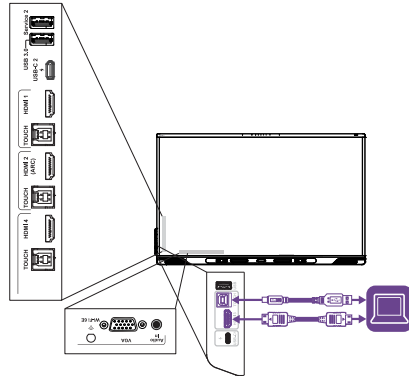

Video/audio

Connector HDMI 3


Standard HDMI 2.1

Touch

Connector Touch (USB Type-B)

Standard USB 3.2 Gen 1

- **HDMI 4**

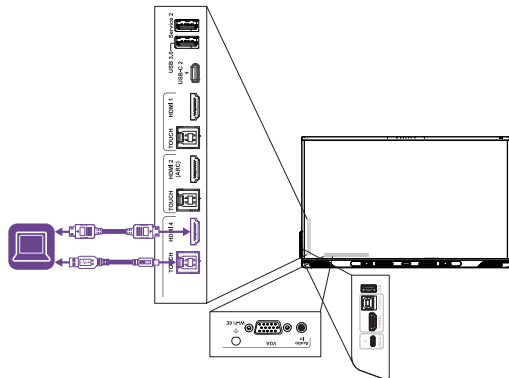

Video/audio

Connector HDMI 4

Standard HDMI 2.1


Touch

Connector Touch (USB Type-B)²

Standard USB 3.2 Gen 1

²The HDMI 4 and VGA inputs share a USB Type-B receptacle.

• **VGA**

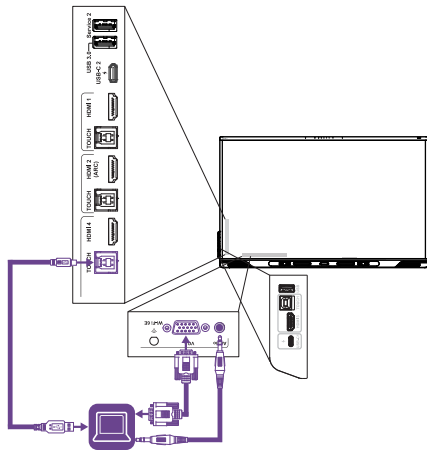

Video

Connector VGA

Standard VGA

Audio

Connector Audio In (Stereo 3.5 mm)

Standard Stereo 3.5 mm

Touch

Connector Touch (USB Type-B)²

Standard USB 3.2 Gen 1



Caution



When connecting a USB cable to a computer, make sure the computer has a USB compliant interface and bears the USB logo. In addition, the USB source computer must be compliant with IEC 60950-1 and/or IEC 62368-1. The source computer must be CE marked and carry safety certification marks for Canada and USA. This is for operating safety and to avoid damage to the display.

Notes

- Install SMART software on any computers you connect to the display.
See > *Installing SMART software* on page 16
- If a connected computer reports “Too many USB hubs” or “cannot start (code 10),” see the knowledge base article, [SMART Board interactive displays and USB tier structure use](#).

Viewing a connected computer’s input

1. Connect the computer to the display.
2. View the available inputs in one of the following ways:
 - If iQ is enabled, tap **Input**  on the Home screen.
 - OR
 - If iQ is disabled, press the **Home** button .

- Press **Input**  on the convenience panel.
- Press **Input**  on the remote control.

The input selection menu appears.

3. Tap the computer's input menu option.

Setting a connected computer's resolution and refresh rate

This table presents the recommended resolutions and refresh rates for the display's USB-C and HDMI inputs:

| Resolution | Input aspect ratio | Mode | Refresh rate |
|-------------|--------------------|-------------------|--|
| 3840 × 2160 | 16:9 | 4K UHD / 2160p | 59.94 Hz / 60 Hz 50 Hz 29.97 Hz / 30 Hz 25 Hz 23.98 Hz / 24 Hz |
| 1920 × 1080 | 16:9 | FHD / 1080p | 59.94 Hz / 60 Hz 50 Hz 29.97 Hz / 30 Hz 25 Hz 23.98 Hz / 24 Hz |
| 1360 × 768 | 16:9 | HD | 60.015 Hz |
| 1366 × 768 | 16:9 | HD | 60.015 Hz |
| 1280 × 720 | 16:9 | HD / 720p | 59.94 Hz / 60 Hz 50 Hz 29.97 Hz / 30 Hz 25 Hz 23.98 Hz / 24 Hz |
| 720 × 480 | 16:9 | 480p (DVD Player) | 60 Hz |

This table presents the recommend resolutions and refresh rates for the display's VGA input:

| Resolution | Input aspect ratio | Mode | Refresh rate |
|-------------|--------------------|------|--------------|
| 1920 × 1080 | 16:9 | FHD | 60.000 Hz |
| 1600 × 1200 | 4:3 | UXGA | 60.000 Hz |
| 1360 × 768 | 16:9 | WXGA | 60.015 Hz |

| Resolution | Input aspect ratio | Mode | Refresh rate |
|-------------|--------------------|---------|--------------|
| 1280 × 1024 | 5:4 | SXGA 60 | 60.020 Hz |
| 1024 × 768 | 4:3 | XGA 60 | 60.004 Hz |
| | | XGA 70 | 70.069 Hz |
| | | XGA 75 | 75.029 Hz |
| 800 × 600 | 4:3 | SVGA 60 | 60.317 Hz |
| | | SVGA 72 | 72.188 Hz |
| | | SVGA 75 | 75.000 Hz |
| 640 × 480 | 4:3 | VGA 60 | 59.940 Hz |

If possible, set connected computers to these resolutions and refresh rates. See the connected computers' operating system documentation for instructions.

See also > support.smarttech.com/docs/resandrefreshrates


Connecting other devices

In addition to computers, you can connect a variety of other devices to the display:

- USB drives, peripherals, and other devices
- A second SMART Board interactive display
- External displays
- External video sources
- External audio systems
- Room control systems

Connecting USB drives, peripherals, and other devices

The display includes the following USB receptacles. You can connect USB drives, peripherals (such as keyboards), and other devices to these receptacles and use the devices with iQ, connected computers, and OPS modules installed in the OPS accessory slot.

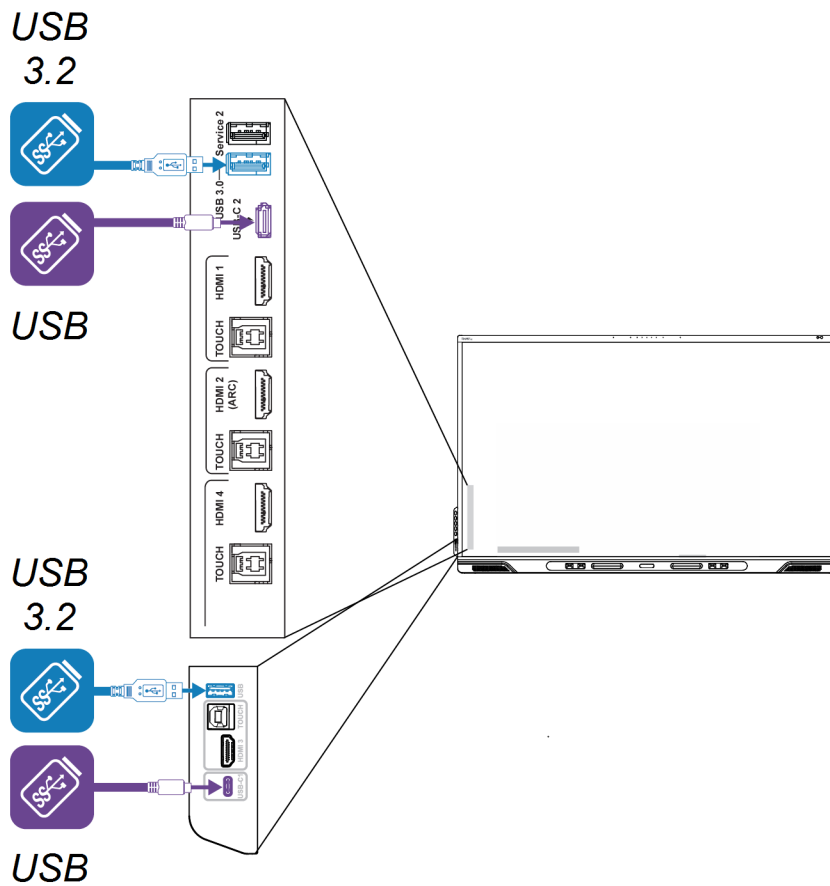

This table shows the supported maximum USB speeds for each input:

| Input | USB 2.0 Type-A | USB 3.2 Gen 1 Type-A | USB Type-C |
|--------------------|----------------|----------------------|------------|
| iQ | Hi-Speed | SuperSpeed | SuperSpeed |
| USB-C 1 | Hi-Speed | Hi-Speed | Hi-Speed |
| USB-C 2 | Hi-Speed | Hi-Speed | Hi-Speed |
| HDMI 1 | Hi-Speed | SuperSpeed | SuperSpeed |
| HDMI 2 | Hi-Speed | SuperSpeed | SuperSpeed |
| HDMI 3 | Hi-Speed | SuperSpeed | SuperSpeed |
| HDMI 4 | Hi-Speed | SuperSpeed | SuperSpeed |
| VGA | Hi-Speed | SuperSpeed | SuperSpeed |
| OPS accessory slot | Hi-Speed | SuperSpeed | SuperSpeed |


Notes

- Hi-Speed = 480 Mbps
- SuperSpeed = 5 Gbps

Connecting a second SMART Board interactive display


You can connect the SMART Board interactive display to a second display by connecting a USB cable from the first display's USB Type-C Out receptacle to one of the second display's USB Type-C In receptacles.

The same input appears on both displays, and users can interact with the input by touching, writing on, drawing on, or erasing on either display.

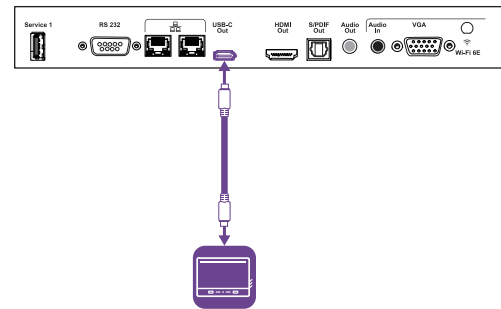

Connecting an external display

You can connect an external display using the HDMI Out connector on the connector panel. The external display will show the same image. This is useful when you're using the display in an auditorium or other large space where it would be beneficial to have a second display.

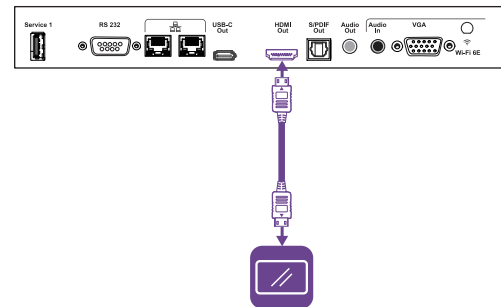

! Important

If the connected external display doesn't support HDCP, the image on the external display is limited to 480p resolution. For full resolution output, connect a display that supports HDCP.

Connecting an external video source

You can connect an external video source, such as a DVD player, media box, or cable box, to your display using an HDMI cable and any of the HDMI connectors on the display's connector panels. To view the source content, switch to the connected HDMI input.



Connecting an external audio system

The display includes two speakers, which are designed to provide sound at the front of a room. You might want to connect an external audio system if you're providing sound in a larger space.

You can connect the display to an external audio system using the Stereo 3.5 mm Out connector. This disables the display's internal speakers. Alternatively, you can connect an external audio system directly to a room computer. In addition to the Stereo 3.5 mm Out connector, the display provides a Sony/Philips Digital Interface (S/PDIF) Out connector. S/PDIF is a digital audio transmission medium. You need an audio system that has an S/PDIF input to decode this connection to analog. Most external sound bars include an S/PDIF connector.

You can also connect an external audio system to the display using the HDMI 2.0 Out connector on the bottom connector panel.

If you have an external audio system with HDMI ARC (Audio Return Channel) or eARC (Enhanced Audio Return Channel), you can output the display's audio to the audio system by connecting the display's HDMI In connector on the side connector panel to the HDMI Out connector on the audio system's receiver.

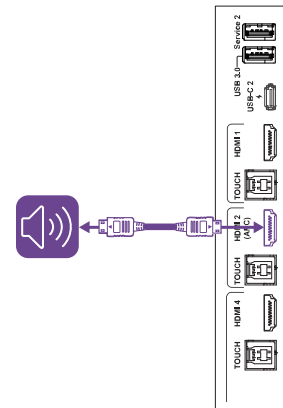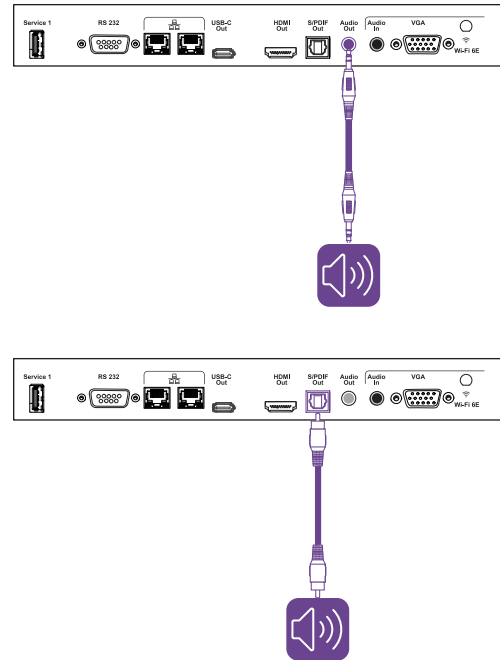

Connecting room control systems

A room control system enables users to control a room's lighting, audio system, and possibly, the display. Some installations may require you to integrate the display with a room control system.

You can use the display's RS-232 connector to connect a third-party external control system to the display.

See [Appendix A Managing the display using RS-232](#) on page 32

Note


Displays are not compatible with centralized remote control systems, such as a universal remote control.

Connector diagrams


Side and bottom connector panels

This diagram and table present the connectors on the display's side and bottom connector panels:

Side

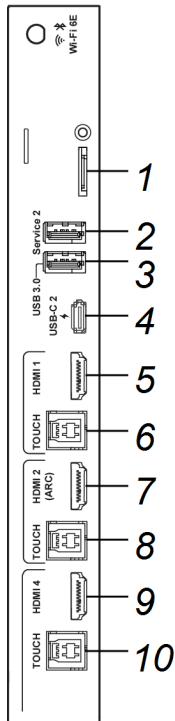

Bottom

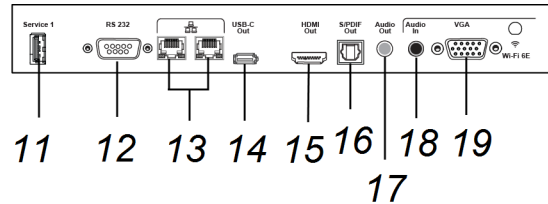


| No. | Connector | Connects to | Notes |
|-----|----------------------|--|---|
| 1 | microSD | microSD card | This connector features a security cover to prevent theft of an installed microSD card. |
| 2 | USB 3.2 Gen 1 Type-A | N/A | This connector is a service port. |
| 3 | USB 3.2 Gen 1 Type-A | Supported USB drives, peripherals, and other devices | See > Page 23 |
| 4 | USB Type-C | USB Type-C 2 input | See > Page 17 |
| 5 | HDMI 2.1 In | HDMI 1 input (video and audio) | See > Page 17 |
| 6 | USB 3.2 Gen 1 Type-B | HDMI 1 input (touch) | See > Page 17 |

| No. | Connector | Connects to | Notes |
|-----|----------------------|---|--|
| 7 | HDMI 2.1 In | HDMI 2 input (video and audio) | This connector supports HDMI ARC (Audio Return Channel) and eARC (Enhanced Audio Return Channel), which allow audio signals to travel between the display and the connected device and improve audio quality as a result. See > Page 17 |
| 8 | USB 3.2 Gen 1 Type-B | HDMI 2 input (touch) | See > Page 17 |
| 9 | HDMI 2.1 In | HDMI 4 input (video and audio) | See > Page 17 |
| 10 | USB 3.2 Gen 1 Type-B | HDMI 4 input (touch) OR VGA input (touch) | If you have devices connected to both the HDMI 4 and VGA inputs' connectors, touch events on either input will only go to the computer that the USB cable is connected to. See > Page 17 |
| 11 | USB 2.0 Type-A | N/A | This connector is a service port. |
| 12 | RS-232 | Room control system | See > Page 32 |
| 13 | RJ45 (x2) | Network | See > Page 12 |
| 14 | USB Type-C | External display | See > Page 25 |
| 15 | HDMI 2.1 Out | External display | See > Page 25 |
| 16 | S/PDIF out | Digital audio output | See > Page 26 |
| 17 | Stereo 3.5 mm Out | External audio system | See > Page 26 |
| 18 | Stereo 3.5 mm In | VGA input (audio) | See > Page 17 |
| 19 | VGA In | VGA input (video) | See > Page 17 |

Convenience panel

This diagram and table present the connectors on the display's convenience panel:

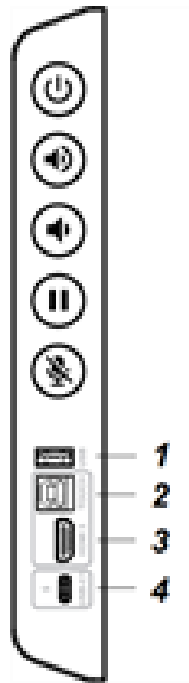


| No. | Connector | Connects to | Notes |
|-----|----------------|---|---|
| 1 | USB 3.0 Type-A | Supported USB drives, peripherals, and other devices | See > <i>Connecting USB drives, peripherals, and other devices</i> on page 23 |
| 2 | USB 2.0 Type-B | HDMI 3 input (touch, microphone, camera, and other USB peripherals) | See > <i>Connecting room computers and guest laptops</i> on page 17 |
| 3 | HDMI 2.0 in | HDMI 3 input (video and audio) | See > <i>Connecting room computers and guest laptops</i> on page 17 |
| 4 | USB Type-C | USB-C | See > <i>Connecting room computers and guest laptops</i> on page 17 |

Other connectors

The display also includes a USB-C connector to connect the SWC-120HD Camera.

Rear top

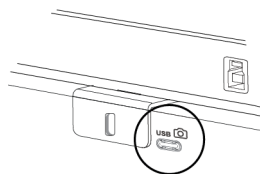

Chapter 4 Troubleshooting

Troubleshooting the display and related SMART products


The Support section of the SMART website includes information about resolving a variety of common problems with the display and related SMART products.

See > support.smarttech.com/docs/rxtroubleshooting

Contacting your reseller for additional support

If an issue you're experiencing with the display persists or isn't covered in this chapter or the knowledge base, contact your authorized SMART reseller (smarttech.com/where) for support.

Your reseller might ask you for the serial number for the display. The serial number is on a label located on the left side of the display (pictured).

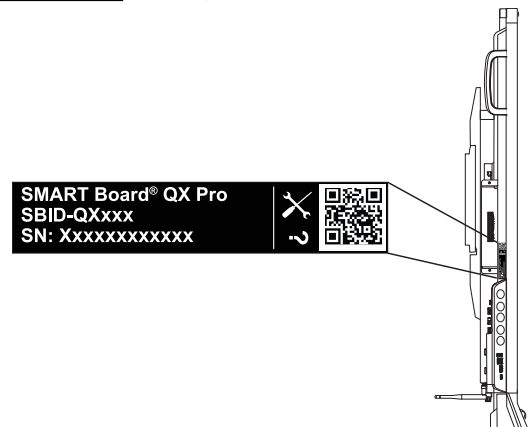


Tips

- Scan the QR code on the label to view the SMART Board QX Pro series interactive display support pages on the SMART website.
- The label features the display's base model number (for example, QX065). Please note this number is different from the actual model/SKU number (for example SBID-QX265).

Appendix A Managing the display using RS-232

| | |
|---|----|
| Configuring the serial interface settings | 33 |
| Commands and responses | 34 |
| Power state commands | 36 |
| Input commands | 37 |
| Brightness commands | 37 |
| Room commands | 37 |
| Freeze commands | 38 |
| Screen shade commands | 38 |
| Volume commands | 38 |
| Mute commands | 38 |
| Firmware version commands | 39 |
| Model number commands | 39 |
| Serial number commands | 39 |
| Part number commands | 39 |
| Asynchronous messages | 39 |

You can connect an RS-232 cable from a computer or a control system's serial output to the display's RS-232 In connector to remotely select video inputs, turn the display on or off, and get information about the display's current settings, such as volume and power state.

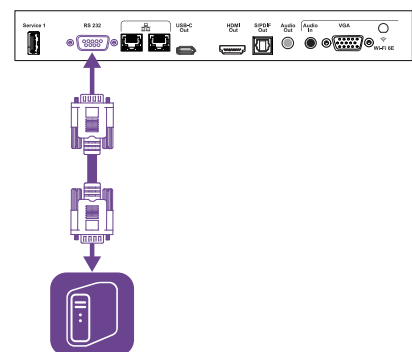

! Important

Use only a standard RS-232 cable. Do not use a null modem cable. Null modem cables typically have ends of the same type.

Configuring the serial interface settings

Configure the computer or control system's serial interface before sending commands to the display.

1. Turn on the display.
2. If you're using a terminal application on a computer, activate local echo to see what you're typing and sending to the display.
3. Configure the serial interface settings with the following values:

| | |
|--------------------|-------|
| Baud rate | 19200 |
| Data length | 8 |
| Parity bit | None |
| Stop bit | 1 |

4. Send a carriage return character (<CR>) to the display. The display will show a command prompt (>) to indicate that the display can now accept commands.

Note

- If you're using a terminal application on a computer, pressing ENTER should send a carriage return character (<CR>) but may also send a line feed character (<LF>), depending on your terminal application configuration.
- If no message appears or an error message appears, the serial interface isn't configured correctly. Repeat steps 3 and 4.

When you use a control system program instead of terminal program, all lines output from the display are preceded by a carriage return character (<CR>) and line feed character (<LF>) and then followed by a carriage return character (<CR>) and line feed character (<LF>), as shown in the example below.

```
>set volume=0<CR>
<CR><LF>
volume=0<CR><LF>
>
```

See also > wikipedia.org/wiki/ASCII

Commands and responses

To access display information or to adjust display settings using the room control system, send a command after the command prompt (>), send a carriage return character or press ENTER, and then wait for the response from the display. Responses are preceded by a carriage return character (<CR>) and line feed character (<LF>) and then followed by a carriage return character (<CR>) and line feed character (<LF>). If no command prompt is present, send a carriage return character to the display. If the display is ready to receive commands, it will show a command prompt (>) when the carriage return is received. See the example below.

Correct

```
>get volume  
volume=55  
>
```

In this example, the user used =-50 instead of -50.

Incorrect

```
>set volume=-50  
invalid cmd: setvolume=-50  
>
```

Notes

- Use ASCII formatted commands.
- Commands aren't case-sensitive and extra spacing is ignored.
- Review each entry carefully before sending a command to the display.
- Don't send another command until you receive the response and the next command prompt (>). If no command prompt is present, send a carriage return character (<CR>) to the display. If the display is ready to receive commands, it will show a command prompt after receiving the carriage return.

To retrieve a setting's current value

Use a `get` command.

This example shows how to get the volume:

```
>get volume  
volume=55  
>
```

To assign a value to a setting

Use a `set` command.

This example sets the volume to 65:

```
>set volume=65  
volume=65  
>
```

To increase or decrease the value of a setting

Use the `set` command to increase or decrease the value by a designated number.

This example increases the volume by 5:


 
```
>set volume+5  
volume=70  
>
```

This example decreases the volume by 15:

```
>set volume-15  
volume=55  
>
```

Power state commands

| Get command | Set command | Response |
|----------------|---|--|
| get powerstate | set powerstate[Value] Where [Value] is one of the following: <ul style="list-style-type: none"> • =on • =standby • =off | powerstate=[Value] Where [Value] is the following: <ul style="list-style-type: none"> • on |

| Power state | Description |
|-------------|---|
| ON | The display is in normal operating mode. OR The screen is off, but the display is ready to turn on when one of the following occurs: <ul style="list-style-type: none"> • A user presses the Power button  on the convenience panel or the remote control. • You send the set powerstate=on command. |
| STANDBY | The screen is off, and the display is in a low power state. The display enters READY or ON state when one of the following occurs: <ul style="list-style-type: none"> • A user presses the Power button  on the convenience panel or the remote control. • You send the set powerstate=standby command. <p>Note</p> <p>The EU uses “networked standby” to describe this power state.</p> |
| OFF | The screen is off, and the display is in a low power state. The display enters ON state when the following occurs: <ul style="list-style-type: none"> • A user presses the Power button on the convenience panel or the remote control. |

Commands are available only when the display is in the ON power state.

Input commands

| Get command | Set command | Response |
|-------------|---|---|
| get input | set input[Value] Where [Value] is one of the following: <ul style="list-style-type: none"> • =hdmi1 • =hdmi2 • =hdmi3 • =hdmi4 • =vga1 • =ops1 • =usbc1 • =usbc2 • =android | input=[Value] Where [Value] is one of the following: <ul style="list-style-type: none"> • hdmi1 • hdmi2 • hdmi3 • hdmi4 • vga1 • ops1 • usbc1 • usbc2 • android |

Brightness commands

| Get command | Set command | Response |
|----------------|--|---|
| get brightness | set brightness[Value] Where [Value] is one of the following: <ul style="list-style-type: none"> • +[Value] • -[Value] • =[0-100] | brightness=[Value] Where [Value] is a number between 0 and 100 |

Room commands

| Get command | Set command | Response |
|--------------------|---|--|
| get micmute | set micmute[Value] Where [Value] is one of the following: <ul style="list-style-type: none"> • =on • =off | micmute=[Value] Where [Value] is the following: <ul style="list-style-type: none"> • on |
| get statereporting | set statereporting[Value] Where [Value] is one of the following: <ul style="list-style-type: none"> • =on • =off | statereporting=[Value] Where [Value] is the following: <ul style="list-style-type: none"> • on |
| get help | | |
| factoryreset | set factoryreset[Value] Where [Value] is the panel serial number | factoryreset=[Value] Where [Value] is the panel serial number |

Freeze commands

| Get command | Set command | Response |
|-----------------|--|---|
| get videofreeze | set videofreeze[Value] Where [Value] is one of the following: <ul style="list-style-type: none"> • =on • =off | videofreeze=[Value] Where [Value] is one of the following: <ul style="list-style-type: none"> • on • off |

Screen shade commands

| Get command | Set command | Response |
|-----------------|--|---|
| get screenshade | set screenshade[Value] Where [Value] is one of the following: <ul style="list-style-type: none"> • =on • =off | screenshade=[Value] Where [Value] is one of the following: <ul style="list-style-type: none"> • on • off |

Volume commands

| Get command | Set command | Response |
|-------------|--|---|
| get volume | set volume[Value] Where [Value] is one of the following: <ul style="list-style-type: none"> • +[Value] • -[Value] • =[0-100] | volume=[Value] Where [Value] is a number between 0 and 100 |

Mute commands

| Get command | Set command | Response |
|-------------|---|--|
| get mute | set mute[Value] Where [Value] is one of the following: <ul style="list-style-type: none"> • =on • =off | mute=[Value] Where [Value] is one of the following: <ul style="list-style-type: none"> • on • off |

Firmware version commands

| Get command | Response |
|---------------|---|
| get fwversion | fwversion=[Value] Where [Value] is the firmware version. |

Model number commands

| Get command | Response |
|--------------|---|
| get modelnum | modelnum=[Value] Where [Value] is one of the following: <ul style="list-style-type: none"> • SBID-RX065 • SBID-RX075 • SBID-RX086 |

Serial number commands

| Get command | Response |
|---------------|--|
| get serialnum | serialnum=[Value] Where [Value] is the serial number. |

Part number commands

| Get command | Response |
|-------------|--|
| get partnum | partnum=[Value] Where [Value] is the part number, including the revision. |

Asynchronous messages

The display sends an asynchronous message when the convenience panel, Settings app, or remote control are used to change a display's setting that can be controlled by RS-232. The display will also send an asynchronous message if the display's power state changes. Asynchronous messages are identified by a pound sign (#) before the message and aren't followed by a command prompt (>).

| Change | Asynchronous message |
|-----------------------------|--|
| Display power state | <p>#powerstate=[Value] Where [Value] is one of the following:</p> <ul style="list-style-type: none"> • on • standby • powersave |
| Input selection | <p>#input=[Value] Where [Value] is one of the following:</p> <ul style="list-style-type: none"> • hdmi1 • hdmi2 • hdmi3 • hdmi4 • usbc1 • usbc2 • vga1 • ops1 • android |
| Brightness | <p>#brightness=[Value] Where [Value] is a number between 0 and 100</p> |
| Freeze frame | <p>#videofreeze=[Value] Where [Value] is one of the following:</p> <ul style="list-style-type: none"> • on • off |
| Screen shade | <p>#screenshade=[Value] Where [Value] is one of the following:</p> <ul style="list-style-type: none"> • on • off |
| Volume increase or decrease | <p>#volume=[Value] Where [Value] is a number between 0 and 100</p> |
| Volume mute | <p>#mute=[Value] Where [Value] is one of the following:</p> <ul style="list-style-type: none"> • on • off |

Appendix B Enrolling the display in SMART Remote Management

The SMART Board QX Pro series interactive display has a built-in feature that enables you to enroll the display with your organization's SMART Remote Management account. When you enroll the display, you can use SMART Remote Management to centrally control the display's features and settings, such as:

- blocklists and allowlists
- Wi-Fi
- wallpaper
- certificates
- lock screen
- available apps

See > support.smarttech.com/docs/enrollingsrm

Certification and compliance

Electronic (e-label) information

Regulatory information is available in the display's settings. From the Home screen, tap **Settings > About > Regulatory Information**.

Informations électroniques (e-Label)

Les informations réglementaires sont disponibles dans les paramètres de l'écran. Depuis l'écran d'accueil, appuyez sur **Paramètres > À propos de > Informations réglementaires**.

Federal Communication Commission interference statement

FCC

Suppliers Declaration of Conformity

47 CFR § 2.1077 Compliance Information

Unique Identifier: QX265-V2-P, QX275-V2-P, QX286-V2-P

Responsible Party – U.S. Contact Information

SMART Technologies Inc.

2401 4th Ave., 3rd Floor

Seattle, WA 98121

compliance@smarttech.com

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.

Note

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

⚠ Caution

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

Restriction

Operations in the 5150–5250 MHz and 5925–6425 MHz bands are restricted to indoor usage only.

IEEE 802.11b or 802.11g operation of this product in the USA is firmware limited to channels 1 through 11.

⚠ Caution

- i. the device for operation in the band 5150–5250 MHz is only for indoor use to reduce the potential for harmful interference to co-channel mobile satellite systems;
- ii. the maximum antenna gain permitted for devices in the bands 5250–5350 MHz and 5470–5725 MHz shall comply with the e.i.r.p. limit; and
- iii. the maximum antenna gain permitted for devices in the band 5725–5825 MHz shall comply with the e.i.r.p. limits specified for point-to-point and non point-to-point operation as appropriate.
- iv. Users should also be advised that high-power radars are allocated as primary users (i.e., priority users) of the bands 5250–5350 MHz and 5650–5850 MHz and that these radars could cause interference and/or damage to LE-LAN devices.
- v. Operation in the 5925–7125 MHz band shall be limited to indoor use only.
- vi. Operation on oil platforms, automobiles, trains, maritime vessels and aircraft shall be prohibited except for on large aircraft flying above 3,048 m (10,000 ft).
- vii. Devices shall not be used for control of or communications with unmanned aircraft systems.

Radiation exposure statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance of 20 cm between the antenna of this device and all nearby persons. This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.

Innovation, Science and Economic Development Canada statement

This device complies with RSS-247 and RSS-248 of the Innovation, Science and Economic Development Canada Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.

Radiation exposure statement

This equipment complies with ISED radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance of 20 cm between the antenna of this device and all nearby persons. This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.

Innovation, Science et Développement économique Déclaration du Canada

Cet appareil est conforme à la norme ISED CNR-247 et CNR-248 pour les appareils radio agréés. Son fonctionnement est soumis aux deux conditions suivantes:

1. le dispositif ne doit pas produire de brouillage préjudiciable, et
2. ce dispositif doit accepter tout brouillage reçu, y compris un brouillage susceptible de provoquer un fonctionnement indésirable.

⚠ Advertissement

- i. les dispositifs fonctionnant dans la bande 5 150-5 250 MHz sont réservés uniquement pour une utilisation à l'intérieur afin de réduire les risques de brouillage préjudiciable aux systèmes de satellites mobiles utilisant les mêmes canaux;
- ii. le gain maximal d'antenne permis pour les dispositifs utilisant les bandes 5 250-5 350 MHz et 5 470-5 725 MHz doit se conformer à la limite de p.i.r.e.;
- iii. le gain maximal d'antenne permis (pour les dispositifs utilisant la bande 5 725-5 825 MHz) doit se conformer à la limite de p.i.r.e. spécifiée pour l'exploitation point à point et non point à point, selon le cas.
- iv. De plus, les utilisateurs devraient aussi être avisés que les utilisateurs de radars de haute puissance sont désignés utilisateurs principaux (c.-à-d., qu'ils ont la priorité) pour les bandes 5 250-5 350 MHz et 5 650-5 850 MHz et que ces radars pourraient causer du brouillage et/ou des dommages aux dispositifs LAN-EL.
- v. Les opérations dans la bande 5925-7125 MHz doivent être limitées à une utilisation en intérieur.

- vi. L'utilisation sur les plates-formes énergétiques, les autos, les train, les vaisseaux navigateurs et les avions sera interdite, sauf sur les gros appareils volant au-dessus de 3 048 m (10 000 pieds).
- vii. Ces appareils ne doivent pas être utilisés pour contrôler des systèmes de navigation sans pilote ou pour communiquer avec eux.

Déclaration d'exposition aux radiations

Cet équipement est conforme aux limites d'exposition aux rayonnements ISED établies pour un environnement non contrôlé. Cet équipement doit être installé et utilisé avec un minimum de 20 cm de distance entre la source de rayonnement et votre corps. Cet émetteur ne doit pas être co-implantés ou exploités conjointement avec une autre antenne ou émetteur.

EU declaration of conformity



Hereby SMART Technologies ULC declares that the radio equipment type Interactive displays model QX265-V2-P, QX275-V2-P, and QX286-V2-P, and the OPS PCM11 are in compliance with Directive 2014/53/EU.

⚠ Warning

Operation of this equipment in a residential environment this equipment may could cause radio interference.

The full text of the EU declaration of conformity is available at the following internet address: smarttech.com/compliance
The frequency band and the maximum transmitted power in EU are listed below:

| Transmitting Band (MHz) | Maximum Transmit Power |
|-------------------------|------------------------|
| 13.56 | 0.0007μW (ERP) |
| 2400-2483.5 | 19.5dBm (EIRP) |
| 5150-5350 | 19.7dBm (EIRP) |
| 5470-5725 | 19.3dBm (EIRP) |
| 5725-5825 | 13.3dBm (EIRP) |
| 5925-6425 | 18.9dBm (EIRP) |

|  | | | | | | | | | |
|--|----|----|----|----|--------|----|----|----|--|
| AT | BE | BG | CH | CY | CZ | DE | DK | EE | |
| EL | ES | FI | FR | HR | HU | IE | IS | IT | |
| LI | LT | LU | LV | MT | NL | NO | PL | PT | |
| RO | SE | SI | SK | TR | UK(NI) | | | | |
|  | | | | | | | | | |

Restrictions: 5150 MHz - 5350 MHz and 5925 MHz - 6425 MHz are for indoor use only.

Certification and compliance

Caution: Exposure to Radio Frequency Radiation

This equipment complies with EU radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20 cm between the radiator and your body.

Hardware environmental compliance

SMART Technologies supports global efforts to ensure that electronic equipment is manufactured, sold, and disposed of in a safe and environmentally friendly manner.

Waste Electrical and Electronic Equipment and Battery regulations (WEEE and Battery Directives)

Electrical and electronic equipment and batteries contain substances that can be harmful to the environment and to human health. The crossed-out wheeled bin symbol indicates that products should be disposed of in the appropriate recycling stream and not as regular waste.



Batteries

Caution

There is a risk of fire or explosion if a battery is replaced by an incorrect type. Dispose of used batteries promptly. Follow handling instructions on coin cell packaging. Recycle or dispose of used batteries according to local guidelines.

The display contains a CR1220 coin cell battery. The remote control contains alkaline batteries. Recycle or dispose of batteries properly.

Perchlorate material

The coin cell battery contains perchlorate material. Special handling may apply.

See > dtsc.ca.gov/hazardouswaste/perchlorate

SMART Technologies

smarttech.com/support

smarttech.com/contactsupport

docs.smarttech.com/kb/171961