

# Notebook Tour

## User Guide

© Copyright 2007 Hewlett-Packard  
Development Company, L.P.

Microsoft and Windows are U.S. registered  
trademarks of Microsoft Corporation.  
Bluetooth is a trademark owned by its  
proprietor and used by Hewlett-Packard  
Company under license. SD Logo is a  
trademark of its proprietor.

The information contained herein is subject  
to change without notice. The only  
warranties for HP products and services are  
set forth in the express warranty statements  
accompanying such products and services.  
Nothing herein should be construed as  
constituting an additional warranty. HP shall  
not be liable for technical or editorial errors  
or omissions contained herein.

Second Edition: June 2007

First Edition: April 2007

Document Part Number: 438947-002

## Product notice

This user guide describes features that are common to most models. Some features may not be available on your computer.



---

# Table of contents

## 1 Identifying hardware

## 2 Components

Top components .....	2
TouchPad .....	2
Lights .....	3
Buttons, speakers and fingerprint reader .....	4
Keys .....	6
Front components .....	8
Rear components .....	10
Right-side components .....	11
Left-side components .....	12
Bottom components .....	14
Display components .....	15
Wireless antennae (select models only) .....	16
Additional hardware components .....	17

## 3 Labels

Index .....	19
-------------	----



---

# 1 Identifying hardware

To see a list of hardware installed in the computer, follow these steps:

1. Select **Start > Computer > System properties**.
2. In the left pane, click **Device Manager**.

---

 **NOTE:** Windows® includes the User Account Control feature to improve the security of your computer. You may be prompted for your permission or password for tasks such as installing applications, running utilities, or changing Windows settings. Refer to Windows online Help for more information.


---

You can also add hardware or modify device configurations using Device Manager.

## 2 Components

### Top components

#### TouchPad

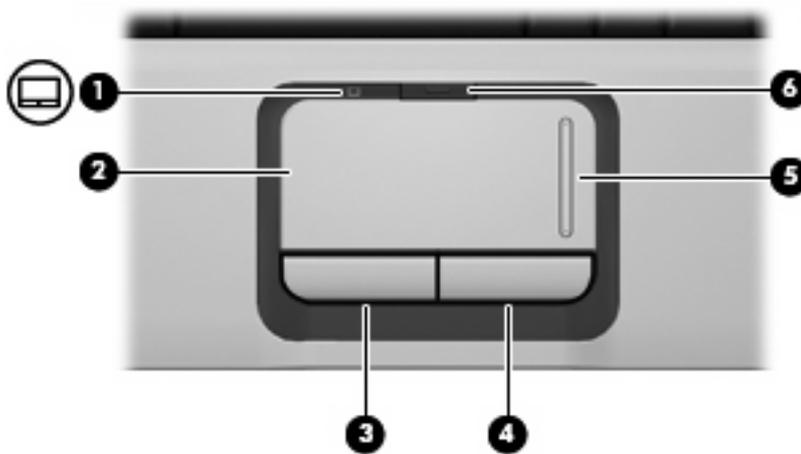

Component	Description
(1) TouchPad light	<ul style="list-style-type: none"><li>• Blue: TouchPad is enabled.</li><li>• Amber: TouchPad is disabled.</li></ul>
(2) TouchPad*	Moves the pointer and selects or activates items on the screen.
(3) Left TouchPad button*	Functions like the left button on an external mouse.
(4) Right TouchPad button*	Functions like the right button on an external mouse.
(5) TouchPad scroll zone*	Scrolls up or down.
(6) TouchPad on/off button	Enables/disables the TouchPad.

\*This table describes factory settings. To view and change pointing device preferences, select **Start > Control Panel > Hardware and Sound > Mouse**.

## Lights



Component	Description
(1) Power lights (2)*	<ul style="list-style-type: none"> <li>On: The computer is on.</li> <li>Blinking: The computer is in the Sleep state.</li> <li>Off: The computer is off or in Hibernation.</li> </ul>
(2) Battery light	<ul style="list-style-type: none"> <li>On: A battery is charging.</li> <li>Blinking: A battery that is the only available power source has reached a low battery level or a critical battery level.</li> <li>Off: If the computer is plugged into an external power source, the light is turned off when all batteries in the computer are fully charged. If the computer is not plugged into an external power source, the light stays off until the battery reaches a low battery level.</li> </ul>
(3) Drive light	Blinking: The hard drive or optical drive is being accessed.
(4) Caps lock light	On: Caps lock is on.
(5) Media button light	Blinks once when the media button is pressed.
(6) DVD button light	Blinks once when the DVD button is pressed.
(7) Previous/rewind light	Blinks once when the previous/rewind button is pressed.
(8) Play/pause light	Blinks once when the play/pause button is pressed.
(9) Next/fast forward light	Blinks once when the next/fast forward button is pressed.
(10) Stop light	Blinks once when the stop button is pressed.
(11) Volume mute light	<ul style="list-style-type: none"> <li>Blue: Computer sound is turned on.</li> <li>Amber: Computer sound is turned off.</li> </ul>
(12) Volume down light	Blinking: The volume scroll zone is being used to decrease speaker volume.
(13) Volume up light	Blinking: The volume scroll zone is being used to increase speaker volume.

Component	Description
(14) Num lock light	On: Num lock is on or the embedded numeric keypad is enabled.

\*The 2 power lights display the same information. The light on the power button is visible only when the computer is open. The power light on the front of the computer is visible whether the computer is open or closed.

## Buttons, speakers and fingerprint reader


 **NOTE:** Refer to the illustration that most closely matches your computer.



Component	Description
(1) Power button*	<ul style="list-style-type: none"> <li>When the computer is off, press the button to turn on the computer.</li> <li>When the computer is on, press the button to initiate Sleep.</li> <li>When the computer is in the Sleep state, press the button briefly to exit Sleep.</li> <li>When the computer is in Hibernation, press the button briefly to exit Hibernation.</li> </ul> <p>If the computer has stopped responding and Windows® shutdown procedures are ineffective, press and hold the power button for at least 5 seconds to turn off the computer.</p> <p>To learn more about your power settings, select <b>Start &gt; Control Panel &gt; System and Maintenance &gt; Power Options</b>.</p>
(2) Speakers (2)	Produce sound.
(3) Media button	Launches the QuickPlay program.

Component	Description
	<p><b>NOTE:</b> If the computer has been set up to require a logon password, you may be asked to log on to Windows. QuickPlay launches after you log on. Refer to the QuickPlay online Help for more information.</p>
(4) DVD button	<p>Launches the DVD playback feature of the QuickPlay program.</p> <p><b>NOTE:</b> If the computer has been set up to require a logon password, you may be asked to log on to Windows. QuickPlay launches after you log on. Refer to the QuickPlay online Help for more information.</p>
(5) Previous/rewind button	<ul style="list-style-type: none"> <li>Plays the previous track or chapter when the button is pressed once.</li> <li>Rewinds media when the button is pressed simultaneously with the <b>fn</b> key.</li> </ul>
(6) Play/pause button	Plays or pauses the disc.
(7) Next/fast forward button	<ul style="list-style-type: none"> <li>Plays the next track or chapter when the button is pressed once.</li> <li>Fast forwards media when pressed simultaneously with the <b>fn</b> key.</li> </ul>
(8) Stop button	Stops the disc.
(9) Volume mute button	Mutes and restores speaker sound.
(10) Volume scroll zone	Adjusts speaker volume. Slide your finger to the left to decrease volume and to the right to increase volume. You can also tap the minus sign on the scroll zone to decrease volume, or tap the plus sign on the scroll zone to increase volume.
(11) Fingerprint reader (select models only)	Allows a fingerprint logon to Windows, instead of a password logon.

\*This table describes factory settings. For information about changing factory settings, refer to the user guides located in Help and Support.

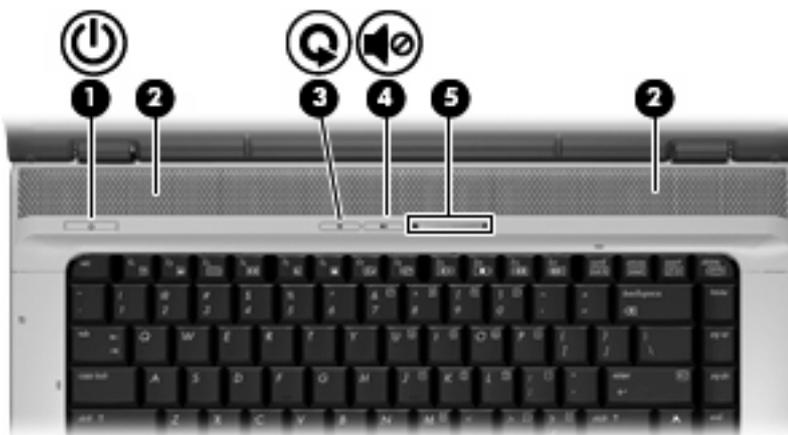


Component	Description
(1) Power button*	<ul style="list-style-type: none"> <li>When the computer is off, press the button to turn on the computer.</li> <li>When the computer is on, press the button to initiate Sleep.</li> <li>When the computer is in the Sleep state, press the button briefly to exit Sleep.</li> <li>When the computer is in Hibernation, press the button briefly to exit Hibernation.</li> </ul> <p>If the computer has stopped responding and Windows® shutdown procedures are ineffective, press and hold the power button for at least 5 seconds to turn off the computer.</p> <p>To learn more about your power settings, select <b>Start &gt; Control Panel &gt; System and Maintenance &gt; Power Options</b>.</p>
(2) Speakers (2)	Produce sound.
(3) Media button	<p>Launches the QuickPlay program.</p> <p><b>NOTE:</b> If the computer has been set up to require a logon password, you may be asked to log on to Windows. QuickPlay launches after you log on. Refer to the QuickPlay online Help for more information.</p>
(4) Volume mute button	Mutes and restores speaker sound.
(5) Volume scroll zone	Adjusts speaker volume. Slide your finger to the left to decrease volume and to the right to increase volume. You can also tap the minus sign on the scroll zone to decrease volume, or tap the plus sign on the scroll zone to increase volume.

\*This table describes factory settings. For information about changing factory settings, refer to the user guides located in Help and Support.

## Keys

 **NOTE:** Your computer may look slightly different from the illustration in this section.

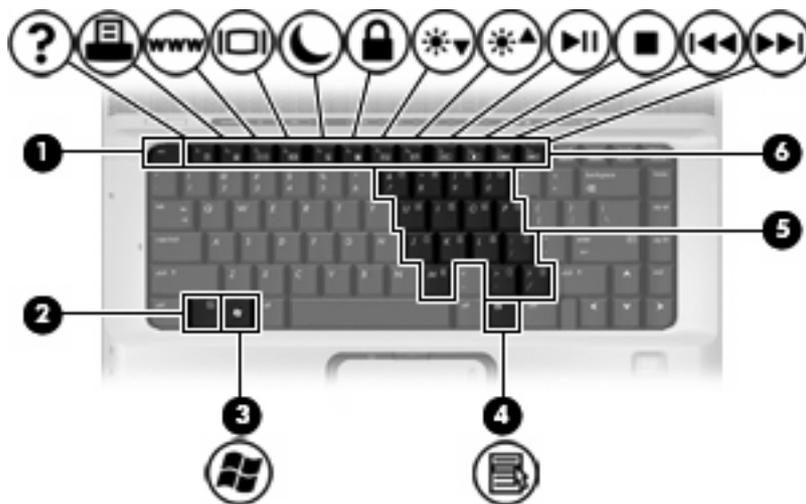

Component	Description
(1) <code>esc</code> key	Displays system information when pressed in combination with the <code>fn</code> key.
(2) <code>fn</code> key	Executes frequently used system functions when pressed in combination with a function key or the <code>esc</code> key.
(3) Windows logo key	Displays the Windows Start menu.
(4) Windows applications key	Displays a shortcut menu for items beneath the pointer.
(5) Embedded numeric keypad keys	Can be used like the keys on an external numeric keypad.
(6) Function keys	Execute frequently used system functions when pressed in combination with the <code>fn</code> key.

# Front components

 **NOTE:** Refer to the illustration that most closely matches your computer.



Component	Description
(1) Wireless switch	Turns the wireless feature on or off, but does not create a wireless connection.  <b>NOTE:</b> To establish a wireless connection, a wireless network must already be set up.
(2) Wireless light	<ul style="list-style-type: none"> <li>Blue: An integrated wireless device, such as a wireless local area network (LAN) device and/or a Bluetooth® device, is turned on.</li> <li>Amber: An integrated wireless device is turned off.</li> </ul>
(3) Consumer infrared lens	Receives a signal from a remote control device, such as an HP Remote Control.
(4) Audio-in (microphone) jack	Connects an optional computer headset microphone, stereo array microphone, or monaural microphone.
(5) Audio-out (headphone) jack	Produces sound when connected to optional powered stereo speakers, headphones, ear buds, a headset, or television audio.
(6) Audio-out (headphone) jack (select models only)	Produces sound when connected to optional powered stereo speakers, headphones, ear buds, a headset, or television audio.



Component	Description
(1) Wireless switch	Turns the wireless feature on or off, but does not create a wireless connection.  <b>NOTE:</b> To establish a wireless connection, a wireless network must already be set up.


Component	Description
(2) Wireless light	<ul style="list-style-type: none"> <li>• Blue: An integrated wireless device, such as a wireless local area network (LAN) device and/or a Bluetooth® device, is turned on.</li> <li>• Amber: An integrated wireless device is turned off.</li> </ul>
(3) Consumer infrared lens	Receives a signal from a remote control device, such as an HP Remote Control.
(4) Audio-in (microphone) jack	Connects an optional computer headset microphone, stereo array microphone, or monaural microphone.
(5) Audio-out (headphone) jack	Produces sound when connected to optional powered stereo speakers, headphones, ear buds, a headset, or television audio.

## Rear components



Component	Description
Vent	<p data-bbox="770 457 1190 480">Enables airflow to cool internal components.</p> <p data-bbox="770 510 1437 611"><b>CAUTION:</b> To prevent overheating, do not obstruct vents. Use the computer only on a hard, flat surface. Do not allow another hard surface, such as an adjoining optional printer, or a soft surface, such as pillows or thick rugs or clothing, to block airflow.</p> <p data-bbox="770 640 1437 716"><b>NOTE:</b> The computer fan starts up automatically to cool internal components and prevent overheating. It is normal for the internal fan to cycle on and off during routine operation.</p>


## Right-side components

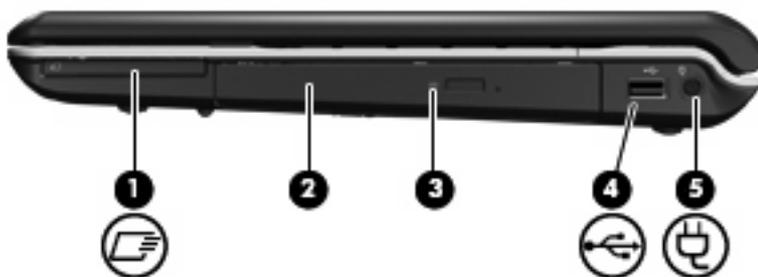

Component	Description
(1) ExpressCard slot	Supports optional ExpressCard/54 cards.
(2) Optical drive	Reads optical discs and, on select models, also writes to optical discs.
(3) Optical drive light	Blinking: The optical drive is being accessed.
(4) USB port	Connects an optional USB device.
(5) Power connector	Connects an AC adapter.


## Left-side components

 **NOTE:** Refer to the illustration that most closely matches your computer.

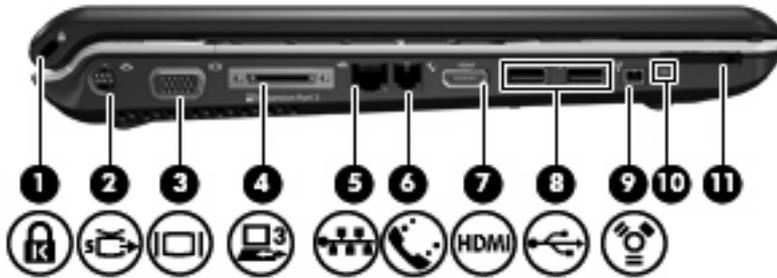


Component	Description
(1) Security cable slot	Attaches an optional security cable to the computer.  <b>NOTE:</b> The security cable is designed to act as a deterrent, but may not prevent the computer from being mishandled or stolen.
(2) S-Video-out jack	Connects an optional S-Video device such as a television, VCR, camcorder, overhead projector, or video capture card.
(3) External monitor port	Connects an external VGA monitor or projector.
(4) Expansion port 3	Connects the computer to an optional docking device or optional expansion product.  <b>NOTE:</b> The computer has only one expansion port. The term <i>expansion port 3</i> describes the type of expansion port.
(5) RJ-45 (network) jack	Connects a network cable.  <b>NOTE:</b> On select computer models, the network jack provides Gigabit Ethernet functionality.
(6) RJ-11 (modem) jack	Connects a modem cable.
(7) HDMI port (select models only)	Connects an optional video or audio device such as a high-definition television, set-top box, DVD player, or any compatible digital or audio component.
(8) USB port (1 or 2, depending on computer model)	Connects an optional USB device.
(9) 1394 port (select models only)	Connects an optional IEEE 1394 or 1394a device, such as a camcorder.
(10) Digital Media Slot light (select models only)	On: A digital card is being accessed.
(11) Digital Media Slot (select models only)	Supports the following optional digital card formats: <ul style="list-style-type: none"> <li>• Memory Stick (MS)</li> <li>• Memory Stick Pro (MSP)</li> <li>• MultiMediaCard (MMC)</li> <li>• Secure Digital Input/Output (SD/IO)</li> <li>• Secure Digital (SD) Memory Card</li> <li>• xD-Picture Card (XD)</li> </ul>

Component	Description
	<ul style="list-style-type: none"> <li>xD-Picture Card (XD) Type H</li> <li>xD-Picture Card (XD) Type M</li> </ul>

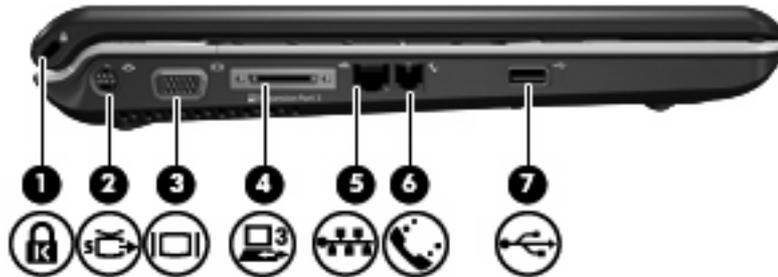

Component	Description
(1) Security cable slot	<p>Attaches an optional security cable to the computer.</p> <p><b>NOTE:</b> The security cable is designed to act as a deterrent, but may not prevent the computer from being mishandled or stolen.</p>
(2) S-Video-out jack	<p>Connects an optional S-Video device such as a television, VCR, camcorder, overhead projector, or video capture card.</p>
(3) External monitor port	<p>Connects an external VGA monitor or projector.</p>
(4) Expansion port 3	<p>Connects the computer to an optional docking device or optional expansion product.</p> <p><b>NOTE:</b> The computer has only one expansion port. The term <i>expansion port 3</i> describes the type of expansion port.</p>
(5) RJ-45 (network) jack	<p>Connects a network cable.</p> <p><b>NOTE:</b> On select computer models, the network jack provides Gigabit Ethernet functionality.</p>
(6) RJ-11 (modem) jack	<p>Connects a modem cable.</p>
(7) USB port	<p>Connects an optional USB device.</p>

## Bottom components

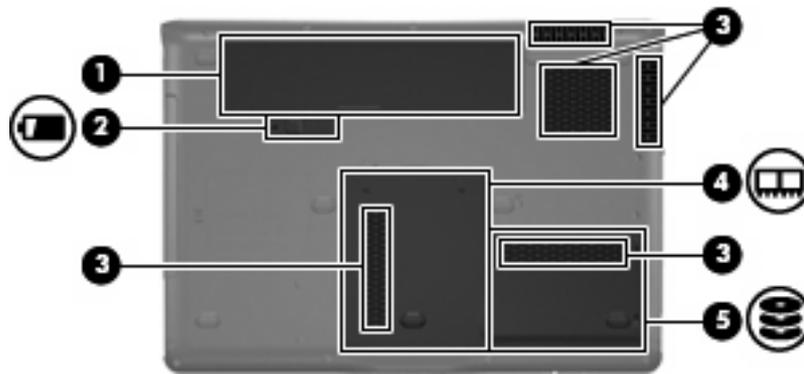

Component	Description
(1) Battery bay	Holds the battery.
(2) Battery release latch	Releases the battery from the battery bay.
(3) Vents (5)	Enable airflow to cool internal components.  <b>CAUTION:</b> To prevent overheating, do not obstruct vents. Use the computer only on a hard, flat surface. Do not allow another hard surface, such as an adjoining optional printer, or a soft surface, such as pillows or thick rugs or clothing, to block airflow.  <b>NOTE:</b> The computer fan starts up automatically to cool internal components and prevent overheating. It is normal for the internal fan to cycle on and off during routine operation.
(4) Memory module compartment	Contains the memory module slots.
(5) Hard drive bay	Holds the hard drive.

## Display components



Component	Description
(1) Internal display switch*	Turns off the display if the display is closed while the computer is on.
(2) Internal microphones (2) (select models only)	Record sound. <b>NOTE:</b> If there is a microphone icon next to each microphone opening, your computer has internal microphones.
(3) Integrated camera light (select models only)	On: The integrated camera is in use.
(4) Integrated camera (select models only)	Records video and captures still photographs.

\*Depending on your computer model, the internal display switch on the computer may vary in location.

## Wireless antennae (select models only)

On select computer models, at least 2 antennae send and receive signals from one or more wireless devices. These antennae are not visible from the outside of the computer.

To see wireless regulatory notices, refer to your country's section of the *Regulatory, Safety and Environmental Notices* located in Help and Support.



---

 **NOTE:** For optimal transmission, keep the areas immediately around the antennae free from obstructions.

---

## Additional hardware components



Component	Description
(1) Power cord*	Connects an AC adapter to an AC outlet.
(2) AC adapter	Converts AC power to DC power.
(3) Battery*	Powers the computer when the computer is not plugged into external power.

\*Batteries and power cords vary in appearance by region and country.

---

## 3 Labels

The labels affixed to the computer provide information you may need when you troubleshoot system problems or travel internationally with the computer.

- Service tag—Provides the product brand and series name, serial number (s/n), and product number (p/n) of your computer. Have this information available when you contact technical support. The service tag label is affixed to the bottom of the computer.
- Microsoft® Certificate of Authenticity—Contains the Windows® Product Key. You may need the Product Key to update or troubleshoot the operating system. This certificate is affixed to the bottom of the computer.
- Regulatory label—Provides regulatory information about the computer. The regulatory label is affixed inside the battery bay.
- Modem approval label—Provides regulatory information about the modem and lists the agency approval markings required by some of the countries in which the modem has been approved for use. You may need this information when traveling internationally. The modem approval label is affixed inside the memory module compartment.
- Wireless certification label(s) (select models only)—Provide information about optional wireless devices and the approval markings of some of the countries in which the devices have been approved for use. An optional device may be a wireless local area network (WLAN) device or an optional Bluetooth® device. If your computer model includes one or more wireless devices, one or more certification labels are included with your computer. You may need this information when traveling internationally. Wireless certification labels are affixed inside the memory module compartment.

---

# Index

## Symbols/Numerics

1394 port, identifying 12

## A

AC adapter, identifying 17  
antennae 16  
applications key, Windows 7  
audio-in (microphone) jack,  
identifying 8, 9  
audio-out (headphone) jack,  
identifying 8, 9

## B

battery bay 18  
battery bay, identifying 14  
battery light, identifying 3  
battery release latch,  
identifying 14  
battery, identifying 17  
bays  
    battery 14, 18  
    hard drive 14  
Bluetooth label 18  
buttons  
    DVD 5  
    media 4, 6  
    next/fast forward 5  
    play/pause 5  
    power 4, 6  
    previous/rewind 5  
    stop 5  
    TouchPad 2  
    TouchPad on/off 2  
    volume mute 5, 6

## C

camera, identifying 15  
caps lock light, identifying 3  
Certificate of Authenticity label 18

compartment, memory  
    module 14  
components  
    additional hardware 17  
    bottom 14  
    display 15  
    front 8  
    left-side 12  
    rear 10  
    right-side 11  
    top 2  
connector, power 11  
cord, power 17

## D

Digital Media Slot light,  
identifying 12  
Digital Media Slot, identifying 12  
display switch, identifying 15  
drive light, identifying 3  
drives  
    hard drive 14  
    optical drive 11  
DVD button light, identifying 3  
DVD button, identifying 5

## E

esc key, identifying 7  
expansion port, identifying 12,  
13  
ExpressCard slot, identifying 11  
external monitor port,  
identifying 12, 13

## F

fingerprint reader, identifying 5  
fn key, identifying 7  
function keys, identifying 7

## H

hard drive bay, identifying 14  
HDMI port, identifying 12

## I

IEEE 1394 port, identifying 12  
infrared lens, identifying 8, 9  
integrated camera light,  
identifying 15  
integrated camera, identifying 15  
internal display switch,  
identifying 15  
internal microphones,  
identifying 15

## J

jacks  
    audio-in (microphone) 8, 9  
    audio-out (headphone) 8, 9  
    RJ-11 (modem) 12, 13  
    RJ-45 (network) 12, 13  
    S-Video-out 12, 13

## K

keypad keys, identifying 7  
keys  
    esc 7  
    fn 7  
    function 7  
    keypad 7  
    Windows applications 7  
    Windows logo 7

## L

labels  
    Bluetooth 18  
    Microsoft Certificate of  
    Authenticity 18  
    modem approval 18  
    regulatory 18

- service tag 18
- wireless certification 18
- WLAN 18
- latch, battery release 14
- lights
  - battery 3
  - caps lock 3
  - Digital Media Slot 12
  - drive 3
  - DVD button 3
  - integrated camera 15
  - media button 3
  - mute 3
  - next/fast forward 3
  - num lock 4
  - optical drive 11
  - play/pause 3
  - power 3
  - previous/rewind 3
  - stop 3
  - TouchPad 2
  - volume down 3
  - volume mute 3
  - volume up 3
  - wireless 8, 9

## M

- media activity buttons, identifying 5
- media activity lights, identifying 3
- media button light, identifying 3
- media button, identifying 4, 6
- memory module compartment, identifying 14
- Microsoft Certificate of Authenticity label 18
- modem approval label 18
- monitor port, external 12, 13
- mute button, identifying 5, 6
- mute light, identifying 3

## N

- next/fast forward button, identifying 5
- next/fast forward light, identifying 3
- num lock light, identifying 4

## O

- operating system
  - Microsoft Certificate of Authenticity label 18
  - Product Key 18
- optical drive light, identifying 11
- optical drive, identifying 11

## P

- play/pause button, identifying 5
- play/pause light, identifying 3
- ports
  - 1394 12
  - expansion 12, 13
  - external monitor 12, 13
  - HDMI 12
  - USB 11, 12, 13
- power button, identifying 4, 6
- power connector, identifying 11
- power cord, identifying 17
- power lights, identifying 3
- previous/rewind button, identifying 5
- previous/rewind light, identifying 3
- Product Key 18
- product name and number, computer 18

## R

- regulatory information
  - modem approval label 18
  - regulatory label 18
  - wireless certification labels 18
- RJ-11 (modem) jack, identifying 12, 13
- RJ-45 (network) jack, identifying 12, 13

## S

- S-Video-out jack, identifying 12, 13
- scrolling regions, TouchPad 2
- security cable slot, identifying 12, 13
- serial number, computer 18
- service tag 18
- slots
  - Digital Media 12
  - ExpressCard 11

- memory module 14
- security cable 12, 13
- speakers, identifying 4, 6
- stop button, identifying 5
- stop light, identifying 3

## T

- TouchPad
  - buttons 2
  - identifying 2
  - scrolling regions 2
- TouchPad light, identifying 2
- TouchPad on/off button 2
- traveling with the computer
  - modem approval label 18
  - wireless certification labels 18

## U

- USB ports, identifying 11, 12, 13

## V

- vents, identifying 10, 14
- volume down light, identifying 3
- volume mute button, identifying 5, 6
- volume mute light, identifying 3
- volume scroll zone, identifying 5, 6
- volume up light, identifying 3

## W

- Windows applications key, identifying 7
- Windows logo key, identifying 7
- wireless antennae 16
- wireless certification label 18
- wireless light, identifying 8, 9
- wireless switch, identifying 8
- WLAN device 18
- WLAN label 18

