 
 


## Temperature/Humidity Sensor (AP9335TH) Installation Instructions

 
### Inventory



4-m (13.12-ft) temperature/humidity sensor (1)



25.4-mm x 25.4-mm  
(1-in x 1-in) temperature/  
humidity sensor mount (1)



Housing clip (1)



203-mm (8-in) tie wrap (5)



#8 x 3/4-in sheet  
metal screw (1)



#8 wall anchor (1)



19-mm x 19-mm (3/4-in x 3/4-in) adhesive  
cable tie holder (2)



Wire clip (6)

### Installation




**Note:** If you use a tie wrap to secure the sensor, tighten the tie wrap over the recessed channel on the sensor. If you use the housing clip, make sure the protrusions on the inside of the clip snap into the slots in the recessed channel.




**Note:** Use adhesive cable tie holders, tie wraps, and wire clips to secure the sensor cable.

## Vertical rail

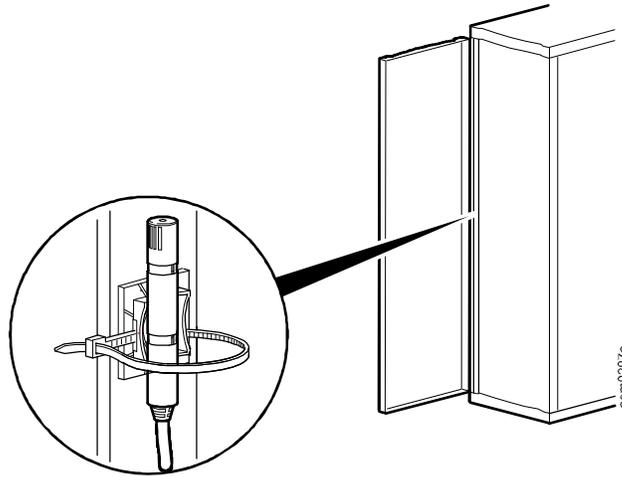


## Door

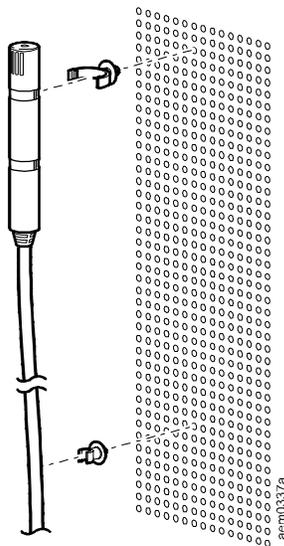

## Wall



**Note:** Drill a 4.76-mm (3/16-in) pilot hole for the wall anchor.

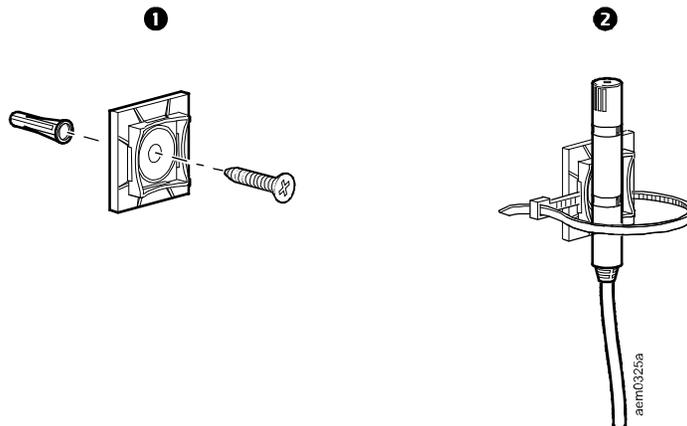

Customer support and warranty information is available at the APC Web site, [www.apc.com](http://www.apc.com).

© 2008 American Power Conversion. All rights reserved. All APC trademarks are property of American Power Conversion. Other trademarks are property of their respective owners.

990-3506  
11/2008

