

How can we help you?

GET TO KNOW YOUR PRODUCT:

- Access user manuals, tips and more at samsung.com/us/support.

ASK THE COMMUNITY:

- Ask questions and get solutions from Samsung customers, at us.community.samsung.com.

CONTACT US FOR SUPPORT:

- For hardware or software support, visit samsung.com/us/support/contact or call us at 1.800.SAMSUNG.
- Find a service location near you, at support-us.samsung.com/cyber/locator/asc_locator.jsp.

Quick Reference Guide



Unlocked!

 
 
 
1 About your phone



2 Set up your phone


Your SIM card may be pre-installed.

1. Remove the back cover and battery.
2. Slide the SIM card into the SIM card slot.
3. Slide the microSD card into the microSD card slot.
4. Install the battery and replace the back cover

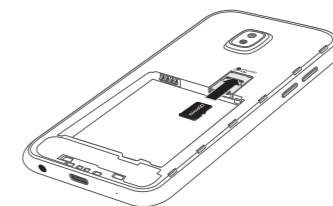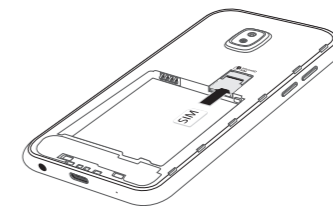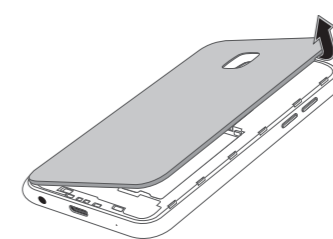

Charge the phone

 Before turning on your phone, charge it fully.

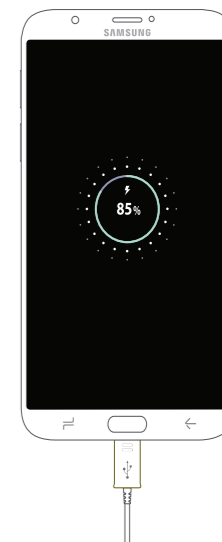

Caution: Use only Samsung approved charging devices and batteries. Samsung accessories are designed for your device to maximize battery life. Using other accessories may void your warranty and may cause damage.

microSD sold separately



3 Customize your phone

Pinch the home screen to change the look of your phone:



Wallpapers



Themes



Widgets



Home screen settings

From a home screen swipe up, and then tap **Settings** to customize, connect or turn on options to personalize your phone:



CONNECTIONS

Connect to a Wi-Fi network, Bluetooth device and other connection options.



SOUNDS AND VIBRATION

Set device volume and sounds.



DISPLAY

Customize the home screen and display brightness.



LOCK SCREEN

 
Select a screen lock type and set security options.

Bixby

Set reminders, send messages, search and access content on your phone and Internet.

To launch Bixby, from the home screen, swipe right.

Note: For more information about Bixby, visit samsung.com/us/support/owners/app/Bixby.

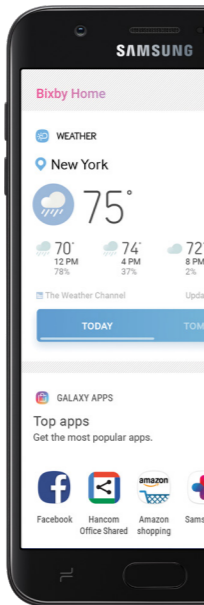

Learn more

Need help?



The Help setting displays the device user manual. The user manual provides information about the following and more.

To open, from the Home screen, swipe up and tap **Settings** > **Help** .



Make a call



Contacts



Health & Fitness



 
Personalized device support



Accessibility settings

Search

From the home screen swipe up, and search for anything on the phone. For example enter an app or settings name.

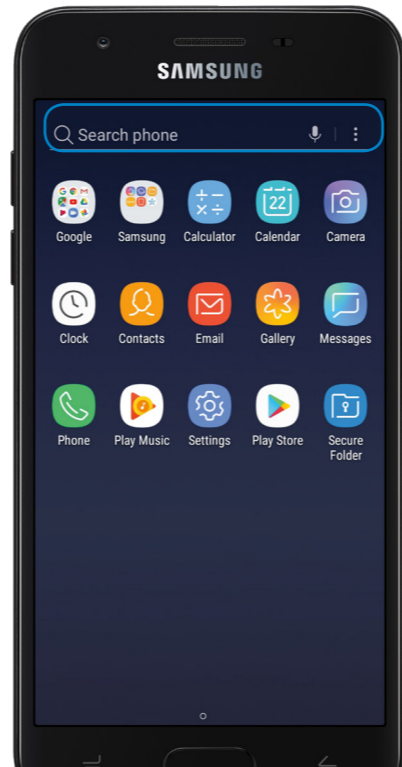

Contacts



- Tap to add a new contacts.
- Enter the desired information and tap **SAVE** to store the new entry.
- To edit, tap a name > **Details** > **EDIT**.
- Tap **SAVE** to complete.
- To delete, touch and hold a contact name and tap **DELETE**.

Messages



- Tap to create a new message.

Note: If entering a phone number, press to add the phone number as a recipient.

- Tap **START** to compose a message.
- Tap to add an attachment.
- Touch and hold to create an audio message.
- Tap to add a sticker or a GIF.
- Tap to send the message.

Picture & Video



- Tap to take a photo.
- Drag left or right to zoom in or out.
- Tap or swipe up to take selfies.
- Swipe right to select a mode.
- Swipe left to select an effect.
- Tap to begin recording.
- Tap to pause a recording.
- Tap to end a video.

¹Wireless voice, data and messaging services compatible with most major U.S. GSM and CDMA networks. Visit www.samsung.com for more information on your device. Support for certain features and services such as VoWiFi and hotspot, vary by wireless service provider. See provider for compatibility details.

©2018 Samsung Electronics America, Inc. Samsung and Galaxy J3 are both trademarks of Samsung Electronics Co., Ltd. Android, Google, Google Play, and other marks are trademarks of Google LLC. Other company and product names mentioned herein may be trademarks of their respective owners. Screen images simulated. Appearance of phone may vary.