

1

Insert one or two SIM cards and a microSD card, if any.



2


Attach our:

- ✓ ACC-A21 antenna to the leftmost antenna connector (labelled Wi-Fi), if needed; and
- ✓ ACC-A32 or A33H to the rightmost and the second leftmost antenna connectors (labelled Main Cellular and Cellular Diversity).



3

Use either our ACC-PS2x-F power adapter or your own power adapter* with our ACC-CA10 or ACC-CA10-F power cord.

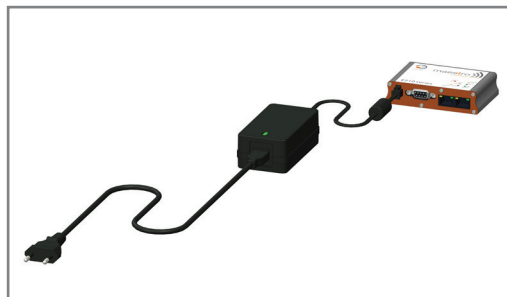

* Provided its output voltage fell inside E210 series' 8 V ~ 32 V range

4

Plug:

- ✓ a serial cord into E210 series' 9-pin female sub-D header; and / or
- ✓ one or two Ethernet cords into its RJ-45 headers.



E214 E218 QUICK START GUIDE