

Dell Pro 7 Slim Keyboard

KB726

User's Guide

Notes, cautions, and warnings

 **NOTE:** A NOTE indicates important information that helps you make better use of your product.

 **CAUTION:** A CAUTION indicates either potential damage to hardware or loss of data and tells you how to avoid the problem.

 **WARNING:** A WARNING indicates a potential for property damage, personal injury, or death.

Contents

- About your keyboard 4
 - Package contents 4
 - Information available on the packaging 5
- Features 6
 - Keyboard 6
 - Launch Copilot in Windows 7
- Dell Display and Peripheral Manager 9
 - Installing Dell Display and Peripheral Manager 9
- Setting up your wireless keyboard 10
- Pairing with a USB receiver 11
- Pairing your wireless keyboard using Swift Pair 12
- Pairing your wireless keyboard using Bluetooth 13
- Pairing device two using Bluetooth 14
- Switching between paired devices 15
 - Smart Connect 15
- Specifications 16
 - General 16
 - Electrical 16
 - Physical characteristics 16
 - Environmental 16
 - Wireless 16
- Troubleshooting 17
- Statutory information 19
 - Warranty 19
 - Limited warranty and return policies 19
 - For U.S. customers: 19
 - For European, Middle Eastern and African customers: 19
 - For non-U.S. customers: 19
- European Accessibility Act 20
- Revision history 21

 
 
About your keyboard

Package contents

The following table provides the list of components that are shipped with your keyboard. If any component is missing, contact Dell. For more information, see [Contacting Dell](#).

NOTE: Some items may be optional and may not ship with your keyboard. Some features may not be available in certain countries.

Table 1. Components and descriptions

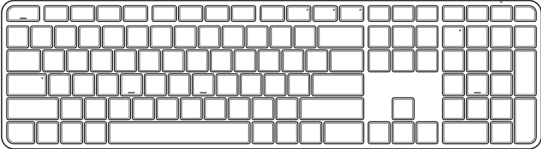Component image	Component description
	Dell KB726 Keyboard
	Dell Secure Link USB receiver NOTE: The Dell Secure Link USB receiver is stored in the USB receiver storage compartment in the keyboard.
	Document NOTE: Scan the QR code on the document to access the information about setting up, features, specifications, and troubleshooting.
	AAA-type batteries (2)

Information available on the packaging

The product is compatible with the following operating systems:

- Windows 10
- Windows 11
- macOS 11 or later
- Linux
- Ubuntu
- ChromeOS
- iPadOS 14 or later
- Android 9.0 or later

The following are the accessories that ship within the box:

- USB receiver
- Batteries (AAA-type x 2)

For information about recycling, see the [Dell recycling](#) website.

Features

Keyboard



Figure 1. Back view

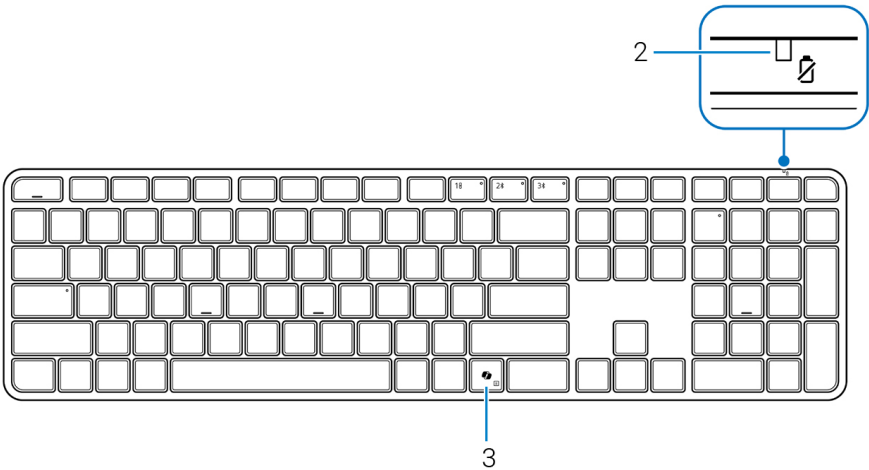 


Figure 2. Top view

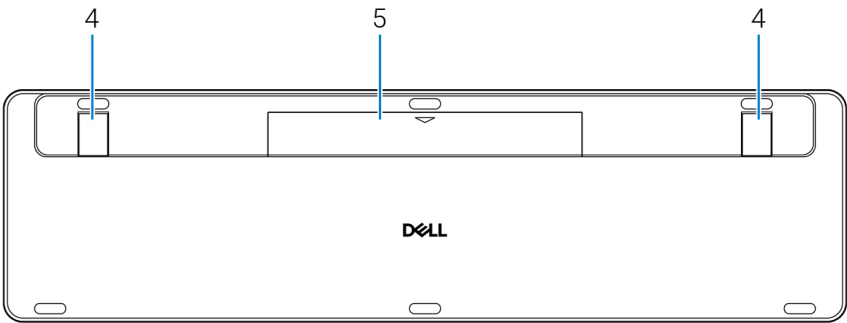 


Figure 3. Bottom view

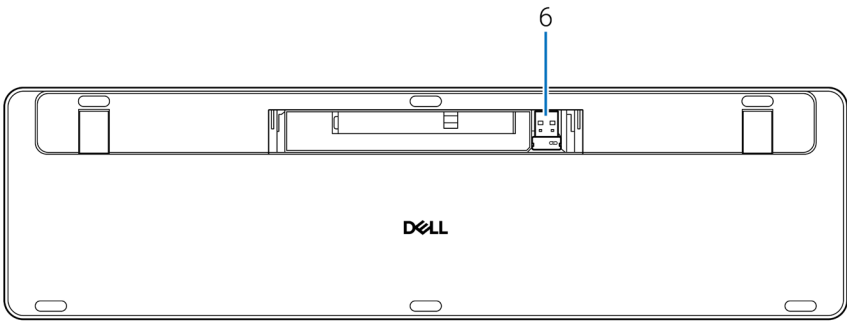 


Figure 4. Bottom view (without battery cover)

Table 2. Keyboard components

Callout	Description	Callout	Description
1	Power switch	2	Battery-status light
3	Copilot key	4	Keyboard feet
5	Battery cover	6	USB receiver storage compartment

Launch Copilot in Windows

- ① **NOTE:** Use the  key with supported Windows 11 devices. The feature availability varies by device and market, see [aka.ms/KeySupport](#).
- ① **NOTE:** Copilot in Windows is available only in approved markets.

The regulatory and PPID labels are in the battery compartment.

NOTE: The following images are sample illustrations that are intended only to show the location of the regulatory label. To view the regulatory and PPID labels or logos, open the keyboard battery cover.

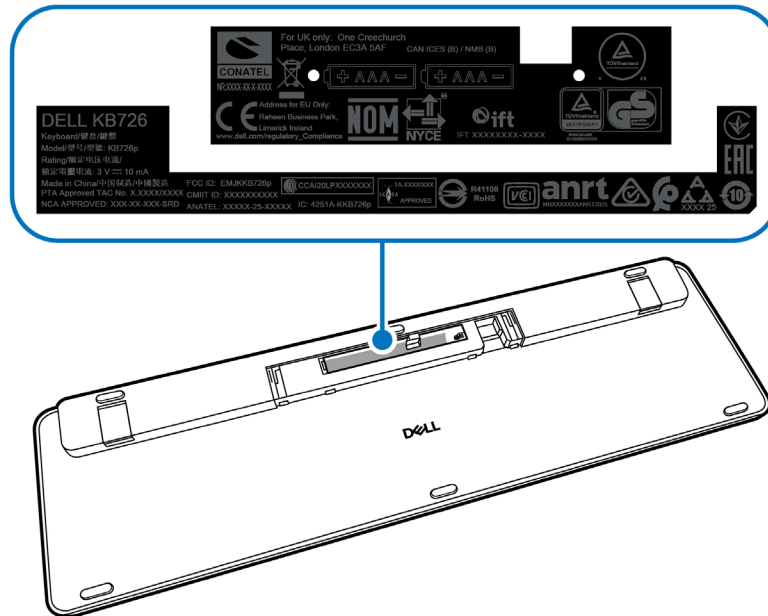 


Figure 5. Regulatory and PPID label location in the keyboard

Dell Display and Peripheral Manager

Dell Display and Peripheral Manager is an app that enables you to set up and configure your Dell monitors and peripherals. With this app you can:

- Assign program shortcuts to device programmable keys through **Key Customization** tab. You can even set shortcuts specific to an app with App settings.
- View device information such as firmware version and battery status for wireless devices.
- Upgrade to the latest firmware for your device.
- Pair or unpair to the USB receiver.

Installing Dell Display and Peripheral Manager

When you connect the device to your computer for the first time, you may be prompted to download and install the app.

① **NOTE:** If the download prompt does not appear within a few minutes, you can manually install the software from [Dell.com/support/DDPM](https://dell.com/support/DDPM).

For more information, expand **Support Resources** and click **Manuals & Documents** to access the *Dell Display and Peripheral Manager User's Guide*.

Setting up your wireless keyboard

1. Using your fingertip, slide the battery cover down to open the battery cover.

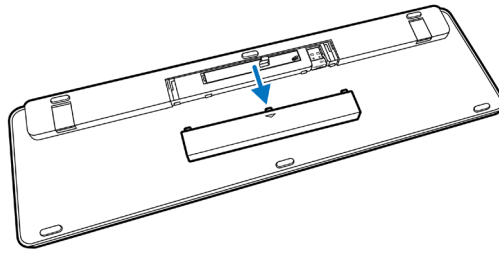 


Figure 6. Opening the battery cover

2. Remove the USB receiver from the USB receiver storage compartment.

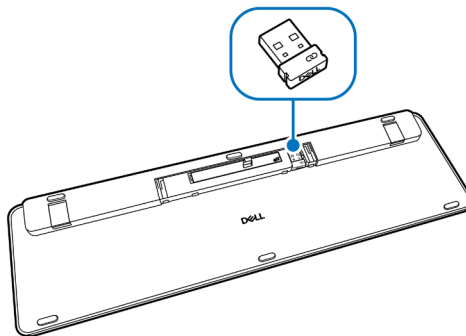 


Figure 7. Removing the USB receiver

3. Install the AAA batteries into the battery compartment and then replace the battery cover.

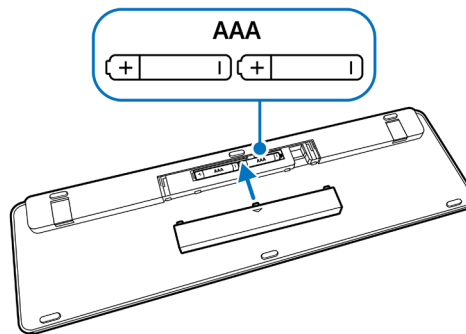 


Figure 8. Installing the batteries

4. Slide the power switch to the left to turn on the keyboard.

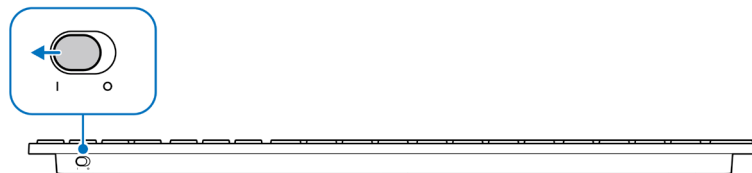 


Figure 9. Turning on the keyboard

Pairing with a USB receiver

Your Dell wireless keyboard can be paired with devices using the USB receiver. You can pair and switch between a laptop, desktop, and a compatible mobile device.

NOTE: You can connect a device to your wireless keyboard using the USB receiver.

1. Connect the USB receiver to the USB port on your computer.

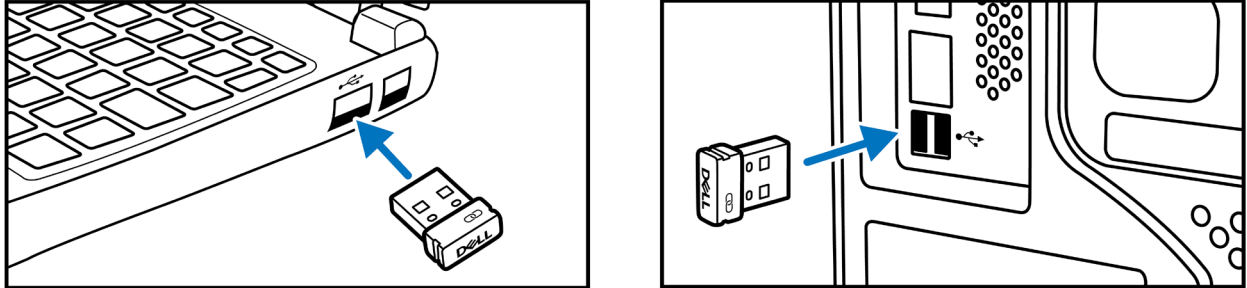 


Figure 10. Connecting the USB receiver

2. Press **10** on the keyboard. The LED indicator (**10**) turns on automatically for three seconds and then turns off.

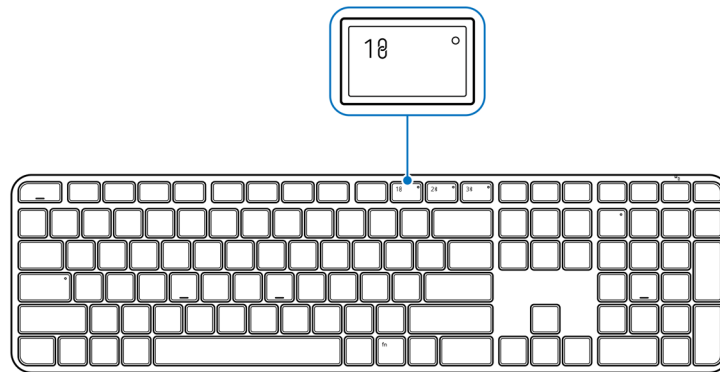 


Figure 11. Selecting the USB mode

The keyboard is now connected to your computer.

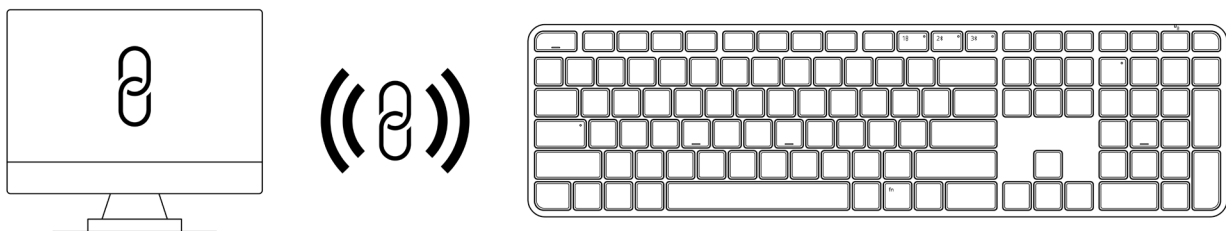 


Figure 12. Keyboard connected to the computer

Pairing your wireless keyboard using Swift Pair

1. In Windows Search, type Bluetooth.
2. Click **Bluetooth and other devices settings**. The **Settings** window appears.
3. Ensure that the **Show notifications to connect using Swift Pair** setting is turned on.

 


Figure 13. Show notifications

4. Ensure that the Bluetooth is turned on in your computer.
5. On the wireless keyboard, press **2** + **Fn** to initiate the Bluetooth pairing. The **New Dell KB726 found** window appears. Click **Connect** to confirm the pairing process between the wireless keyboard and your computer.

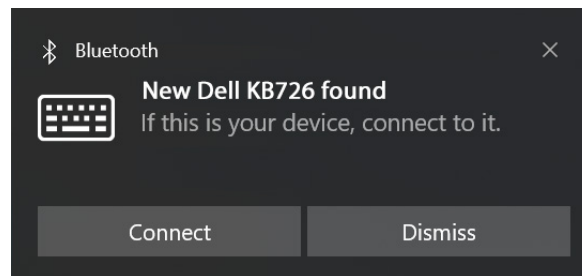 


Figure 14. New Dell KB726 found

Pairing your wireless keyboard using Bluetooth

Your Dell wireless keyboard can be paired with your Bluetooth-enabled computer. You can pair and switch between laptop, desktop, and a compatible mobile device.

- ① **NOTE:** You can connect up to two devices with your wireless keyboard using Bluetooth.
- ① **NOTE:** Before pairing your wireless keyboard using Bluetooth, ensure that you unpair the inactive devices on your computer. Update the Bluetooth driver on your Dell computer to the latest version. For more information, see **Drivers & Downloads** at [Dell Support Site](#).
- ① **NOTE:** Ensure that the distance between your computer is within the Bluetooth reception range.

1. On the wireless keyboard, press 2* to initiate pairing.

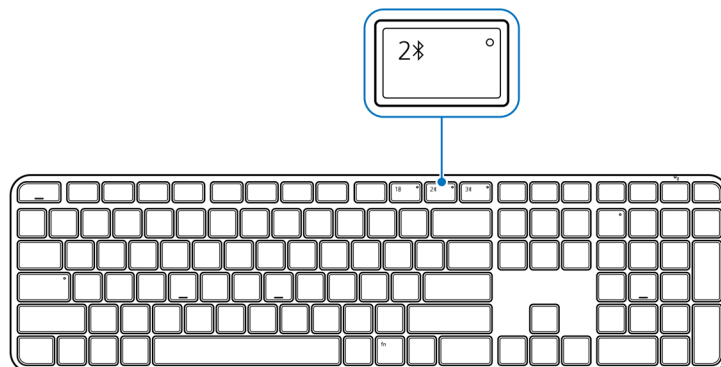 


Figure 15. Initiating pairing with devices

2. Pair your wireless keyboard with your Bluetooth-enabled computer.
 1. Select **Start > Settings > Bluetooth & devices > Add device**.
 2. Click **Bluetooth**. A list of bluetooth-enabled devices are displayed.
 3. Click **Dell KB726**. Type the numbers that are shown onscreen when using the wireless keyboard, press Enter, and then click **Done**.
 - ① **NOTE:** Ensure that the distance between your computer and keyboard is within the Bluetooth reception range.
 4. Confirm the pairing process on the wireless keyboard and your computer. The Bluetooth channel LED (2*) turns solid white for a few seconds to confirm the pairing, and then the light turns off. After your keyboard and computer pairing is completed, the keyboard connect to the computer automatically.

The following image indicates the first Bluetooth (2*) enabled device pairing.

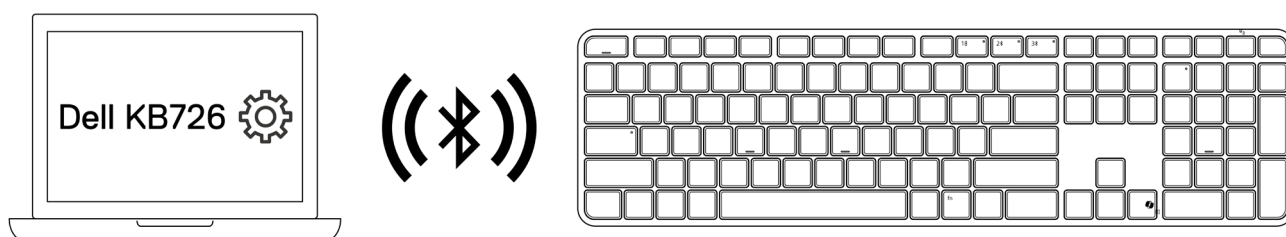 


Figure 16. First Bluetooth-enabled device pairing

Pairing device two using Bluetooth

- ① **NOTE:** You can connect up to two devices with your wireless keyboard using Bluetooth.
- ① **NOTE:** Before pairing your wireless keyboard using Bluetooth, ensure that you unpair the inactive devices on your computer. Update the Bluetooth Driver on your Dell computer to the latest version. For more information, see **Drivers & Downloads** at [Dell Support Site](#).
- ① **NOTE:** Ensure that the distance between your computer is within the Bluetooth reception range.
- ① **NOTE:** For Bluetooth pairing, you can use Swift Pair or manual pair option.

1. In **Windows Search**, type **Bluetooth**.
2. Click **Bluetooth and other devices settings**. The **Settings** window appears.
3. Ensure that the Bluetooth is turned on.
4. On the wireless keyboard, press **3** to initiate pairing.

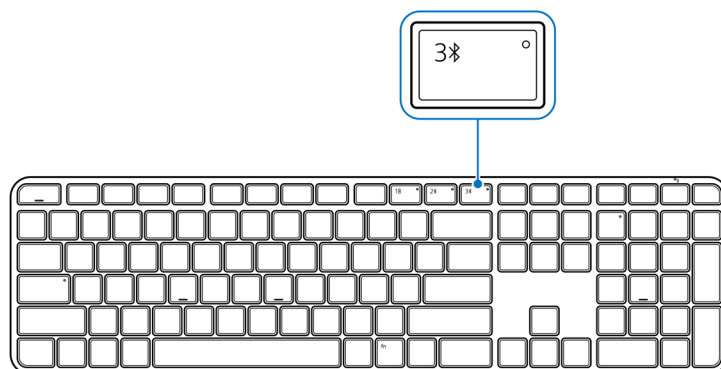 


Figure 17. Initiating pairing

The **New Dell KB726 found** window appears.

5. Click **Connect** to confirm the pairing process between the wireless keyboard and your computer. Type the pin number that is shown onscreen using the wireless keyboard and press Enter.

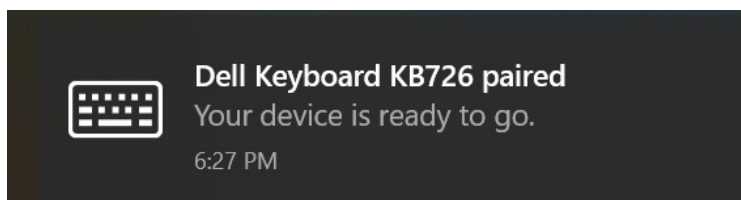 


Figure 18. Dell KB726 keyboard is paired

Switching between paired devices

Your wireless keyboard remembers the last connection mode.

If you want to switch to another paired device, press the corresponding key on the keyboard.

For example, if the computer is connected through the USB receiver, press **3** on the keyboard to immediately switch the active connection to the assigned Bluetooth device (**3**).

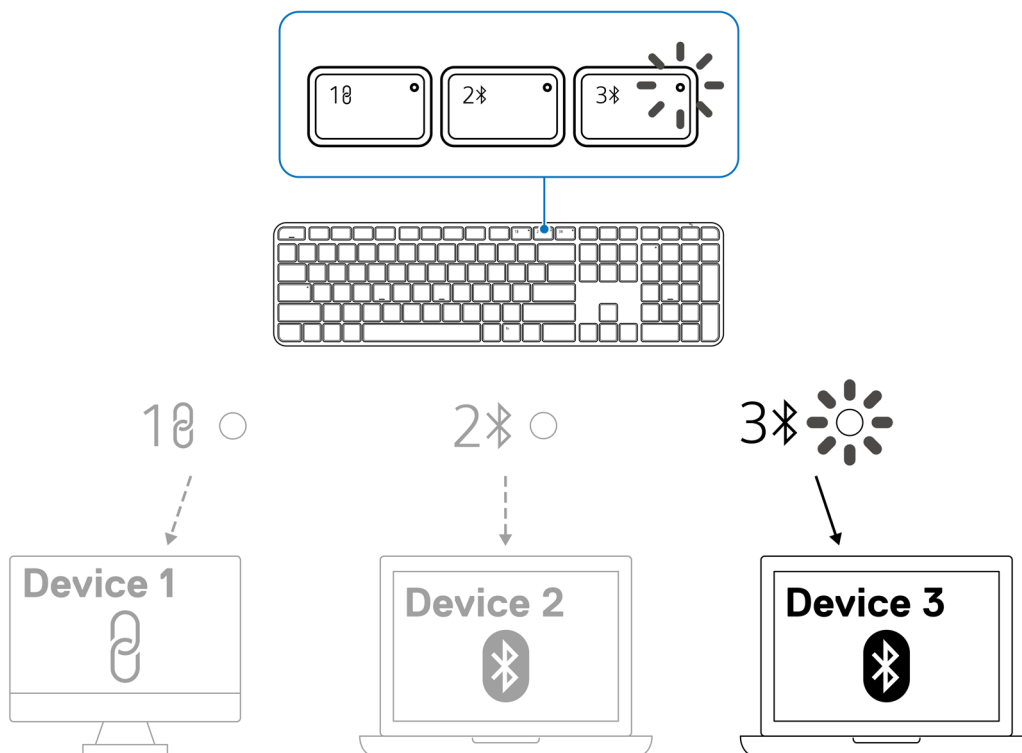 


Figure 19. Switching between paired devices

Smart Connect

- Once connectivity is set up on different channels, when the device is disconnected it searches and switches to another channel if that connection exists.
- When on Bluetooth, after an idle period of 10 seconds, the device checks for RF connectivity and switches over accordingly.
- Manual switching of connectivity to Bluetooth disables this feature until keyboard is turned off or on again.

Specifications

General

Table 3. General specifications

Description	Value
Model number	KB726
Connection type	• Wireless 2.4GHz RF with Dell Secure Link Receiver • Bluetooth LE 6.0
Supported operating systems	• Windows 10 • Windows 11 • macOS 11 or later • Linux • Ubuntu • ChromeOS • iPadOS 14 or later • Android 9.0 or later

Electrical

Table 4. Electrical specifications

Description	Value
Operating voltage	3.00 V
Battery type	Two AAA batteries

Physical characteristics

Table 5. Physical characteristics

Description	Value
Weight (without batteries)	570 g (1.26 lb)
Dimensions:	
Length	429.67 mm (16.91 in.)
Width	117.87 mm (4.64 in.)
Height	20.87 mm (0.82 in.)

Environmental

Table 6. Environmental specifications

Description	Value
Temperature:	
Operating	–10°C to 50°C (14°F to 122°F)
Storage	–40°C to 65°C (–40°F to 149°F)
Storage humidity	20% to 90% relative humidity; non-condensing

Wireless

Table 7. Wireless specifications

Description	Value
RF resolution	2.4 GHz RF
Transmission range	> 10 m (outdoor without any interference)

Troubleshooting

Table 8. Troubleshooting

Problem	Possible solution
Unable to find USB receiver for the wireless keyboard	1. Locate the USB receiver in the keyboard. 2. If you have accidentally unpaired the wireless keyboard, use the Dell Display and Peripheral Manager to pair the wireless keyboard again.
Keyboard is not functioning	1. Check if the batteries are inserted in the correct orientation. The "+" and "-" ends of the battery must be placed as indicated on the battery compartment. 2. Check the battery level. • If the device uses the rechargeable batteries, ensure that the batteries are fully charged. • If the batteries are exhausted, replace them with new batteries. 3. Turn off the device, and then turn it on. Check if the battery-status light is flashing amber 10 times, indicating that the battery power is low. If the batteries are fully depleted, the battery-status light does not turn on. 4. Restart your computer. 5. Ensure that the USB receiver is directly connected to your computer. Avoid using the port replicators, USB hubs, and so on. 6. Change the USB port.
Unable to pair the keyboard with your computer	1. Check the battery level. • If the device uses the rechargeable batteries, ensure that the batteries are fully charged. • If the batteries are exhausted, replace them with new batteries. 2. Turn off the device, and then turn it on. Check if the battery-status light is flashing amber 10 times, indicating that the battery power is low. If the batteries are fully depleted, the battery-status light does not turn on. 3. Restart your computer. 4. Ensure that the USB receiver is directly connected to your computer. Avoid using the port replicators, USB hubs, and so on. 5. Change the USB port or insert the USB receiver into another USB port on your computer. 6. Ensure that the distance between your computer and keyboard is within 10 meters. 7. Use the Dell Display and Peripheral Manager to initiate the pairing process with your keyboard.
Keyboard keys do not work	1. Check the battery level. • If the device uses the rechargeable batteries, ensure that the batteries are fully charged. • If the batteries are exhausted, replace them with new batteries. 2. Turn off the device, and then turn it on. Check if the battery-status light is flashing amber 10 times, indicating that the battery power is low. If the batteries are fully depleted, the battery-status light does not turn on. 3. Restart your computer. 4. Ensure that the distance between your computer and keyboard is within 10 meters. 5. Remove if there are any debris under the keys.
Wireless connection is lost	

Problem	Possible solution
Dell Display and Peripheral Manager software features are not working as intended.	Dell Display and Peripheral Manager features are dependent on the operating system and processor that is installed in your computer. For more information, see the documentation for Dell Display and Peripheral Manager at Dell Support Site.

Statutory information

Warranty

Limited warranty and return policies

Dell Pro 7 Slim Keyboard (KB726) carry a three-year limited hardware warranty. If purchased together with Dell computer, it follows the system warranty.

For U.S. customers:

This purchase and your use of this product are subject to Dell's end user agreement, which you can find at [Terms of Sale](#). This document contains a binding arbitration clause.

For European, Middle Eastern and African customers:

Dell Pro 7 Slim Keyboard (KB726) that is sold and used is subject to applicable national consumer legal rights, the terms of any retailer sale agreement that you have entered into (which applies between you and the retailer) and Dell's end user contract terms.

Dell may also provide an additional hardware warranty – full details of the Dell end user contract and warranty terms can be found by going to [Terms of Sale](#), selecting your country from the list at the bottom of the "home" page and then clicking the "terms and conditions" link for the end user terms or the "support" link for the warranty terms.

For non-U.S. customers:

Dell Pro 7 Slim Keyboard (KB726) that is sold and used is subject to applicable national consumer legal rights, the terms of any retailer sale agreement that you have entered into (which applies between you and the retailer) and Dell's warranty terms. Dell may also provide an additional hardware warranty – full details of Dell's warranty terms can be found by going to [Dell Site](#), selecting your country from the list at the bottom of the "home" page and then clicking the "terms and conditions" link or the "support" link for the warranty terms.

European Accessibility Act

- Power button location: With the keyboard laying down face up, and the space bar closer to the end user, the user can tactilely discern the location of the power button. The end user can feel for the top key in the right-hand corner of the keyboard and count one key to the left. If they reach towards the back of the keyboard from there, they can feel the power switch.
- For Windows-only keyboards, Off position is towards the center of the keyboard, and On is located towards the edge of the keyboard.

Revision history

The following table provides the revision history of this document:

Table 9. Revision history

Revision	Date	Description
A00	May 2026	Original publish date.