

QUICK INSTALLATION GUIDE

Samsung Printer **ProXpress**
M403x series

Thank you for purchasing a Samsung product



FR Guide d'installation rapide

ES Guía rápida de instalación

* The illustration may differ from your machine depending on your model.
FR Selon le modèle, cette illustration peut différer de votre appareil.
ES Esta ilustración puede ser diferente a su dispositivo en función del modelo.




  JC68-03445A02


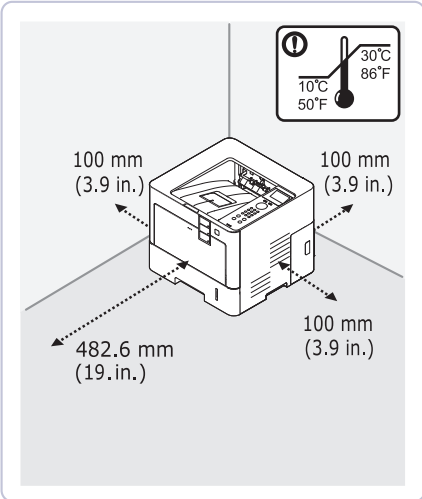
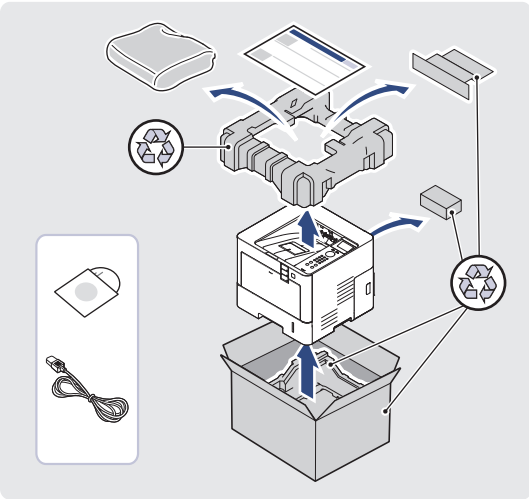


Detach / Détachez / Retirar


 
* The location of the tape differs depending on the model and is subject to change without notice.
FR L'emplacement du ruban varie selon le modèle et peut faire l'objet de modifications sans préavis.
ES La ubicación de la cinta varía en función del modelo y está sujeta a cambios sin previo aviso.

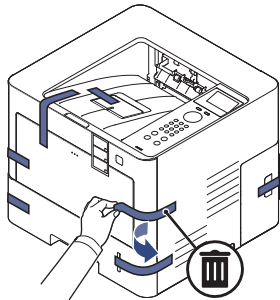



1 Installing the Toner Cartridge

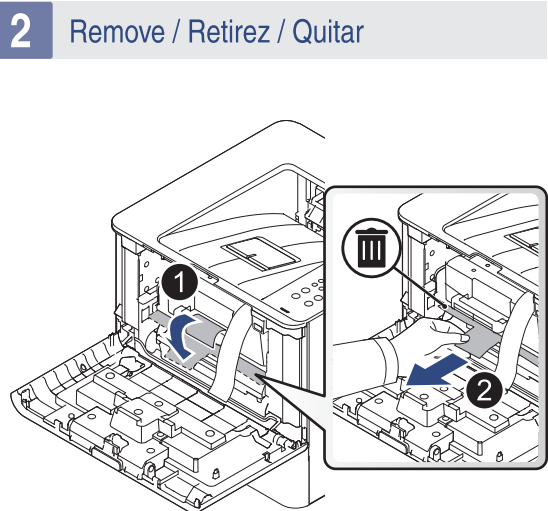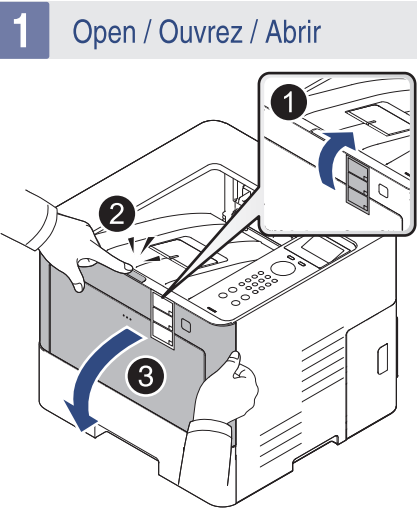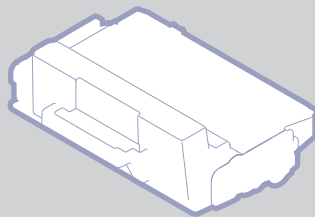   


3 Remove / Retirez / Quitar

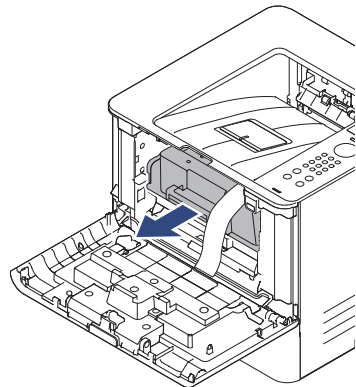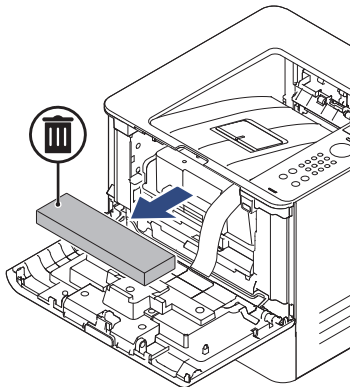  


4 Remove / Retirez / Quitar

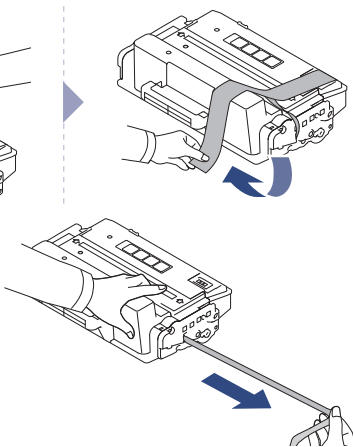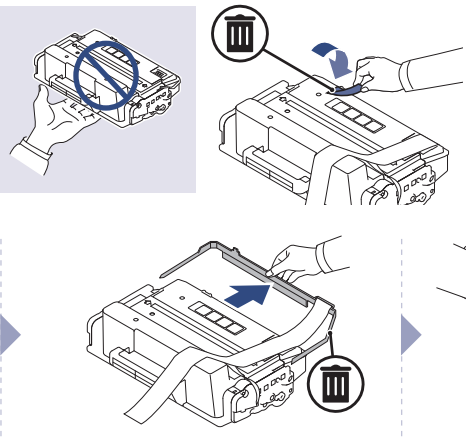  


5 Shake / Secouez / Agitar

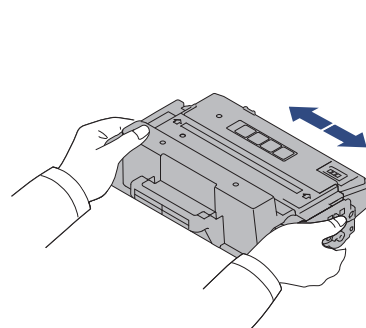 

6 Insert / Insérez / Insertar

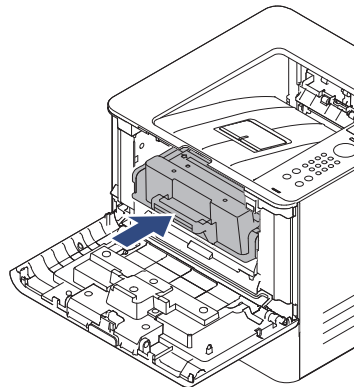 


7 Close / Fermez / Cerrar

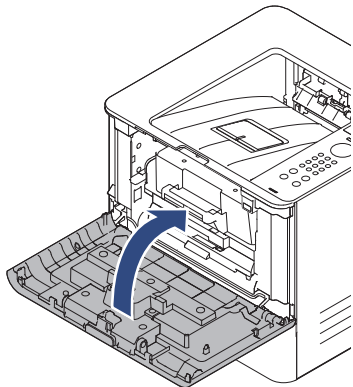 


2 Loading Paper



 
1 Open / Ouvrez / Abrir

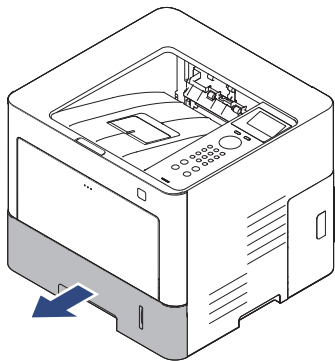


2 Remove / Retirez / Quitar

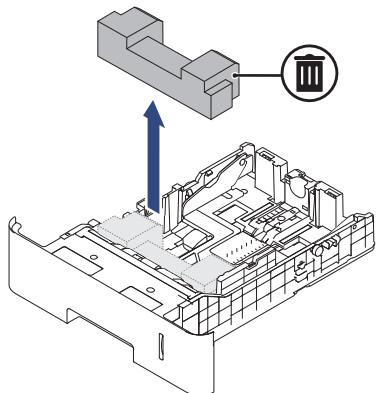 


3 Adjust / Ajuster / Ajustar

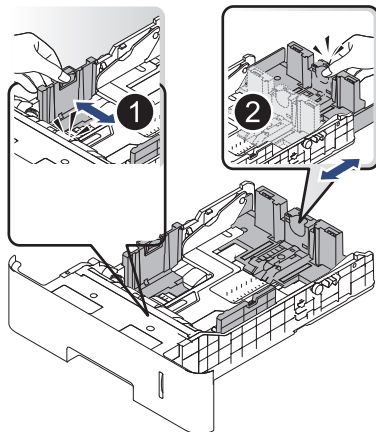 

4 Insert / Insérez / Insertar

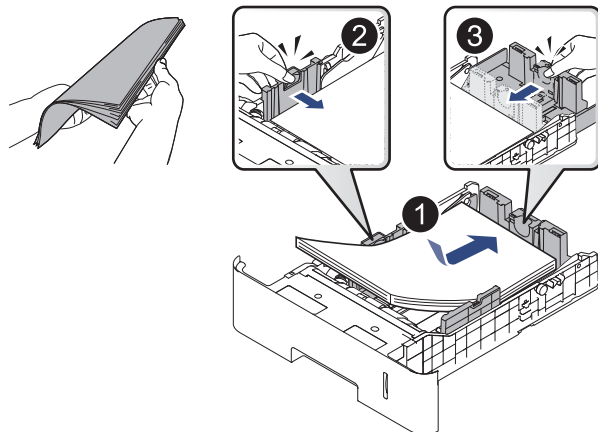 


5 Close / Fermez / Cerrar

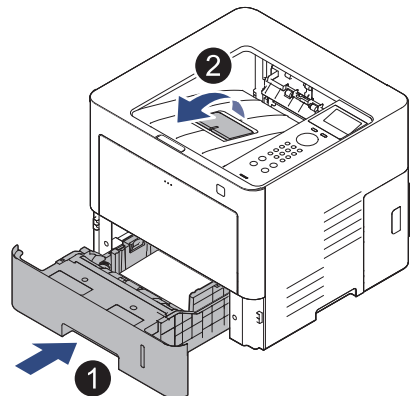 


Letter Xerox Business Multipurpose 4200 or 20lb, 92 brightness
A4 Xerox Premier or 80g/m², 92 brightness

SAMSUNG

 
3 Connecting Cable

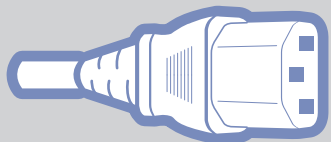

1 Connect / Branchez / Conectar

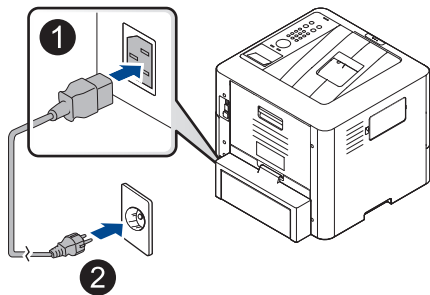 

2 Power On / Marche / Encendido

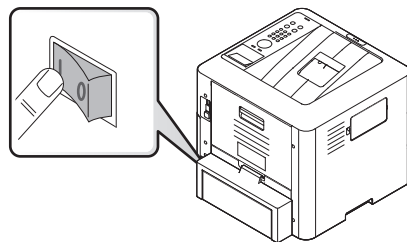 

Wait a few seconds for the machine to warm up.

FR Attendre quelques secondes que la machine se réchauffe.

ES Espere hasta que la impresora se caliente.

 
4 Installing Software




Windows




1 Insert / Insérez / Insertar

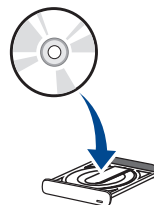

2 Click/ Cliquez/ Clic

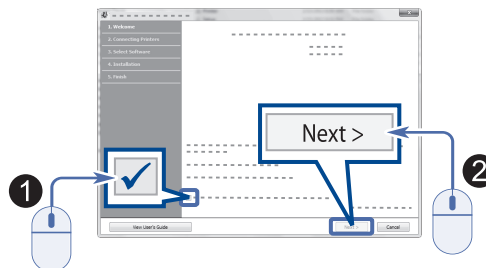 


3 Connect / Branchez / Conectar

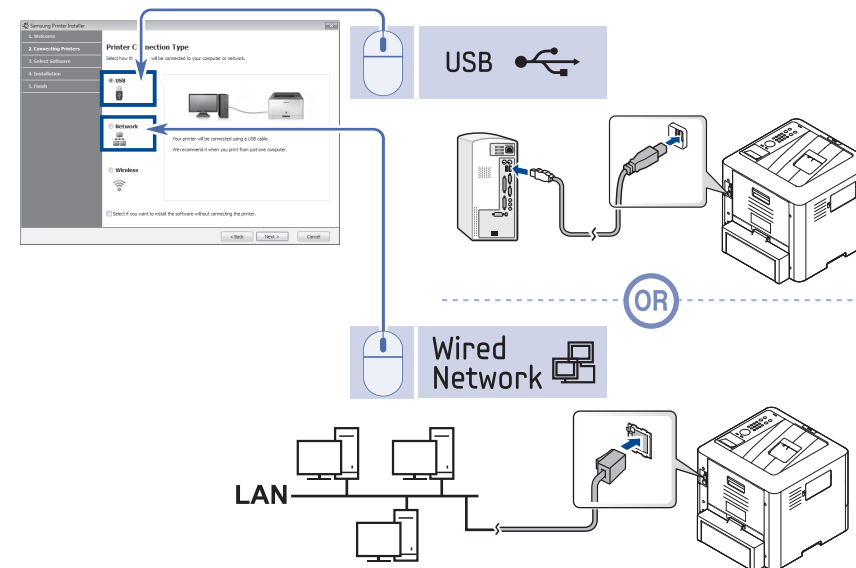 


Mac



 1 Insert / Insérez / Insertar

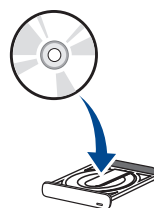

2 Click/ Cliquez/ Clic

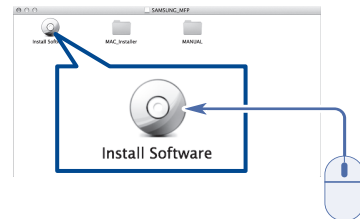 

UNIX®

Linux

No CD-ROM Drive

Download / Télécharger / Descargar

 
<http://www.samsung.com/printersetup>

For details about how to install software, refer to the User's Guide.

FR Pour savoir comment installer le logiciel, consultez le mode d'emploi.

ES Si desea obtener más información sobre cómo instalar el software, consulte la Guía del usuario.

5 Viewing the User Guide in the CD-ROM

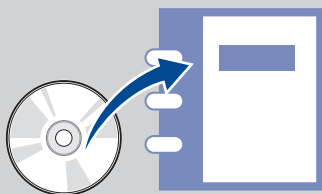

Be sure to read the safety guidelines in the User Guide.

FR Veillez à bien lire les directives de sécurité du guide de l'utilisateur.

ES Asegúrese de leer las instrucciones de seguridad del manual de usuario.