

Releasing the Tablet from the Cradle

1. Unlock the Cradle with the number lock or cam lock, then slide the latch on the top of the Cradle to loosen the Top Clasp.
2. Using two hands, hold the Tablet on both sides, pull the tablet out to remove the Tablet from the Cradle.

NOTE: For proper operation, make sure all necessary connections are in place before powering on the DT Research Tablet.

Specifications

ACC-WM312	
Dimensions (H x W x D)	292.45 x 324.37 x 54.8mm
Weight	2.93lbs/1325g
Temperature	Operation: 0°C – 35°C Storage: -20°C – 60°C
Humidity	0% – 90% non-condensing
I/O Ports	
Ethernet	1
USB 2.0	2
USB 3.0	2
DC-in	1
COM	1
GNSS Antenna Connector* (optional)	1
Mobile Broadband Antenna Connector* (optional)	1

NOTE: The antenna connector only works while there are corresponding modules (optional) in the Rugged Tablet

Wall Mount Cradle

BASIC OPERATION GUIDE



INTRODUCTION

Thank you for acquiring the latest addition to DT Research's line of tablet accessories – the Wall Mount Cradle ACC-WM312 design for the DT312RP tablet. Featuring compact, robust design, this cradle provides secure placement and charging of the tablets whether mounted in vehicles or on the wall. This innovative cradle provides connection ports and promotes ergonomic, efficient access and management of DT Research tablets.

Package Contents


- One (1) Tablet Wall Mount Cradle
- Two (2) Keys
- Four (4) Black Nuts for VESA mounting
- Four (4) M4 x 8 Screws

NOTE: The cradle you receive may look slightly different than the one in this picture based on the exact model ordered.






Front-View Layout

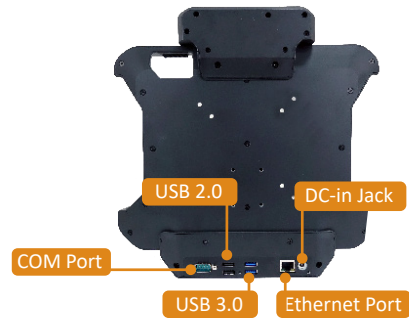

Back-View Layout



Combination Cam Lock Instruction

- Manufacturer combination
 1. Manufacturer Combination code be set at 0-0-0.
- Reset new combination code:
 1. Make sure the knob stays at 『』 position then turn the wheels to the correct combination code.
 2. Push down and hold the reset button (as Fig. 1) until you have done the new code resetting. Turn the 3 wheels to your desired new combination code and release the reset button.
 3. Turn the knob to 『』 -opening position.
 4. Turn the knob back to 『』 then random your combination code, it is locked now!
- How to unlock:
 - Way #1: Turn the 3 wheels to your key codes then turn the knob to 『』 position.
 - Way #2: When the 3 wheels are incorrect, please insert the key to the knob then turn the knob to 『』 position.

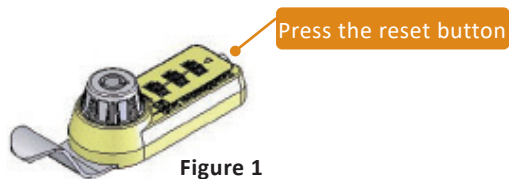


Figure 1

OPERATION

Inserting the Mobile Tablet in the Cradle

1. Insert the bottom part of the Tablet into the cradle first with the connector parts. Insert the bottom part of the Tablet into the cradle first with the connector parts correctly lined up.
2. When the bottom of the Tablet is in place, push the Tablet against the back and into the Cradle.
3. Slide the latch on the top of the Cradle to fasten the tablet.
4. Lock the Cradle with the number lock.



Using the Mini Detachable Keyboard with the Wall Mount Cradle

1. Attach the Mini Detachable Keyboard to the Wall Mount Cradle.
2. Fix the Mini Detachable Keyboard with six screws.



3. Connect the USB Type-A cable from Mini Detachable keyboard to the USB port at the back side of the Wall Mount Cradle.

