


2-Port 5Gbps Ethernet Network Adapter Card - PCIe Ver 3.0 x2 - Dual RJ-45

Product ID

PR25GR-NETWORK-CARD

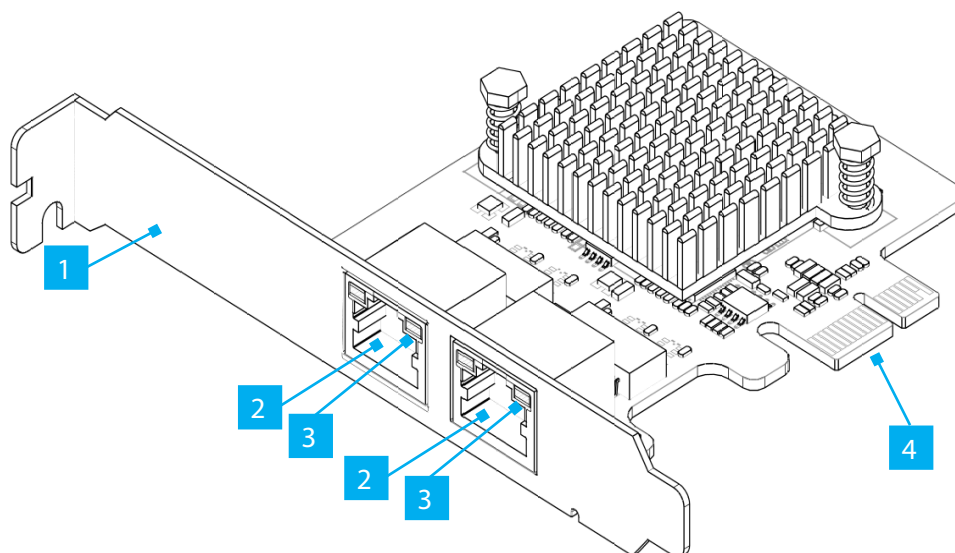

**Product may vary from image*

	Feature	Function
1	Bracket	Secures the card to the Computer Case. The Full-Height Bracket comes pre-installed.
2	Ethernet Ports (x2)	- Connect a Network Cable to the Network Card - Supports 5Gbps/2.5Gbps/1Gbps/100Mbps/10Mbps
3	LED Indicators	- Left LED Indicator is Link Speed - Solid Green = Highest Link Speed (ex. 5Gbps) - Solid Amber = Lower Link Speeds (ex. 2500/1000/100/10Mbps) - Right LED Indicator is Link Status - Solid Green = Network port is connected
4	PCIe x2 Connector	Insert into a PCI Express Slot on the Host Computer

Package Contents

- PCIe Network Card x 1
- Low-Profile Bracket x 1
- Quick-Start Guide x 1

Requirements

For the latest manuals, product information, technical specifications, and declarations of conformance, please visit:

www.StarTech.com/PR25GR-NETWORK-CARD

- Computer with an available PCI Express Slot (x2, x4, x8, or x16)

Installation

Install the PCI Express Card

WARNING!

Static Electricity can severely damage **PCI Express Cards**. Ensure that you are adequately Grounded before you open your **Computer Case** or touch the **PCI Express Card**. You should wear an **Anti-Static Strap** or use an **Anti-Static Mat** when installing any computer component. If an **Anti-Static Strap** isn't available, discharge any built-up static electricity by touching a large **Grounded Metal Surface** for several seconds. Only handle the **PCI Express Card** by its edges and don't touch the gold connectors.

1. Turn off the **Computer** and any **Peripheral Devices** that are connected to it (for example, **Printers, External Hard Drives**, etc.).
2. Unplug the **Power Cable** from the back of the **Computer**.
3. Disconnect any **Peripheral Devices** that are connected to the **Computer**.
4. Remove the **Cover** from the **Computer Case**. Consult the documentation that came with the **Computer** for details about doing this safely.
5. Locate an open **PCI Express Slot** and remove the corresponding **Slot Cover Plate** from the back of the **Computer Case**. Consult the documentation that came with the Computer for details about doing this safely. This card works in PCI Express **x2, x4, x8, or x16** Slots.
6. Gently insert the **PCI Express Card** into the open **PCI Express Slot** and fasten the **Bracket** to the back of the **Computer Case**.

Note: If you install the **PCI Express Card** into a **Small Form Factor** or a **Low-Profile Desktop**, it may be necessary to replace the pre-installed **Full-Height Bracket** with the included **Low-Profile Bracket**.

7. Return the **Cover** onto the **Computer Case**.
8. Reconnect the **Power Cable** to the back of the **Computer**.
9. Reconnect all of the **Peripheral Devices** disconnected in **Step 3**.
10. Turn on your **Computer** and **Peripheral Devices**.

Install the Driver

1. Open an **Internet Browser** and navigate to: www.StarTech.com/PR25GR-NETWORK-CARD
2. Click the **Drivers & Downloads** tab.
3. Under **Driver(s)**, download the **Driver** for your operating system.

For Windows Systems

- a. Extract the contents of the **Driver Package** by **Right Clicking** the **Driver Folder** that was downloaded from the website and select **Extract All**. Follow the on-screen instructions to finish the **Extraction**.
- b. Follow the steps in the **included file** for further **Installation Instructions**.

For Linux Systems


- a. Extract the contents of the **Driver Package**.
- b. Follow the instructions on the accompanying **README.txt** file.

Verify the Driver Installation (Windows)

1. Navigate to the **Device Manager**.
2. Under **Network Adapters**, right-click **Realtek PCIe 5GbE Family Controller** and click the **Properties** option.
3. Confirm that the **Driver** is installed and working as expected.

Verify Driver Installation (Linux)

1. Run **lsmod | grep -i Realtek** from the command line.
2. Verify that the **Driver** is present in the command line.

 

StarTech.com Ltd.
45 Artisans Crescent
London, Ontario
N5V 5E9
Canada

StarTech.com LLP
4490 South Hamilton
Road
Groveport, Ohio
43125
U.S.A.

StarTech.com Ltd.
Unit B, Pinnacle 15
Gowerton Road
Brackmills,
Northampton
NN4 7BW
United Kingdom

StarTech.com Ltd.
Siriusdreef 17-27
2132 WT Hoofddorp
The Netherlands

FR: startech.com/fr
DE: startech.com/de
ES: startech.com/es
NL: startech.com/nl
IT: startech.com/it
JP: startech.com/jp