Star

Easy Setup Guide

TSP100IIIW

Introduction

This manual describes the setup procedures for the TSP100IIIW. It also describes the connection settings to be made over a wireless LAN with a DHCP server, using WPS*. When you would like to know how to install the utility software or driver, when the network used does not have a DHCP server, or when a wireless LAN access point or router does not support WPS* (in this case, use Ad-Hoc), and setup and connection does not proceed smoothly, refer to the online manual for the TSP100IIIW.

* WPS: A standard for making easy connections between wireless networking devices



Set Up the Printer

Inserting a Roll of Paper

Push the cover opening lever **1** and then open the rear cover **2**.



• When using a paper roll with 58 mm width, install the supplied paper guide on the



To change the paper width, the memory switch must be set. Refer to the online manual for details

Connect to the Network

Press and hold the PAIR button until LED

(blue) starts flashing.

(about 2sec.)



Insert a roll of paper in the direction shown in the illustration.



Pull the end of the paper out straight (3), and push down both sides of the printer cover to close 4



Press the WPS button of the access point or router. When the printer connects to the network, it will print the connection information and its LED (blue) will change



Turn ON the Main Unit Power

Connect the included power cable to the inlet on the back side of the TSP100III 1. Connect the plug of the power cable to the outlet 2



Turn on the power to the TSP100III (3), and check the LED (blue) to light up 4.



 Operation for access points and routers varies according to your device. For details, refer to your device manual.

When a connection cannot be made, start from step 3 and perform the settings again.

1 If your POS software requires a static IP address, please continue to next section "Assigning a static IP address".

(Optional) Assigning a static IP address ****recommended for windows users**

4 Prepare the Utility

TSP100III Utility.

Use TSP100III Utility to connect the TSP100III to Tablet/PC.

TSP100III Utility (iOS / Android)

TSP100III Windows Driver TSP100LAN Ethernet Setup Tool

(Windows) Download





www.star-m.jp/tsp100iii-app.html

Use Tablet/PC that is connected to the same network as the TSP100III.

Tap [Confirm]
and the printer's LED (blue) will flash, and you can check the selected printer.

Selected Devi

Link disconnection detection feature

The TSP100IIIW will automatically print out a warning message if it detects a network failure.

To prevent the printer from printing the warning message above, change the printer settings. For details, see TSP100IIIW online manual.

If the setting contents are not output, or the IP address setting is completed by the network but connection is not established, reset the wireless LAN settings, start from step 3 and perform the settings again.

Network settings reset procedure Use a small tool with a fine point to hold in the RST button while turning on the printer* Continue holding the RST button until the printer resets.

* When the printer is reset, it will make initializing mechanical sound.



• iPad, iPhone, iPod touch are trademarks of Apple Inc., registered in the U.S. and other countries. • Android is a trademark of Google Inc. • Windows is registered trademarks of Microsoft Corporation

[Submit] 4.



www.star-m.jp/

tsp100iiiw-oml.html

f 5 Connect the printer and then open the settings screen



Assign a static IP address

Once a static IP address is assigned, IP address changes through the DHCP server will not occur, so the specified connection destination device can be used continuously once set.





5 プリンターに接続して設定画面を開く iPad / iPhone / iPod touch Android Windows プリンターの電源が入っていることを確認 して「TSP100III Utility」を開きます。 (Windows) Ē 未選択状態 接続先デバイスを選択する ✔ [接続を確認する] 🔒 を TSP143IIII AN (STR T-001) クリックすると、プリン ターの LED(青)が点滅 して、選択しているプリ ンターを確認できます。 確認する 適用する [確認する]3 をタップする と、プリンターの LED (青) プリンターを検索する が点滅して、選択している プリンターを確認できます。 \checkmark 接続先デバイス TSP143IIILAN (STR_T-001) 構成を変更する ネットワークの設定を変更す 接続を確認する(TSP100皿 6 固定 IP アドレスを設定する 🖌 固定 IP アドレスを設定すると、DHCP サーバーによる IP アドレスの変更が起こらないため、 一度指定した接続先デバイスを継続して使うことができます。 設定画面左側に表示されるメニュー、または左上に表示さ れるメニューボタン (目) より [Login] ● を開き、ログイン: root / パスワード: public でログインを行ってください。 Network Configuration > WLAN Setting デフォルトのログイン / パスワードは root / public です。 > IP Parar セキュリティ保護のため、稼働の際はパスワードを変更する ことをお勧めします。 Static メニューまたはメニューボタン (三) より [IP Parameters] 2 //Following を開き、 O Static を選択して IP Address、 Subnet Mask を IP Address 0.0.0.0 入力し
〇、[Submit]
④をタップまたはクリックします。 ubnet Mas 設定する固定 IP Address、Subnet Mask の値については 0.0.0.0 ネットワーク管理者にご確認ください。 メニューまたはメニューボタン (三) より [Save] を開き、 \odot Save → Configuration Printing → Restart device を選択 して [Execute] **⑤** をタップまたはクリックすると、設定し た内容がプリンターに保存され、印刷されます。 ❶ 以上で固定 IP アドレスの接続設定は完了です。 印刷された接続内容より、IPアドレスが正しく設定されているか確認してください。 ・iPad、iPhone、iPod touch は、米国および他の国々で登録された Apple Inc. の商標です。"iPhone"の商標は、アイホン株式会社のライセンスにもとづき使用されています。 Android は、Google Inc.の商標です。
 Windows は、米国 Microsoft Corporation の、米国、日本およびその他の国における登録商標です。 ・さらに細かな内容については、弊社 FAO サイト (http://www.star-m.ip/fag/index.html) をご参照ください。

タブレット・PC と接続して固定 IP アドレスを設定する場合



