



imageCLASS

MF289dw / MF287dw / MF284dw

User's Guide

Contents

About the Machine	2
Supported Functions	3
System Manager ID and PIN	5
Measures to Prevent Unauthorized Access	6
Names of Parts and Their Functions	8
Front Side	9
Rear Side	11
Interior	12
Control Panel	13
Feeder	17
Drawer	18
Usable Paper	19
Precautions When Handling Paper	22
Specifications	23
Basic Specifications	24
Feeder Specifications	26
Print Specifications	27
Scan Specifications	29
Fax Specifications	30
Network Specifications	31
Security and Management Function Specifications	32
Supported Environment	35
Recommended Functions	37
Digitizing Documents	38
Cost Savings	39
Making Operations More Efficient	40
Setting Up	43
Configuring the Default Settings (Setup Guide) (Touch Panel Model)	44
Configuring the Default Settings (Setup Guide) (5 Lines LCD Model)	47
Configuring the Initial Settings for Remote UI, Fax, Scan, and Web Service Usage	50
Setting Up the Network	56
Selecting Wired or Wireless LAN	58
Connecting to a Wired LAN	60
Connecting to a Wireless LAN	61
Connecting to a Wireless LAN by Using the Router Button (Push Button Mode)	64
Connecting to a Wireless LAN by Entering a PIN Code (WPS PIN Code Mode)	66
Connecting to a Wireless LAN by Searching for a Router (Access Point Setup Method)	69
Connecting to a Wireless LAN by Setting the Details (Manual Setup Method)	72
Setting IPv4 Addresses	77
Setting IPv6 Addresses	81

Configuring Your Machine for Your Network Environment	83
Manually Configuring the Ethernet Settings	84
Configuring DNS	85
Configuring SMB	88
Configuring WINS	90
Configuring SNMP	91
Configuring SNTP	94
Configuring CHMP	96
Checking the Network Status and Settings	97
Configuring the Fax Settings (Fax Setup Guide)	103
Installing Software and Drivers to the Computer	107

Basic Operations 110

Turning ON and OFF the Machine	111
Turning ON the Machine	112
Turning OFF the Machine	113
Restarting the Machine	114
Reducing Power Consumption (Sleep Mode)	115
Using the Control Panel	117
Screens Displayed on the Control Panel	118
[Home] Screen	121
[Status Monitor] Screen	125
How to Operate the Control Panel (Touch Panel Model)	128
How to Operate the Control Panel (5 Lines LCD Model)	130
Entering Characters	132
Customizing the [Home] Screen	136
Logging In to the Machine	138
Placing Originals	140
Loading Paper	144
Loading Paper in the Drawer	145
Preparations and Orientation for Loading Envelopes	150
Orientation for Loading Paper with a Logo	152
Specifying the Paper Size and Type	154
Setting the Paper Size and Type for the Drawer	155
Registering Non-standard Size Paper (Custom Paper)	159
Hiding Unused Paper Sizes	161
Registering Destinations (Address Book)	163
Address Book Function	164
Registering Destinations to the Address Book (Control Panel)	166
Registering Groups to the Address Book (Control Panel)	168
Editing and Deleting Destinations in the Address Book (Control Panel)	170
Registering Destinations to the Address Book (Remote UI)	171
Registering Groups to the Address Book (Remote UI)	175
Specifying Destinations	177
Specifying Destinations (Address Book)	178

Specifying Destinations (Direct Input)	182
Specifying Destinations (Address Book on a Mobile Device)	183
Specifying Destinations (TX Job Log)	184
Changing the Default Settings	185
Adjusting the Volume (For Models with a Fax Function)	188
[Volume Settings] Screen	191
Reducing the Operation Sound (Quiet Mode)	192
Printing	195
Printing Preparations	196
Preparing to Print from a Computer	197
Configuring a Printer Port (Windows)	198
Setting Up a Print Server	201
Printing from a Computer	204
Registering Non-standard Size Paper to the Computer (Custom Size)	207
Canceling Printing	209
Viewing the Print Job Status and Log	212
Scanning	215
Preparations for Scanning	217
Preparing to Save Scanned Data to a Computer	218
Preparing for a Shortcut Key to Store Scanned Data to a Computer	220
Preparing to Send Scanned Data by E-mail	224
Configuring the Basic Settings for Sending E-mail (Send Function Setting Tool)	225
Using the Downloaded Send Function Setting Tool	227
Configuring Detailed Information of the E-mail Server (Remote UI)	228
Preparing to Save Scanned Data to a Shared Folder	230
Registering a Shared Folder to the Address Book (Send Function Setting Tool)	231
Scanning (Saving to a Computer)	233
Scanning (Sending by E-mail)	236
Scanning (Saving to a Shared Folder)	238
Scanning Using the Shortcut Key (Saving to a Computer)	240
Scanning from a Computer (Saving to a Computer)	243
Starting MF Scan Utility	246
Scan Settings (Touch Panel Model)	247
Canceling Scanning	251
Checking the Send and Save Status and Log of Scanned Data (Touch Panel Model)	252
Faxing	255
Preparing to Send and Receive Faxes	256
Preparing to Send Faxes from a Computer	257
Changing Fax RX Mode and Setting the Action when Receiving a Fax	259
Changing the Fax Number and Unit Name	261
Forwarding Faxes and Configuring the Backup Settings	262

Backing Up Sent Faxes	263
Auto Forwarding and Backing Up Received Faxes	265
Sending Faxes	267
Sending a Fax after a Phone Conversation (Manual Sending)	269
Sending Faxes from a Computer (PC Faxing)	271
Securely Sending PC Faxes	274
Fax Original Scan Settings	275
Receiving Faxes	277
Receiving Faxes via Telephone (Remote RX)	278
Changing the Print Settings for Received Faxes	279
Canceling Fax Sending	281
Checking the Status and Log for Sent and Received Faxes	282

Copying 285

Copy Operations	286
Additional Copying Features	289
Paper Save Copy	300
Copying Both Sides of ID Cards onto One Sheet	304
Copying Multiple Passports onto One Sheet	308
Canceling Copy Operations	312
Checking the Copy Status	314

Linking with Mobile Devices and Integrating with a Cloud Service 317

Preparations for Linking with Mobile Devices and Integrating with a Cloud Service	318
Preparations for Direct Connection	319
Preparations for Using Universal Print	322
Registering the Machine to Microsoft Entra ID	323
Registering the Machine to the Computer	326
Preparations for Using AirPrint	327
Connecting a Mobile Device to the Machine	330
Connecting a Mobile Device via Wireless LAN Router (LAN Connection)	331
Connecting a Mobile Device Directly to the Machine (Direct Connection)	332
Using a Dedicated Application to Print and Scan (Canon PRINT)	335
Using the Cloud Integration Service to Print and Scan	336
Printing with Universal Print	337
Using AirPrint Application to Print and Scan Data and Send Faxes	338
Printing from an Android Device	342
Printing from a Chrome OS Device	343

Security 345

Setting the Department ID and PIN for the Administrator	346
Protecting the Network	349
Setting the Firewall	350
Changing the Port Number	353

Using a Proxy	354
Using TLS	356
Using IEEE 802.1X	358
Managing and Verifying a Key and Certificate	360
Generating a Key and Certificate	361
Generating a Key and Certificate Signing Request (CSR) and Obtaining and Registering a Certificate	363
Registering a Key and Certificate or CA Certificate Obtained from an Issuing Authority	366
Verifying a Received Certificate with OCSP	368
Preventing Sending Data by Mistake and Leaking Information	369
Limiting Available Destinations	370
Confirming the Destination before Sending	372
Restricting Fax Sending	374
Restricting Use from a Mobile Device	376
Restricting Printing	377
Saving Received Documents in the Machine (Memory Lock)	378
Preventing Unauthorized Use	381
Restricting Address Book Registration and Editing	382
Restricting Use of Remote UI	384
Preventing Connection to Computer via USB Port	387
Configuring LPD, RAW, or WSD	388
Disabling HTTP Communication	390

Managing the Machine 392

Setting the Date and Time	393
Managing the Machine from a Computer (Remote UI)	394
Starting Remote UI	395
Portal Page of Remote UI	397
Checking Usage and Logs with Remote UI	399
Monitoring the Usage	401
Checking the Number of Printed Pages (Check Counter)	402
Printing and Viewing Reports and Lists	404
Changing the Report and List Print Settings	407
Clearing the Mail Box	409
Importing and Exporting the Address Book	410
Updating the Firmware (Touch Panel Model)	412
Updating the Firmware (5 Lines LCD Model)	415
Initializing the Settings and Data	418

Settings Menu Items 423

[Preferences]	424
[Display Settings]	426
[Timer/Energy Settings]	430
[Network]	433
[Wireless LAN Settings]	438
[TCP/IP Settings]	440

[External Interface]	447
[Accessibility]	448
[Volume Settings]	450
[Adjustment/Maintenance]	453
[Adjust Image Quality]	454
[Special Processing]	455
[Maintenance]	459
[Function Settings]	460
[Common]	461
[Paper Feed Settings]	462
[Print Settings]	463
[Scan Settings]	464
[Generate File]	465
[Copy]	466
[Printer]	468
[Printer Settings]	469
[PDL Selection (Plug and Play)]	479
[Send]	480
[Common Settings]	481
[Scan and Send Settings]	483
[Fax Settings]	489
[Receive/Forward]	494
[Common Settings]	495
[Fax Settings]	497
[Set Destination]	501
[Management Settings]	502
[User Management]	504
[Device Management]	505
[Remote UI Settings/Update Firmware]	508
[Remote UI Settings]	509
[Data Management]	510
[Security Settings]	511
[Authentication/Password Settings]	513
[Toner Deliv. Set.] or [Toner Delivery Set.]	514

Maintenance 516

Cleaning the Machine	518
Cleaning the Surface of the Machine	519
Cleaning inside the Machine	520
Cleaning the Platen Glass	522
Cleaning the Feeder	523
Cleaning the Fixing Assembly	526
Cleaning the Drum	527
Replacing Consumables	528
Replacing the Toner Cartridge	529

Checking the Remaining Amount of Consumables	535
List of Consumables	536
Adjusting the Print Density	538
Moving the Machine	540

Troubleshooting 544

Paper Jams	546
Paper Jams in the Drawer, Output Tray, Inside the Machine, and in the Rear Side	548
Paper Jams in the Feeder	551
Paper Jams That Occur Repeatedly	555
Problems with Printing Results	556
Toner Smudges and Splatters Appear	558
Streaks Appear	560
Printing Is Uneven	562
Printed Paper Is Blank	564
Smudge Marks Appear on the Edge of Printouts	565
Text or Images Are Blurry	566
Printouts Have Ghost Images	568
Printouts Are Faded	570
The Edge of the Page Is Not Printed	572
The Background Is Generally Dark	573
White Spots Appear	574
Smudge Marks Appear on the Back Side of Printouts	576
Printouts Are Skewed	577
The Printed Barcode Cannot be Scanned	578
Paper and Paper Feeding Problems	579
Paper Creases	580
Paper Curls	581
Paper Is Not Fed or Two or More Sheets Are Fed Together	582
Paper Drawer Does Not Fit in the Machine	583
Setting Up	584
The Machine Connected via WSD Port Is Not Displayed During Driver Installation	585
Cannot Connect to Wireless LAN	586
Network	587
Cannot Switch to Wireless LAN	588
Cannot Find the Print Server to Connect to	590
Cannot Connect to a Shared Printer	591
Cannot Find the IP Address of the Machine	592
AirPrint Does Not Work	593
Printing and Copying	594
Cannot Print or Copy	595
Cannot Print (Wireless LAN)	596
Cannot Print (Wired LAN)	598
Cannot Print (USB Connection)	600

Cannot Print (via Print Server)	601
Printing Is Slow	602
Scanning	603
Cannot Save Scanned Data to a Computer	604
Cannot Save Scanned Data to a Shared Folder	606
Faxing and Using the Telephone	608
Cannot Send a Fax	609
Cannot Receive a Fax	611
Machine Does Not Automatically Switch Between Telephone and Fax	613
Cannot Send or Receive a Fax via Optical Line	614
Cannot Send a Fax to an International Destination	615
Other Party's Telephone or Fax Number Is Not Displayed	616
Management Functions and Environment Settings	617
Cannot Access Remote UI or Send Function Setting Tool	618
Changing the Volume of the Confirmation Sound and Warning Tone	619
Changing the Time Until Sleep Mode	620
Lost Department ID or PIN for the Administrator	621
Checking the Items That Can Be Configured on the Machine and Their Settings	622
A Message Appears	623
An Error Code Is Displayed	643
If the Problem Persists	652

Appendix	655
Manuals of the Machine	656
Using the User's Guide	657
Operation Examples When Using a Computer	659
Environmental Information, Regulations, and Standards	669
Notice	670
Trademarks and Copyrights	671
Third-party Software	673

About the Machine

- About the Machine** 2
 - Supported Functions** 3
 - System Manager ID and PIN** 5
 - Measures to Prevent Unauthorized Access** 6
 - Names of Parts and Their Functions** 8
 - Front Side 9
 - Rear Side 11
 - Interior 12
 - Control Panel 13
 - Feeder 17
 - Drawer 18
 - Usable Paper** 19
 - Precautions When Handling Paper 22
 - Specifications** 23
 - Basic Specifications 24
 - Feeder Specifications 26
 - Print Specifications 27
 - Scan Specifications 29
 - Fax Specifications 30
 - Network Specifications 31
 - Security and Management Function Specifications 32
 - Supported Environment 35
 - Recommended Functions** 37
 - Digitizing Documents 38
 - Cost Savings 39
 - Making Operations More Efficient 40

About the Machine

A19R-000

Before using the machine, check the basic information of the machine such as the supported functions, names of each part, and specifications of the functions. Also consider the management system of the machine and measures against security risks.

Basic Information

The supported functions vary depending on the model. Check the list for details.

▶Supported Functions(P. 3)

Check the names of parts, usable paper, and specifications of functions, as needed.

▶Names of Parts and Their Functions(P. 8)

▶Usable Paper(P. 19)

▶Specifications(P. 23)

Information Required for Management Functions

When using the management functions, use the System Manager ID and PIN to log in.

▶System Manager ID and PIN(P. 5)

When using the machine in a network environment, check the examples of measures to prevent unauthorized access, and consider implementing these.

▶Measures to Prevent Unauthorized Access(P. 6)

Useful Tips

Introduces recommended functions useful for digitizing documents, reducing costs, and making operations more efficient.

▶Recommended Functions(P. 37)

Supported Functions

A19R-001

User's Guide (this manual) describes all functions of the model series including the machine. Some of the functions listed in User's Guide may not be available depending on your model. Use the table below to see which functions are supported by your model.

✓ : Supported — : Not supported

Function	MF289dw	MF287dw	MF284dw
Print	✓	✓	✓
Scan	✓	✓	✓
Fax	✓	✓	—
Copy	✓	✓	✓
2-sided Printing	✓	✓	✓
Forward received faxes	✓	✓	—
Send scanned data (e-Mail/SMB)	✓	✓	—
Wired LAN connection	✓	✓	✓
Wireless LAN connection	✓	✓	✓
USB connection	✓	✓	✓
Remote UI	✓	✓	✓
Keys and certificates	✓	✓	✓
Linking with mobile devices	✓	✓	✓
Display	Touch panel	Touch panel	5 Lines LCD
Feeder	Feeder (2-sided scanning)	Feeder (1-sided scanning)	Feeder (1-sided scanning)
Default System Manager ID	Not specified	Not specified	Not specified
Default System Manager PIN	Not specified	Not specified	Not specified
Toner Replenishment Service	✓	✓	✓

NOTE

- For details about the types of available drivers, see the Canon website for your country or region.
<https://global.canon/en/support/>

System Manager ID and PIN

A19R-002

The machine has a System Manager Mode for viewing and changing important settings. When System Manager ID and System Manager PIN are set, only those users who know this information are able to log into System Manager Mode.

The System Manager ID and System Manager PIN are not set. System Manager Mode is disabled, allowing anyone to see and change important settings. Set the System Manager ID and System Manager PIN to protect the information, and allow only certain administrators of this information.

For details about how to change and set the System Manager ID and System Manager PIN, see the following:

➤ **Setting the Department ID and PIN for the Administrator(P. 346)**

Measures to Prevent Unauthorized Access

A19R-003

Be sure to read this section before using the machine in a network environment.

Printers and multifunction machines can provide various useful functions when connected to a network. However, because this also creates risks of unauthorized access and eavesdropping over the network, measures against security risks are essential.

This section provides examples of measures against unauthorized access that you can implement during setup when using the machine in a network environment.

- ▶ **Using a Private IP Address(P. 6)**
- ▶ **Using a Password or PIN to Protect Information(P. 6)**
- ▶ **Precautions When Using Remote UI(P. 7)**

NOTE

- There are additional measures against security risks you can implement on the machine, such as restricting communication with a firewall and using TLS encrypted communication to prevent eavesdropping and tampering. Take the necessary measures according to your usage environment. ▶ **Security(P. 345)**

Using a Private IP Address

There are two types of IP addresses: a global IP address, which is used for connecting to the Internet, and a private IP address, which is used in a local area network such as a company LAN.

If a global IP address is assigned to the machine, the machine can be accessed by users on the Internet. Thus, the risk of information leakage due to unauthorized access from external network increases.

On the other hand, if a private IP address is assigned to the machine, access to the machine is restricted to only users on your local area network. Therefore, it reduces the risk of unauthorized access compared to an assigned global IP address.

Basically, assign a private IP address to the machine.

A private IP address is used in one of the following ranges.

Ranges for Private IP Addresses

- From 10.0.0.0 to 10.255.255.255
- From 172.16.0.0 to 172.31.255.255
- From 192.168.0.0 to 192.168.255.255

For details about how to assign and confirm the IP address, see the following:

- ▶ **Setting IPv4 Addresses(P. 77)**
- ▶ **Setting IPv6 Addresses(P. 81)**

If you want to assign a global IP address to the machine, you can create an environment to prevent outside access, such as by using a firewall, to reduce the risk of unauthorized access. Contact your network administrator about how to implement network security.

Using a Password or PIN to Protect Information

By setting up a password or PIN to protect the information stored in the machine, you can reduce the risk of information leakage or unauthorized use if a malicious third party attempts to gain unauthorized access.

You can set a password or PIN to the functions indicated below. Only users who know the password or PIN can use these functions and access the information on the machine.

Remote UI

You can require the user to enter the Remote UI password when using Remote UI.

▶ **Setting the Password to Use for Remote UI(P. 384)**

System Manager ID

You can require the user to enter the System Manager ID and System Manager PIN, when changing any important settings.

▶ **Setting the Department ID and PIN for the Administrator(P. 346)**

Address Book

You can require the user to enter the Address Book PIN when adding new entries and editing existing ones.

▶ **Restricting Address Book Registration and Editing by Setting a PIN(P. 382)**

Precautions When Using Remote UI

- Do not access other websites when using Remote UI.
- After using Remote UI, be sure to log out and close your browser.

Names of Parts and Their Functions

A19R-004

Front Side

Check these parts on the front when operating the machine.

▶ Front Side(P. 9)

- Use the control panel to operate the machine and configure the settings.
 - ▶ Control Panel(P. 13)
- Place the original on the platen glass or in the feeder when scanning, sending a fax, or copying.
 - ▶ Feeder(P. 17)
- Load printing and copying paper into the drawer.
 - ▶ Drawer(P. 18)

Rear Side

Check the rear parts when installing and connecting the machine and when clearing paper jams.

▶ Rear Side(P. 11)


Interior

Open the covers and access the interior to replace a toner cartridge or to remove jammed paper.

▶ Interior(P. 12)

Front Side

A19R-005

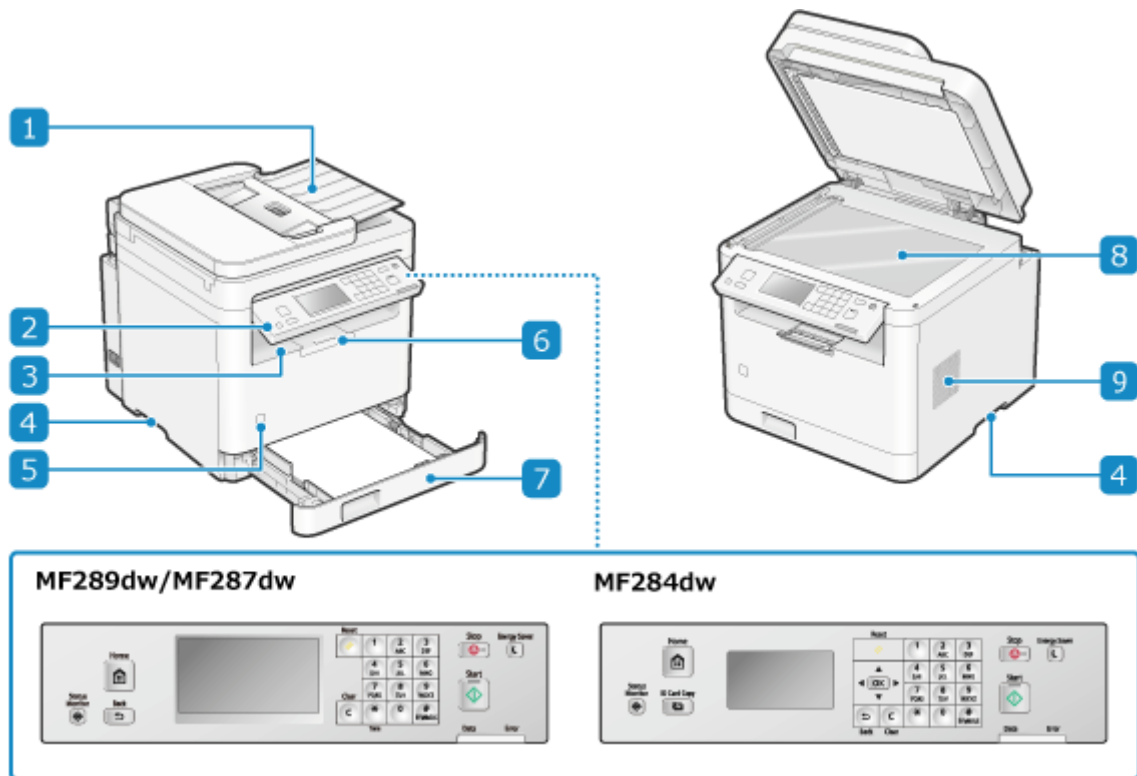

1 Feeder

You can place two or more sheets of originals in the feeder. The placed originals are fed and scanned one by one automatically. ▶ **Feeder(P. 17)**

2 Control panel

Use the display and keys to operate the machine and confirm the operations and status. ▶ **Control Panel(P. 13)**

3 Output tray

Printed and copied paper is ejected to the output tray.

4 Lift handles

Hold the lift handles when moving the machine.

5 Power switch

Turns the power of the machine ON and OFF. ▶ **Turning ON and OFF the Machine(P. 111)**

6 Paper stopper

Open the paper stopper to prevent paper from falling out of the output tray.

7 Drawer

Load paper you usually use into the Drawer. ▶ **Drawer(P. 18)**

8 Platen glass

Place books, thick paper, thin paper, and other originals that cannot be placed in the feeder on the platen glass to copy or scan. The placed originals are scanned in a fixed position. ▶ **Placing Originals(P. 140)**


9 Ventilation slots

Air inside the machine is released through the ventilation slots to cool down the inside of the machine. Do not place objects next to the ventilation slots, as this can prevent ventilation.

NOTE

- To ensure efficient use of the machine, regularly clean the surface and platen glass.
 - ▶ **Cleaning the Surface of the Machine(P. 519)**
 - ▶ **Cleaning the Platen Glass(P. 522)**
- If the following symptoms occur when using the feeder, clean the feeder: ▶ **Cleaning the Feeder(P. 523)**
 - Originals become dirty
 - Originals frequently jam
 - Printouts appear smudged after scanning, copying, or sending faxes

Rear Side

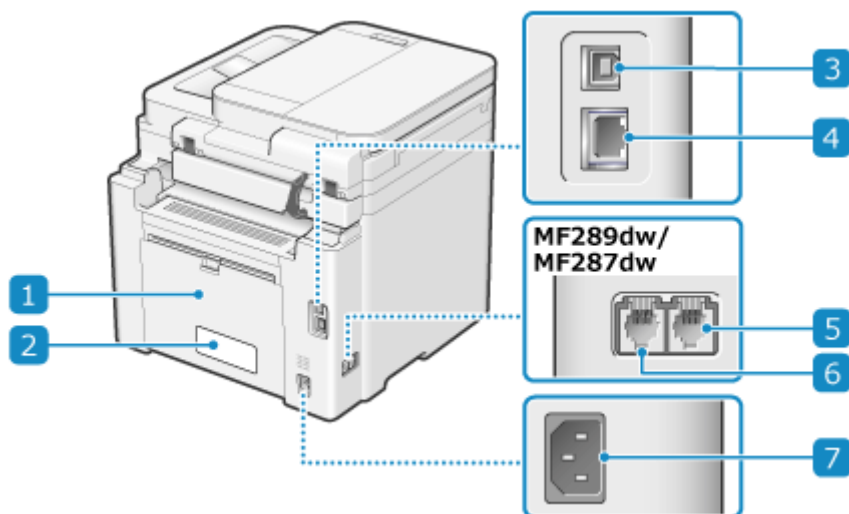

1 Rear cover

Open the rear cover when a paper jam occurs inside the machine.

2 Rating label

This label shows the serial number, which is needed when making inquiries about the machine.

3 USB port (for computer connection)

You can connect a computer to the USB port using a commercial USB cable.

4 LAN port

You can connect the machine to a wired LAN using a commercial Ethernet cable connected to the LAN port.

5 External telephone jack (EXT.)

Connect a commercial telephone to this jack.

6 Telephone line jack (LINE)

Use the supplied telephone cord to connect the machine to the telephone line.


7 Power socket

Connect the power cord to the power socket.

Interior

A19R-007

Install the toner cartridge into the machine.

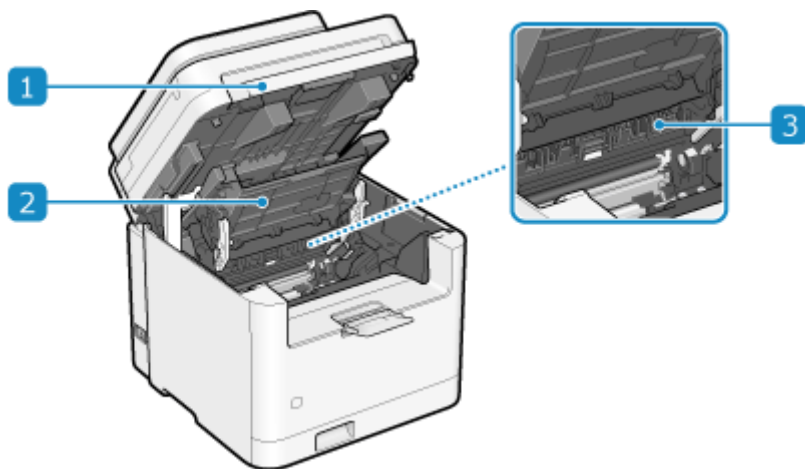

1 Control panel

Lift the toner cartridge from the slots when removing jammed paper in the interior or when replacing the toner cartridge.

- ▶ **Replacing the Toner Cartridge(P. 529)**
- ▶ **Paper Jams in the Drawer, Output Tray, Inside the Machine, and in the Rear Side(P. 548)**

2 Toner cover

Lift the toner cartridge from the slots when removing jammed paper in the interior or when replacing the toner cartridge.

- ▶ **Replacing the Toner Cartridge(P. 529)**
- ▶ **Paper Jams in the Drawer, Output Tray, Inside the Machine, and in the Rear Side(P. 548)**

3 Paper exit guide


Open the paper exit guide when paper is jammed at the paper exit. ▶ **Paper Jams in the Drawer, Output Tray, Inside the Machine, and in the Rear Side(P. 548)**

Control Panel

Use the control panel to operate the machine and configure the settings.

When operating on the control panel, raise the control panel, as shown on the right.


For details on supported models, see the following: [▶Supported Functions\(P. 3\)](#)

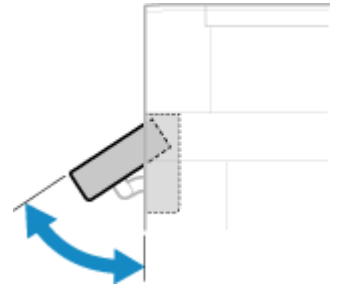

[▶Control Panel \(Touch Panel Model\)\(P. 13\)](#)

[▶Control Panel \(5 Lines LCD Model\)\(P. 15\)](#)

Control Panel (Touch Panel Model)

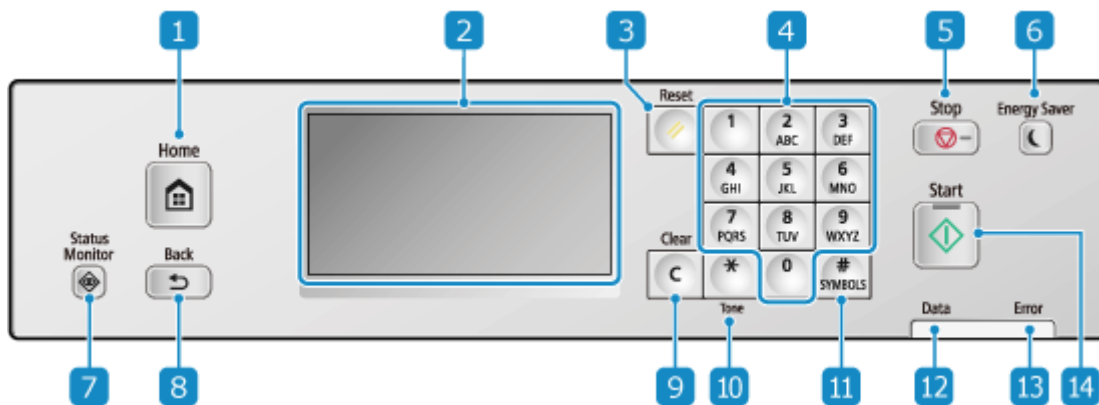

1 Home key ()

Displays the [Home] screen. [▶\[Home\] Screen\(P. 121\)](#)

2 Display

Displays the screens for operating the functions, usage, messages, and other information. This touch panel can be operated by directly touching the screen with your finger. [▶Using the Control Panel\(P. 117\)](#)

3 Reset key ()

Press to cancel the settings and restore the previously specified settings.


4 Numeric keys (-)

Press to enter numbers and text. [▶Entering Characters\(P. 132\)](#)

5 Stop key ()

Cancels printing and other operations.

6 Energy Saver key ()

Puts the machine into sleep mode to reduce power consumption. In the sleep mode,  lights up yellow-green. ▶**Reducing Power Consumption (Sleep Mode)(P. 115)**

7 Status Monitor key ()

Check the information of the machine, usage and logs, network settings, and error information. ▶**[Status Monitor] Screen(P. 125)**

8 Back key ()

Returns you to the previous screen.

9 Clear key ()

Press to delete the entered numbers and text.

10 Uppercase/lowercase/numeric key ()

Changes the character type.

11 Symbol key ()

Enter symbols. ▶**Entering Characters(P. 132)**

12 Data indicator

Blinks when an operation is being performed, such as during printing, and lights up when data is waiting to be processed.


13 Error indicator

Blinks or lights up when an error such as a paper jam occurs.

14 Start key ()

Press to scan originals.

Control Panel (5 Lines LCD Model)

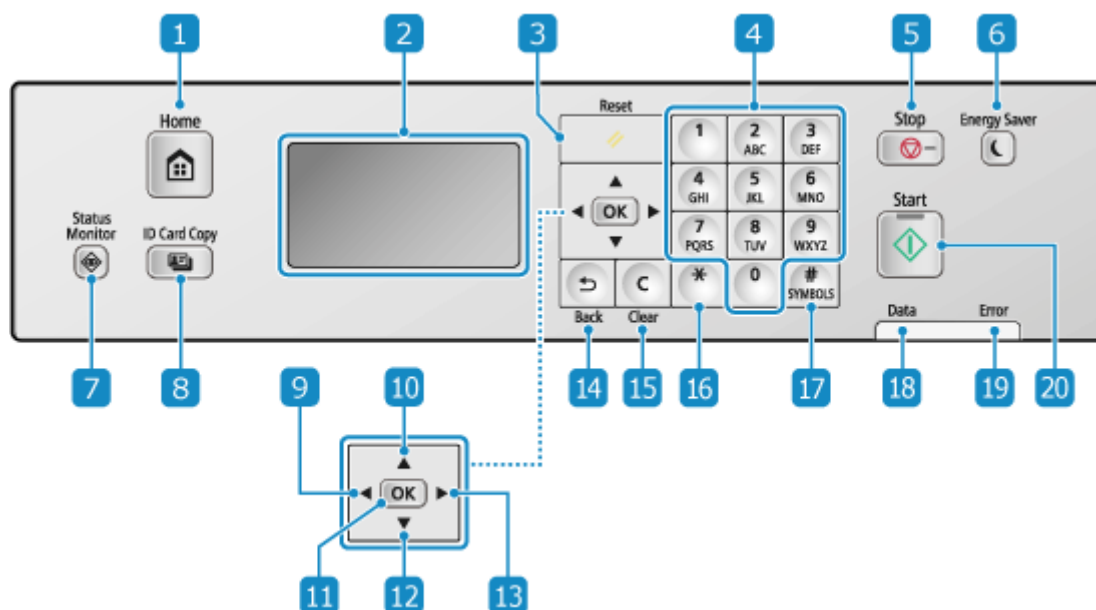**1 Home key** ()

Displays the [Home] screen. ▶ **[Home] Screen(P. 121)**

2 Display

Displays the screens for operating the functions, usage, messages, and other information. ▶ **Using the Control Panel(P. 117)**

3 Reset key ()

Press to cancel the settings and restore the previously specified settings.


4 Numeric keys ( - )

Press to enter numbers and text. ▶ **Entering Characters(P. 132)**

5 Stop key ()

Cancels printing and other operations.

6 Energy Saver key ()

Puts the machine into sleep mode to reduce power consumption. In the sleep mode,  lights up yellow-green. ▶ **Reducing Power Consumption (Sleep Mode)(P. 115)**

7 Status Monitor key ()

Check the information of the machine, usage and logs, network settings, and error information. ▶ **[Status Monitor] Screen(P. 125)**

8 ID Card Copy key ()

Press to copy both sides of an ID card onto the same side of paper. ▶ **Copying Both Sides of ID Cards onto One Sheet(P. 304)**

9 Left key ()

Returns to the previous screen. Press when entering text to move the cursor to the left.

10 Up key ()

Selects the item above and increases the value on a slider.

11 OK key ()

Confirms the settings and selected details.

12 Down key ()

Selects the item below and decreases the value on a slider.

13 Right key ()

Moves to the next screen. Press when entering text to move the cursor to the right.

14 Back key ()

Returns you to the previous screen.

15 Clear key ()

Press to delete the entered numbers and text.

16 Uppercase/lowercase/numeric key ()

Changes the character type.

17 Symbol key ()

Enter symbols. ▶ **Entering Characters(P. 132)**

18 Data indicator

Blinks when an operation is being performed, such as during printing, and lights up when data is waiting to be processed.

19 Error indicator

Blinks or lights up when an error such as a paper jam occurs.


20 Start key ()

Press to scan originals.

Feeder

A19R-009

For details on supported models, see the following: [▶Supported Functions\(P. 3\)](#)

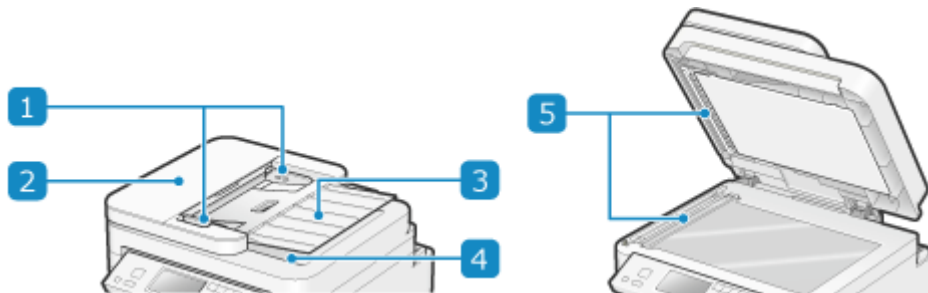

1 Slide guides

Align the slide guides against the edges of the originals to properly place the original.

2 Feeder cover

Open the feeder cover when cleaning the inside of the feeder or clearing a paper jam inside the feeder.

3 Original supply tray

You can place two or more sheets of originals in the original supply tray. [▶Placing Originals\(P. 140\)](#)

4 Original output tray

Scanned originals are output to the original output tray.

5 Original scanning area

Originals placed on the feeder are scanned.

! IMPORTANT

- Do not place objects on the original output tray. This can damage the originals.


NOTE

- If the following symptoms occur when using the feeder, clean the feeder: [▶Cleaning the Feeder\(P. 523\)](#)
 - Originals become dirty
 - Originals frequently jam
 - Printouts appear smudged after scanning, copying, or sending faxes

Drawer

A19R-00E

Load paper that you usually use into the drawer. ▶ **Loading Paper in the Drawer(P. 145)**

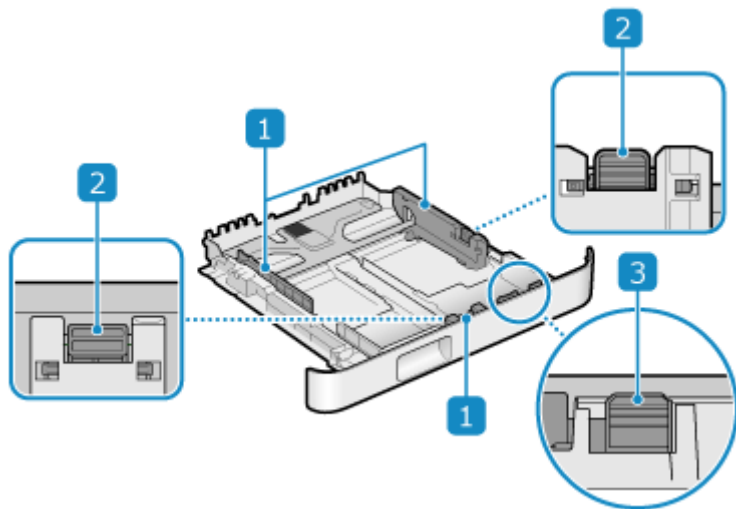

1 Paper guides

Align the paper guides against the edges of the paper to properly place the paper.

2 Lock release lever

Move the paper guides while pressing the lock release lever.

3 Lock release lever (for extending the drawer)

When loading paper longer than A4, extend the drawer toward you while pressing the lock release lever.

* When the drawer is extended from the machine, it is not fully housed.

Usable Paper

The sizes and types of paper that can be used on the machine are shown below.

- ▶ Usable Paper Sizes(P. 19)
- ▶ Usable Paper Types(P. 20)
- ▶ Unusable Paper(P. 21)

NOTE

- Precautions must be taken when handling and storing paper. ▶ Precautions When Handling Paper(P. 22)

Usable Paper Sizes

✓ : Usable ✕ : Not usable

Paper Size	Drawer	Automatic 2-sided Printing ^{*1}
A4 ^{*2*3}	✓	✓
B5 ^{*2}	✓	✕
A5 ^{*2*4}	✓	✕
A6	✓	✕
Legal (LGL) ^{*2}	✓	✓
Letter (LTR) ^{*2*3}	✓	✓
Statement (STMT) ^{*2}	✓	✕
Executive (EXEC)	✓	✕
Oficio ^{*2}	✓	✓
Oficio (Brazil) ^{*2}	✓	✓
Oficio (Mexico) ^{*2}	✓	✓
Letter (Government) ^{*2}	✓	✕
Legal (Government) ^{*2}	✓	✕

Paper Size	Drawer	Automatic 2-sided Printing ^{*1}
Foolscap/Folio ^{*2}	✓	✓
Foolscap (Australia) ^{*2}	✓	×
Legal (India)	✓	✓
3x5inch	✓	×
Envelope No.10 (COM10)	✓	×
Envelope Monarch	✓	×
Envelope C5	✓	×
Envelope DL	✓	×
Custom Paper Size	✓ ^{*5}	✓ ^{*6}

^{*1} Automatic 2-sided printing is available without replacing paper.

^{*2} Allows you to print received fax documents.

^{*3} Enables printing of reports and lists.

^{*4} Enables loading of paper in the portrait or landscape orientation.

^{*5}The custom size ranging from 3" x 5" (76.0 mm x 127.0 mm) to 8 1/2" x 14" (216.0 mm x 356.0 mm) is available.

^{*6} The custom size ranging from 8 1/4" x 11" (210.0 mm x 279.0 mm) to 8 1/2" x 14" (216.0 mm x 356.0 mm) is available.

Usable Paper Types

You can use non-chlorine paper.

✓ : Usable × : Not usable

Paper Type	Paper Weight	Drawer	Automatic 2-sided Printing ^{*1}
Thin 1	16 lb Bond (60 g/m ²)	✓	✓
Plain 1 ^{*2}	17 lb Bond to 18 lb Bond (61 g/m ² to 70 g/m ²)	✓	✓
Plain 2 ^{*2}	19 lb Bond to 23 lb Bond (71 g/m ² to 89 g/m ²)	✓	✓
Plain 3 ^{*2}	24 lb Bond to 28 lb Bond (90 g/m ² to 105 g/m ²)	✓	✓
Heavy 1	29 lb Bond to 32 lb Bond (106 g/m ² to 120 g/m ²)	✓	×

Paper Type	Paper Weight	Drawer	Automatic 2-sided Printing ^{*1}
Heavy 2	33 lb Bond to 60 lb Cover (121 g/m ² to 163 g/m ²)	✓	×
Recycled 1 ^{*2}	17 lb Bond to 18 lb Bond (61 g/m ² to 70 g/m ²)	✓	✓
Recycled 2 ^{*2}	19 lb Bond to 23 lb Bond (71 g/m ² to 89 g/m ²)	✓	✓
Labels	—	✓	×
Color ^{*2}	17 lb Bond to 18 lb Bond (61 g/m ² to 70 g/m ²)	✓	✓
Letterhead 1	17 lb Bond to 18 lb Bond (61 g/m ² to 70 g/m ²)	✓	✓
Letterhead 2	19 lb Bond to 23 lb Bond (71 g/m ² to 89 g/m ²)	✓	✓
Letterhead 3	24 lb Bond to 28 lb Bond (90 g/m ² to 105 g/m ²)	✓	✓
Letterhead 4	29 lb Bond to 32 lb Bond (106 g/m ² to 120 g/m ²)	✓	×
Letterhead 5	33 lb Bond to 60 lb Cover (121 g/m ² to 163 g/m ²)	✓	×
Bond 1	16 lb Bond to 27 lb Bond (60 g/m ² to 104 g/m ²)	✓	✓
Bond 2	28 lb Bond to 60 lb Cover (105 g/m ² to 163 g/m ²)	✓	×
Envelope	—	✓	×

^{*1} Automatic 2-sided printing is available without replacing paper.

^{*2} Enables printing of reports and lists.

Unusable Paper

Before printing, check whether the paper to use is suitable. Do not use the following types of paper, as they can cause paper jams or printing errors:

- Wrinkled, creased, curled, torn, or damp paper^{*1}
- Thin straw paper, very thin paper, coarse paper, glossy paper
- Paper with glue or other adhesive sticking out or label paper whose back side can be easily peeled off
- Paper printed by a thermal transfer printer, back side of paper printed by a thermal transfer printer

^{*1} Printing on damp paper may cause steam to be emitted from the output area or water droplets to adhere to the output part, but this does not indicate a malfunction. This is because the water contained in the paper evaporates due to the heat generated when the toner fixes to the paper. This is more likely to occur when the room temperature is low.

Precautions When Handling Paper

A19R-00H

To prevent paper jams and other errors and ensure beautiful printing, you must take precautions when handling and storing paper.

To maintain the quality of printed paper, pay attention when storing and gluing paper.

■ Handling and Storing Paper

Acclimating the Paper to the Usage Environment

Before using the paper in the machine, be sure to fully acclimate the paper to the environment where the machine is located. Immediately using paper stored in a location with a different temperature or humidity can cause paper jams or printing errors.

Storing Paper Before Use

- It is recommended that you use paper as soon as possible after opening the package. Any remaining paper should be wrapped in the original package and stored on a flat surface.
- To protect the paper from moisture or dryness, keep the paper wrapped in its package until use.
- Do not store the paper so that it curls or folds.
- Do not store the paper vertically, and do not stack too much paper.
- Do not store the paper in direct sunlight, or in a place with high humidity, dryness, or a drastically different temperature or humidity compared to the usage environment.

■ Storing and Gluing Printed Paper

Storing Paper

- Store the paper on a flat surface.
- Do not store the paper together with items made of polyvinyl chloride (PVC) such as a clear folder. The toner may melt, causing the paper to stick to the PVC material.
- Do not store the paper folded or creased. Toner may peel off.
- Do not store the paper in a place with high temperature.
- When storing the paper for a long period of time (two years or longer), store in a binder or similar item.
- Storing the paper for a long period of time can cause a discoloration of the paper, resulting in a discoloration of printed images.

Precautions When Gluing Printed Paper

- Always use insoluble adhesives.
- Before applying adhesive, perform a test using an unneeded printout.
- Allow glued paper to fully dry before stacking.

Specifications

A19R-00J

Specifications are subject to change for product improvement, and the contents may be updated depending on products released in the future. For details about product information, see the Canon website.

<https://global.canon/>

Specifications of Main Unit

- ▶ **Basic Specifications(P. 24)**
- ▶ **Feeder Specifications(P. 26)**

Specifications of Functions


- ▶ **Print Specifications(P. 27)**
- ▶ **Scan Specifications(P. 29)**
- ▶ **Fax Specifications(P. 30)**
- ▶ **Network Specifications(P. 31)**
- ▶ **Security and Management Function Specifications(P. 32)**

Operating Environment and Supported Software and Servers

- ▶ **Supported Environment(P. 35)**

Basic Specifications

A19R-00K

Type	Desktop
Color Supported	Black and White
Scan Resolution	600 dpi x 600 dpi
Print Resolution	600 dpi x 600 dpi
Number of Tones	256 Gradation Levels
Copy Original	Maximum: 8 1/2" x 11 3/4" (216 mm x 297.0 mm) Sheet/Book
Copy Paper Size	Maximum: 8 1/2" x 14" (216.0 mm x 356.0 mm) Minimum: 3" x 5" (76 mm x 127 mm) Margin (when copying) Top: 1/4" ± 1/8" (5.0 mm ± 2.0 mm) or less Left and right: 1/4" ± 1/8" (5.0 mm ± 2.0 mm) or less
Paper Type and Weight	 Usable Paper(P. 19)
Warm-up time ^{*1}	After powering ON 15 seconds or less After recovering from sleep mode 3.2 seconds or less
First Copy Time (Letter)	7.1 seconds or less
Continuous Copy Speed ^{*2} (Letter)	35 sheets/minute
Original Scanning Speed (Letter)	Full Color: 3.3 seconds/sheet Black and White: 2.5 seconds/sheet
Magnification	25% to 400% (in 1% increments)
Paper Feeding System and Paper Capacity ^{*3}	Paper Drawer 250 sheets (17 lb Bond (64 g/m ²), 21 lb Bond (80 g/m ²))

About the Machine

Output System and Output Capacity *3	Output Tray 100 sheets (18.1 lb Bond (68 g/m ²))
Number of Continuous Copies	999 sheets
Power supply	AC 110V-127V, 60Hz, 4.7A
Power Consumption *1	Maximum Power Consumption 970 W or less During Sleep Mode 0.5 W (USB connection) 0.6 W (wired LAN, wireless LAN connection) With Power Turned OFF 0.08 W
Dimensions (W x D x H)	15 3/8" x 15 3/4" x 15 3/8" (390.0 mm x 399.0 mm x 389.6 mm)
Weight (Not including toner cartridges)	MF289dw Approx. 29.5 lb (13.4 kg) MF287dw / MF284dw Approx. 27.6 lb (12.5 kg)
Maximum Occupancy Space	MF289dw 15 3/8" x 32" x 27" (390.0 mm x 810.9 mm x 686.4 mm) MF287dw / MF284dw 15 3/8" x 32" x 25 7/8" (390.0 mm x 810.9 mm x 657.4 mm) * Provide a space of at least 4" (100 mm) around the machine.
Memory Capacity	RAM: 256 MB
Usage Environment	Temperature: 50 °F to 86 °F (10 °C to 30 °C) Humidity: 20% to 80% RH (no condensation)

*1 May vary depending the usage environment and usage conditions.

*2 Copy/print speeds are measured based on internal testing using Letter size paper copied/printed with 100% copy/print ratio to original on one-sided paper. Internal testing involved continuously copying/printing the same one page of content on plain paper (copy speed is tested by copying on the platen glass). Copy/print speeds may vary depending on paper type, paper size or paper feeding direction.
The device may automatically pause or slow down in order to adjust printer condition such as controlling temperature of a certain unit or limiting impact to image quality during continuous copying/printing.

*3 May vary depending on the installation environment and paper to be used.

Feeder Specifications

A19R-00L

Feeder Type	<p>MF289dw</p> <p>Automatic 2-sided Document Feeder</p> <p>MF287dw / MF284dw</p> <p>Automatic Document Feeder</p>
Original Size and Type	<p>Original Size</p> <p>Maximum: 8 1/2" x 14" (216 mm x 356 mm)</p> <p>Minimum: 5 7/8" x 4 1/8" (148 mm x 105 mm)</p> <p>Original Weight</p> <p>One sheet: 28 lb Bond to 34 lb Bond (105 g/m² to 128 g/m²)</p> <p>Multiple sheets: 13 lb Bond to 28 lb Bond (50 g/m² to 105 g/m²)</p>
Original Storage Capacity (Letter)	<p>35 sheets (21 lb Bond (80 g/m²))</p>
Original Scanning Speed (Letter)	<p>Copying</p> <p>1-sided Scanning</p> <p>Black and White (300 dpi x 600 dpi): 21 pages/minute</p> <p>Scanning *1</p> <p>1-sided Scanning</p> <p>Full Color (300 dpi x 300 dpi): 15 pages/minute</p> <p>Black and White (300 dpi x 600 dpi): 21 pages/minute</p>

*1 May vary depending the usage environment and usage conditions.

Print Specifications

A19R-00S

- ▶ **UFR II Printer Function(P. 27)**
- ▶ **PCL Printer Function(P. 27)**

UFR II Printer Function

Type	Embedded
Print Size	▶ Usable Paper(P. 19)
Continuous Print Speed	Same as "Continuous Copy Speed" for main unit ▶ Basic Specifications(P. 24)
Resolution	Data Processing 1,200 dpi x 1,200 dpi, 600 dpi x 600 dpi
Page Description Language (PDL)	UFR II
Protocol Supported	TCP/IP: LPD, Port9100, IPP, IPPS, WSD
Resident Fonts	None
Interface	USB USB 2.0 Hi-Speed Wired LAN 10Base-T, 100Base-TX, 1000Base-T (IEEE 802.3 compliant) Wireless LAN IEEE 802.11b, IEEE 802.11g, IEEE 802.11n

PCL Printer Function





Type	Embedded
Print Size	▶ Usable Paper(P. 19)
Continuous Print Speed	Same as "Continuous Copy Speed" for main unit ▶ Basic Specifications(P. 24)
Resolution	Data Processing 1,200 dpi x 1,200 dpi, 600 dpi x 600 dpi

About the Machine

Page Description Language (PDL)	PCL6, PCL5
Protocol Supported	TCP/IP: LPD, Port9100, IPP, IPPS, WSD
Resident Fonts	45 Roman, 10 Bitmap fonts
Interface	USB USB 2.0 Hi-Speed Wired LAN 10Base-T, 100Base-TX, 1000Base-T (IEEE 802.3 compliant) Wireless LAN IEEE 802.11b, IEEE 802.11g, IEEE 802.11n

Scan Specifications

A19R-00U

Type	Color Scanner
Original Scan Size	<p>Platen Glass</p> <p>Same as "Copy Original" for main unit  Basic Specifications(P. 24)</p> <p>Feeder</p> <p>Same as "Original Size and Type" for feeder  Feeder Specifications(P. 26)</p>
Resolution (Maximum)	600 dpi x 600 dpi
Original Scanning Speed	<p>Platen Glass</p> <p>Same as "Original Scanning Speed" for main unit  Basic Specifications(P. 24)</p> <p>Feeder</p> <p>Same as "Original Scanning Speed" for feeder  Feeder Specifications(P. 26)</p>
Interface	<p>USB</p> <p>USB 2.0 Hi-Speed</p> <p>Wired LAN</p> <p>10BASE-T, 100BASE-TX, 1000BASE-T (RJ-45)</p> <p>Wireless LAN</p> <p>IEEE 802.11b, IEEE 802.11g, IEEE 802.11n</p>
Protocol Supported *1	<p>Push Scan</p> <p>SMB (TCP/IP), SMTP</p> <p>Pull Scan</p> <p>USB, TCP/IP</p>
Output Format *1	TIFF, JPEG (Single Page), PDF (Compact)

*1 Some formats are not available depending on the function.

Fax Specifications

A19R-00W

Line Used *1	Public Switched Telephone (PSTN), Facsimile communication network (F-NET)
Scan Line Density	<p>Normal Mode</p> <p>G3: 8 pels/mm^{*2} x 3.85 line/mm</p> <p>Fine Mode</p> <p>G3: 8 pels/mm^{*2} x 7.7 line/mm</p> <p>Superfine Mode</p> <p>G3: 8 pels/mm^{*2} x 15.4 line/mm</p>
Transmission Speed *3	<p>SuperG3: 33.6 Kbps</p> <p>G3: 14.4 Kbps</p>
Compression Method	MH, MR, MMR, JBIG
Communication Mode	SuperG3, G3
Maximum Sending Original Size	A4
Recording Paper Size	🔴 Usable Paper(P. 19)
Transmission Time	Approx. 2.6 seconds*4

*1 Depending on your telephone line and region, you may not be able to perform data communication, such as when the sum of the resistance value of the telephone line and that of the machine exceeds 1,700 Ω. In this case, contact your dealer or service representative.

*2 Pels stands for picture elements (pixels).

*3 With Automatic Fallback function.

*4 Value obtained with Canon original test sheet of A4 size, standard ECM (JBIG) transmission.

Network Specifications

A19R-00X

■ Common

Protocol Supported	TCP/IP Frame type: Ethernet II Print applications: LPD, Raw, IPP, IPPS, WSD, Mopria, AirPrint, Windows Mobile Print
---------------------------	---

■ Wired LAN

Interface	10BASE-T, 100BASE-TX, 1000BASE-T (RJ-45)
------------------	--

■ Wireless LAN

Standard	IEEE 802.11b, IEEE 802.11g, IEEE 802.11n
Transmission Method	IEEE 802.11b (Modulation system: DS-SS) IEEE 802.11g (Modulation system: OFDM method) IEEE 802.11n (Modulation system: OFDM method)
Communication Mode	Infrastructure Mode Access Point Mode
Security (Encryption Method)	Infrastructure Mode 128 (104) / 64 (40) bit WEP WPA-PSK (TKIP / AES-CCMP) WPA2-PSK (TKIP / AES-CCMP) WPA3-SAE (AES-CCMP) WPA-EAP (AES-CCMP) WPA2-EAP (AES-CCMP) WPA3-EAP (AES-CCMP) Access Point Mode WPA2-PSK (AES-CCMP)
Setup Method	WPS (Wi-Fi Protected Setup), Manual setup

Security and Management Function Specifications

A19R-00Y

- ▶ Firewall(P. 32)
- ▶ Keys and Certificates(P. 32)
- ▶ Definition of "Weak Encryption"(P. 33)
- ▶ TLS(P. 33)

Firewall

- Up to 16 IP addresses (or ranges of IP addresses) can be specified for both IPv4 and IPv6.
- Up to 32 MAC addresses can be specified.

Keys and Certificates

The following keys and certificates are supported:

■ Self-generated Key and Self-signed Certificate or CSR

Public key algorithm (and key length)	RSA (512 bits, 1024 bits, 2048 bits, 4096 bits) DSA (1024Bits, 2048Bits, 3072Bits) ECDSA (P256, P384, P521)
Certificate signature algorithm	RSA: SHA-1* ¹ , SHA-256, SHA-384* ² , SHA-512* ² DSA: SHA-1* ¹ ECDSA: SHA-1* ¹ , SHA-256, SHA-384, SHA-512

*¹ Available only when installed by using the Remote UI.

*² SHA384-RSA and SHA512-RSA are available only when the RSA key length is 1024 bits or more.

■ Key and Certificate or CA Certificate for Installation

Format	Key PKCS#12* ^{1*2} CA certificate X.509 DER format/PEM format* ²
File extension	Key ".p12" or ".pfx" CA certificate ".cer" or ".pem"

Public key algorithm (and key length)	RSA (512 bits, 1024 bits, 2048 bits, 4096 bits) DSA (1024 bits, 2048 bits, 3072 bits) ECDSA (P256, P384, P521)
Certificate signature algorithm	RSA: SHA-1 ^{*3} , SHA-256, SHA-384 ^{*4} , SHA-512 ^{*4} DSA: SHA-1 ^{*3} ECDSA: SHA-1 ^{*3} , SHA-256, SHA-384, SHA-512

*1 Requirements for the certificate contained in a key are pursuant to CA certificates.

*2 Certificates of more than 2 MB cannot be registered.

*3 Available only when installed by using the Remote UI.

*4 SHA384-RSA and SHA512-RSA are available only when the RSA key length is 1024 bits or more.

NOTE

- The machine does not support use of a certificate revocation list (CRL).

Definition of "Weak Encryption"

When [Prohibit Use of Weak Encryption] in [Encryption Settings] is set to [On], the use of the following algorithms is prohibited. [▶\[Encryption Settings\]\(P. 511\)](#)

Hash	MD4, MD5, SHA-1
HMAC	HMAC-MD5
Common key encryption	RC2, RC4, DES
Public key encryption	RSA encryption (512 bits/1024 bits) RSA signature (512 bits/1024 bits) DSA (512 bits/1024 bits) DH (512 bits/1024 bits)

NOTE

- Even when [Prohibit Key/Cert. with Weak Encryption] in [Encryption Settings] is set to [On], the hash algorithm SHA-1, which is used for signing a root certificate, can be used.

TLS

The following combinations of the TLS version and algorithm are usable:

✓ : Usable — : Not usable

Algorithm	TLS Version			
	TLS 1.3	TLS 1.2	TLS 1.1	TLS 1.0
Encryption Algorithm				
AES-CBC (256bit)	—	✓	✓	✓
AES-CBC (128bit)	—	✓	✓	✓
AES-GCM (256bit)	✓	✓	—	—
AES-GCM (128bit)	✓	✓	—	—
3DES-CBC	—	✓	✓	✓
CHACHA20-POLY1305	✓	—	—	—
Key Exchange Algorithm				
RSA	—	✓	✓	✓
ECDHE	✓	✓	✓	✓
X25519	✓	—	—	—
Signature Algorithm				
RSA	✓	✓	✓	✓
ECDSA	✓	✓	✓	✓
HMAC Algorithm				
SHA1	—	✓	✓	✓
SHA256	✓	✓	—	—
SHA384	✓	✓	—	—

Supported Environment

A19R-010

- ▶ Operating Environment(P. 35)
- ▶ Supported Software and Servers(P. 35)

Operating Environment

System Environment for WSD Scan	Windows 10 Windows 11
Operating Conditions of Send Function Setting Tool	Microsoft Edge Google Chrome
AirPrint Operating Environment	▶ Using AirPrint Application to Print and Scan Data and Send Faxes(P. 338)
Remote UI Operating Environment ^{*1}	<p>Windows</p> <p>Microsoft Edge</p> <p>Google Chrome</p> <p>macOS</p> <p>Safari 11</p> <p>Google Chrome</p> <p>Android</p> <p>Google Chrome</p> <p>UC Browser</p> <p>iOS</p> <p>Safari 11</p> <p>UC Browser</p>

*1 You must set your Web browser to enable cookies and use JavaScript.

Supported Software and Servers

File Servers Available for File Transmission	<p>SMB</p> <p>Windows 8.1</p> <p>Windows 10</p> <p>Windows 11</p> <p>Windows Server 2012 / Windows Server 2012 R2</p> <p>Windows Server 2016</p>
---	---

About the Machine

Windows Server 2019

Windows Server 2022

macOS 10.15 / 11.0 / 12.0

CentStream8


Recommended Functions

A19R-011

This section introduces recommended functions that can be useful for your purpose and help you solve problems, such as to simplify document management and sharing, save paper and power, and improve operations.



▶ **Digitizing Documents(P. 38)**

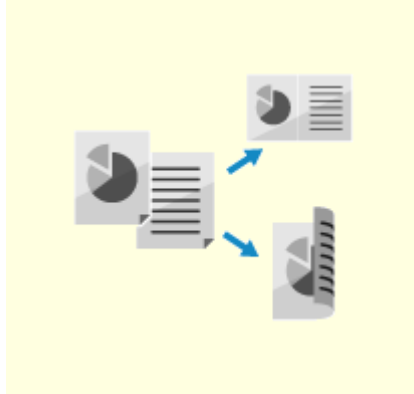

▶ **Cost Savings(P. 39)**



▶ **Making Operations More Efficient(P. 40)**

Canon strives to be environmentally and energy conscious in all aspects of its operations. [Click here to learn about the ways in which Canon is helping to protect the environment.](#)



Digitizing Documents

A19R-012

By digitizing paper documents, you do not have to worry about storage space and documents deteriorating, and you can view and use these documents on a computer or mobile device.

Scanning Paper Documents

You can use the scan function to scan documents and photos into data that can be saved and sent.

▶ **Scanning(P. 215)**

Use the scan settings to convert these into data according to your purpose. You can reduce the data size, or divide and save the data into pages.

▶ **Scan Settings (Touch Panel Model)(P. 247)**



Digitizing Fax Documents

You can digitize received faxes and send faxes directly from a computer. You can also send and view faxes in a timely fashion even if you are away from the machine.

Forwarding and Saving Received Faxes as Data

Received faxes can be automatically forwarded to a specified computer or mobile device and saved.

▶ **Auto Forwarding and Backing Up Received Faxes(P. 265)**




Sending Faxes from a Computer

You can use a procedure similar to that for printing documents and photos to send faxes directly from a computer.

▶ **Sending Faxes from a Computer (PC Faxing)(P. 271)**

▶ **Using AirPrint Application to Print and Scan Data and Send Faxes(P. 338)**

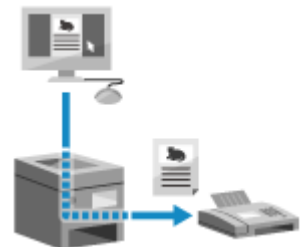

Cost Savings

A19R-013


This machine can help you save costs on paper, power, and fax communication.

Saving Paper

Saving Paper When Printing

You can print on both sides of the paper, and print multiple pages on one sheet of paper.

- ▶ **Printing from a Computer(P. 204)**

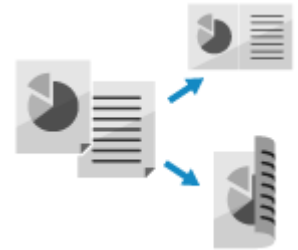

Saving Paper When Faxing

Instead of immediately printing received faxes, you can temporarily save them in the memory of the machine and forward them automatically. You can view the faxes and print only those that are needed.

- ▶ **Saving Received Documents in the Machine (Memory Lock)(P. 378)**
- ▶ **Auto Forwarding and Backing Up Received Faxes(P. 265)**

You can print received faxes on both sides of the paper.

- ▶ **Changing the Print Settings for Received Faxes(P. 279)**

Saving Paper When Copying

You can copy on both sides of the paper, and copy multiple originals or the front and back of a card on a sheet of paper.

- ▶ **Additional Copying Features(P. 289)**
- ▶ **Copying Both Sides of ID Cards onto One Sheet(P. 304)**
- ▶ **Paper Save Copy(P. 300)**

Saving Energy

You can configure the machine to enter sleep mode when not in use to save energy. The power of the machine does not turn OFF, so it can quickly resume operations and receive faxes.

- ▶ **Reducing Power Consumption (Sleep Mode)(P. 115)**

Making Operations More Efficient

A19R-014

You can print and share data even in an environment where a computer cannot be used. In addition, you can use the job logs and customize the control panel to make operations more efficient and reduce the amount of time using the machine.

Printing and Sharing Data Without Using a Computer

Printing Data from a Smartphone or Tablet

You can print data from a mobile device connected to the machine while using an application. The machine supports direct connection, allowing easy connection setup between the machine and a mobile device without having to use a wireless LAN router.


- ▶ **Linking with Mobile Devices and Integrating with a Cloud Service(P. 317)**



Saving and Sharing Paper Documents as Data

You can scan a original, send the data by e-mail, and save it to a shared folder. By just operating the machine, you can save and share data with a computer.

- ▶ **Scanning (Sending by E-mail)(P. 236)**
- ▶ **Scanning (Saving to a Shared Folder)(P. 238)**

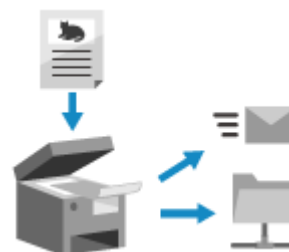

Easy Touch Panel Operations

Using the Job Log to Send Data and Faxes

You can send scanned data or faxes to destinations specified in the past by calling up the TX Job Log for scan or fax jobs. In addition to calling up the destination, you can also call up the past settings to save the trouble of having to configure the settings again.

- ▶ **Specifying Destinations (TX Job Log)(P. 184)**



Customizing the Control Panel for Greater Usability

You can rearrange the buttons on the [Home] screen for greater usability.

- ▶ **Customizing the [Home] Screen(P. 136)**

You can change the initial settings which are standardly selected when initiating the Scan/Fax/Copy functions.

- ▶ **Changing the Default Settings(P. 185)**



One-touch Operation of Useful Functions

A shortcut button allows you to perform "scanning an original with the same settings" and "copying with saving paper" by a single press of the button.


- ▶ **Paper Save Copy(P. 300)**
- ▶ **Scanning Using the Shortcut Key (Saving to a Computer)(P. 240)**



About the Machine

Through the toner replenishment service, new toner cartridges are automatically delivered to you before your existing toner cartridge is used up.

* Use of the toner replenishment service requires prior registration with select retailers. This service is only available in certain countries.

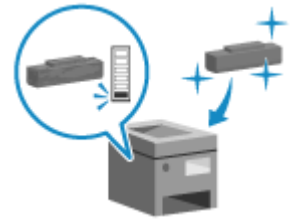

Setting Up

Setting Up	43
Configuring the Default Settings (Setup Guide) (Touch Panel Model)	44
Configuring the Default Settings (Setup Guide) (5 Lines LCD Model)	47
Configuring the Initial Settings for Remote UI, Fax, Scan, and Web Service Usage	50
Setting Up the Network	56
Selecting Wired or Wireless LAN	58
Connecting to a Wired LAN	60
Connecting to a Wireless LAN	61
Connecting to a Wireless LAN by Using the Router Button (Push Button Mode)	64
Connecting to a Wireless LAN by Entering a PIN Code (WPS PIN Code Mode)	66
Connecting to a Wireless LAN by Searching for a Router (Access Point Setup Method)	69
Connecting to a Wireless LAN by Setting the Details (Manual Setup Method)	72
Setting IPv4 Addresses	77
Setting IPv6 Addresses	81
Configuring Your Machine for Your Network Environment	83
Manually Configuring the Ethernet Settings	84
Configuring DNS	85
Configuring SMB	88
Configuring WINS	90
Configuring SNMP	91
Configuring SNTP	94
Configuring CHMP	96
Checking the Network Status and Settings	97
Configuring the Fax Settings (Fax Setup Guide)	103
Installing Software and Drivers to the Computer	107

Setting Up

A19R-015

After installing the machine, configure the required settings to enable use of the functions.

Configuring the Default Settings of the Machine

When you turn ON the machine for the first time, the screen (Setup Guide) for setting the items required for using the machine is displayed. Configure the settings by following the instructions on the screen.

▶ **Configuring the Default Settings (Setup Guide) (Touch Panel Model)(P. 44)**

▶ **Configuring the Default Settings (Setup Guide) (5 Lines LCD Model)(P. 47)**

Setting Up the Network

To operate the machine from a computer or to connect to a server, you must connect the machine to a network. If you did not connect to the network when you configured the default settings, do that during this step.

▶ **Setting Up the Network(P. 56)**

Configuring the Fax Settings

Configure the fax settings on the screen for setting the items required for using the fax function (Fax Setup Guide). If you did not configure these settings when you configured the default settings, do that during this step.

▶ **Configuring the Fax Settings (Fax Setup Guide)(P. 103)**

Installing Software and Drivers to the Computer

Install the software required to use the machine and any printer and fax drivers on your computer. If you did not install the software or drivers when you configured the default settings, and you want to install them separately, see the following:

▶ **Installing Software and Drivers to the Computer(P. 107)**

■ See Also

Implementing Measures to Prevent Unauthorized Access

It is important to provide measures against security risks when using the machine in a network environment. Check examples of measures that you can take with the machine.

▶ **Measures to Prevent Unauthorized Access(P. 6)**

Checking Available Functions

The functions available on the machine vary depending on the model. Check the functions that are available on your model.

▶ **Supported Functions(P. 3)**

Configuring the Settings Required to Use the Functions of the Machine

Additional settings may be required depending on your model. For details about the settings required for each function, see the following:

▶ **Printing Preparations(P. 196)**

▶ **Preparations for Scanning(P. 217)**

▶ **Preparations for Linking with Mobile Devices and Integrating with a Cloud Service(P. 318)**

Importing Settings Data from Another Machine

You can share settings data with other machines to save time on registering and configuring the settings. You can export data from another machine of the same model to a computer and import that data to the machine so as to share the settings.

▶ **Importing and Exporting the Address Book(P. 410)**

Configuring the Default Settings (Setup Guide) (Touch Panel Model)

A19R-016

When you turn ON the machine for the first time, the screen (Setup Guide) for setting the items required for using the machine is displayed. Configure the settings using the procedure below by following the instructions on the screen.

- ▶ **Step 1: Setting the Display Language and Country or Region(P. 44)**
- ▶ **Step 2: Setting the Date and Time(P. 44)**
- ▶ **Step 3: Connecting the Machine to a Network or Computer(P. 45)**
- ▶ **Step 4: Configuring Settings for Toner Replenishment Service(P. 45)**
- ▶ **Step 5: Installing the Driver and Configuring the Initial Settings Using Remote UI(P. 45)**

NOTE

- These settings can only be configured one time using the Setup Guide when starting the machine for the first time. To change the settings configured with the Setup Guide at a later time, set the items in Steps 2 to 4 individually. For the details of each setting, see the following.
 - ▶ **Setting the Date and Time(P. 393)**
 - ▶ **Connecting to a Wireless LAN(P. 61)**
 - ▶ **[Home] Screen(P. 121)**

Step 1: Setting the Display Language and Country or Region

Set the language displayed on the control panel screen and reports to be printed. Next, set the country or region where the machine is used.

1 On the [Language] screen, select the display language.

2 Press [Yes].

- ⇒ The display language is set, and the [Select Country/Region] screen is displayed. Depending on the country or region, the [Select Country/Region] screen is not displayed and the [Time Zone] screen is displayed. When the [Time Zone] screen is displayed, proceed to "Step 2: Setting the Date and Time." ▶ **Step 2: Setting the Date and Time(P. 44)**

3 On the [Select Country/Region] screen, select the country or region.

- ⇒ The country or region is set, and the [Time Zone] screen is displayed.

Step 2: Setting the Date and Time

The date and time are used as the reference for the functions using date and time information, and therefore, they need to be set accurately.

1 On the [Time Zone] screen, select your time zone.

Set the time zone (UTC*¹) and Daylight Saving Time according to the region where this machine is installed.

*1 The UTC (Coordinated Universal Time) is a coordinated universal time that is standard for all parts of the world. Internet-based communication relies on the UTC being set correctly.

2 On the [Current Time Set.] screen, enter the date and time, and press [Apply].

⇒ The time and date are set, and the [Select Connect. Method] screen is displayed.

Step 3: Connecting the Machine to a Network or Computer

Connect to the network using wireless local area network (LAN).

1 Select the connection method on the [Select Connect. Method] screen.

To configure this setting at a later time, press [Do Not Connect Now].

The Setup Guide closes, and the [Home] screen is displayed. ▶[Home] Screen(P. 121)

2 Configure the settings by following the instructions on the screen.

⇒ After the settings are complete, the toner replenishment service screen is displayed.

Step 4: Configuring Settings for Toner Replenishment Service

You can configure settings for toner replenishment service. Through toner replenishment service, new toner cartridges are automatically delivered to you before your existing toner cartridges are used up.

* Use of the toner replenishment service requires prior registration with select retailers. This service is only available in certain countries.

* This service can be set up through [Toner Deliv. Set.] displayed on the [Home] screen. ▶[Home] Screen(P. 121)

1 On the confirm screen of toner replenishment service, press [Next].

2 Press [Accept].

If you press [Do Not Acpt.], the screen for configuring settings for toner replenishment service is skipped and proceed to step 5.

3 Press [Close].

⇒ The [Current Time Set.] screen is displayed.

- If connecting to the server fails, try configuring the settings again through [Connect to Server/Verify Connection] in [Toner Deliv. Set.]. ▶[Home] Screen(P. 121)

Step 5: Installing the Driver and Configuring the Initial Settings Using Remote UI

1 Install the driver by following the instructions on the screen.

If you are not installing the driver, press [End], and proceed to Step 2.

2 When driver installation is complete, press [End].

⇒ The [Home] screen is displayed.

3 Configure the initial settings using Remote UI. ▶ **Configuring the Initial Settings for Remote UI, Fax, Scan, and Web Service Usage(P. 50)**

Configuring the Default Settings (Setup Guide) (5 Lines LCD Model)

A19R-017

When you turn ON the machine for the first time, the screen (Setup Guide) for setting the items required for using the machine is displayed. Configure the settings using the procedure below by following the instructions on the screen.

- ▶ **Step 1: Setting the Display Language and Country or Region(P. 47)**
- ▶ **Step 2: Setting the Date and Time(P. 47)**
- ▶ **Step 3: Connecting the Machine to a Network or Computer(P. 48)**
- ▶ **Step 4: Configuring Settings for Toner Replenishment Service(P. 48)**
- ▶ **Step 5: Installing the Driver and Configuring the Initial Settings Using Remote UI(P. 48)**

NOTE

- These settings can only be configured one time using the Setup Guide when starting the machine for the first time. To change the settings configured with the Setup Guide at a later time, set the items in Steps 2 to 4 individually. For the details of each setting, see the following.
 - ▶ **Setting the Date and Time(P. 393)**
 - ▶ **Connecting to a Wireless LAN(P. 61)**
 - ▶ **[Home] Screen(P. 121)**

Step 1: Setting the Display Language and Country or Region

Set the language displayed on the control panel screen and reports to be printed. Next, set the country or region where the machine is used.

1 On the [Language] screen, select the display language and press .

2 Select [Yes], and then press .

- ⇒ The display language is set, and the [Select Country/Region] screen is displayed. Depending on the country or region, the [Select Country/Region] screen is not displayed and the [Time Zone] screen is displayed. When the [Time Zone] screen is displayed, proceed to "Step 2: Setting the Date and Time." ▶ **Step 2: Setting the Date and Time(P. 47)**

3 On the [Select Country/Region] screen, select the country or region, and press .

- ⇒ The country or region is set, and the [Time Zone] screen is displayed.

Step 2: Setting the Date and Time

The date and time are used as the reference for the functions using date and time information, and therefore, they need to be set accurately.

1 On the [Time Zone] screen, select your time zone and press .

Set the time zone (UTC*¹) and Daylight Saving Time according to the region where this machine is installed.
 *1 The UTC (Coordinated Universal Time) is a coordinated universal time that is standard for all parts of the world. Internet-based communication relies on the UTC being set correctly.


2 On the [Current Time Set.] screen, enter the date and time, and press .

⇒ The time and date are set, and the [Select Connect. Method] screen is displayed.

Step 3: Connecting the Machine to a Network or Computer

Connect to the network using wireless local area network (LAN).

1 Select the connection method on the [Select Connect. Method] screen.

To configure this setting at a later time, select [Do Not Connect Now], press .

The Setup Guide closes, and the [Home] screen is displayed. ▶[Home] Screen(P. 121)

2 Configure the settings by following the instructions on the screen.

⇒ After the settings are complete, the toner replenishment service screen is displayed.

Step 4: Configuring Settings for Toner Replenishment Service


You can configure settings for toner replenishment service. Through toner replenishment service, new toner cartridges are automatically delivered to you before your existing toner cartridges are used up.

* Use of the toner replenishment service requires prior registration with select retailers. This service is only available in certain countries.

* This service can be set up through [Toner Deliv. Set.] displayed on the [Home] screen. ▶[Home] Screen(P. 121)

1 On the confirm screen of toner replenishment service, press .

2 Press .

If you press , the screen for configuring settings for toner replenishment service is skipped and proceed to step 5.


3 Press .

⇒ The [Current Time Set.] screen is displayed.

- If connecting to the server fails, try configuring the settings again through [Connect to Server/Verify Connection] in [Toner Deliv. Set.].

Step 5: Installing the Driver and Configuring the Initial Settings Using Remote UI

1 Install the driver by following the instructions on the screen.

If you are not installing the driver, press [<Close>] ► , and proceed to Step 2.

2 When driver installation is complete, press [<Close>] ► .

► The [Home] screen is displayed.

3 Configure the initial settings using Remote UI. ► [Configuring the Initial Settings for Remote UI, Fax, Scan, and Web Service Usage\(P. 50\)](#)

Configuring the Initial Settings for Remote UI, Fax, Scan, and Web Service Usage

A19R-0FJ


Access the IP address of the machine from a Web browser on a computer, and configure the initial settings for Remote UI, fax, scan, and Web service usage.

Required Preparations

- Check the operating environment of Remote UI. [▶Supported Environment\(P. 35\)](#)
- Connect the computer you are using to operate Remote UI to the machine over a network. [▶Setting Up the Network\(P. 56\)](#)
- Check the IP address of the machine. [▶Checking the Network Status and Settings\(P. 97\)](#)

1 From a Web browser on a computer, access the following URL.

http://<IP address of the machine>/

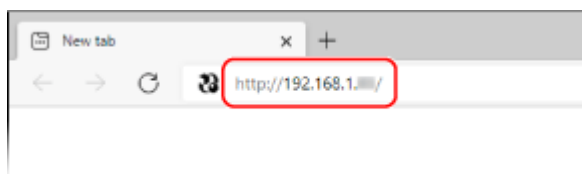

⇒ The [Password Settings] screen is displayed.

- This screen is displayed only if you access it within 15 minutes of connecting the machine to the network.
- If the Remote UI login screen is displayed, log in to Remote UI in System Manager Mode. If you have not set the Remote UI password, set the password on the machine. [▶Setting the Department ID and PIN for the Administrator\(P. 346\)](#)

When entering an IPv6 address, enclose the IP address in brackets [].

Example:

http://[fe80:2e9e:fcff:fe4e:dbce]/

■ If the Remote UI Login Screen Is Not Displayed

When a message such as [Cannot access Remote UI.] is displayed and the login screen is not displayed, see the following:

- [▶Cannot Access Remote UI or Send Function Setting Tool\(P. 618\)](#)

2 Set the password required for login by following the instructions on the screen, and click [OK].

⇒ The [Initial Settings] screen is displayed.

* If the screen is not displayed, click [Initial Settings] on the Portal page.


3 Click [Fax Settings], and configure the fax settings.

If you are not configuring the fax settings, proceed to Step 4.

■ [Fax Setup Guide]

Configure the settings required for using the fax function.

- 1 Click [Fax Setup Guide].
 ↳ The [Enter Registration Information] screen is displayed.
- 2 Enter the machine's fax number and unit name (name or company name), and click [Next].
- 3 Answer the questions displayed on the [RX Mode Settings] screen by selecting [Yes] or [No].
- 4 Check the selected RX mode, and click [Next].
 ↳ The [Connect Telephone Line] screen is displayed.
- 5 Connect the supplied telephone cord to the telephone line jack (LINE) on the machine and the telephone line connector on the wall.

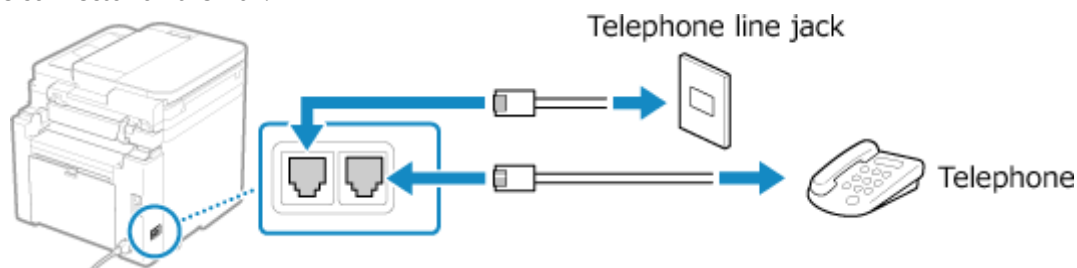

Connect the telephone to the external telephone jack on the machine.

- When connecting a telephone with fax function, be sure to disable the fax auto receive setting on the telephone.
- Depending on the type of telephone connected to it, the machine may not be able to send or receive faxes properly.

- 6 Click [Done].
- 7 Click [End].
 ↳ The [Fax Settings] screen is displayed.
 To exit the [Fax Settings] screen and proceed to the next step, click [To [Initial Settings] Screen].

■ [E-Mail Forwarding Settings]

Configure the settings to forward received faxes to an e-mail address.

- 1 Click [E-Mail Forwarding Settings].
- 2 Check the displayed message, and click [OK].
 ↳ The [E-Mail Forwarding Settings] screen is displayed.
- 3 Enter the information of the server to be used, and click [Next].

[SMTP Server]

Enter the SMTP server name (the host name or IP address) to be used for sending e-mail, using single-byte alphanumeric characters.

[E-Mail Address]

Enter the e-mail address of the machine using single-byte alphanumeric characters.

[POP Server]

When using POP authentication before sending (POP before SMTP), enter the POP3 server name (the host name or IP address) using single-byte alphanumeric characters.

Input example: Host name
pop.example.com

[User Name]

Enter the user name used for authenticating the POP3 server using single-byte alphanumeric characters.

[Password]

To set a password to use when authenticating the POP3 server, enter the password using single-byte alphanumeric characters.

- You can click [Check SMTP Connection] or [Check POP Connection] to check whether the machine can connect to each server.

4 Enter the forwarding settings, and click [Next].

[E-Mail Address]

Enter the e-mail address of the forwarding destination using single-byte alphanumeric characters.


[Name (Optional)]

Enter any string, as needed.

[File Name (Optional)]

Enter any string, as needed.

A PDF file is forwarded or saved with a file name in the following format:

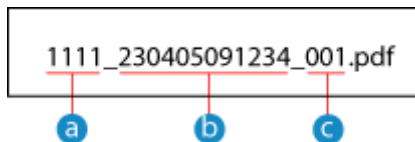

a Communications management number

b Date sent (in this example, "April 5, 2023, 9:12:34 AM")

c File sequence number (if one file, then "001")

When you enter a string in [File Name (Optional)], the specified string is appended to the start of the above file name.

5 On the [Settings complete.] screen, click [End].

⇒ The [Fax Settings] screen is displayed.

To exit the [Fax Settings] screen and proceed to the next step, click [To [Initial Settings] Screen].

■ [Folder Storing Settings]

Configure the settings to save received faxes to a shared folder.

1 Click [Folder Storing Settings].

2 Check the displayed message, and click [OK].

⇒ The [Folder Storing Settings] screen is displayed.

3 Enter the folder information, and click [Next].

[Name (Optional)]

Enter any string, as needed.

[Folder Path]

Enter the path to the shared folder. Use "\" as a separator.

Input example: when the shared folder path is C:\users\public\share users\public\share

If there is no folder at the entered path, a folder with the entered name is created when scanned data is saved for the first time.

* However, if there is no parent folder, or you do not have write permission to the parent folder, a sending error occurs without a folder being created.

[User Name]

If Restrict Access is enabled for the shared folder, enter the user name used for accessing the shared folder, using single-byte alphanumeric characters.


[Password]

If Restrict Access is enabled for the shared folder, enter the password used for accessing the shared folder, using single-byte alphanumeric characters.

[File Name (Optional)]

Enter any string, as needed.

A PDF file is forwarded or saved with a file name in the following format:

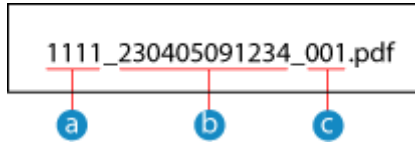

a Communications management number

b Date sent (in this example, "April 5, 2023, 9:12:34 AM")

c File sequence number (if one file, then "001")

When you enter a string in [File Name (Optional)], the specified string is appended to the start of the above file name.

- 4 On the [Settings complete.] screen, click [End].

⇒ The [Fax Settings] screen is displayed.

To exit the [Fax Settings] screen and proceed to the next step, click [To [Initial Settings] Screen].

4 Click [Scan Settings], and configure the scan settings.

If you are not configuring the scan settings, proceed to Step 5.

■ [E-Mail Sending Settings]

Configure the settings to forward received faxes to an e-mail address.

- 1 Click [E-Mail Sending Settings].

⇒ The [E-Mail Sending Settings] screen is displayed.

- 2 Enter the information of the server to be used, and click [Next].

[SMTP Server]

Enter the SMTP server name (the host name or IP address) to be used for sending e-mail, using single-byte alphanumeric characters.

[E-Mail Address]

Enter the e-mail address of the machine using single-byte alphanumeric characters.

[POP Server]

When using POP authentication before sending (POP before SMTP), enter the POP3 server name (the host name or IP address) using single-byte alphanumeric characters.

Input example: Host name
pop.example.com

[User Name]

Enter the user name used for authenticating the POP3 server using single-byte alphanumeric characters.

[Password]

To set a password to use when authenticating the POP3 server, enter the password using single-byte alphanumeric characters.

- You can click [Check SMTP Connection] or [Check POP Connection] to check whether the machine can connect to each server.

3 On the [Settings complete.] screen, click [End].

➡ The [Scan Settings] screen is displayed.

To exit the [Scan Settings] screen and proceed to the next step, click [To [Initial Settings] Screen].

■ [Folder Storing Settings]

Configure the settings to save scanned originals to a shared folder.

1 Click [Folder Storing Settings].

➡ The [Folder Storing Settings] screen is displayed.

2 Enter the folder information, and click [Next].

[Name (Optional)]

Enter any string, as needed.

[Folder Path]

Enter the path to the shared folder. Use "\" as a separator.

Input example: when the shared folder path is C:\users\public\share users\public\share

If there is no folder at the entered path, a folder with the entered name is created when scanned data is saved for the first time.

* However, if there is no parent folder, or you do not have write permission to the parent folder, a sending error occurs without a folder being created.

[User Name]

If Restrict Access is enabled for the shared folder, enter the user name used for accessing the shared folder, using single-byte alphanumeric characters.

[Password]

If Restrict Access is enabled for the shared folder, enter the password used for accessing the shared folder, using single-byte alphanumeric characters.

[Register As]

Specify Coded Dial and enter a three-digit number.

* Coded Dial is a destination with a three-digit number that can be directly recalled from the Address Book.

3 On the [Settings complete.] screen, click [End].

➡ The [Scan Settings] screen is displayed.

To exit the [Scan Settings] screen and proceed to the next step, click [To [Initial Settings] Screen].

5 Click [Web Service Usage], and configure the Web service usage settings.

Specify whether to use the Canon cloud integration service. If you are not configuring the Web service usage settings, proceed to Step 6.

1 Check the message, and click [I Accept].

2 Click [Next].

3 On the [Settings complete.] screen, check the message and click [End].

☞ If the connection fails, check the settings of the machine and network. ▶ **Setting Up the Network(P. 56)**

4 Click [To [Initial Settings] Screen].

☞ The [Initial Settings] screen is displayed.

6 Click [Close].

☞ The Portal page of Remote UI appears.

* If you configured the fax settings, restart the machine. ▶ **Restarting the Machine(P. 114)**

Setting Up the Network

A19R-018

To operate the machine from a computer or to connect to a server, you must connect the machine to a network. Use the procedure below to connect the machine to a network and configure the settings of the machine according to the network environment.

Administrator privileges are required to set up the network.

IMPORTANT

- Connecting the machine to a network without proper security measures may leak information from the machine to third parties. [▶Protecting the Network\(P. 349\)](#)

■ Preparing to Set Up the Network

- Provide an Ethernet cable and router according to the usage environment of the machine.
- Check the information of the network environment used by the machine and the required network settings. For details, contact the network administrator.
- Check that the computer and router to be used in the network are properly connected, and complete the network settings. For details on the connection method, see the manuals of the devices or contact the manufacturer.

■ Network Settings Procedure

Step 1

Select whether to use wired or wireless LAN and connect to the network.

To connect to a Wired LAN

- [▶Selecting Wired or Wireless LAN\(P. 58\)](#)
- [▶Connecting to a Wired LAN\(P. 60\)](#)

To connect to a Wireless LAN

- [▶Selecting Wired or Wireless LAN\(P. 58\)](#)
- [▶Connecting to a Wireless LAN\(P. 61\)](#)



Step 2

Set the IP address.

- By default, when the machine connects to a wired or wireless LAN, an IP address is obtained automatically and set to the machine.
- To use a specific IP address, set this manually.
 - [▶Setting IPv4 Addresses\(P. 77\)](#)
 - [▶Setting IPv6 Addresses\(P. 81\)](#)

* When setting an IP address manually, you cannot use the control panel to configure some IPv6 address settings. It is recommended to use the control panel to set the IPv4 address, and then use Remote UI to set the IPv6 address.



Step 3

Configure the settings of the machine according to the network environment, as needed.

▶ **Configuring Your Machine for Your Network Environment(P. 83)**

* You cannot use the control panel to configure some of the settings. It is recommended that you configure the settings using Remote UI in Step 3

■ **Checks after Configuring the Network Settings**

Check that the machine is properly connected to the network.

Check the IP address and MAC address of the machine and other information, as needed.

▶ **Checking the Network Status and Settings(P. 97)**

Selecting Wired or Wireless LAN

A19R-019

Set whether to connect the machine to the network using a wired or wireless LAN.

If you want to switch from wired LAN to wireless LAN, you can make the setting during the procedure for connecting to wireless LAN. **▶Connecting to a Wireless LAN(P. 61)**

For details on supported models, see the following: **▶Supported Functions(P. 3)**

* You cannot connect to a wired LAN and wireless LAN at the same time.

Use the control panel to configure the settings. You cannot configure the settings using Remote UI from a computer. Administrator privileges are required.

▶Touch Panel Model(P. 58)

▶5 Lines LCD Model(P. 58)

Touch Panel Model

1 On the control panel, press [Menu] in the [Home] screen. **▶[Home] Screen(P. 121)**

2 Press [Preferences] ▶ [Network] ▶ [Select Wired/Wireless LAN].

⇒ The [Select LAN] screen is displayed.

If the login screen appears, enter the System Manager ID and PIN, and then press [Log In]. **▶Logging In to the Machine(P. 138)**

3 Select [Wired LAN] or [Wireless LAN].

⇒ The message [Settings applied.] appears.

Next, connect to the wired or wireless LAN.

▶Connecting to a Wired LAN(P. 60)

▶Connecting to a Wireless LAN(P. 61)

IMPORTANT

When Switching between Wired and Wireless LAN

- Any installed drivers must be uninstalled and then reinstalled.


For details about uninstalling and installing drivers, see the driver manual at the online manual site.

<https://oip.manual.canon/>



5 Lines LCD Model

1 On the control panel, select [Menu] in the [Home] screen, and press . **▶[Home] Screen(P. 121)**

2 Press **[Preferences]** ► **[OK]** ► **[Network]** ► **[OK]** ► **[Select Wired/Wireless LAN]** ► **[OK]**.

If the login screen appears, enter the System Manager ID and PIN, and then select [**<Log In>**] and press **[OK]**.  **Logging In to the Machine(P. 138)**

3 Select **[Wired LAN]** or **[Wireless LAN]** and press **[OK]**.

- ⇒ The message [Settings applied.] appears.
- Next, connect to the wired or wireless LAN.
 -  **Connecting to a Wired LAN(P. 60)**
 -  **Connecting to a Wireless LAN(P. 61)**

IMPORTANT

When Switching between Wired and Wireless LAN


- Any installed drivers must be uninstalled and then reinstalled.
For details about uninstalling and installing drivers, see the driver manual at the online manual site.
<https://oip.manual.canon/>

Connecting to a Wired LAN

A19R-01A

Connect a computer to the machine via a router. Use an Ethernet cable to connect the machine to the router.

1 Connect an Ethernet cable to the machine and router.

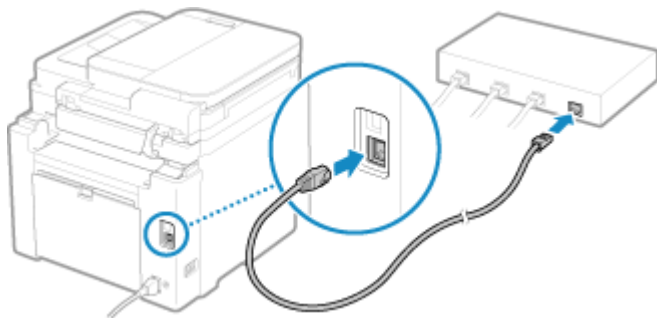

Insert the connector all the way into the port until it clicks in place.

2 Wait a few minutes.

⇒ By default, the IP address is set automatically.
To use a specific IP address, set this manually.

▶ [Setting IPv4 Addresses\(P. 77\)](#)

▶ [Setting IPv6 Addresses\(P. 81\)](#)

Connecting to a Wireless LAN

A19R-01C

Connect a computer to the machine via a wireless LAN router (access point).

Depending on your wireless LAN router, the connection type and security standards may vary. Check for a connection type and security standard that are supported by both the wireless LAN router and the machine, and then establish a connection according to the connection type.

Depending on the connection type, you must enter the security information of the wireless LAN router.

▶ **Checking the Connection Types and Security Standards Supported by the Machine**(P. 61)

▶ **Wireless LAN Router Information Required for Connection**(P. 62)

IMPORTANT

Connect with a Secure Network Environment

- The radio waves used for wireless communication can reach beyond walls and other obstructions within a certain range. Therefore, connecting the machine to a network without proper security measures may leak personal data and other information to third parties. Connect the machine to a wireless LAN at your own discretion and responsibility. ▶ **Protecting the Network**(P. 349)

NOTE

Reducing Power Consumption

- When Power Save Mode is enabled, the machine regularly enters the power save state according to the signal transmitted by the wireless LAN router. ▶ **[Power Save Mode]**(P. 439)

Checking the Connection Types and Security Standards Supported by the Machine

■ Connection Type

Connect using a type that is supported by your wireless LAN router. To specify the authentication, encryption, or other security method in detail, use the manual setup method to connect.

The following connection types are supported by the machine:

Push Button Mode (WPS)



If the wireless LAN router has the above symbol on the package or the button of the device, you can easily connect by pressing the button.

▶ **Connecting to a Wireless LAN by Using the Router Button (Push Button Mode)**(P. 64)

WPS PIN Code Mode

If you are using a WPS router that does not support the push button mode, enter the PIN code to connect.

▶ **Connecting to a Wireless LAN by Entering a PIN Code (WPS PIN Code Mode)**(P. 66)

* If the wireless LAN router is set up to use WEP authentication, you may not be able to connect with WPS. In this case, use the manual setup method to connect.

Access Point Setup Method

Search for the wireless LAN router from the machine, and enter the network key manually to connect.

▶ Connecting to a Wireless LAN by Searching for a Router (Access Point Setup Method)(P. 69)

When you connect with the access point setup method, the following authentication and encryption methods are set:

- WEP authentication method: Open System
- Encryption for WPA/WPA2: AES-CCMP or TKIP is set automatically according to the selected wireless LAN router.
- Encryption for WPA3:AES-CCMP

To specify a different authentication or encryption method, use the manual setup method to connect.

Manual Setup Method

In addition to the SSID and network key, manually enter all the wireless LAN settings such as the authentication and encryption methods to connect.

▶ Connecting to a Wireless LAN by Setting the Details (Manual Setup Method)(P. 72)

■ Security Standards

The wireless LAN of the machine supports the security standards below. For details on whether your wireless LAN router supports these standards, see the manual of the wireless LAN router or contact the manufacturer.

- WEP
- WPA-PSK
- WPA2-PSK
- WPA-EAP
- WPA2-EAP
- WPA3-SAE

Wireless LAN Router Information Required for Connection

When connecting with the access point setup method or the manual setup method, you must set the information below.

This information is listed on the main unit of the wireless LAN router. For details, see the manual of the wireless LAN router or contact the manufacturer.

SSID

This is the name used to identify the wireless LAN router. This may be listed as the access point name or network name.

Network Key

This is the keyword used for data encryption or the password used for network authentication. This may be listed as the encryption key, WEP key, WPA/WPA2 passphrase, or pre-shared key (PSK).

Security Standards

These are required when connecting with the manual setup method. Check the following information:

Security Standards

- WEP
- WPA-PSK
- WPA2-PSK
- WPA-EAP
- WPA2-EAP

- WPA3-SAE

WEP Authentication Method

- Open System
- Shared Key

Encryption for WPA/WPA2

- TKIP
- AES-CCMP
- IEEE 802.1X Authentication

Encryption for WPA3

- AES-CCMP

Connecting to a Wireless LAN by Using the Router Button (Push Button Mode)

A19R-01E

If your wireless LAN router supports WPS push button mode, you can easily set up a connection simply by using the control panel of the machine and the button on the wireless LAN router.

Administrator privileges are required to connect to a wireless LAN.

▶ **Touch Panel Model(P. 64)**

▶ **5 Lines LCD Model(P. 65)**

Touch Panel Model

1 On the control panel, press [Wireless LAN Set.] in the [Home] screen. ▶[Home] Screen(P. 121)

⇒ The [Select Network] screen is displayed.

- If the login screen appears, enter the System Manager ID and PIN, and then press [Log In]. ▶ **Logging In to the Machine(P. 138)**
- If the message [Enable the wireless LAN?] appears, press [Yes].
- If the message [Cannot find the access point.] appears, press [Close].

2 Press [Other Connections].

3 Press [WPS Push Button Mode].


⇒ The machine starts searching for an access point.

4 After the search for an access point starts, press the button on the wireless LAN router within two minutes.

Depending on the wireless LAN router, you may have to press and hold the button.

* For details on how to operate the button, see the manual of your wireless LAN router.

5 When [Connected.] appears on the control panel, wait a few minutes.

⇒ When the machine is connected to the wireless LAN, [] appears on the [Home] screen and screen of each function.

By default, an IP address is set automatically.

To use a specific IP address, set this manually.

▶ **Setting IPv4 Addresses(P. 77)**

▶ **Setting IPv6 Addresses(P. 81)**

NOTE

If an Error Message Appears during Operation and a Connection Cannot Be Established





- Press [Close], and repeat the procedure starting from Step 2.

5 Lines LCD Model

1 On the control panel, select [Wireless LAN Set.] in the [Home] screen and press .

[Home] Screen(P. 121)

⇒ The [Select Network] screen is displayed.

- If the login screen appears, enter the System Manager ID and PIN, and then select [<Log In>] and press .  **Logging In to the Machine(P. 138)**
- If the message [Enable the wireless LAN?] appears, select [Yes] and press .
- If the message [Cannot find the access point.] appears, press .

2 Select [Other Connections] and press .

3 Select [WPS Push Button Mode] and press .

⇒ The machine starts searching for an access point.

4 After the search for an access point starts, press the button on the wireless LAN router within two minutes.

Depending on the wireless LAN router, you may have to press and hold the button.

* For details on how to operate the button, see the manual of your wireless LAN router.

5 When [Connected.] appears on the control panel, wait a few minutes.

⇒ When the machine is connected to the wireless LAN, [] appears on the [Home] screen.

By default, an IP address is set automatically.


To use a specific IP address, set this manually.

 **Setting IPv4 Addresses(P. 77)**

 **Setting IPv6 Addresses(P. 81)**

NOTE

If an Error Message Appears during Operation and a Connection Cannot Be Established

- Select [Close] and press , and repeat the procedure starting from Step 2.

Connecting to a Wireless LAN by Entering a PIN Code (WPS PIN Code Mode)

A19R-01F

When the wireless LAN router supports WPS PIN code mode, you can establish a connection by registering a PIN code generated on the machine to the wireless LAN router. Use a computer to register the PIN code.

Administrator privileges are required to connect to a wireless LAN.

▶ **Touch Panel Model(P. 66)**

▶ **5 Lines LCD Model(P. 67)**

Touch Panel Model

Required Preparations

- Access the wireless LAN router from a computer, and enable registration of a WPS PIN code.
* For details on how to register a WPS PIN code, see the manual of your wireless LAN router.

1 On the control panel, press [Wireless LAN Set.] in the [Home] screen. ▶[Home] Screen(P. 121)


⇒ The [Select Network] screen is displayed.

- If the login screen appears, enter the System Manager ID and PIN, and then press [Log In]. ▶ **Logging In to the Machine(P. 138)**
- If the message [Enable the wireless LAN?] appears, press [Yes].
- If the message [Cannot find the access point.] appears, press [Close].

2 Press [Other Connections].

3 Press [WPS PIN Code Mode].

⇒ A PIN code is generated.

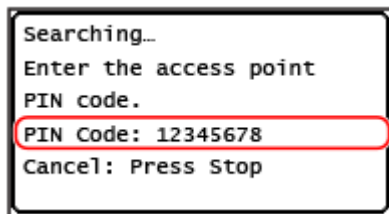

Once this screen is displayed, you must register the WPS PIN code to the wireless LAN router within 10 minutes.

4 Access the wireless LAN router from a computer, and register the WPS PIN code to the router.

5 When [Connected.] appears on the control panel, wait a few minutes.

⇒ When the machine is connected to the wireless LAN, [] appears on the [Home] screen and screen of each function.

By default, an IP address is set automatically.

To use a specific IP address, set this manually.

▶ **Setting IPv4 Addresses(P. 77)**

▶ **Setting IPv6 Addresses(P. 81)**

NOTE

If an Error Message Appears during Operation and a Connection Cannot Be Established

- Press [Close], and repeat the procedure starting from Step 2.

5 Lines LCD Model

Required Preparations

- Access the wireless LAN router from a computer, and enable registration of a WPS PIN code.
* For details on how to register a WPS PIN code, see the manual of your wireless LAN router.

1 On the control panel, select [Wireless LAN Set.] in the [Home] screen and press **OK**.

▶ [Home] Screen(P. 121)


⇒ The [Select Network] screen is displayed.

- If the login screen appears, enter the System Manager ID and PIN, and then select [<Log In>] and press **OK**. ▶ **Logging In to the Machine(P. 138)**
- If the message [Enable the wireless LAN?] appears, select [Yes] and press **OK**.
- If the message [Cannot find the access point.] appears, press **OK**.

2 Select [Other Connections] and press **OK**.

3 Select [WPS PIN Code Mode] and press **OK**.

⇒ A PIN code is generated.

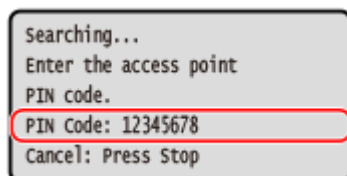

Once this screen is displayed, you must register the WPS PIN code to the wireless LAN router within 10 minutes.

4 Access the wireless LAN router from a computer, and register the WPS PIN code to the router.

5 When [Connected.] appears on the control panel, wait a few minutes.

⇒ When the machine is connected to the wireless LAN, [] appears on the [Home] screen.

Wait a few minutes. By default, an IP address is set automatically.


To use a specific IP address, set this manually.

▶ **Setting IPv4 Addresses(P. 77)**

▶ **Setting IPv6 Addresses(P. 81)**

NOTE

If an Error Message Appears during Operation and a Connection Cannot Be Established

- Select [Close] and press , and repeat the procedure starting from Step 2.

Connecting to a Wireless LAN by Searching for a Router (Access Point Setup Method)

Search for a wireless LAN router (access point) to which to connect, and enter the network key.

When you connect with the access point setup method, the following authentication and encryption methods are set:

- WEP authentication method: Open System
- Encryption for WPA/WPA2: AES-CCMP or TKIP is set automatically according to the selected wireless LAN router.
- Encryption for WPA3: AES-CCMP

To specify a different authentication or encryption method, use the manual setup method to connect. ▶

Connecting to a Wireless LAN by Setting the Details (Manual Setup Method)(P. 72)

Administrator privileges are required to connect to a wireless LAN.

▶ **Touch Panel Model(P. 69)**

▶ **5 Lines LCD Model(P. 70)**

Touch Panel Model

Required Preparations


- Prepare the information of the wireless LAN router (SSID or network key) to which you want to connect, and keep it close by. ▶ **Wireless LAN Router Information Required for Connection(P. 62)**
- When connecting to a wireless LAN router supporting WPA-EAP or WPA2-EAP for the security standard, set IEEE 802.1X. ▶ **Using IEEE 802.1X(P. 358)**

1 On the control panel, press [Wireless LAN Set.] in the [Home] screen. ▶ [Home] Screen(P. 121)

⇒ The [Select Network] screen is displayed.

- If the login screen appears, enter the System Manager ID and PIN, and then press [Log In]. ▶ **Logging In to the Machine(P. 138)**
- If the message [Enable the wireless LAN?] appears, press [Yes].
- If the message [Cannot find the access point.] appears, check that the router is discoverable. ▶ **Cannot Connect to Wireless LAN(P. 586)**

2 Select the SSID of the wireless LAN to which you want to connect.

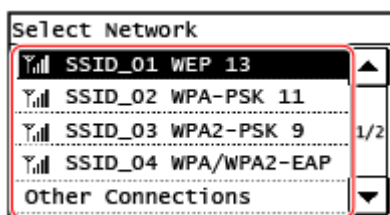

⇒ The Network Key input screen is displayed.


When selecting the SSID of the wireless LAN router supporting WPA-EAP or WPA2-EAP for the security standard, the message [IEEE 802.1X Settings values will be applied to connect.] appears. Press [OK], and proceed to Step 4.

If you cannot find the wireless LAN router to which you want to connect, check that the router is discoverable. [▶Cannot Connect to Wireless LAN\(P. 586\)](#)

3 Enter the network key, and press [Apply].

4 Check the message, and press [Yes].

5 When [Connected.] is displayed on the control panel, wait a few minutes.

⇒ When the machine is connected to the wireless LAN, [] appears on the [Home] screen and screen of each function.

By default, an IP address is set automatically.

To use a specific IP address, set this manually.

[▶Setting IPv4 Addresses\(P. 77\)](#)

[▶Setting IPv6 Addresses\(P. 81\)](#)

NOTE

If an Error Message Appears during Operation and a Connection Cannot Be Established

- Press [Close], check the information (SSID or network key) of the wireless LAN router to which you want to connect, and repeat the procedure starting from Step 2.

5 Lines LCD Model



Required Preparations

- Prepare the information of the wireless LAN router (SSID or network key) to which you want to connect, and keep it close by. [▶Wireless LAN Router Information Required for Connection\(P. 62\)](#)
- When connecting to a wireless LAN router supporting WPA-EAP or WPA2-EAP for the security standard, set IEEE 802.1X. [▶Using IEEE 802.1X\(P. 358\)](#)


1 On the control panel, select [Wireless LAN Set.] in the [Home] screen and press .

[▶\[Home\] Screen\(P. 121\)](#)

⇒ The [Select Network] screen is displayed.

- If the login screen appears, enter the System Manager ID and PIN, and then select [<Log In>] and press . [▶Logging In to the Machine\(P. 138\)](#)
- If the message [Enable the wireless LAN?] appears, select [Yes] and press .
- If the message [Cannot find the access point.] appears, check that the router is discoverable. [▶Cannot Connect to Wireless LAN\(P. 586\)](#)

2 Select the SSID of the wireless LAN to which you want to connect, and press .

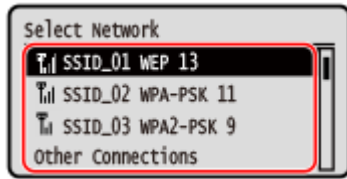

⇒ The Network Key input screen is displayed.

When selecting the SSID of the wireless LAN router supporting WPA-EAP or WPA2-EAP for the security standard, the message [IEEE 802.1X Settings values will be applied to connect.] appears. Select [OK] and press , and proceed to Step 4.

If you cannot find the wireless LAN router to which you want to connect, check that the router is discoverable. ▶ **Cannot Connect to Wireless LAN(P. 586)**

3 Enter the network key, and press [**<Apply>**] ▶ .

4 Check the message, and select [**Yes**] ▶ .

5 When [**Connected.**] is displayed on the control panel, wait a few minutes.

⇒ When the machine is connected to the wireless LAN, [] appears on the [Home] screen.

By default, an IP address is set automatically.

To use a specific IP address, set this manually.

▶ **Setting IPv4 Addresses(P. 77)**

▶ **Setting IPv6 Addresses(P. 81)**

NOTE

If an Error Message Appears during Operation and a Connection Cannot Be Established

- Select [Close] and press , check the information (SSID or network key) of the wireless LAN router to which you want to connect, and repeat the procedure starting from Step 2.

Connecting to a Wireless LAN by Setting the Details (Manual Setup Method)

A19R-01J

You can connect to a wireless LAN router by manually entering all information of the router such as the SSID, network key, and security settings.

Administrator privileges are required to connect to a wireless LAN.

▶ **Touch Panel Model(P. 72)**

▶ **5 Lines LCD Model(P. 74)**

Touch Panel Model

Required Preparations

- Prepare the information of the wireless LAN router to which you want to connect, and keep it close by. ▶ **Wireless LAN Router Information Required for Connection(P. 62)**
- When connecting to a wireless LAN router supporting WPA-EAP or WPA2-EAP for the security standard, set IEEE 802.1X. ▶ **Using IEEE 802.1X(P. 358)**

1 On the control panel, press [Wireless LAN Set.] in the [Home] screen. ▶ [Home] Screen(P. 121)

⇒ The [Select Network] screen is displayed.

- If the login screen appears, enter the System Manager ID and PIN, and then press [Log In]. ▶ **Logging In to the Machine(P. 138)**
- If the message [Enable the wireless LAN?] appears, press [Yes].
- If the message [Cannot find the access point.] appears, press [Close].

2 Press [Other Connections].

3 Press [Manually Enter Network Name].

⇒ The SSID input screen is displayed.

4 Enter the SSID, and press [Apply].

⇒ The [Security Settings] screen is displayed.

5 Select the security standard, and set the authentication and encryption.

■ When using WEP

- 1 Press [WEP].

⇒ The [802.11 Authentication] screen is displayed.

- 2 Select the authentication method.

[Open System]


Uses open authentication.

* When you select this authentication method, an authentication error occurs when connected to a wireless LAN router that uses a shared key. The machine setting changes to [Shared Key] at this time, and an attempt to reconnect to the router is made.

[Shared Key]

Uses an encryption key for the password.

- 3 Press [Edit Encryption Key].
- 4 Select an encryption key that is not registered.

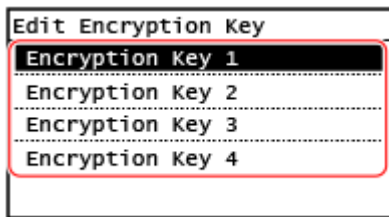

⇒ The encryption key input screen is displayed.

- 5 Enter the network key, and press [Apply].
 - ⇒ The encryption key is registered to the [Encryption Key] screen.
- 6 Press [Select Encryption Key].
- 7 Select a registered encryption key.

■ When Using WPA-PSK, WPA2-PSK, or WPA3-SAE

- 1 Select [WPA/WPA2-PSK], [WPA2-PSK/WPA3-SAE], or [WPA3-SAE] to match the security settings of the wireless LAN router.
 - ⇒ The [Encryption Method] screen is displayed.
- 2 Select the encryption method.
 - ⇒ The encryption key input screen is displayed.

When you select [Auto], AES-CCMP or TKIP is set automatically according to the wireless LAN router to which you want to connect. Note that when you are using WPA3-SAE, the encryption method is set to AES-CCMP even if you select [Auto].

- 3 Enter the network key, and press [Apply].

■ When Using WPA-EAP or WPA2-EAP

Press [WPA/WPA2-EAP] ► [OK].


■ When Not Using a Security Standard

Press [None].

- 6 Check the message, and press [Yes].

⇒ If the machine is correctly connected to the network, [Connected.] appears.

7 Wait a few minutes.

⇒ When the machine is connected to the wireless LAN, [] appears on the [Home] screen and screen of each function.

By default, an IP address is set automatically.

To use a specific IP address, set this manually.

▶ **Setting IPv4 Addresses(P. 77)**

▶ **Setting IPv6 Addresses(P. 81)**

NOTE

If an Error Message Appears during Operation and a Connection Cannot Be Established

- Press [Close], check the information of the wireless LAN router to which you want to connect, and repeat the procedure starting from Step 2.

5 Lines LCD Model

Required Preparations

- Prepare the information of the wireless LAN router to which you want to connect, and keep it close by. ▶ **Wireless LAN Router Information Required for Connection(P. 62)**
- When connecting to a wireless LAN router supporting WPA-EAP or WPA2-EAP for the security standard, set IEEE 802.1X. ▶ **Using IEEE 802.1X(P. 358)**

1 On the control panel, select [Wireless LAN Set.] in the [Home] screen and press .

▶[Home] Screen(P. 121)

⇒ The [Select Network] screen is displayed.

- If the login screen appears, enter the System Manager ID and PIN, and then select [<Log In>] and press . ▶ **Logging In to the Machine(P. 138)**
- If the message [Enable the wireless LAN?] appears, select [Yes] and press .
- If the message [Cannot find the access point.] appears, press .

2 Select [Other Connections] and press .

3 Select [Manually Enter Network Name] and press .

⇒ The SSID input screen is displayed.

4 Enter the SSID, select [<Apply>], and press .

⇒ The [Security Settings] screen is displayed.

5 Select the security standard, and set the authentication and encryption.

■ When using WEP

- 1 Select [WEP] and press **OK**.

⇒ The [802.11 Authentication] screen is displayed.

- 2 Select the authentication method.

[Open System]

Uses open authentication.


* When you select this authentication method, an authentication error occurs when connected to a wireless LAN router that uses a shared key. The machine setting changes to [Shared Key] at this time, and an attempt to reconnect to the router is made.

[Shared Key]

Uses an encryption key for the password.

- 3 Select [Edit Encryption Key] and press **OK**.

- 4 Select an encryption key that is not registered, and press **OK**.

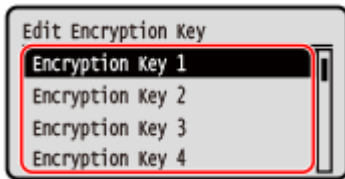

⇒ The encryption key input screen is displayed.

- 5 Enter the network key, select [<Apply>], and press **OK**.

⇒ The encryption key is registered to the [Encryption Key] screen.

- 6 Select [Select Encryption Key] and press **OK**.

- 7 Select a registered encryption key, and press **OK**.

■ When Using WPA-PSK, WPA2-PSK, or WPA3-SAE

- 1 Select [WPA/WPA2-PSK], [WPA2-PSK/WPA3-SAE], or [WPA3-SAE] to match the security settings of the wireless LAN router, and then press **OK**.

⇒ The [WPA/WPA2 Encryption] screen is displayed.

- 2 Select the encryption method and press **OK**.

⇒ The encryption key input screen is displayed.

When you select [Auto], AES-CCMP or TKIP is set automatically according to the wireless LAN router to which you want to connect. Note that when you are using WPA3-SAE, the encryption method is set to AES-CCMP even if you select [Auto].

- 3 Enter the network key, select [<Apply>], and press **OK**.

■ When Using WPA-EAP or WPA2-EAP

Select [WPA/WPA2-EAP] and press .

■ When Not Using a Security Standard

Select [None] and press .

6 Check the message, and select [Yes] and press .

⇒ If the machine is correctly connected to the network, [Connected.] appears.

7 Wait a few minutes.

⇒ When the machine is connected to the wireless LAN, [] appears on the [Home] screen.

By default, an IP address is set automatically.

To use a specific IP address, set this manually.

▶ **Setting IPv4 Addresses(P. 77)**

▶ **Setting IPv6 Addresses(P. 81)**

NOTE

If an Error Message Appears during Operation and a Connection Cannot Be Established

- Select [Close] and press , check the information of the wireless LAN router to which you want to connect, and repeat the procedure starting from Step 2.

Setting IPv4 Addresses

A19R-01K

The machine's IPv4 address can either be assigned automatically using DHCP or entered manually. By default, the IPv4 address is set automatically when connected to a wired or wireless LAN, but you can set it or change it manually according to your usage environment and purpose.

This section describes how to configure the settings using the control panel.

You can also set the IPv4 address using Remote UI from a computer after it has been set on the machine. **▶Managing the Machine from a Computer (Remote UI)(P. 394)**

Administrator privileges are required. The machine must be restarted to apply the settings.

▶**Touch Panel Model(P. 77)**

▶**5 Lines LCD Model(P. 78)**


Touch Panel Model

1 On the control panel, press [Menu] in the [Home] screen. ▶**[Home] Screen(P. 121)**

2 Press [Preferences] ▶ [Network] ▶ [TCP/IP Settings] ▶ [IPv4 Settings] ▶ [IP Address Settings].

If the login screen appears, enter the System Manager ID and PIN, and then press [Log In]. ▶**Logging In to the Machine(P. 138)**

3 Set the IP address.

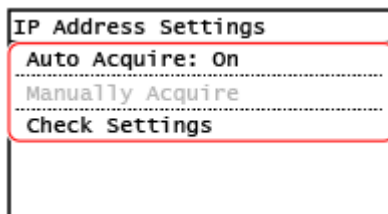

■ When Manually Setting the IP Address

- 1** Press [Auto Acquire].
 - ▣ The [Auto Acquire] screen is displayed.
- 2** Set [Select Protocol] to [Off].
- 3** Set [Auto IP] to [Off].
- 4** Press [Apply].
 - ▣ The [IP Address Settings] screen is displayed.
- 5** Press [Manually Acquire].
 - ▣ The IP address input screen is displayed.
- 6** Enter the IP address, and press [Apply].
- 7** Enter the subnet mask, and press [Apply].

- 8 Enter the gateway address, and press [Apply].

■ When Assigning an IP Address Automatically

- 1 Press [Auto Acquire].
 ⇒ The [Auto Acquire] screen is displayed.
- 2 Configure the Auto Acquire setting, as needed.

[Select Protocol]

Normally, set to [DHCP]. However, when [DHCP] is set in an environment where DHCP cannot be used, the machine will continue to confirm Auto Acquire in the network, creating unnecessary communication. When not using DHCP, set this to [Off].

[Auto IP]

Normally, set to [On]. Although priority is given to the IP address allocated with DHCP, if there is no response from DHCP, Auto IP will be used.

- 3 Press [Apply].

4 Restart the machine. ▶ Restarting the Machine(P. 114)

⇒ The settings are applied.

Perform a connection test to check whether the IPv4 address is correctly configured. ▶ Checking the Network Status and Settings(P. 97)

NOTE

Checking the Currently Set IP Address

- On the screen in Step 3, press [Check Settings] to check the current IP address setting. If the IP address is displayed as "0.0.0.0," it is not correctly configured.

If the IP Address Is Changed after Installing the Printer Driver

- In Windows, you must add a new port. ▶ Configuring a Printer Port (Windows)(P. 198)
 - If you are using an MFNP port, the connection is maintained as long as the machine and computer belong to the same subnet, so no action is required on the computer.
 - If you are using a standard TCP/IP port, you must add a new port. ▶ Adding a Port(P. 198)

If you do not know which port is being used, see the following:

▶ Viewing the Printer Port(P. 666)

- In macOS, you must re-register the machine on the Mac. For details about registering the machine, see the manual of the driver at the online manual site.


<https://oip.manual.canon/>

* If you are using DHCP to automatically obtain the IP address of the machine, the IP address may be changed automatically.


5 Lines LCD Model

- 1 On the control panel, select [Menu] in the [Home] screen, and press . ▶ [Home] Screen(P. 121)

- 2** Press [Preferences] ► ► [Network] ► ► [TCP/IP Settings] ► ► [IPv4 Settings] ► ► [IP Address Settings] ► .

If the login screen appears, enter the System Manager ID and PIN, and then select [<Log In>] and press .  **Logging In to the Machine(P. 138)**

3 Set the IP address.

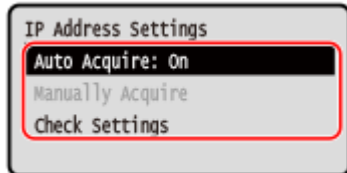

■ When Manually Setting the IP Address

- 1** Select [Auto Acquire] and press .
 - ⇒ The [Auto Acquire] screen is displayed.
- 2** Press [Select Protocol] ► ► [Off] ► .
- 3** Press [Auto IP] ► ► [Off] ► .
- 4** Select [<Apply>] and press .
 - ⇒ The [IP Address Settings] screen is displayed.
- 5** Select [Manually Acquire] and press .
 - ⇒ The IP address input screen is displayed.
- 6** Enter the IP address and press .
- 7** Enter the subnet mask and press .
- 8** Enter the gateway address and press .

■ When Assigning an IP Address Automatically

- 1** Select [Auto Acquire] and press .
 - ⇒ The [Auto Acquire] screen is displayed.
- 2** Configure the Auto Acquire setting, as needed.

[Select Protocol]

Normally, set to [DHCP]. However, when [DHCP] is set in an environment where DHCP cannot be used, the machine will continue to confirm Auto Acquire in the network, creating unnecessary communication. When not using DHCP, set this to [Off].

[Auto IP]

Normally, set to [On]. Although priority is given to the IP address allocated with DHCP, if there is no response from DHCP, Auto IP will be used.

- 3** Select [<Apply>] and press .

4 Restart the machine. ▶ Restarting the Machine(P. 114)

⇒ The settings are applied.

Perform a connection test to check whether the IPv4 address is correctly configured. ▶ Checking the Network Status and Settings(P. 97)

NOTE

Checking the Currently Set IP Address

- On the screen in Step 3, select [Check Settings] and press to check the current IP address setting. If the IP address is displayed as "0.0.0.0," it is not correctly configured.

If the IP Address Is Changed after Installing the Printer Driver

- In Windows, you must add a new port. ▶ Configuring a Printer Port (Windows)(P. 198)
 - If you are using an MFNP port, the connection is maintained as long as the machine and computer belong to the same subnet, so no action is required on the computer.
 - If you are using a standard TCP/IP port, you must add a new port. ▶ Adding a Port(P. 198)

If you do not know which port is being used, see the following:

▶ Viewing the Printer Port(P. 666)

- In macOS, you must re-register the machine on the Mac. For details about registering the machine, see the manual of the driver at the online manual site.

<https://oip.manual.canon/>

* If you are using DHCP to automatically obtain the IP address of the machine, the IP address may be changed automatically.

Setting IPv6 Addresses

A19R-01L

In an IPv6 environment, you can set the following IPv6 addresses and use them at the same time.

- **Link-Local Address**
An address that can only be used within the same link. It cannot be used to communicate with devices beyond a router.
A link-local address is automatically set when usage of IPv6 addresses is enabled.
- **Stateless Address**
An address that is generated automatically using the network prefix provided by the router and the MAC address of the machine.
This address is discarded when the machine is restarted or turned ON.
- **Manual Address**
An address that is entered manually by specifying the IP address, prefix length, and default router address.
- **Stateful Address**
An address obtained from a DHCP server using DHCPv6.

This section describes how to configure the settings using Remote UI from a computer. On the control panel, select [Menu] in the [Home] screen, and then select [Preferences] to configure the settings. You cannot use the control panel to configure some of the settings. [▶\[IPv6 Settings\]\(P. 442\)](#) Administrator privileges are required. The machine must be restarted to apply the settings.

Required Preparations

- Set an IPv4 address to the machine. [▶Setting IPv4 Addresses\(P. 77\)](#)

IMPORTANT

- In an IPv6 environment, you cannot use the function for scanning originals and saving the data to a computer.

- 1 Log in to Remote UI in System Manager Mode.** [▶Starting Remote UI\(P. 395\)](#)
- 2 On the Portal page of Remote UI, click [Settings/Registration].** [▶Portal Page of Remote UI\(P. 397\)](#)
- 3 Click [Network Settings] ▶ [IPv6 Settings] ▶ [Edit].**
 ▶▶ The [Edit IPv6 Settings] screen is displayed.
- 4 In [IP Address Settings], select the [Use IPv6] checkbox.**
- 5 Set the IPv6 address to use.**

■ **When Using a Stateless Address**

Select the [Use Stateless Address] checkbox.

■ **When Using a Manual Address**

Select the [Use Manual Address] checkbox, and enter the IP address, prefix length, and default router address.

* You cannot enter a multicast address (address starting with "ff").

■ **When Using a Stateful Address**

Select the [Use DHCPv6] checkbox.

6 Click [OK].

7 Restart the machine. ▶ **Restarting the Machine(P. 114)**

⇒ The settings are applied.

Perform a connection test to check whether the IPv6 address is correctly configured. ▶ **Checking the Network Status and Settings(P. 97)**

NOTE

If the IP Address Is Changed after Installing the Printer Driver

- You must add a new port. ▶ **Adding a Port(P. 198)**

Configuring Your Machine for Your Network Environment

A19R-01R

The size and configuration of a network vary depending on the purpose and usage. The machine is equipped with a variety of technologies to support many environments.

Configure the settings of the machine according to your network environment, as needed.

▶ **Manually Configuring the Ethernet Settings(P. 84)**

▶ **Configuring DNS(P. 85)**

▶ **Configuring SMB(P. 88)**

▶ **Configuring WINS(P. 90)**

▶ **Configuring SNMP(P. 91)**

▶ **Configuring SNTP(P. 94)**

▶ **Configuring CHMP(P. 96)**

■ See Also

To reduce the threat of unauthorized access and eavesdropping, it is recommended to configure the security settings according to your network environment.

▶ **Protecting the Network(P. 349)**

NOTE

Using the Machine in a Network with IEEE 802.1X Authentication

- When connecting the machine to a network that uses IEEE 802.1X authentication, you must configure the settings on the machine such as the authentication method managed by the authentication server. ▶ **Using IEEE 802.1X(P. 358)**

Manually Configuring the Ethernet Settings

A19R-01S

By default, when the machine connects to a wired LAN, the Ethernet communication mode and Ethernet type are detected automatically, and these can be used without changes. Depending on the usage environment, you may have to change the Ethernet settings to suit the settings of peripheral devices.

This section describes how to configure the settings using Remote UI from a computer.

On the control panel, select [Menu] in the [Home] screen, and then select [Preferences] to configure the settings. ▶
[Ethernet Driver Settings](P. 435)

Administrator privileges are required. The machine must be restarted to apply the settings.

1 Log in to Remote UI in System Manager Mode. ▶Starting Remote UI(P. 395)

2 On the Portal page of Remote UI, click [Settings/Registration]. ▶Portal Page of Remote UI(P. 397)

3 Click [Network Settings] ▶ [Ethernet Driver Settings] ▶ [Edit].

⇒ The [Edit Ethernet Driver Settings] screen is displayed.

4 Clear the [Auto Detect] checkbox.

5 Select the communication mode.

Normally, select [Full Duplex]. When the network router is set to half duplex communication, select [Half Duplex].

6 Select the Ethernet type, and click [OK].

7 Restart the machine. ▶Restarting the Machine(P. 114)

⇒ The settings are applied.

Configuring DNS

A19R-01U

When using the machine in an environment with Domain Name System (DNS), configure the DNS server information and DHCP option settings.

In an environment without DNS, you can configure multicast DNS (mDNS) to use the DNS function. mDNS is used by Bonjour and other software.

This section describes how to configure the settings using Remote UI from a computer.

On the control panel, select [Menu] in the [Home] screen, and then select [Preferences] to configure the settings. You cannot use the control panel to configure some of the settings. [▶\[TCP/IP Settings\]\(P. 440\)](#)

Administrator privileges are required. Depending on the item to be configured, you may have to restart the machine.

Required Preparations

- When configuring DNS for IPv6, configure the setting to use an IPv6 address. [▶Setting IPv6 Addresses\(P. 81\)](#)

1 Log in to Remote UI in System Manager Mode. [▶Starting Remote UI\(P. 395\)](#)

2 On the Portal page of Remote UI, click [Settings/Registration]. [▶Portal Page of Remote UI\(P. 397\)](#)

3 Click [Network Settings] ▶ [IPv4 Settings] or [IPv6 Settings] ▶ [Edit].

⇒ The [Edit IPv4 Settings] screen or [Edit IPv6 Settings] screen is displayed.

4 In [DHCP Option Settings], configure the DHCP option settings.

If you are not configuring the DHCP option settings, proceed to Step 5.

Select the checkboxes of the items to enable.

[Acquire Host Name] (IPv4 only)

Obtains a host name (Option 12) from the DHCP server.

[DNS Dynamic Update] (IPv4 only)

The DHCP server automatically updates the information (Option 81) corresponding to the host name in place of the machine.

[Acquire DNS Server Address]

Obtains a DNS server address (Option 6 for IPv4, Option 23 for IPv6) from the DHCP server.

[Acquire Domain Name]

Obtains a domain name (Option 15 for IPv4, Option 24 for IPv6) from the DHCP server.

[Acquire WINS Server Address] (IPv4 only)

Obtains a WINS server address (Option 44) from the DHCP server.

[Acquire SMTP Server Address] (IPv4 only) *1

Obtains an SMTP server address (Option 69) from the DHCP server.

[Acquire POP Server Address] (IPv4 only) *1

Obtains a POP3 server address (Option 70) from the DHCP server.

*1 This setting is displayed only when the function to send scanned data is supported. **Supported Functions(P. 3)**

5 In [DNS Settings], set the DNS server information.

- For details about the setting information, contact your provider or network administrator. You can also refer to the computer settings. **Viewing the Network Connection Information of the Computer(P. 664)**
- If you are not configuring the DNS server information, proceed to Step 6.

[Primary DNS Server Address]

Enter the IP address of the DNS server.

* For IPv6, you cannot enter a multicast address (address starting with "ff").

[Secondary DNS Server Address]

When using a secondary DNS server, enter the IP address of that server.

* For IPv6, you cannot enter a multicast address (address starting with "ff").

[Use Same Host Name/Domain Name as IPv4] (IPv6 only)

Select the checkbox to use the same host and domain names as in IPv4.

To set the IPv6 host name and domain name individually, clear this checkbox, and enter [Host Name] and [Domain Name].

[Host Name]

Enter the host name to register in the DNS server using single-byte alphanumeric characters.

[Domain Name]

Enter the domain name to which the machine belongs using single-byte alphanumeric characters.

Input example:

example.com

[DNS Dynamic Update]

Select the checkbox to automatically update the DNS records when the corresponding information of the host name and IP address is changed in a DHCP environment, for example.

To Specify the Type of Address to Register to the DNS Server (IPv6 only)

Depending on the type of address you want to register, select the [Register Manual Address], [Register Stateful Address], or [Register Stateless Address] checkbox.

To Specify the Interval between Updates

In [DNS Dynamic Update Interval], enter the interval at which to automatically update this information.

6 In [mDNS Settings], configure the mDNS settings.

If you are not configuring the mDNS settings, proceed to Step 7.

For IPv4

To use mDNS, select the [Use mDNS] checkbox, and enter the mDNS name.

For IPv6

To use mDNS, select the [Use mDNS] checkbox, and select whether to use the same mDNS name as IPv4.

- To use the mDNS name set with IPv4 also with IPv6, select the [Use Same mDNS Name as IPv4] checkbox.
- To configure the mDNS name of IPv6 individually, clear the [Use Same mDNS Name as IPv4] checkbox, and enter the mDNS name.

7 Click [OK].

8 Restart the machine. ▶ [Restarting the Machine\(P. 114\)](#)

▣▶ The settings are applied.

Configuring SMB

A19R-01W

This machine uses the Server Message Block (SMB) communication protocol to save scanned data to a shared folder, for example. Depending on the network environment, you may have to set the computer name and workgroup name of the machine, and configure the SMB client information when connecting to an SMB server.

- ▶ **Setting the Computer Name and Workgroup Name(P. 88)**
- ▶ **Configuring an SMB Client(P. 88)**

Setting the Computer Name and Workgroup Name

Set the computer name used to identify the machine in a network and the workgroup name to identify the group that the machine belongs to.

Configure these settings using Remote UI from a computer. You cannot use the control panel to configure the settings.

Administrator privileges are required. The machine must be restarted to apply the settings.

- 1 Log in to Remote UI in System Manager Mode. ▶ Starting Remote UI(P. 395)**
- 2 On the Portal page of Remote UI, click [Settings/Registration]. ▶ Portal Page of Remote UI(P. 397)**
- 3 Click [Network Settings] ▶ [Computer Name/Workgroup Name Settings] ▶ [Edit].**

⇒ The [Edit Computer Name/Workgroup Name Settings] screen is displayed.

- 4 Enter the computer name and workgroup name of the machine, and click [OK].**

Enter using single-byte alphanumeric characters.

■ In an Environment with WINS

- Select the [Use NetBIOS] checkbox.
- You cannot register names that start with an asterisk (*) to the WINS server.

- 5 Restart the machine. ▶ Restarting the Machine(P. 114)**

⇒ The settings are applied.

Configuring an SMB Client

Configure the settings when connecting to an SMB server (such as the computer with the shared folder) and the version of SMB to use with the SMB client.

* This setting is displayed only when the function to send scanned data is supported. ▶ **Supported Functions(P. 3)**

Configure these settings using Remote UI from a computer. You cannot use the control panel to configure the settings.

Administrator privileges are required.

1 Log in to Remote UI in System Manager Mode. ▶ Starting Remote UI(P. 395)

2 On the Portal page of Remote UI, click [Settings/Registration]. ▶ Portal Page of Remote UI(P. 397)

3 Click [Network Settings] ▶ [SMB Client Settings] ▶ [Edit].

⇒ The [Edit SMB Client Settings] screen is displayed.

4 Configure the settings when connecting to an SMB server, and click [OK].

[Authentication Type]

Select the checkbox according to the authentication protocol of the SMB server.

[Require SMB Signature for Connection]

Select this checkbox to request an SMB packet signature when connecting to the SMB server.

[Require Encryption for Connection]

Select this checkbox to connect only with the SMB server supporting SMB v3.0 encryption communications.

[Timeout]

Enter the wait time until the SMB server responds.

* If the machine times out before saving the scanned data, for example, is completed, lengthen the wait time.

5 Click [Network Settings] ▶ [Specified SMB Client Versions] ▶ [Edit].

⇒ The [Edit Specified SMB Client Versions] screen is displayed.

6 Select the checkbox of the version of the SMB server to which the machine will connect.

If [Require Encryption for Connection] is selected in the setting when connecting to the SMB server, select the [3.0] checkbox.

7 Click [OK].

⇒ The settings are applied.

8 Log out from Remote UI.

Configuring WINS

A19R-01X

When using the machine in a network environment that uses both NetBIOS and TCP/IP, configure Windows Internet Name Service (WINS) to convert the NetBIOS name to an IP address.
To enable WINS, specify the WINS server. WINS cannot be used in an IPv6 environment.

This section describes how to configure the settings using Remote UI from a computer.
On the control panel, select [Menu] in the [Home] screen, and then select [Preferences] to configure the settings. ▶
[WINS Settings](P. 443)
Administrator privileges are required. The machine must be restarted to apply the settings.

Required Preparations

- Set the computer name and workgroup name. ▶ **Setting the Computer Name and Workgroup Name(P. 88)**
- Prepare the IPv4 address of the WINS server and keep it close by.

1 Log in to Remote UI in System Manager Mode. ▶ **Starting Remote UI(P. 395)**

2 On the Portal page of Remote UI, click [Settings/Registration]. ▶ **Portal Page of Remote UI(P. 397)**

3 Click [Network Settings] ▶ [WINS Settings] ▶ [Edit].

⇒ The [Edit WINS Settings] screen is displayed.

4 Select the [WINS Resolution] checkbox.

5 Enter the IPv4 address of the WINS server, and click [OK].

If the IP address of the WINS server is obtained from a DHCP server, the obtained IP address has priority. ▶ **Configuring DNS(P. 85)**

6 Restart the machine. ▶ **Restarting the Machine(P. 114)**

⇒ The settings are applied.

Configuring SNMP

A19R-01Y

Simple Network Management Protocol (SNMP) is a protocol for monitoring and controlling communication devices in a network by accessing a Management Information Base (MIB). Configure these settings according to the purpose of use and environment of the machine.

The machine supports SNMPv1 and SNMPv3. You can also use both at the same time. Trap notification is not supported.

When SNMP management software is installed on the network, you can use the software to configure, monitor, and control the machine remotely from a computer. For more information, see the manual of the software you are using.

SNMPv1

SNMPv1 defines the scope of communication using information called a "community name." As the community name is sent to the network in plain text, the security of the network is vulnerable. To ensure network security, disable SNMPv1 and use SNMPv3. When SNMPv1 is disabled, you will not be able to use some functions such as obtaining information from the machine using the printer driver.

SNMPv3

SNMPv3 communicates using user information for SNMPv3. This protocol enables you to configure the authentication and encryption in the user information to monitor and control communication devices on the network with a solid security system.

This section describes how to configure the settings using Remote UI from a computer.

On the control panel, select [Menu] in the [Home] screen, and then select [Preferences] to configure the settings. However, the control panel can only be used to enable or disable SNMPv1 and SnMPv3. [▶\[SNMP Settings\]\(P. 434\)](#) Administrator privileges are required. The machine must be restarted to apply the settings.

Required Preparations

- To configure SNMPv3, you must enable TLS. [▶Using TLS\(P. 356\)](#)

1 Log in to Remote UI in System Manager Mode. [▶Starting Remote UI\(P. 395\)](#)

2 On the Portal page of Remote UI, click [Settings/Registration]. [▶Portal Page of Remote UI\(P. 397\)](#)

3 Click [Network Settings] ▶ [SNMP Settings] ▶ [Edit].

⇒ The [Edit SNMP Settings] screen is displayed.

4 In [SNMPv1 Settings], set SNMPv1.

■ To Enable SNMPv1

1 Select the [Use SNMPv1] checkbox.

2 Configure the community.

- You can set MIB Access Permission (permission to read/write to MIB objects) for each community.
- When using both SNMPv1 and SNMPv3, it is recommended to set MIB Access Permission to [Read Only]. When setting SNMPv1 to [Read/Write] (full-access permission), you can perform nearly all operations, and therefore, you are not able to use the solid security features of SNMPv3.

To Configure the Community Name

Select the [Use Community Name 1] or [Use Community Name 2] checkbox, and configure the community name and MIB Access Permission.

Enter the community name using single-byte alphanumeric characters.

To Configure a Dedicated Community

Dedicated Community is a preset community for Canon Device Management software.

To use Dedicated Community, select the [Use Dedicated Community] checkbox, and configure MIB Access Permission.

* For details, see the manual of the software you are using.

■ To Disable SNMPv1

Clear the [Use SNMPv1] checkbox.

5 In [SNMPv3 Settings], configure SNMPv3.**■ To Enable SNMPv3**

- 1** Select the [Use SNMPv3] checkbox.
- 2** In [User Settings 1], [User Settings 2], or [User Settings 3], select the [Enable User] checkbox.
- 3** Configure the user.

[User Name]

Enter the user name using single-byte alphanumeric characters.

[MIB Access Permission]

Set the read/write permission to MIB objects for each specified user.

To allow both read and write, select [Read/Write].

[Security Settings]

Select whether to enable or disable authentication and encryption.

[Authentication Algorithm]

When [Authentication On/Encryption On] or [Authentication On/Encryption Off] is selected in [Security Settings], select the authentication algorithm according to the usage environment.

To set a password, select the [Set/Change Password] checkbox, and enter the same password in both [Authentication Password] and [Confirm] using single-byte alphanumeric characters.

[Encryption Algorithm]

When [Authentication On/Encryption On] is selected in [Security Settings], select the encryption algorithm according to the usage environment.

To set a password, select the [Set/Change Password] checkbox, and enter the same password in both [Encryption Password] and [Confirm] using single-byte alphanumeric characters.

■ To Disable SNMPv3

Clear the [Use SNMPv3] checkbox.

6 In [Printer Management Information Acquisition Settings], select whether to obtain the printer management information.

To regularly obtain printer management information from the machine, such as protocols and ports, select the [Acquire Printer Management Information from Host] checkbox.

7 Click [OK].

8 Restart the machine. ▶Restarting the Machine(P. 114)

⇒ The settings are applied.

NOTE

Changing the Port Number

- To change the port number of the SNMP server, see the following:
▶**Changing the Port Number(P. 353)**

Configuring SNTP

A19R-020

To obtain time information from the time server on the network, configure Simple Network Time Protocol (SNTP). When SNTP is configured, the time server is checked at specified intervals to adjust the time and maintain the correct time on the machine.

The machine supports both an NTP server (NTPv3) and SNTP server (SNTPv3 and v4).

Configure these settings using Remote UI from a computer. You cannot use the control panel to configure the settings.

Administrator privileges are required.

Required Preparations

- The time is adjusted based on the UTC (Coordinated Universal Time), so specify the time zone setting. [▶ Setting the Date and Time\(P. 393\)](#)
- Prepare the IP address of the NTP or SNTP server and keep it close by.

1 Log in to Remote UI in System Manager Mode. [▶ Starting Remote UI\(P. 395\)](#)

2 On the Portal page of Remote UI, click [Settings/Registration]. [▶ Portal Page of Remote UI\(P. 397\)](#)

3 Click [Network Settings] ▶ [SNTP Settings] ▶ [Edit].

⇒ The [Edit SNTP Settings] screen is displayed.

4 Select the [Use SNTP] checkbox.

5 In [NTP Server Name], enter the IP address of the NTP/SNTP server.

When using a DNS server, you can enter the host name or FQDN instead of the IP address.

Input example:
ntp.example.com

6 In [Polling Interval], enter the interval at which to check the server and adjust the time.

7 Click [OK].

⇒ The settings are applied.


8 Log out from Remote UI.

NOTE

Testing Communication with the NTP or SNTP Server

- Test communication using the following procedure: If the machine is correctly communicating with the server, [OK] appears in [NTP Server Check Result].

Log in to Remote UI in System Manager Mode ▶ click [Settings/Registration] ▶ [Network Settings] ▶ [SNTP Settings] ▶ [Check NTP Server].

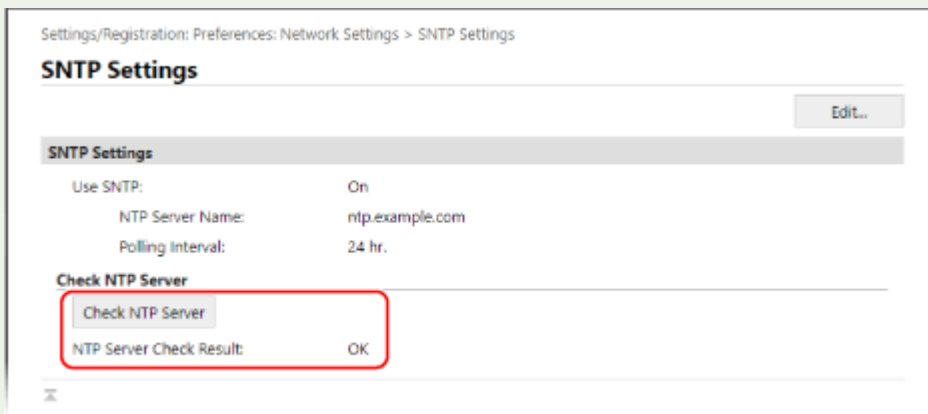

* This tests the communication status and does not adjust the time.

Configuring CHMP

A19R-0FK

Configure the settings related to the communication that occurs when the driver or application software obtains device information from the machine.

* CHMP is a Canon proprietary protocol.

Configure these settings using Remote UI from a computer. You cannot use the control panel to configure the settings.

Administrator privileges are required.

Required Preparations

- To configure CHMP, you must enable TLS. [▶Using TLS\(P. 356\)](#)

1 Log in to Remote UI in System Manager Mode. [▶Starting Remote UI\(P. 395\)](#)

2 On the Portal page of Remote UI, click [Settings/Registration]. [▶Portal Page of Remote UI\(P. 397\)](#)

3 Click [Network Settings] ▶ [CHMP Settings] ▶ [Edit].

⇒ The [Edit CHMP Settings] screen is displayed.

4 Select the [Enable HTTPS Redirection] checkbox.

* Communication that uses CHMP will be redirected to encrypted communication.

5 Click [OK].

⇒ The settings are applied.

6 Import the certificate to the computer, as needed.

Perform this operation only if a self-signed certificate is generated when TLS is enabled. You can skip this step if a self-signed certificate is not generated.

- Export the certificate registered to the machine.
Log in to Remote UI, and use the browser to export the certificate registered to the machine. For details on how to perform export, see Help in your browser.
- Import the certificate to the computer.
Import the exported certificate to your computer.
For details on how to import the certificate, see Help in the OS installed on your computer.

Checking the Network Status and Settings

A19R-021

You can perform a connection test with devices in the network to check whether the machine is correctly connected to the network.

The IP address of the machine and the MAC address information are needed to use Remote UI and configure the firewall settings. Check these current settings.

- ▶ **Checking Whether the Machine Can Connect to Network Devices(P. 97)**
- ▶ **Viewing the IP address set to the machine(P. 98)**
- ▶ **Viewing the MAC Address of the Wired LAN(P. 99)**
- ▶ **Viewing the MAC Address and Connection Information of the Wireless LAN(P. 100)**

NOTE

- If the IP address is displayed as "0.0.0.0," it is not correctly configured. Set the IP address again.
 - ▶ **Setting IPv4 Addresses(P. 77)**
 - ▶ **Setting IPv6 Addresses(P. 81)**
- Connecting the machine to a switching hub, for example, may prevent connection to the network even when the IP address is correctly configured. In this case, set a wait time until machine starts communicating and try connecting again. ▶ **[Waiting Time for Connection at Startup](P. 435)**
- You can print the System Manager Data List to view the network settings. ▶ **Printing and Viewing Reports and Lists(P. 404)**

Checking Whether the Machine Can Connect to Network Devices

In the Web browser of the computer connected to the network, enter the IPv4 or IPv6 address of the machine. If the Remote UI login screen is displayed, the machine is properly connected to the network. ▶ **Starting Remote UI(P. 395)**

When using an IPv4 address, you can use the following procedure to send a ping command from the control panel to check whether the machine can connect to a network device.

Administrator privileges are required.

- ▶ **Touch Panel Model(P. 97)**
- ▶ **5 Lines LCD Model(P. 98)**

■ Touch Panel Model

Required Preparations

- Prepare the IPv4 address of a device in the network to which you want to connect and keep it close by.

1 On the control panel, press [Menu] in the [Home] screen. ▶ **[Home] Screen(P. 121)**

2 Press [Preferences] ▶ [Network] ▶ [TCP/IP Settings] ▶ [IPv4 Settings] ▶ [PING Command].

If the login screen appears, enter the System Manager ID and PIN, and then press [Log In]. ▶ **Logging In to the Machine(P. 138)**

3 Enter the IPv4 address of a network device, and press [Apply].




⇒ If the machine is correctly connected to the network, [Received response from host.] appears.



■ 5 Lines LCD Model

Required Preparations

- Prepare the IPv4 address of a device in the network to which you want to connect and keep it close by.

1 On the control panel, select [Menu] in the [Home] screen, and press .  [Home] Screen(P. 121)

2 Press [Preferences]  ► [Network]  ► [TCP/IP Settings]  ► [IPv4 Settings]  ► [PING Command] .

If the login screen appears, enter the System Manager ID and PIN, and then select [<Log In>] and press .  Logging In to the Machine(P. 138)


3 Enter the IPv4 address of a network device, and press .

⇒ If the machine is correctly connected to the network, [Received response from host.] appears.

Viewing the IP address set to the machine

You can view the setting of IP address set to the machine such as the IPv4 address and the IPv6 address.

This section describes how to view the IP address using the control panel.

You can also check this information using Remote UI from a computer.  Managing the Machine from a Computer (Remote UI)(P. 394)

 Touch Panel Model(P. 98)

 5 Lines LCD Model(P. 99)


■ Touch Panel Model

1 Press  on the control panel.

⇒ The [Status Monitor] screen is displayed.

2 Press [Network Information] ► [IPv4] or [IPv6].

3 Select the item you want to view.

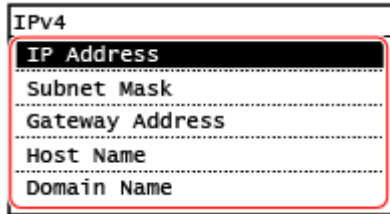

⇒ The settings of the selected item are displayed.


■ 5 Lines LCD Model

1 Press  on the control panel.

⇒ The [Status Monitor] screen is displayed.

2 Press [Network Information] ►  ► [IPv4] or [IPv6] ► .

3 Select the item you want to view and press .

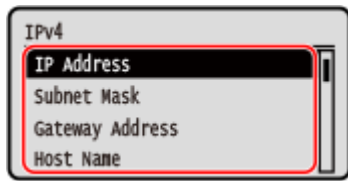


⇒ The settings of the selected item are displayed.

Viewing the MAC Address of the Wired LAN

You can view the MAC address set to the machine when the machine is connected to the wired LAN.

This section describes how to view this information using the control panel.

You can also use Remote UI from a computer to view the MAC address.  **Managing the Machine from a Computer (Remote UI)(P. 394)**

Administrator privileges are required.


 **Touch Panel Model(P. 99)**

 **5 Lines LCD Model(P. 100)**


■ Touch Panel Model

1 On the control panel, press [Menu] in the [Home] screen.  **[Home] Screen(P. 121)**

2 Press [Preferences] ► [Network] ► [Ethernet Driver Settings].

If the login screen appears, enter the System Manager ID and PIN, and then press [Log In].  **Logging In to the Machine(P. 138)**

3 View the MAC address.

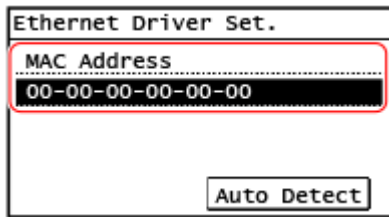


■ 5 Lines LCD Model

1 On the control panel, select [Menu] in the [Home] screen, and press **OK**. ▶ [Home] Screen(P. 121)

2 Press [Preferences] ▶ **OK** ▶ [Network] ▶ **OK** ▶ [Ethernet Driver Settings] ▶ **OK**.

If the login screen appears, enter the System Manager ID and PIN, and then select [<Log In>] and press **OK**. ▶ Logging In to the Machine(P. 138)

3 View the MAC address.

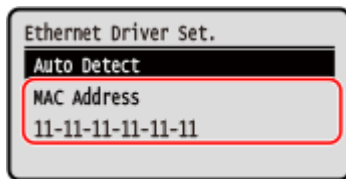

Viewing the MAC Address and Connection Information of the Wireless LAN

In addition to the MAC address and connection information of the wireless LAN when the machine is connected to the wireless LAN, you can also view the security settings.

This section describes how to view this information using the control panel.

You can also check this information using Remote UI from a computer. ▶ Managing the Machine from a Computer (Remote UI)(P. 394)

Administrator privileges are required.

▶ Touch Panel Model(P. 100)

▶ 5 Lines LCD Model(P. 101)

■ Touch Panel Model


1 On the control panel, press [Wireless LAN Set.] in the [Home] screen. ▶ [Home] Screen(P. 121)

⇒ The [Select Network] screen is displayed.

If the login screen appears, enter the System Manager ID and PIN, and then press [Log In]. ▶ Logging In to the Machine(P. 138)

2 Press [Connection Settings] ► [Connection Information].

3 Select the item you want to view.

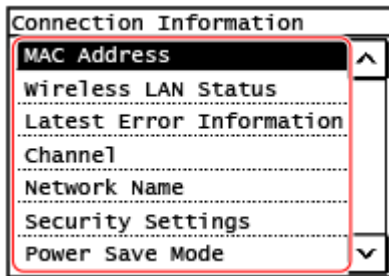


⇒ The MAC address and the settings of the selected item are displayed.

NOTE

Viewing Information with the [Status Monitor] Screen


- You can also view the wireless LAN status and error information with the following procedure:

 on the control panel ► [Network Information] ► [Network Connection Method] ► [Conn. Info].

■ 5 Lines LCD Model


1 On the control panel, select [Wireless LAN Set.] in the [Home] screen and press  .
 ◀[Home] Screen(P. 121)

⇒ The [Select Network] screen is displayed.

If the login screen appears, enter the System Manager ID and PIN, and then select [<Log In>] and press  . ▶ Logging In to the Machine(P. 138)

2 Press [Connection Settings] ►  ► [Connection Information] ►  .

3 Select the item you want to view and press  .

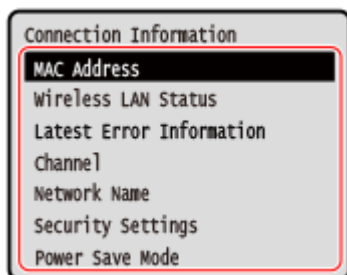





⇒ The MAC address and the settings of the selected item are displayed.

NOTE

Viewing Information with the [Status Monitor] Screen

  - You can also view the wireless LAN status and error information with the following procedure:

 on the control panel ▶ [Network Information] ▶  ▶ [Network Connection Method] ▶  ▶ [Connection Information] ▶  .

Configuring the Fax Settings (Fax Setup Guide)

A19R-022

When you press [Fax] in the [Home] screen on the control panel for the first time, the screen (Fax Setup Guide) for setting the items so as to use the fax is displayed. Configure the fax settings using the procedure below by following the instructions on the screen.

- ▶ **Step 1: Starting the Fax Setup Guide(P. 103)**
- ▶ **Step 2: Registering the Fax Number and Unit Name(P. 103)**
- ▶ **Step 3: Setting the RX Mode(P. 104)**
- ▶ **Step 4: Connecting to Telephone Line(P. 105)**

Step 1: Starting the Fax Setup Guide

1 On the control panel, press [Fax] in the [Home] screen. ▶ [Home] Screen(P. 121)

⇒ The [Fax Setup Guide] screen is displayed.

■ When the [Fax Setup Guide] Screen Is Not Displayed

If the [Fax Setup Guide] screen is not displayed after pressing [Fax] in the [Home] screen, or to reset the fax with the Fax Setup Guide, use the following procedure to display the [Fax Setup Guide].

[Home] screen on the control panel ▶ [Menu] ▶ [Function Settings] ▶ [Common] ▶ [Fax Setup Guide].

2 Press [Set Up Now] ▶ [Next].

⇒ The [Register Unit Tel. No.] screen is displayed.

Step 2: Registering the Fax Number and Unit Name

Register the fax number and unit name (name or company name). This information is printed together with the fax data at the destination.

1 On the [Register Unit Tel. No.] screen, enter the fax number of the machine, and press [Apply].

⇒ After the message [Settings applied.] appears, the screen guiding you to register the unit name is displayed.

2 Press [Next].

⇒ The [Register Unit Name] screen is displayed.

3 Enter the name or company name, and press [Apply].

⇒ After the message [Settings applied.] appears, the RX Mode settings screen is displayed.

Step 3: Setting the RX Mode


Answer the questions on the screen to select the proper RX mode.

1 On the RX Mode settings screen, press [Next].

2 Answer the questions displayed on the screen by pressing [Yes] or [No].

⇒ When you have completed answering all the questions, the selected RX mode is displayed on the screen.

3 Check the selected RX mode.

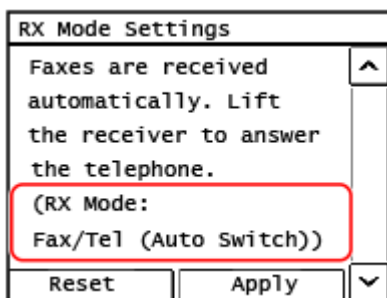

The RX modes operate as follows:

* If you have subscribed to a Distinctive Ring Pattern Detection (DRPD) service provided by your telephone company, [DRPD: Select Fax] is also available for the receiving mode. **▶ Changing Fax RX Mode and Setting the Action when Receiving a Fax(P. 259)**

[Fax/Tel (Auto Switch)]

Enables use of both fax and telephone.

- Faxes are automatically received.
- When a telephone call is received, the machine rings. Pick up the handset to answer the call.

[Auto]

Used for fax only.

- Faxes are automatically received.
- Incoming telephone calls cannot be answered.

[Answering Machine]

Enables use of both fax and phone.

- Faxes are automatically received.
- When a telephone call is received, the answering machine function can be used to record messages. You can answer the call by picking up the handset before recording starts.

* Set the answering machine so that the recording function activates after the machine rings one or two times.

* When recording your message, it is recommended that you keep about four seconds of silence, or keep the entire message within 20 seconds.

[Manual]

Enables use of both fax and phone.

- The machine rings when receiving both fax and phone calls.
- If you hear a fax tone when picking up the handset, receive the fax manually. **▶ Receiving Faxes(P. 277)**

- You can also configure the setting to receive faxes automatically after the machine rings for a certain period of time. ▶[Switch to Auto RX](P. 498)

4 Press [Apply].

⇒ The [Connect Telephone Line] screen is displayed.


Step 4: Connecting to Telephone Line

Use the supplied telephone cord to connect the machine to the telephone line.
When using a telephone, connect it to the machine.

1 Press [Next].

⇒ The [Connect to device side socket.] screen is displayed.

2 Connect the supplied telephone cord to the telephone line jack (LINE) on the machine and the telephone line connector on the wall.

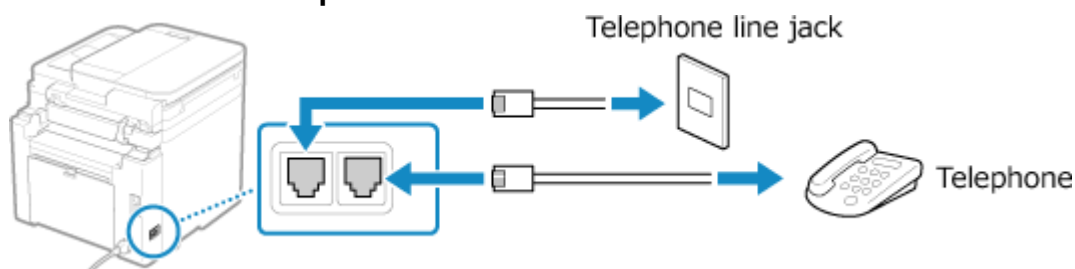

Connect a telephone to the external telephone jack (EXT.) on the machine.

- When connecting a telephone with fax function, be sure to disable the fax auto receive setting on the telephone.
- Depending on the type of telephone connected to it, the machine may not be able to send or receive faxes properly.

3 Press [Next].

⇒ The screen confirming that you want to exit the Fax Setup Guide is displayed.

4 Press [Yes].

⇒ The settings configured in the Fax Setup Guide are applied, and the type of telephone line is configured automatically.

NOTE


If the Type of Telephone Line Is Not Configured Automatically

- Configure the type of telephone line manually. ▶[Select Line Type](P. 491)
* If you do not know the type of your telephone line, contact your telephone company.

Making an Alert Sound When the Handset Is Not Properly Set on the Cradle

- You can select whether the machine makes an alert sound when the handset of a telephone connected to the machine is not properly set on the cradle.

Log in to Remote UI ► [Settings/Registration] ► [TX Settings] ► [Fax TX Settings] ► [Edit] ► Select the [Off-Hook Alarm] checkbox and adjust the volume ► [OK]

On the control panel, select [Menu] in the [Home] screen, and then select [Function Settings] to configure the settings.  **[Off-Hook Alarm](P. 489)**

Installing Software and Drivers to the Computer

A19R-023

Install the related software and drivers to the computer that will use the functions of the machine, such as printing, remote scanning, and PC faxing.

Installation Procedure

Check the operating environment via the Canon website for your country/region, and download and install the latest software and drivers.

<https://global.canon/en/support/>

For details about the installation method, see the manual of the software or driver at the online manual site.

<https://oip.manual.canon/>

Precautions and Limitations

When the Firewall Settings of the Machine Are Configured

The computer that will be used with the machine must be allowed to communicate with the machine. If the computer is not allowed to communicate with the machine, you will not be able to install the software and drivers or use the functions of the machine. **▶Setting the Firewall(P. 350)**

If the IP Address of the Machine Is Changed after Installing the Printer Driver

- In Windows, the required action depends on the port you are using.
 - If you are using an MFNP port, the connection is maintained as long as the machine and computer belong to the same subnet, so no action is required on the computer.
 - If you are using a standard TCP/IP port, you must add a new port. **▶Adding a Port(P. 198)**

If you do not know which port is being used, see the following:

▶Viewing the Printer Port(P. 666)

- In macOS, you must re-register the machine on the Mac. For details about registering the machine, see the manual of the driver at the online manual site.

<https://oip.manual.canon/>

* If you are using DHCP to automatically obtain the IP address of the machine, the IP address may be changed automatically.

NOTE

Using the Functions of the Machine without Installing Software or Drivers (macOS)

- You can use AirPrint standard equipped in macOS to print and scan data and send faxes from a computer without installing software or drivers. **▶Using AirPrint Application to Print and Scan Data and Send Faxes(P. 338)**

Basic Operations

Basic Operations	110
Turning ON and OFF the Machine	111
Turning ON the Machine	112
Turning OFF the Machine	113
Restarting the Machine	114
Reducing Power Consumption (Sleep Mode)	115
Using the Control Panel	117
Screens Displayed on the Control Panel	118
[Home] Screen	121
[Status Monitor] Screen	125
How to Operate the Control Panel (Touch Panel Model)	128
How to Operate the Control Panel (5 Lines LCD Model)	130
Entering Characters	132
Customizing the [Home] Screen	136
Logging In to the Machine	138
Placing Originals	140
Loading Paper	144
Loading Paper in the Drawer	145
Preparations and Orientation for Loading Envelopes	150
Orientation for Loading Paper with a Logo	152
Specifying the Paper Size and Type	154
Setting the Paper Size and Type for the Drawer	155
Registering Non-standard Size Paper (Custom Paper)	159
Hiding Unused Paper Sizes	161
Registering Destinations (Address Book)	163
Address Book Function	164
Registering Destinations to the Address Book (Control Panel)	166
Registering Groups to the Address Book (Control Panel)	168
Editing and Deleting Destinations in the Address Book (Control Panel)	170
Registering Destinations to the Address Book (Remote UI)	171
Registering Groups to the Address Book (Remote UI)	175
Specifying Destinations	177
Specifying Destinations (Address Book)	178
Specifying Destinations (Direct Input)	182
Specifying Destinations (Address Book on a Mobile Device)	183

Specifying Destinations (TX Job Log)	184
Changing the Default Settings	185
Adjusting the Volume (For Models with a Fax Function)	188
[Volume Settings] Screen	191
Reducing the Operation Sound (Quiet Mode)	192

Basic Operations

A19R-024

This chapter describes the basic operations common to all functions of the machine and how to understand the screen layout.

Managing and Saving Power

You can turn OFF the power to conserve energy or when cleaning and restart the machine to apply the settings.

You can use sleep mode to reduce power consumption.

- ▶ **Turning ON and OFF the Machine(P. 111)**
- ▶ **Reducing Power Consumption (Sleep Mode)(P. 115)**

Using the Control Panel

Use the control panel to scan, copy, and perform other functions and to configure the settings of the machine.

- ▶ **Using the Control Panel(P. 117)**

When the login screen is displayed, enter the required login information to continue operations.

- ▶ **Logging In to the Machine(P. 138)**

Placing Originals and Loading Paper

Place the original on the platen glass or in the feeder when scanning, sending a fax, or copying.

Load printing and copying paper into the drawer.

- ▶ **Placing Originals(P. 140)**
- ▶ **Loading Paper(P. 144)**

Registering and Specifying Destinations

Register destinations for sending and saving scanned data and faxes to the Address Book of the machine.

In addition to specifying destinations from the Address Book, you can also directly enter them, use the TX Job Log, and use other methods to specify them.

- ▶ **Registering Destinations (Address Book)(P. 163)**
- ▶ **Specifying Destinations(P. 177)**

Customizing Functions and Settings

You can change frequently used settings for each function, allowing you to use the machine easier and more conveniently.

- ▶ **Changing the Default Settings(P. 185)**
- ▶ **Adjusting the Volume (For Models with a Fax Function)(P. 188)**
- ▶ **Reducing the Operation Sound (Quiet Mode)(P. 192)**

Turning ON and OFF the Machine

A19R-025

Be sure to use the power switch to manually turn ON the power of the machine.

- ▶ **Turning ON the Machine(P. 112)**
- ▶ **Turning OFF the Machine(P. 113)**
- ▶ **Restarting the Machine(P. 114)**


Turning ON the Machine

A19R-026

To turn ON the machine, press the power switch on the front.

1 Make sure that the power plug is inserted into a power outlet.

2 Press the power switch.

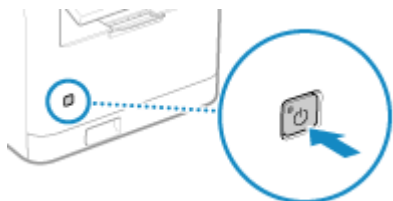

⇒ The start screen is displayed on the control panel.

NOTE

Changing the Screen that Appears at Startup

- After the power is turned ON and the start screen is displayed, the [Home] screen is displayed by default. You can configure the setting to display another function screen. ▶ **[Default Screen after Startup/Restoration](P. 426)**

Blank Paper is Output

- A blank sheet of paper may be output when you turn ON the power for the first time. This is not a malfunction.

Turning OFF the Machine


A19R-027

Press the power switch on the front side of the machine to turn OFF the machine.
When you turn OFF the machine, the data that is waiting to be printed will be erased.

NOTE

- The following data remains stored without being deleted even if the machine is turned OFF:
 - Received data saved in the memory
 - Data waiting to be sent
 - Reports to be printed automatically after data is sent or received

1 Press the power switch.

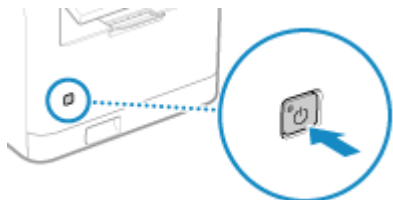

⇒ The display turns off, and the power turns OFF.

It may take a few minutes until the power turns OFF. Do not unplug the power cord until the power turns OFF.

Make sure that the power indicator has gone out.

NOTE

Turning ON the Machine Again

- Wait at least 10 seconds after turning OFF the power before turning ON the machine.

Restarting the Machine

A19R-028

When you make changes to the settings of the machine, you may have to restart the machine to apply the changes depending on the setting.


When you change the settings using either the control panel or Remote UI, you can restart the machine using the power switch.

Restarting the machine deletes any data waiting to be printed.

NOTE

- The following data remains stored without being deleted even if the machine is restarted:
 - Received data saved in the memory
 - Data waiting to be sent
 - Reports to be printed automatically after data is sent or received

1 Press the power switch.

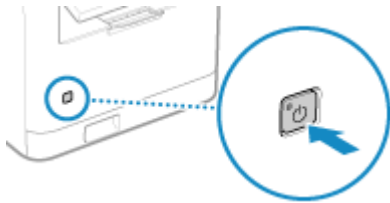

⇒ The display turns off, and the power turns OFF.

It may take a few minutes until the power turns OFF. Do not unplug the power cord until the power turns OFF.

Make sure that the power indicator has gone out.


2 Wait at least 10 seconds after turning OFF the power before pressing the power switch.


⇒ The machine starts up.

Reducing Power Consumption (Sleep Mode)

A19R-029

Sleep mode reduces power consumption by pausing certain operations inside the machine.

On the control panel, press  to enter sleep mode. [▶Control Panel\(P. 13\)](#)

When the machine is in sleep mode,  lights yellow-green.

■ Exiting Sleep Mode

Perform any of the following operations:

- Press any key on the control panel.
- Press the display.
- When a telephone is connected, take the handset off the hook.

■ Configuring Auto Sleep Time

"Auto Sleep" is a function which automatically places the machine into sleep mode after a certain period of idle time. Auto Sleep Time specifies the duration the idle time.

This section describes how to configure the settings using Remote UI from a computer.

On the control panel, select [Menu] in the [Home] screen, and then select [Preferences] to configure the settings. [▶\[Timer/Energy Settings\]\(P. 430\)](#)


- 1 Log in to Remote UI.** [▶Starting Remote UI\(P. 395\)](#)
- 2 On the Portal page of Remote UI, click [Settings/Registration].** [▶Portal Page of Remote UI\(P. 397\)](#)
- 3 Click [Timer Settings] ▶ [Edit].**
 - ⇒ The [Edit Timer Settings] screen is displayed.
- 4 Enter the time in [Auto Sleep Time].**
 - * It is recommended to use the default setting to efficiently save power. [▶\[Auto Sleep Time\]\(P. 432\)](#)
- 5 Click [OK].**
 - ⇒ The settings are applied.
- 6 Log out from Remote UI.**



Press  if the machine will not be used for a long period of time, such as overnight

- Put the machine into sleep mode as a safety precaution.

NOTE

- The machine does not enter sleep mode in the following cases:
 - When the data indicator on the control panel is lit or blinking  **Control Panel(P. 13)**
 - When the [Menu] screen, a paper jam or other error message^{*1}, or Direct Connection SSID or network key display screen is displayed on the control panel
 - When the machine is performing an adjustment, cleaning, or other operation
 - When a phone is connected, the handset is off the hook.
 - When the incoming fax ring is turned off
 - When the machine is communicating with a computer or similar device

^{*1} The machine may enter sleep mode depending on the message.

Using the Control Panel

A19R-02A

Use the control panel to change the settings of the machine and use the scan, copy, and other functions.

Main Instructions

Check how to use the buttons and items displayed on the control panel, how to enter text, and how to display the various screens.

- ▶ **Screens Displayed on the Control Panel(P. 118)**
- ▶ **How to Operate the Control Panel (Touch Panel Model)(P. 128)**
- ▶ **How to Operate the Control Panel (5 Lines LCD Model)(P. 130)**
- ▶ **Entering Characters(P. 132)**

Making the [Home] Screen Easier to Use

You can change the order of the buttons or insert a space.

- ▶ **Customizing the [Home] Screen(P. 136)**

IMPORTANT

Regarding the Handling of the Touch Panel Display


- Do not press the touch panel display too hard. Doing so may break the touch panel display.
- Do not use an object with a sharp end, such as a mechanical pencil or ballpoint pen. Doing so may scratch the surface of the touch panel display or break it.
- Placing objects on the display or wiping the display may cause the touch panel to react and lead to a malfunction.

Screens Displayed on the Control Panel


A19R-02C

The following are the main screens of the control panel.


[Home] Screen

This screen is displayed when you press  on the control panel. By default, the [Home] screen is displayed after the power is turned ON and immediately after the startup screen closes. [▶\[Home\] Screen\(P. 121\)](#)


Touch Panel Model

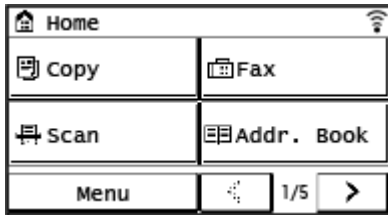


5 Lines LCD Model

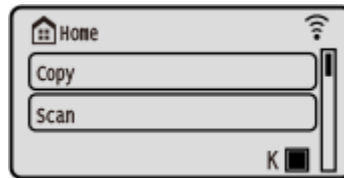


[Status Monitor] Screen

This screen is displayed when you press  on the control panel. Use this screen to check the information of the machine, usage and logs, network settings, and error information. [▶\[Status Monitor\] Screen\(P. 125\)](#)


Touch Panel Model

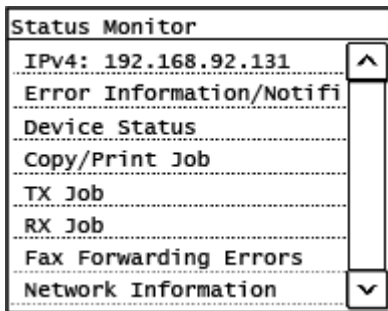

5 Lines LCD Model

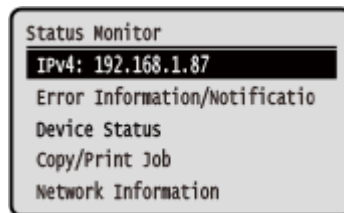


[Menu] Screen


This screen is displayed when you press [Menu] on the [Home] screen. Use this screen to configure the various settings of the machine. For the 5 Lines LCD Model, this screen is displayed by pressing [Menu]  on the [Home] screen. [▶Settings Menu Items\(P. 423\)](#)

When the System Manager ID is set, the login screen may be displayed when certain items are selected. Only users who know the System Manager ID and PIN can log in and change the settings.


Touch Panel Model

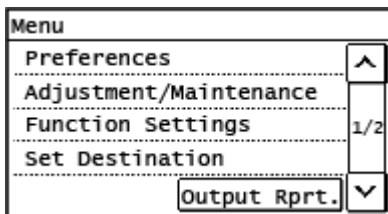

5 Lines LCD Model

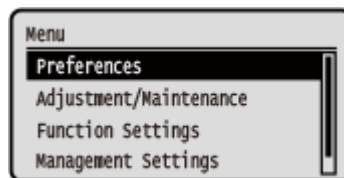


[Paper Settings] Screen


This screen is displayed when you press [Paper Set.] on the [Home] screen. Use this screen to configure the various settings of the machine. For the 5 Lines LCD Model, this screen is displayed by pressing [Paper Settings]  on the [Home] screen.

To ensure quality printing and prevent paper jams, the paper size and type must be set correctly according to the loaded paper. **Specifying the Paper Size and Type(P. 154)**

Touch Panel Model

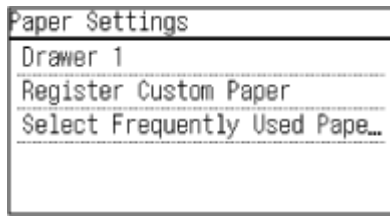

5 Lines LCD Model

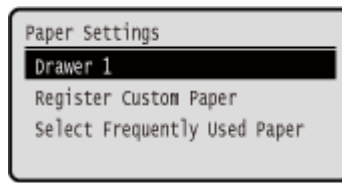

Message Display

Messages are displayed on the screen when errors occur and the machine is out of paper or toner in the toner cartridge.

If a troubleshooting solution is displayed, follow the on-screen instructions to solve the problem.

If a troubleshooting solution is not displayed, check the cause and solution by referring to the message or error code.


A Message Appears(P. 623)

An Error Code Is Displayed(P. 643)


Display example:

- **When an Error Occurs**

Touch Panel Model

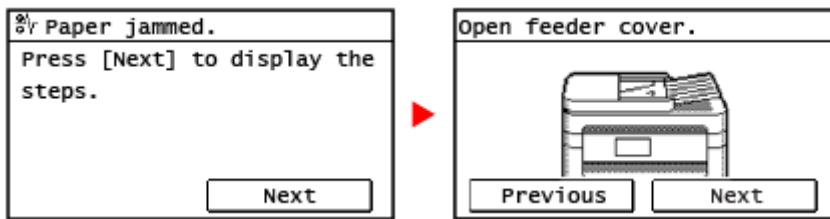


5 Lines LCD Model

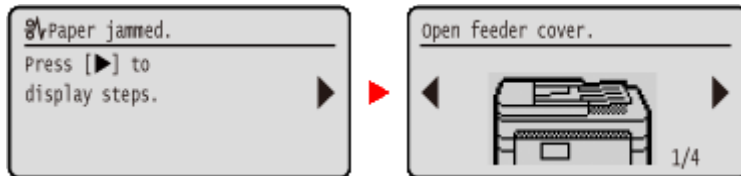

- **When a Message Appears at the Bottom of the Screen**


If the message is too long to display at once, it may be separated into smaller segments and displayed alternately.

Touch Panel Model

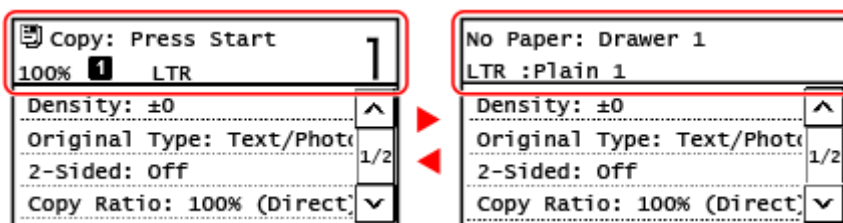

When [Information Icon] is displayed on the top side of the screen, you can press [Information Icon] to display and check the notification.

5 Lines LCD Model

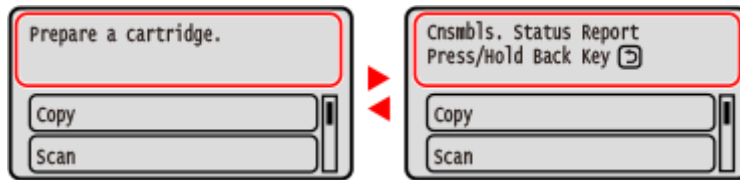

NOTE

Changing the Screen Display


- You can change the control panel display such as by changing the display language and units, and show or hide messages. ▶ **[Display Settings](P. 426)**
- You can invert screen colors and adjust the contrast to make the screen easier to view. ▶ **[Accessibility] (P. 448)**

Clearing the Settings Automatically

- By default, if no operations are performed after a certain period of time, the settings being configured on the screen are cleared, and the [Home] screen is displayed. You can change the time until the settings are cleared and the screen that is displayed after.
 - ▶ **[Auto Reset Time](P. 431)**
 - ▶ **[Function After Auto Reset](P. 432)**

[Home] Screen



A19R-02E


This screen is displayed when you press  on the control panel.

▶ **Touch Panel Model(P. 121)**

▶ **5 Lines LCD Model(P. 123)**

Touch Panel Model

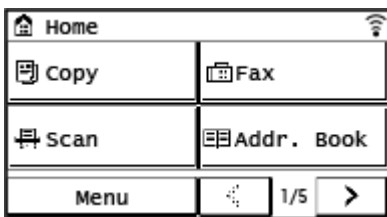

Buttons corresponding to the functions or settings are displayed on the screen. Pressing [] or [] changes the displayed buttons of functions or settings. By pressing these buttons, you can start the corresponding functions or the settings. You can also change the order of the buttons.



■ Status of the Machine Information

[]

When connected to a wireless LAN, [] is displayed.

[] is displayed when there is a notification. Press [] to check the notification.

■ Function and Setting Buttons



[Copy]

Copies originals. ▶ **Copying(P. 285)**



[Fax]

Faxes documents. ▶ **Faxing(P. 255)**



[Scan]

Scans originals. ▶ **Scanning(P. 215)**



[Addr. Book]

Register destinations when sending and saving scanned data and faxes. You can specify destinations from the Address Book, and call up the send function.

▶ **Registering Destinations (Address Book)(P. 163)**

▶ **Specifying Destinations (Address Book)(P. 178)**

— **[Menu]**

Configure the various settings of the machine. ▶ **Settings Menu Items(P. 423)**



[Paper Set.]

Set the paper size and type to use, and register frequently used paper. ▶ **Specifying the Paper Size and Type(P. 154)**



[Scan -> PC1] / [Scan -> PC2]

Use a registered scan setting. ▶ **Scanning Using the Shortcut Key (Saving to a Computer)(P. 240)**



[Paper Save]

Use the copy setting which saves paper. ▶ **Paper Save Copy(P. 300)**



[ID Card Copy]

Copies the front and back sides of ID cards. ▶ **Copying Both Sides of ID Cards onto One Sheet(P. 304)**



[Passport Copy]

Copies multiple passports onto one sheet of paper. ▶ **Copying Multiple Passports onto One Sheet(P. 308)**



[One-Touch 1] to [One-Touch 4]

Register a fax or e-mail destination.

▶ **Registering Destinations (Address Book)(P. 163)**

▶ **Specifying Destinations (Address Book)(P. 178)**



[Coded Dial]

Coded Dial numbers are three-digit numbers which are assigned to an address when the address is registered in the Address Book. Use the Coded Dial number to perform a corresponding send function.

▶ **Registering Destinations (Address Book)(P. 163)**



[Mobile Portal]

Connect mobile devices to the machine. ▶ **Connecting a Mobile Device to the Machine(P. 330)**



[Home Set.]

Allows you to change the order of the displayed buttons on the [Home] screen or insert a space instead of a button. ▶ **Customizing the [Home] Screen(P. 136)**

**[Update Firmware]**

Updates the firmware via the Internet. [▶Updating the Firmware \(Touch Panel Model\)\(P. 412\)](#)

**[Wireless LAN Set.]**


Connects a computer to the machine via a wireless LAN router (access point). [▶Connecting to a Wireless LAN by Searching for a Router \(Access Point Setup Method\)\(P. 69\)](#)

**[Toner Deliv. Set.]**

You can configure settings for toner replenishment service. Use of the toner replenishment service requires prior registration with select retailers. This service is only available in certain countries.


5 Lines LCD Model

The status of the machine is displayed at the top and bottom of the screen for quick viewing and operations, as needed.

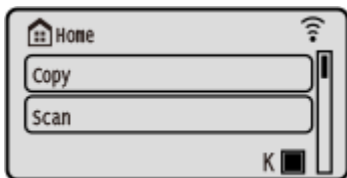

■ Status of the Machine



When connected to a wireless LAN, [] is displayed.



Displays the remaining amount of toner in the toner cartridge.

■ Function and Setting Buttons

[Copy]

Copies originals. [▶Copying\(P. 285\)](#)

[Scan]

Scans originals. [▶Scanning\(P. 215\)](#)

[Menu]

Configure the various settings of the machine. [▶Settings Menu Items\(P. 423\)](#)

[Paper Settings]

Set the paper size and type to use, and register frequently used paper. [▶Specifying the Paper Size and Type\(P. 154\)](#)

[Scan -> PC]

Use the registered scan settings. [▶Scanning Using the Shortcut Key \(Saving to a Computer\)\(P. 240\)](#)

[Paper Save Copy]

Use the copy setting which save paper. [▶Paper Save Copy\(P. 300\)](#)

[Passport Copy]

Copies multiple passports onto one sheet of paper. [▶Copying Multiple Passports onto One Sheet\(P. 308\)](#)

[Mobile Portal]

Connect mobile devices to the machine. ▶ **Connecting a Mobile Device to the Machine(P. 330)**

[Display Order (Home)]

You can change the display order of the items on the [Home] screen. ▶ **Customizing the [Home] Screen(P. 136)**

[Update Firmware]

Updates the firmware via the Internet. ▶ **Updating the Firmware (5 Lines LCD Model)(P. 415)**

[Wireless LAN Set.]


Connects a computer to the machine via a wireless LAN router (access point). ▶ **Connecting to a Wireless LAN by Searching for a Router (Access Point Setup Method)(P. 69)**

[Toner Delivery Set.]

You can configure settings for toner replenishment service. Use of the toner replenishment service requires prior registration with select retailers. This service is only available in certain countries.

[Status Monitor] Screen

A19R-02F


This screen is displayed when you press  on the control panel.

Use this screen to check the information of the machine, usage and logs, network settings, and error information.

▶ **Touch Panel Model(P. 125)**

▶ **5 Lines LCD Model(P. 126)**

Touch Panel Model

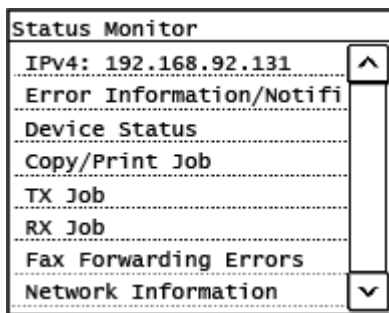

[IPv4]

Displays the IPv4 address of the machine by default. You can also hide this. ▶ **[Display IP Address](P. 429)**

[Error Information/Notification]

You can check the information of errors that occur on the machine. Take troubleshooting measures according to the error details.

▶ **A Message Appears(P. 623)**

▶ **An Error Code Is Displayed(P. 643)**

[Device Status]

[Paper Information]

Check the remaining amount of paper for each paper source.

[Cartridge Level]

You can check the remaining amount in the toner cartridge.

Other internal parts may reach the end of their lifetime before the toner runs out.

[Check Toner Cartridge Name]

You can check the product number of the toner cartridge.

[Check Counter]

Check the total number of pages printed, faxed, and copied. ▶ **Checking the Number of Printed Pages (Check Counter)(P. 402)**

[Version Information]

Displays the firmware version information of the machine.

[Serial Number]

Displays the serial number of the machine.

[Copy/Print Job]

Displays the copy or print processing status and log.

▶ **Checking the Copy Status(P. 314)**

▶ **Viewing the Print Job Status and Log(P. 212)**

[TX Job]

Displays the status and log of sent and saved scanned data and faxes.

▶ **Checking the Send and Save Status and Log of Scanned Data (Touch Panel Model)(P. 252)**

▶ **Checking Sent and Received Faxes(P. 282)**

[RX Job]

Displays the status and log of received faxes. ▶ **Checking Sent and Received Faxes(P. 282)**

[Fax Forwarding Errors]

If a fax could not be forwarded but remains in the memory, you can print it or forward it to a different destination, and view its content. ▶ **Checking Faxes that Failed to Be Forwarded(P. 283)**

[Network Information]

[IPv4]

Check the IPv4 address and other settings. ▶ **Setting IPv4 Addresses(P. 77)**

[IPv6]

Check the IPv6 address and other settings. ▶ **Setting IPv6 Addresses(P. 81)**

[Network Connection Method]

Check whether the machine has a wired or wireless connection.

Displays the connection status and error information when connected by wireless LAN.


[Direct Connection Information]

Displays the connection status when directly connected to a device.

[IEEE 802.1X Error Information]

Displays the details of errors that occur with IEEE 802.1X authentication.

5 Lines LCD Model

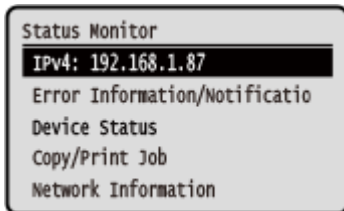

[IPv4]

Displays the IPv4 address of the machine by default. You can also hide this. ▶ **[Display IP Address](P. 429)**

[Error Information/Notification]

You can check the information of errors that occur on the machine. Take troubleshooting measures according to the error details.

▶ **A Message Appears(P. 623)**

▶ **An Error Code Is Displayed(P. 643)**

[Device Status]

[Paper Information]

Check the remaining amount of paper for each paper source.

[Cartridge Level]

You can check the remaining amount in the toner cartridge.

Other internal parts may reach the end of their lifetime before the toner runs out.

[Check Toner Cartridge Name]

You can check the product number of the toner cartridge.

[Check Counter]

Check the total number of pages printed, faxed, and copied. ▶ **Checking the Number of Printed Pages (Check Counter)(P. 402)**

[Version Information]

Displays the firmware version information of the machine.

[Serial Number]

Displays the serial number of the machine.

[Copy/Print Job]

Displays the copy or print processing status and log.

▶ **Checking the Copy Status(P. 314)**

▶ **Viewing the Print Job Status and Log(P. 212)**

[Network Information]

[IPv4]

Check the IPv4 address and other settings. ▶ **Setting IPv4 Addresses(P. 77)**

[IPv6]

Check the IPv6 address and other settings. ▶ **Setting IPv6 Addresses(P. 81)**

[Network Connection Method]

Check whether the machine has a wired or wireless connection.

Displays the connection status and error information when connected by wireless LAN.

[Direct Connection Information]

Displays the connection status when directly connected to a device.

[IEEE 802.1X Error Information]

Displays the details of errors that occur with IEEE 802.1X authentication.

How to Operate the Control Panel (Touch Panel Model)

A19R-02H

The control panel uses a touchscreen. Directly touch your finger to the buttons and items displayed on the screen to operate them.

▶ **Basic Touchscreen Operations (Tapping and Dragging)(P. 128)**

▶ **Selecting Items(P. 128)**

▶ **Scrolling the Screen(P. 129)**

▶ **Set the value(P. 129)**

! IMPORTANT

To prevent accidental operations or damage to the control panel, avoid the following:

- Pressing too hard with your fingers
- Pressing with a sharp tip, such as a fingernail, ballpoint pen, or pencil
- Operating with wet or dirty hands
- Operating with an object on the display

Basic Touchscreen Operations (Tapping and Dragging)

Tapping

Gently touch the screen with your fingertip and quickly release. Do this when selecting items and performing operations.

In the User's Guide, "press" and "select" refer to the tapping operation.




Dragging

Move your fingertip while touching the screen, and release it at the desired position. You can scroll lists and move the area you are touching to a desired position.



Selecting Items


When you tap an item name or button, the item can be selected. The selected screen is displayed, or the selected function is performed.

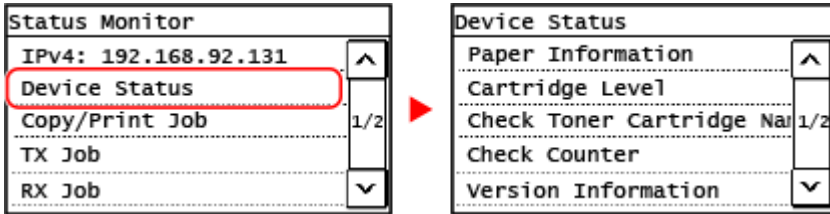



To Cancel a Selection


Drag your fingertip touching the screen away from the selected item or button and release it.

To Return to the Previous Screen

Press  on the control panel.



Scrolling the Screen

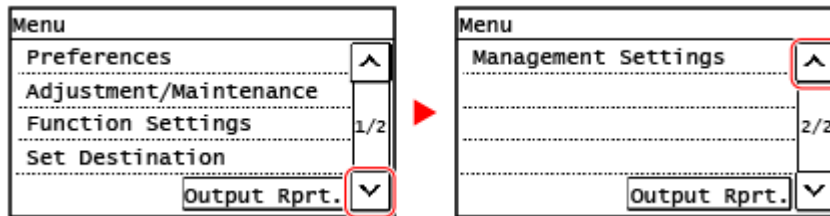When a scroll bar is displayed, this means that there are some items or information which are not displayed on the screen. Press [] or [] to scroll the screen toward the pressed direction.




Set the value

■ Set the value [] / [] buttons


Tap [] or [] to specify a value. You can specify the value directly by using the numeric keys.

Tap [] or [] to move a cursor.

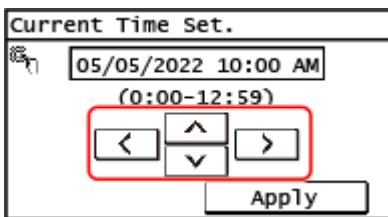

■ Set the value using the [+] and [-] buttons or the slider

Tap the [+] and [-] buttons to adjust the value. When the slider is displayed as shown below, you can drag it to the left or right to adjust the value.

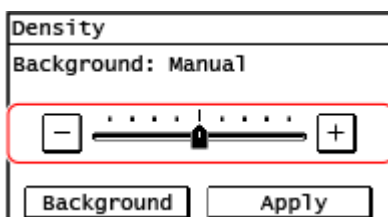

How to Operate the Control Panel (5 Lines LCD Model)


A19R-02J

Use the keys on the control panel to set the various functions and check the settings.

- ▶ Scrolling the Screen(P. 130)
- ▶ Moving to the Next or Previous Screen(P. 130)
- ▶ Confirming a Selected Item(P. 130)
- ▶ Using the Slider to Set Values(P. 130)


Scrolling the Screen

When the scroll bar appears on the screen, it indicates that there are items or information that cannot be completely displayed on the screen. Use ▲ or ▼ to scroll the screen in the direction pressed. The currently selected item is inverted.

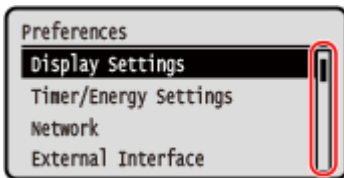


Moving to the Next or Previous Screen

To move to the next screen, press **OK** or ►. To return to the previous screen, press ◀ or **↶**.

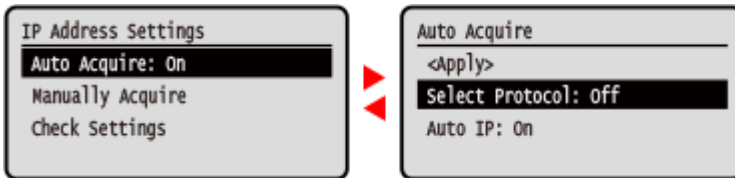


Confirming a Selected Item

To confirm a selected item, press **OK**.

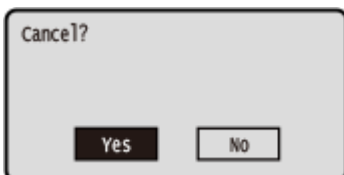

Using the Slider to Set Values

To adjust the value, press ◀ or ►.

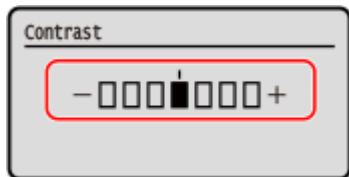

Entering Characters

Enter alphanumeric characters using the numeric keys on the control panel.


- ▶ **Entering Characters Using the Control Panel (Touch Panel Model)(P. 132)**
- ▶ **Entering Characters Using the Control Panel (5 Lines LCD Model)(P. 133)**

Entering Characters Using the Control Panel (Touch Panel Model)

You can enter letters, numbers, and symbols using the control panel.


The type of characters that you can enter may be limited depending on the item.

If the value input range is limited, the value that you can enter is displayed in parentheses () next to the input field.

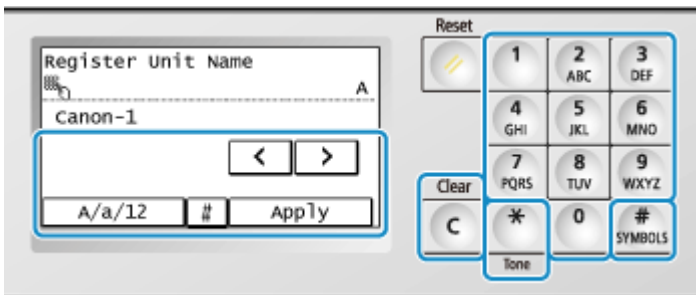

Changing the Character Type


Press [A/a/12] to switch the type of character that is entered. The currently selected type of character is indicated by the "A", "a", or "12" displayed above and to the right of the text input field.


You can also press  to switch the type of character.






You cannot change the character type for items whose character type is limited.







Entering Characters and Spaces

You can enter characters and symbols by using the numeric keys and by pressing keys displayed on the control panel. The keys to enter characters and the characters you can enter are the following.

When you place a cursor after a character and press , a space is entered.

When the entry mode is set to [a] or [A], a symbol can be entered by pressing  or pressing [#].

Key	A	a	12
	@ . - _ /		1
	ABC	abc	2
	DEF	def	3
	GHI	ghi	4
	JKL	jkl	5



Key	A	a	12
	MNO	mno	6
	PQRS	pqrs	7
	TUV	tuv	8
	WXYZ	wxyz	9
	(Not available)		0
	(space) - . * # ! " , ; : ^ ` _ = / ' ? \$ @ % & + \ ~ () [] { } < >		(Not available)

Deleting Characters

Press  to delete one character.


Press and hold  to continuously delete characters.

Moving the Cursor


Press [] or [].

Entering Numbers

Entering Numbers Using the Numeric Keys.

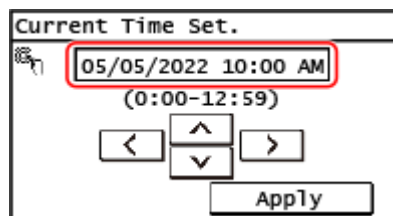

NOTE


- When [+] and [-] or a slider appears instead of numeric keys, press or drag these to set the value.  **Set the value(P. 129)**

Entering Characters Using the Control Panel (5 Lines LCD Model)

You can enter letters, numbers, and symbols using the control panel.

The type of characters that you can enter may be limited depending on the item.

If the value input range is limited, the value that you can enter is displayed in parentheses () on the screen.

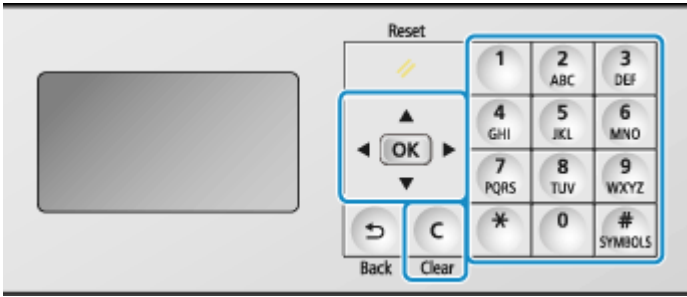


Changing the Character Type

Press **[*]** to change the character type in the order of uppercase letters (A), lowercase letters (a), and numbers (12).

You can also press [Entry Mode] ► **[OK]** to select the character type.

You cannot change the character type for items whose character type is limited.

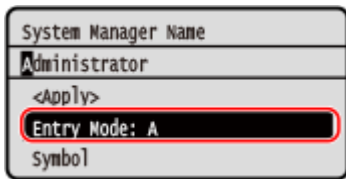



Entering Characters, Spaces, and Symbols

Enter characters and symbols using the numeric keys. The following are the usable keys and characters that can be entered:


You can enter a space by moving the cursor to the end of the characters and pressing ►.


When the entry mode is set to [a] or [A], a symbol can be entered by pressing **[#]**.

Key	A	a	12
1	@ . - _ /		1
2 ABC	ABC	abc	2
3 DEF	DEF	def	3
4 GHI	GHI	ghi	4
5 JKL	JKL	jkl	5
6 MNO	MNO	mno	6
7 PQRS	PQRS	pqrs	7
8 TUV	TUV	tuv	8
9 WXYZ	WXYZ	wxyz	9

Key	A	a	12
	(Not available)		0
	(space) -.*#!";:^\`_=/ '?\$@%&+~\~(){}<>		(Not available)

Deleting Characters




Press  to delete one character.


Press and hold  to continuously delete characters.




Moving the Cursor

Press  or .

Entering Numbers

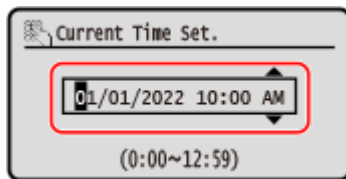Press  or . You can also use the numeric keys to enter numbers when  is displayed on the screen.

**NOTE**

- When the slider is displayed, press  or  to set the value.  **Using the Slider to Set Values(P. 130)**

Customizing the [Home] Screen

A19R-02L

You can quickly select frequently used functions from the [Home] screen of the control panel.

- ▶ **Rearranging the Buttons (Touch Panel Model)(P. 136)**
- ▶ **Inserting a Blank (Touch Panel Model)(P. 136)**
- ▶ **Changing the Display Order of the Items (5 Lines LCD Model)(P. 137)**

Rearranging the Buttons (Touch Panel Model)

You can rearrange the buttons on the [Home] screen.

1 On the control panel, press [Home Set.] in the [Home] screen. ▶ [Home] Screen(P. 121)


If the login screen appears, enter the System Manager ID and PIN, and then press [Log In]. ▶ **Logging In to the Machine(P. 138)**

2 Press [Set Display Order].

3 Select the button to move.

⇒ The currently selected item is inverted.

4 Press [Previous] or [Next] to move the button.

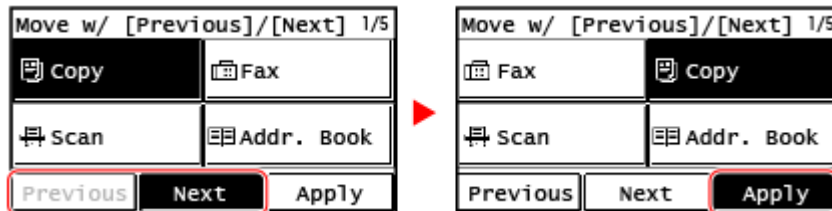

5 Press [Apply].

⇒ The location of the buttons on the [Home] screen is changed.

Inserting a Blank (Touch Panel Model)

You can insert a space between buttons.

1 On the control panel, press [Home Set.] in the [Home] screen. ▶ [Home] Screen(P. 121)

If the login screen appears, enter the System Manager ID and PIN, and then press [Log In]. ▶ **Logging In to the Machine(P. 138)**

2 Press [Insert and Delete Blank]

3 Select a button before which you want to insert a space and press [Insert].

4 Press [Apply].

⇒ A space is inserted right before the selected button.

When you want to delete the inserted space, select the space and press [Delete] ▶ [Apply].


Changing the Display Order of the Items (5 Lines LCD Model)

Rearrange the items on the [Home] screen so that you can operate frequently used items more quickly.


1 On the [Home] screen of the control panel, select [Display Order (Home)] ▶ .

If the login screen appears, enter the currently set System Manager ID and PIN, then select [<Log In>] and press . [▶ Logging In to the Machine\(P. 138\)](#)

2 Use ▲ or ▼ to select the item you want to move, and then press .

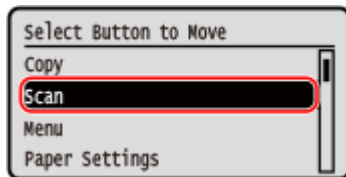

3 Use ▲ or ▼ to move the item, and then press .

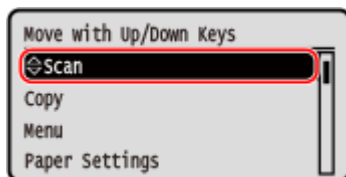

4 Press .

⇒ The display order of the items on the [Home] screen is changed.

Logging In to the Machine

A19R-02R

When the login screen is displayed on the control panel, enter the required login information to perform authentication. When authentication is successful, the screen changes, and you can continue operations.

🔴 **Logging In (Touch Panel Model)(P. 138)**

🔴 **Logging In (5 Lines LCD Model)(P. 138)**

Logging In (Touch Panel Model)

When the System Manager ID is set, the login screen is displayed for operations that require administrator privileges. Enter the System Manager ID and PIN to log in.

1 Press [Manager ID].

⇒ [System Manager ID] screen is displayed.

2 Enter the System Manager ID, and Press [Apply].

3 Press [PIN].

⇒ [System Manager PIN] screen is displayed.

If a PIN is not set, you can skip this step. Proceed to Step 5.


4 Enter the System Manager PIN, and Press [Apply].

5 Press [Log In].

⇒ When authentication is successful, the screen changes.

Logging In (5 Lines LCD Model)

When the System Manager ID is set, the login screen is displayed for operations that require administrator privileges. Enter the System Manager ID and PIN to log in.

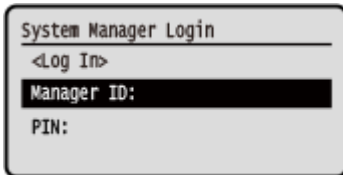

1 Select [Manager ID], and press .

⇒ [System Manager ID] screen is displayed.

2 Enter the System Manager ID and press .

3 Select [PIN], and press .

⇒ [System Manager PIN] screen is displayed.

If a PIN is not set, you can skip this step. Proceed to Step 5.

4 Enter the PIN, and press .

5 Select [<Log In>], and press .

⇒ When authentication is successful, the [Home] screen or other screen is displayed.

Placing Originals

A19R-02S

Place documents, photos, and other printed materials ("originals") to be scanned, faxed, or copied on the platen glass or in the feeder.

Determine whether to use the platen glass or feeder depending on the document type and usage.

Platen Glass

Scans originals in a fixed position. Originals must be placed one at a time, but this ensures highly accurate scanning.

You can also place the following originals on the platen glass:

- Books, thick paper, thin paper, and other originals that cannot be placed in the feeder
- Tracing paper, transparencies, and other transparent originals

▶ Placing Originals on the Platen Glass(P. 140)

Feeder

You can place two or more sheets of originals in the feeder. The placed originals are scanned automatically one sheet at a time.

Both sides of originals can be scanned automatically.*1

▶ Placing Originals in the Feeder(P. 141)

*1 Available only when the machine is equipped with a feeder that supports 2-sided scanning. ▶ Supported Functions(P. 3)

! IMPORTANT


Place Dry Originals

- Before placing originals, make sure that any ink, correction fluid, or glue on them has completely dried.


Placing Originals on the Platen Glass

For the size of the originals that can be placed on the platen glass, see the basic specifications of the machine. ▶ Basic Specifications(P. 24)

1 Open the feeder.

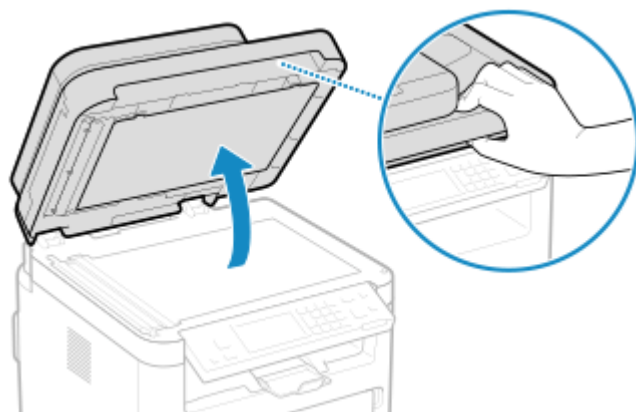

2 Place the side of the original to be scanned face down on the platen glass in the landscape orientation while aligning the corner of the original with the top left corner of the platen glass.

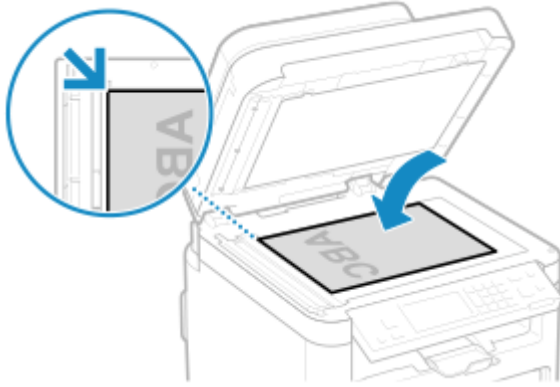

When scanning tracing paper, transparencies, and other transparent originals, place a sheet of plain white paper on top.

3 Gently close the feeder.

4 When scanning of the original is complete, remove the original from the platen glass.

Placing Originals in the Feeder

When scanning two or more sheets of originals, place only originals of the same size. For the size of the originals that can be placed in the feeder, see the specifications of the feeder.


🔴 **Feeder Specifications(P. 26)**

! IMPORTANT


To prevent paper jams inside the feeder, do not place the following originals:

- Wrinkled, creased, curled, rolled, or torn paper
- Carbon paper, coated paper, thin translucent paper, thin paper, or transparencies
- Stapled or clipped paper
- Paper printed by a thermal transfer printer

1 Open the original supply tray.

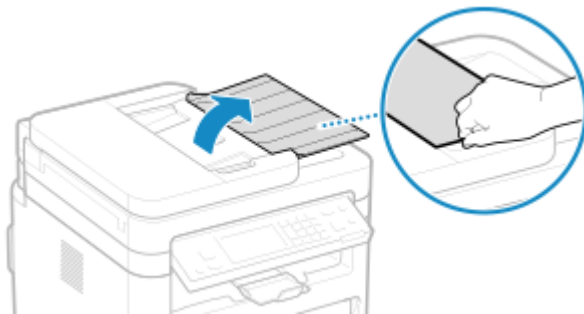

2 Spread the slide guides outward until they are slightly farther apart than the width of the original.

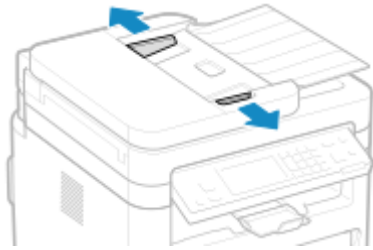


3 Fan the originals and align the edges.



Fan the originals in small batches, and align the edges by tapping the originals on a flat surface a few times.


4 Place the sides of the originals to be scanned face up in the feeder in the landscape orientation.

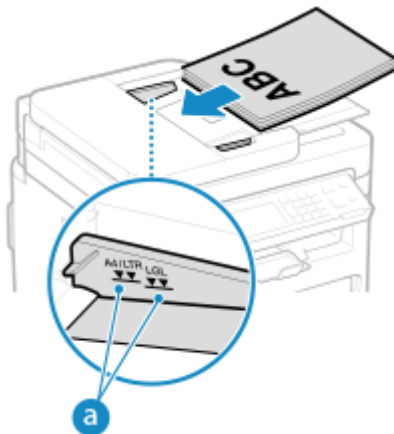

Make sure the placed originals do not exceed the load limit line (**a**). If they exceed the load limit line, there may be misfeeds or a paper jam.


■When Loading A6 Size Paper

Place the A6 slide guides in the feeder.

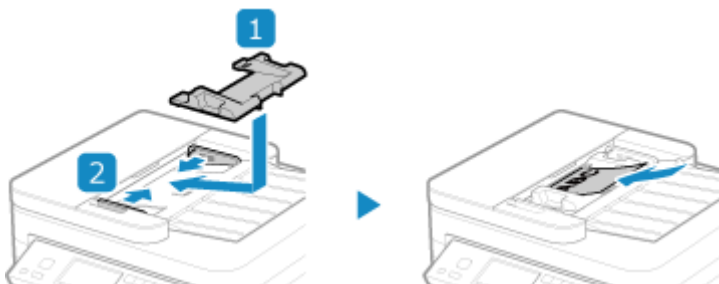

- Load the paper in portrait orientation (A6R).

5 Align the slide guides against the edges of the originals.

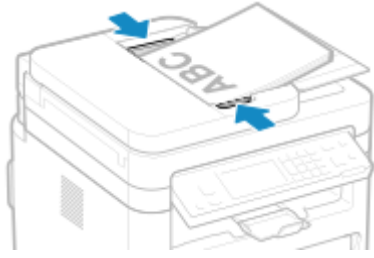

Slide guides that are aligned but too loose or too tight can cause misfeeds or a paper jam.

6 When scanning of the originals is complete, remove the ejected originals from below the feeder.

- Do not add originals or remove them during scanning.
- Leaving ejected originals below the feeder may cause a paper jam.

Loading Paper

A19R-02U

To ensure print quality, confirm the usable paper and how to handle and store paper, and prepare the appropriate paper for use with the machine. [▶ Usable Paper\(P. 19\)](#) / [▶ Precautions When Handling Paper\(P. 22\)](#)

Load the prepared paper in the machine, and then configure the paper size and type settings.

Loading Paper in the Machine

Load the paper in the drawer. When using envelopes or paper with logos, be careful of the orientation of the loaded paper and which side is face up.

- [▶ Loading Paper in the Drawer\(P. 145\)](#)
- [▶ Preparations and Orientation for Loading Envelopes\(P. 150\)](#)
- [▶ Orientation for Loading Paper with a Logo\(P. 152\)](#)

Paper Settings

To ensure quality printing and prevent paper jams, the paper size and type must be set correctly according to the loaded paper.

- [▶ Specifying the Paper Size and Type\(P. 154\)](#)

Loading Paper in the Drawer

Load paper you usually use into the drawer, which can hold large amounts of paper. The setting method varies depending on the size of the paper to be loaded.

When Loading A4, B5, Legal, or Letter Size Paper


Load paper using the standard size method.

▶ **Loading Standard Size Paper(P. 145)**

When Loading A5 Size Paper


The setting method varies depending on the orientation of the paper to be loaded.

Landscape orientation (A5)

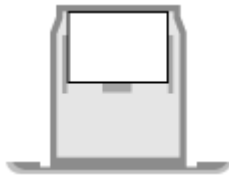

▶ **Loading Non-standard Size Paper(P. 147)**

Portrait orientation (A5R)

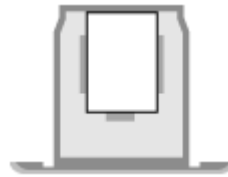

▶ **Loading Standard Size Paper(P. 145)**


When Loading Custom Size Paper

Load paper using the non-standard size method.

▶ **Loading Non-standard Size Paper(P. 147)**

NOTE

- When performing printing, open the paper stopper in advance.

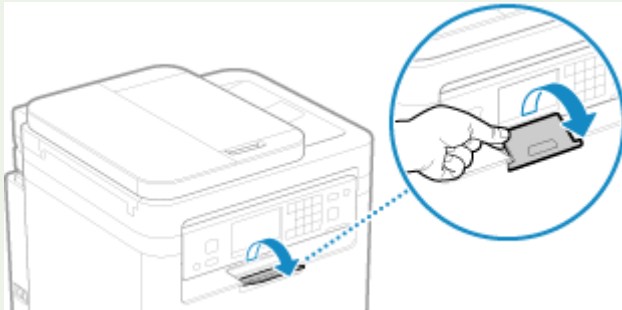


Loading Standard Size Paper

You can load paper correctly by aligning the paper guides on the drawer with the markings.

When using paper with logos, be careful of the orientation of the loaded paper and which side is face up. ▶


Orientation for Loading Paper with a Logo(P. 152)

- 1 Pull out the drawer, and remove it while lifting the front side.**

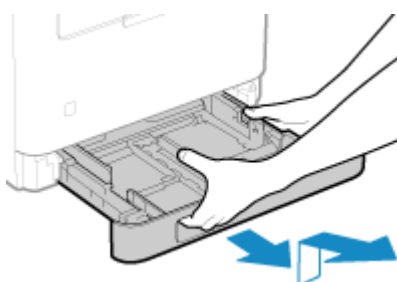


2 Align the paper guides with the size of the paper to be loaded.

- 1 While pressing the lock release lever, move the paper guide.

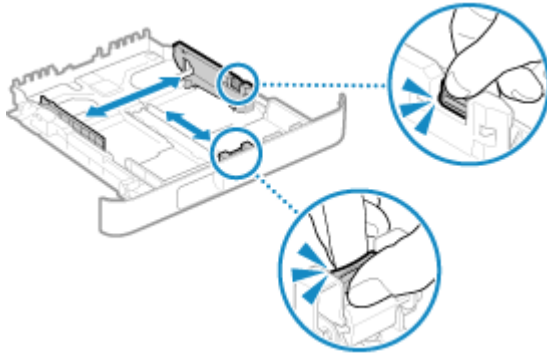


- 2 Align the projections on the paper guides with the size markings of the paper to be loaded.

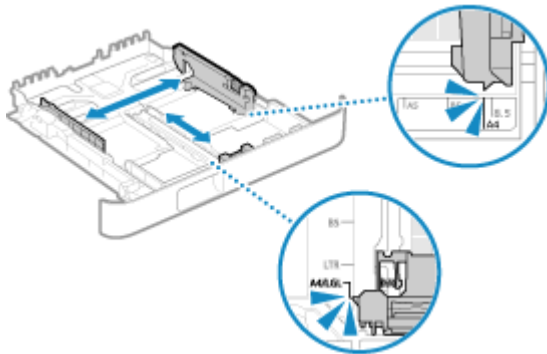

Paper guides that are aligned but too loose or too tight can cause misfeeds or a paper jam.

■When Loading Legal Size Paper

While pressing the lock release lever, extend the drawer toward you.

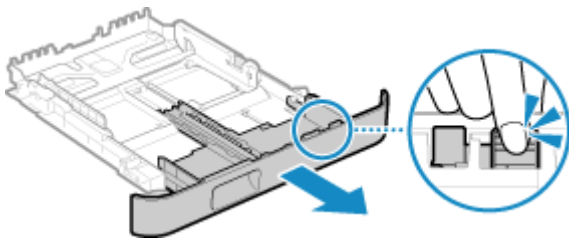


3 Fan the paper and align the edges.



Fan the paper in small batches, and align the edges by tapping the paper on a flat surface a few times.

4 Load the paper with the print side face up.

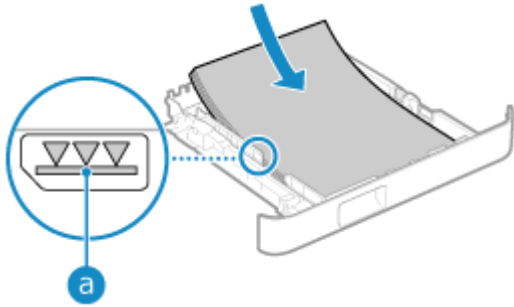

- Align the paper with the paper guide on the front side of the drawer.
- Make sure the loaded paper does not exceed the load limit line (a). If it exceeds the load limit line, there may be misfeeds or a paper jam.

■ When Printing on the Back Side of Printed Paper (Manual 2-sided Printing)

Flatten the edge of the paper to remove any curls, and load the paper with the back (unprinted) side face up.

- You can use only paper printed with this machine.
- If toner smudges and splatters appear on the back side, adjust the image quality. ▶[Manual Back Side Print (2-Sided Only)](P. 455)
- You cannot print on the side that has previously been printed on.

5 Load the drawer into the machine.

- ▶ By default, the Paper Settings confirmation screen is displayed. ▶[Notify to Check Paper Settings] (P. 506)

When you are using legal size paper, the drawer is extended from the machine and is not fully housed.

6 Set the paper size and type, as needed. ▶Setting the Paper Size and Type for the Drawer(P. 155)

By default, the paper size and type of the drawer are set to LTR and Plain 2. When paper of a different size or type is loaded, change the paper settings.


Loading Non-standard Size Paper

You can load paper correctly by aligning the paper guides on the drawer with the paper.


When using envelopes or paper with logos, be careful of the orientation of the loaded paper and which side is face up.

- ▶Preparations and Orientation for Loading Envelopes(P. 150)
- ▶Orientation for Loading Paper with a Logo(P. 152)

1 Pull out the drawer, and remove it while lifting the front side.

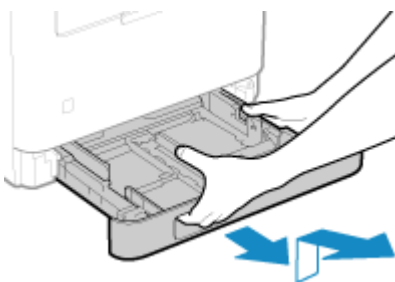


2 Slide the paper guides to the outside.

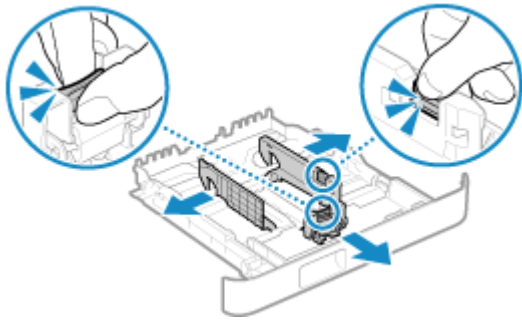

While pressing the lock release lever, move the paper guides.

■When Loading Paper Longer than A4 Size

While pressing the lock release lever, extend the drawer toward you.

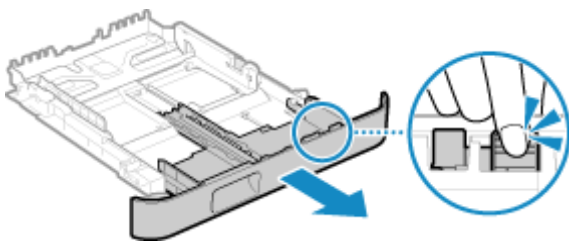


3 Fan the paper and align the edges.



Fan the paper in small batches, and align the edges by tapping the paper on a flat surface a few times.

4 Load the paper with the print side face up.

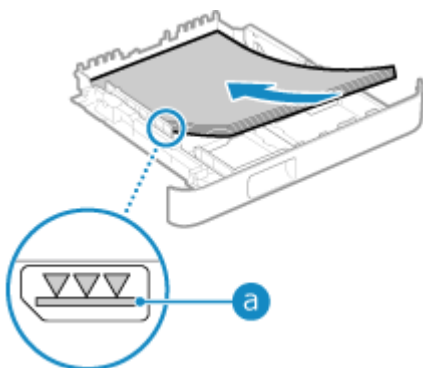


- Load the paper against the rear edge of the drawer.
- Make sure the loaded paper does not exceed the load limit line (a). If it exceeds the load limit line, there may be misfeeds or a paper jam.

■When Printing on the Back Side of Printed Paper (Manual 2-sided Printing)

Flatten the edge of the paper to remove any curls, and load the paper with the back (unprinted) side face up.

- You can use only paper printed with this machine.
- If toner smudges and splatters appear on the back side, adjust the image quality. ▶[Manual Back Side Print (2-Sided Only)](P. 455)
- You cannot print on the side that has previously been printed on.

5 Align the paper guides with the width and length of the paper.

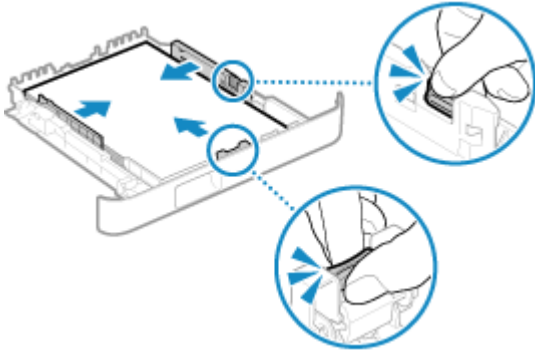

- While pressing the lock release lever, align the paper guides with the width and length of the paper.
- Paper guides that are aligned but too loose or too tight can cause misfeeds or a paper jam.

6 Load the drawer into the machine.

- ▶ By default, the Paper Settings confirmation screen is displayed. ▶[Notify to Check Paper Settings] (P. 506)

When you are using paper that is longer than A4 size, the drawer is extended from the machine and is not fully housed.

7 Set the paper size and type. ▶Setting the Paper Size and Type for the Drawer(P. 155)

By default, the paper size and type of the drawer are set to LTR and Plain 2. When paper of a different size or type is loaded, change the paper settings.

Preparations and Orientation for Loading Envelopes

A19R-02Y

As envelopes have a different shape and thickness from regular paper, preparations must be made before loading envelopes.

Envelopes can be printed only on the front side (non-glued side). When loading envelopes, pay attention to the orientation and which side is face up.

▶ **Preparations before Loading Envelopes(P. 150)**

▶ **Orientation of Envelopes(P. 151)**


NOTE

- For the general procedure of loading envelopes, see the following:
▶ **Loading Paper in the Drawer(P. 145)**

Preparations before Loading Envelopes

Align the envelopes regardless of the number of envelopes to be loaded.


1 Close the flap of each envelope.

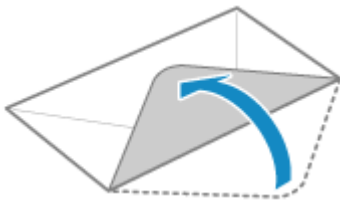


2 Flatten them to remove any air, and make sure the edges are pressed tightly.



3 Loosen any stiff corners of the envelopes, and flatten any curls.

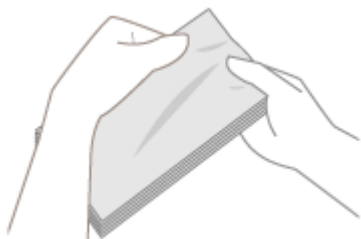


4 Align the edges of the envelopes on a flat surface.

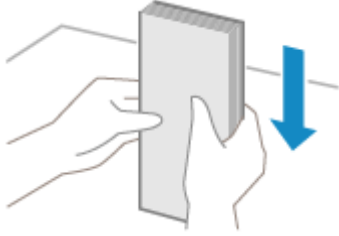

⇒ The envelopes are ready to be loaded.

Orientation of Envelopes

Load the envelopes No. 10 (COM10), Monarch, ISO-C5, or DL in portrait orientation with the front side (non-glued side) face up and the long side of the envelope parallel with the long side of the drawer. Load the envelope with the flap closed and on the left side.

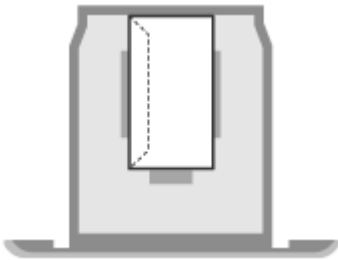

Orientation for Loading Paper with a Logo

A19R-030

When loading paper with a logo, pay attention to the orientation and which side is face up. By default, the orientation the paper is to be loaded and the side to print on vary depending on whether you want to print on one or both sides.

▶ **Printing on One Side of Paper with a Logo(P. 152)**

▶ **Printing on Both Sides of Paper with a Logo(P. 152)**


NOTE

- For the general procedure of loading paper, see the following:
 - ▶ **Loading Paper in the Drawer(P. 145)**
- You can configure the settings so that the orientation the paper is to be loaded and the side to print on do not change depending on whether you want to print on one or both sides. When this setting is configured, load the paper using the 2-sided printing method. ▶ **[Switch Paper Feed Method](P. 462)**


Printing on One Side of Paper with a Logo

Load the paper with the logo side (side to be printed) face up.

Paper with logo in portrait orientation

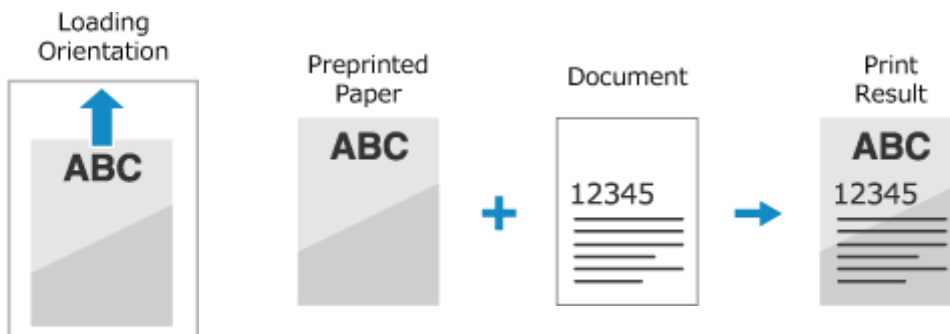

Paper with logo in landscape orientation

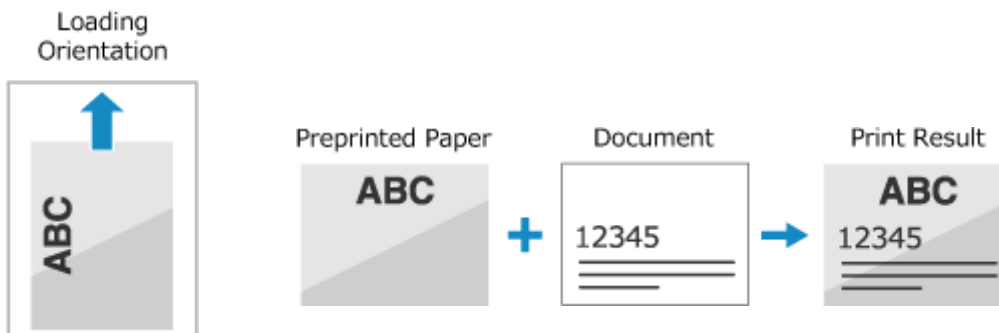


Printing on Both Sides of Paper with a Logo

Load the paper with the logo side (side to be printed first) face down.

Paper with logo in portrait orientation



Paper with logo in landscape orientation

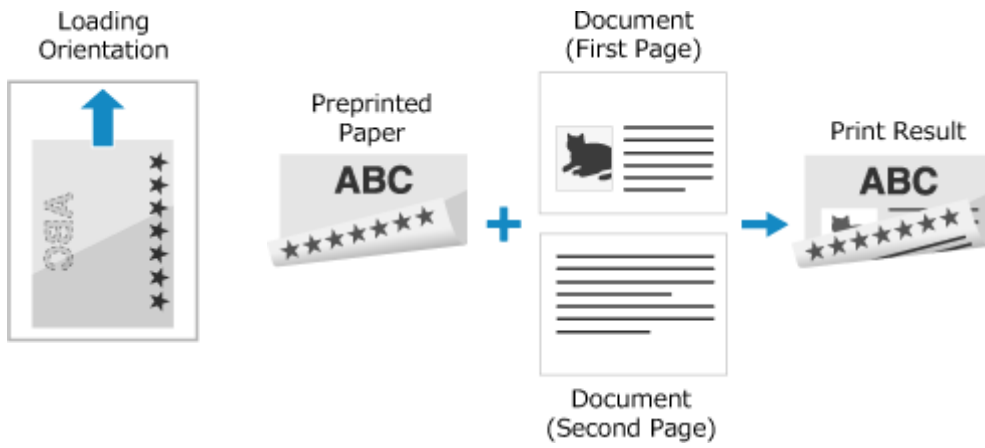

Specifying the Paper Size and Type

A19R-031

To ensure quality printing and prevent paper jams, the paper size and type must be set correctly according to the loaded paper.

You can register frequently used paper settings and hide unneeded paper settings to simplify the paper settings.

Settings Required after Loading the Paper

Set the paper size and type according to the loaded paper.

▶ **Setting the Paper Size and Type for the Drawer(P. 155)**

Simplifying the Paper Settings

You can register and set the paper size for easier settings.

▶ **Registering Non-standard Size Paper (Custom Paper)(P. 159)**


▶ **Hiding Unused Paper Sizes(P. 161)**

Setting the Paper Size and Type for the Drawer


A19R-032

By default, the paper size and type of the drawer are set to LTR and Plain 2. When paper of a different size or type is loaded, change the paper settings.

Touch Panel Model

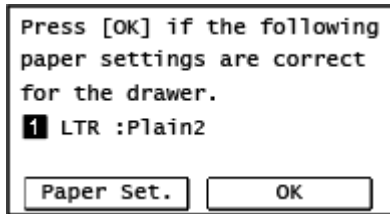

5 Lines LCD Model

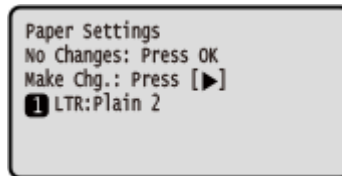

When [Notify to Check Paper Settings] is set to [On], the screen above is displayed. If you want to change the settings, start from [Paper Set.].

This section describes how to configure the settings using the control panel.

You can also configure the settings using Remote UI from a computer. ▶ **Managing the Machine from a Computer (Remote UI)(P. 394)**


▶ **Touch Panel Model(P. 155)**

▶ **5 Lines LCD Model(P. 156)**


Touch Panel Model

1 On the control panel, press [Paper Set.] in the [Home] screen. ▶ **[Home] Screen(P. 121)**

2 Press [Drawer 1].

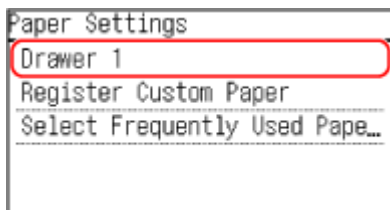

3 Select the size of the paper loaded in the drawer.

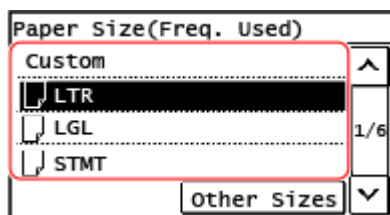


You can scroll the screen to view paper sizes (such as envelopes) not displayed on the screen.


■ When A5 Size Paper Is Loaded

When paper is loaded in the landscape orientation, select [A5]. When paper is loaded in the portrait orientation, select [A5R].

Landscape orientation (A5)

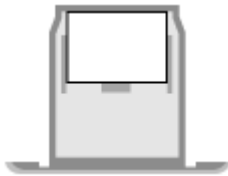


Portrait orientation (A5R)

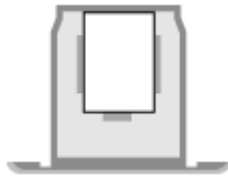

■ When Non-standard Size (Custom Size) Paper Is Loaded

- 1 Press [Custom].
- 2 Press [X] or [Y] to enter the length and press [Apply].

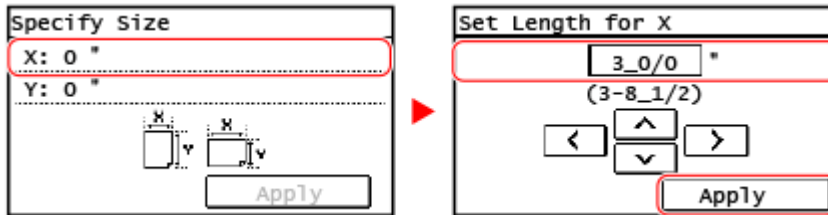


When frequently-used non-standard paper sizes are registered, the registered size is displayed as the paper size. ▶ **Registering Non-standard Size Paper (Custom Paper)(P. 159)**

- 3 Press [Apply].

■ If a Set Paper Size Is Not Displayed

Press [Other Sizes], and select the paper size from the displayed list.

4 Select the type of the paper loaded in the drawer.

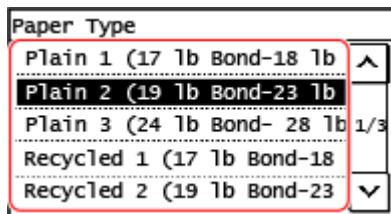


⇒ The paper size and type are set.

NOTE


- You can change the paper size displayed on the screen in Step 3. ▶ **Hiding Unused Paper Sizes(P. 161)**

5 Lines LCD Model

- 1 On the control panel, select [Paper Settings] in the [Home] screen, and press **OK**. ▶ **[Home] Screen(P. 121)**
- 2 Select [Drawer 1], and press **OK**.

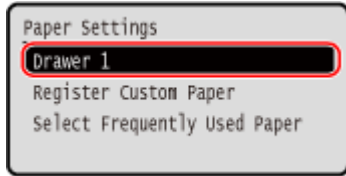

3 Select the size of the paper loaded in the drawer, and press **OK**.

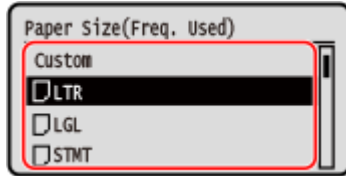



You can scroll the screen to view paper sizes (such as envelopes) not displayed on the screen.

■When A5 Size Paper Is Loaded

When paper is loaded in the landscape orientation, select [A5]. When paper is loaded in the portrait orientation, select [A5R].


Landscape orientation (A5)

Portrait orientation (A5R)

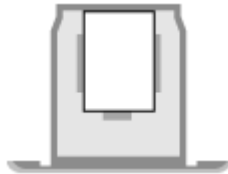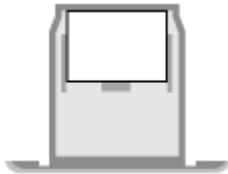

■When Non-standard Size (Custom Size) Paper Is Loaded

- 1 Select [Custom], and press **OK**.
- 2 Select [X] ► **OK** ► enter the values in [X] ► **OK**.

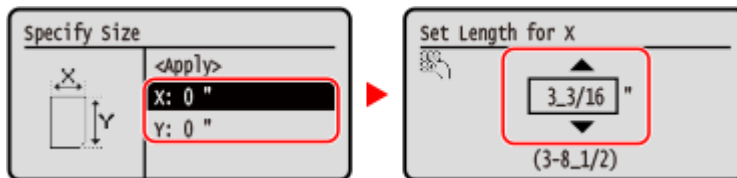


- 3 Enter the values in [Y] in the same way as [X].
When frequently-used non-standard paper sizes are registered, the registered size is displayed as the paper size. ▶ **Registering Non-standard Size Paper (Custom Paper)(P. 159)**
- 4 Select [<Apply>], and press **OK**.

■If a Set Paper Size Is Not Displayed

Press [<Other Sizes>], press **OK**, and select the paper size from the displayed list.

4 Select the type of the paper loaded in the drawer, and press **OK**.

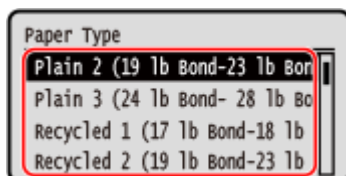

The paper size and type are set.

NOTE

- You can change the paper size displayed on the screen in Step 3. ▶ **Hiding Unused Paper Sizes(P. 161)**

Registering Non-standard Size Paper (Custom Paper)

A19R-035

Custom paper is non-standard size paper whose side lengths can be freely defined within the range supported by the machine.

It is recommended to register a frequently used non-standard paper size. You can call the registered paper size on the paper size selection screen, which saves time to entering the paper size. You can register up to three custom sizes.

This section describes how to register the settings using the control panel.

You can also register the settings using Remote UI from a computer. [▶Managing the Machine from a Computer \(Remote UI\)\(P. 394\)](#)

▶Touch Panel Model(P. 159)

▶5 Lines LCD Model(P. 160)

Touch Panel Model

1 On the control panel, press [Paper Set.] in the [Home] screen. [▶\[Home\] Screen\(P. 121\)](#)

2 Press [Register Custom Paper].

⇒ The [Register Custom Paper] screen is displayed.

3 Select the registration number.

The size is registered to the selected number.


If you have selected the registered number, continue on to press [Edit].

4 Press [X] or [Y] to enter the length and press [Apply].



5 Press [Apply].

6 Select the paper type to register.

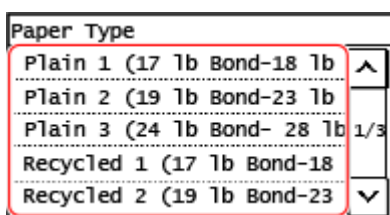

⇒ The custom paper is registered.

5 Lines LCD Model

- 1 On the control panel, select [Paper Settings] in the [Home] screen, and press **OK**. 
[Home] Screen(P. 121)


- 2 Select [Register Custom Paper], and press **OK**.

⇒ The [Register Custom Paper] screen is displayed.

- 3 Select the registration number, and press **OK**.

If you have selected the registered number, continue on to select [Edit], and press **OK**.


- 4 Select [X]  **OK**  enter the values in [X]  **OK**.

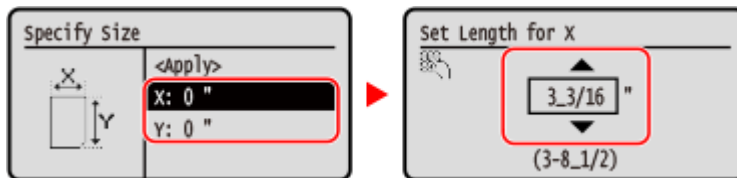

- 5 Enter the values in [Y] in the same way as [X].

- 6 Select [<Apply>], and press **OK**.

- 7 Select the type of the paper, and press **OK**.

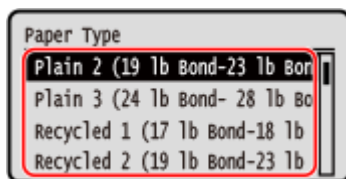

⇒ The custom paper is registered.

Hiding Unused Paper Sizes

The paper settings screen displays the registered frequently used paper sizes. If unused paper sizes are displayed, you can hide these for each paper source to make it easier to select a paper size. To select a hidden paper size, press [Other Sizes] on the paper settings screen.

Use the control panel to configure the settings. You cannot configure the settings using Remote UI from a computer.

▶ Touch Panel Model(P. 161)

▶ 5 Lines LCD Model(P. 161)


Touch Panel Model

1 On the control panel, press [Paper Set.] in the [Home] screen. ▶ [Home] Screen(P. 121)


2 Press [Select Frequently Used Paper Sizes].

⇒ The [Select Frequently Used Paper Sizes] screen is displayed.

3 Select a paper source.

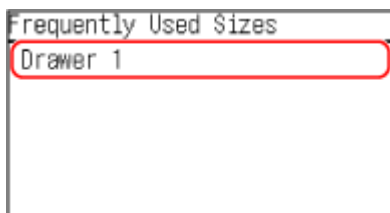

4 Clear the checkboxes of the paper sizes to hide, and press [Apply].

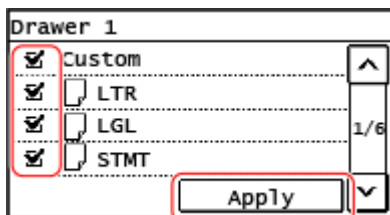

⇒ Paper sizes whose checkboxes are cleared are not displayed on the paper settings screen.


5 Lines LCD Model

1 On the control panel, select [Paper Settings] in the [Home] screen, and press **OK**. ▶ [Home] Screen(P. 121)


2 Select [Select Frequently Used Paper Sizes], and press **OK**.

⇒ The [Select Frequently Used Paper Sizes] screen is displayed.

3 Select a paper source, and press **OK**.

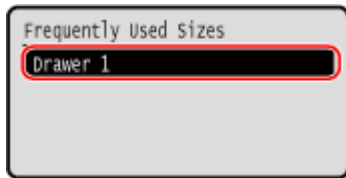

4 Select the paper size to hide and press **OK**.

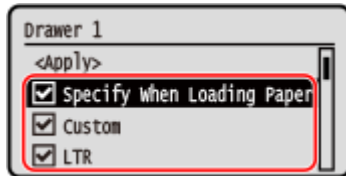

⇒ The checkboxes on the paper sizes are cleared.

5 Select [Apply], and press **OK**.

⇒ Paper sizes whose checkboxes are cleared are not displayed on the paper settings screen.

Registering Destinations (Address Book)

A19R-037

Register destinations for sending and saving scanned data and faxes to the Address Book*¹ of the machine.

*¹ This function is available only when the fax function and the function to send scanned data are supported. ▶

Supported Functions(P. 3)

Address Book Function

By registering destinations to the Address Book, you can save the trouble of entering the information of destinations each time you send or save data. The Address Book has a function for easily specifying destinations. Use this function when displaying the Address Book screen or specifying destinations.

▶ **Address Book Function(P. 164)**

Destinations that Can Be Registered

- E-mail address
- File save locations (shared folder)
- Fax number

How to Register Destinations

You can register a destination by entering a name, e-mail address, fax number, and other information.

You can register a destination to the Address Book from the TX Job Log of a scan job or a fax job.

You can register destinations either with the control panel or Remote UI, but the types of destinations that can be registered and the registration method vary.

Registering Using the Control Panel

Use the control panel to register destinations from the TX Job Log.

You cannot use the control panel to register file save locations (shared folder).

▶ **Registering Destinations to the Address Book (Control Panel)(P. 166)**

Registering Using Remote UI

Use Remote UI to register file save locations (shared folder).

You cannot use Remote UI to register destinations from the TX Job Log.

▶ **Registering Destinations to the Address Book (Remote UI)(P. 171)**

■ See Also

Importing and Exporting the Address Book

You can share and back up data in the Address Book.

▶ **Importing and Exporting the Address Book(P. 410)**

Preventing Unauthorized Use of the Address Book

To prevent unauthorized adding of new entries to the Address Book and editing of existing entries, you can set a PIN and restrict the method for adding new entries.

▶ **Restricting Address Book Registration and Editing(P. 382)**

Address Book Function

A19R-038

You can specify destinations registered in the Address Book by calling up the Address Book in the [Home] screen or the scan or fax screen on the control panel.

When registering destinations, select the function to quickly specify the destination.

You can also efficiently specify destinations from the Address Book screen, such as by grouping destinations or displaying them by type.

Function to Quickly Specify a Destination

When registering destinations, select and register either of the following:

- **One-Touch**

It is very useful to register an especially frequently used destination to a One-Touch button. Any types of destinations can be registered to a One-Touch button. Register a destination to a One-Touch button on the [Home] screen.

Up to four one-touch buttons are available.

- **Coded Dial**

Register a 3-digit number for each destination. You can then directly enter that number to specify a destination.

You can register up to 100 destinations with Coded Dial numbers.

Registering a Group of Multiple Destinations

You can register multiple registered e-mail address or fax number destinations as a group to One-Touch or Coded Dial. This saves you the trouble of specifying multiple destinations individually when sending data.

You can register up to 50 groups.

You can register only the same type of destinations for one group.

- ▶ **Registering Groups to the Address Book (Control Panel)(P. 168)**


- ▶ **Registering Groups to the Address Book (Remote UI)(P. 175)**

Classifying by Index

You can display the initials of the names and types of destinations (such as e-mail or fax) set at the time of registration by classifying them by index.

■ Address Book Screen

When you call the Address Book from the [Home] screen or scan or fax screen, the following screen is displayed.

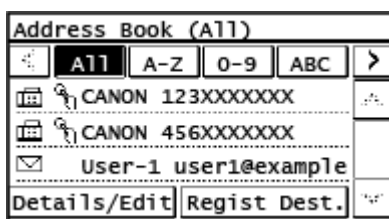

List of Registered Destinations

The types of destinations are indicated with the following symbols, and the destination information, such as the name, e-mail address, and fax number, are displayed:

[✉]: E-mail

[📁]: File save location (shared folder)



[📠]: Fax

- [👤] is displayed for group destinations.

- [👤] is displayed next to the destination type symbol for destinations registered to One-Touch.

Index

This is displayed at the top of the screen. You can filter destinations displayed in the list by selecting their type or the initials of a name.

- Press [] or [] to change the index display.
- To display all destinations registered to the Address Book, select [All].
- When specifying the destinations to be displayed by initials of the name, select [A-Z], [0-9], or [ABC] to [YZ].

Destination Operation Items


These are displayed on the bottom of the screen. Press to register, edit, or delete a destination, or to specify a destination to which to send or save data.

- When you call the Address Book from the [Home] screen and select a destination address, the scan or fax screen is displayed with the selected address specified.

Registering Destinations to the Address Book (Control Panel)

A19R-039

You can register destinations to the Address Book using the control panel.

1 On the control panel, press [Addr. Book] in the [Home] screen.  [Home] Screen(P. 121)

2 Press [Regist Dest.].


⇒ The [Register As] screen is displayed.

If the [Address Book PIN] screen is displayed, enter the PIN, and press [Apply].

3 Press [Coded Dial] or [One-Touch].

⇒ [Destination Type] screen is displayed.

4 Select the destination type.

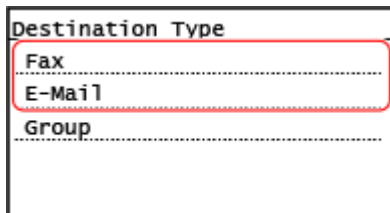


Destination Type

Fax


E-Mail

Group

When registering group destinations, see the following.

 **Registering Groups to the Address Book (Control Panel)(P. 168)**

5 Enter the destination information.

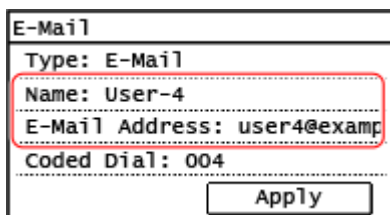

E-Mail


Type: E-Mail

Name: User-4

E-Mail Address: user4@examp

Coded Dial: 004

Apply

- Press [Name] and enter the name, and then press [Apply].
- You can register a destination without entering its name, but by entering the name, you can search for it by its initials when specifying the destination.
- For destination information, press [E-Mail Address] or [Fax Number], enter that information, and then press [Apply].
- When entering an international destination in [Fax Number], enter the international access number, country code, and fax number in that order. If you are unable to connect, press [Pause] in between the numbers to add a pause. You can change the pause time.  **[Set Pause Time](P. 490)**

6 Set the fax sending details, as needed.

If a fax number was registered in Step 5, set the details when a send error occurs or it takes time to send a fax to that number.

If you registered something other than a fax number, this step is not required. Proceed to Step 7.

- 1 Press [Fax Number] ► [Details].
- 2 Set the items, and press [Apply].

[ECM TX] *1

When an error occurs for an image being sent, the machine corrects the image so as not to send a distorted image.

[TX Speed] *1

If it takes time to start sending a fax, such as when there is a poor phone line connection, the machine lowers the communication start speed.

[Long Distance]

If a communication error occurs when sending a fax to an international destination, select [International (1)]. If the error does not improve, select [International (2)] and [International (3)] in that order.

*1 If this is not set here, the settings that appear when selecting [Menu] in the [Home] screen and then selecting [Function Settings] are applied.

▶ [ECM TX](P. 490)

▶ [TX Start Speed](P. 491)

7 Press [Apply].


► The destination is registered to the Address Book.

When a destination is registered to [One-Touch], the destination is registered to the [One-Touch] button on the [Home] screen. The name which is entered in [Name] when the destination is registered appears as the button name.

NOTE

Registering a Destination from the TX Job Log of a Scan or Fax Job

- You can register a destination to the Address Book from the TX Job Log of a scan job or a fax job with the following steps.

 on the control panel ► [TX Job] ► [Job Log] ► select the log you want to call up ► [Reg Adr Book].

▶ **Checking the Send and Save Status and Log of Scanned Data (Touch Panel Model)(P. 252)**

▶ **Checking the Status and Log for Sent and Received Faxes(P. 282)**

Registering Groups to the Address Book (Control Panel)

A19R-03A

You can register a group of multiple destinations to the Address Book using the control panel. You can register only the same type of destinations for a group. You cannot register file save locations (shared folder) to a group.

Required Preparations

- Register the destinations to be added to a group to the Address Book of the machine. **▶Registering Destinations to the Address Book (Control Panel)(P. 166)**

1 On the control panel, press [Addr. Book] in the [Home] screen. ▶[Home] Screen(P. 121)

2 Press [Regist Dest.].

⇒ The [Register As] screen is displayed.

If the [Address Book PIN] screen is displayed, enter the PIN, and press [Apply].

3 Press [Coded Dial] or [One-Touch].

⇒ [Destination Type] screen is displayed.

4 Press [Group].


⇒ The [Group] screen is displayed.

5 Press [Name] and enter the name, and then press [Apply].

You can register a destination without entering its name, but by entering the name, you can search for it by its initials when specifying the destination.


6 Press [Number of Destinations].

7 Press [Add] and select the address you want to add to the group.

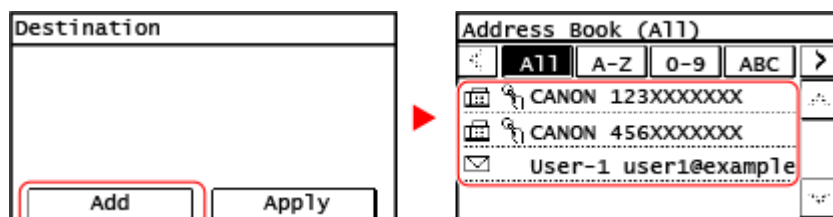

- Select the index at the top of the screen of the Address Book to filter and display the destinations.
- Repeat this operation until you register every address you want to add to the group.

8 Press [Apply].

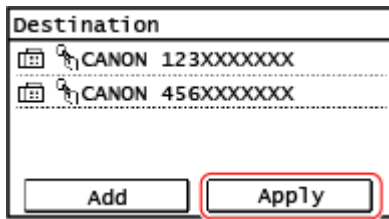

- Press the added address to check the information of the added address.
- If you want to remove an address from the group, press the address you want to remove and press [Remove].

9 Press [Apply].

⇒ The destination is registered to the Address Book.


When a destination is registered to [One-Touch], the destination is registered to the [One-Touch] button on the [Home] screen. The name which is entered in [Name] when the destination is registered appears as the button name.

Editing and Deleting Destinations in the Address Book (Control Panel)

A19R-03C

You can edit information of destinations registered in the Address Book or delete unused destinations.

- 1** On the control panel, press [Addr. Book] in the [Home] screen. ▶[Home] Screen(P. 121)
- 2** Press [Details/Edit].
- 3** Press the destination you want to edit or delete.

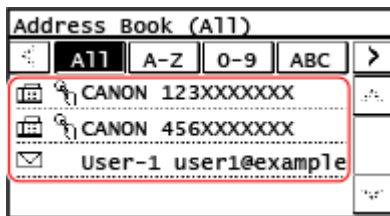

- Select the index at the top of the screen of the Address Book to filter and display the destinations.

4 Edit or delete the destination.

■ When Editing a Destination

- 1** Press [Edit].
If the [Address Book PIN] screen is displayed, enter the PIN, and press [Apply].
- 2** Select and edit the item you want to edit.
- 3** Press [Apply].
⇒ The edited information is applied.

■ When Deleting a Destination

- 1** Press [Delete].
If the [Address Book PIN] screen is displayed, enter the PIN, and press [Apply].
- 2** Press [Yes].
⇒ The destination is deleted.

Registering Destinations to the Address Book (Remote UI)

A19R-03E


You can register destinations to the Address Book using Remote UI from a computer. Use Remote UI to register file save locations (shared folder).

Administrator privileges are required to register destinations using Remote UI.

Required Preparations

- When registering a shared folder as a destination, prepare the following information and keep it close by:
 - Name or IP address of the computer with the shared folder
 - ▶ [Viewing the System Information of the Computer\(P. 662\)](#)
 - ▶ [Viewing the Network Connection Information of the Computer\(P. 664\)](#)
 - Path to the shared folder
 - User name and password used for accessing the shared folder (if Restrict Access is set)

- 1 Log in to Remote UI in System Manager Mode.** ▶ [Starting Remote UI\(P. 395\)](#)
- 2 On the Portal page of Remote UI, click [Address Book].** ▶ [Portal Page of Remote UI\(P. 397\)](#)
- 3 Click [One-Touch] or [Coded Dial].**
- 4 Click an item displayed as [Not Registered].**

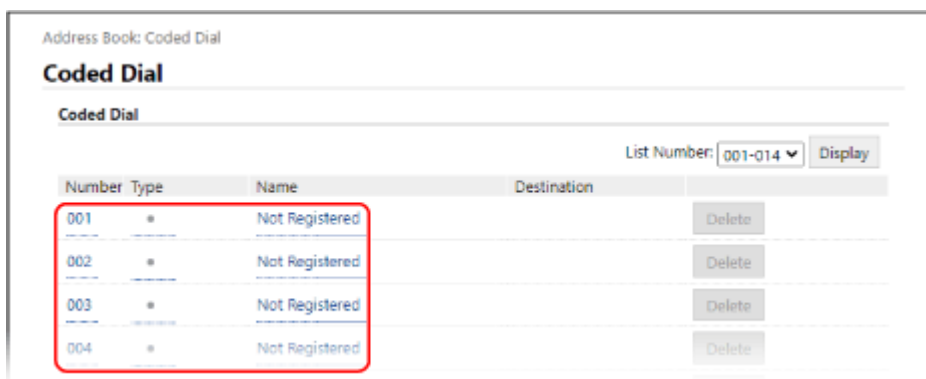

⇒ The [Register New Destination] screen is displayed.

If the [Enter PIN] screen is displayed, enter the Address Book PIN, and then click [OK].

- 5 Select the destination type, and click [OK].**

- When registering file save locations (shared folder), select [File].
- When registering group destinations, see the following.
 - ▶ **Registering Groups to the Address Book (Remote UI)(P. 175)**

6 Set the destination information.

You can register a destination without entering its name, but by entering the name, you can search for it by its initials when specifying the destination.

■ When Registering E-Mail Addresses

Enter the name and e-mail address.

■ When Registering File Save Locations (Shared Folder)

- 1 Enter the name.
- 2 Select [Protocol].
When registering a shared folder, select [Windows (SMB)].

- 3 In [Host Name], enter the computer name or the IP address of the computer where a shared folder is located.
 - * When using a DNS server, you can enter the host name or FQDN instead of the computer name or IP address.
- 4 Enter the path to the folder.
 - Enter the path to the shared folder. Use "\" as a separator.
 - Input example:** when the shared folder path is C:\users\public\share users\public\share

If there is no folder at the entered path, a folder with the entered name is created when the file is saved for the first time.

 - * However, if there is no parent folder, or you do not have write permission to the parent folder, a sending error occurs without a folder being created.
- 5 Enter the user name and password, as needed.
 - If Restrict Access is enabled for the shared folder, enter the user name and password used for accessing the shared folder.
 - To enter a password, select the [Set Password] checkbox, and then enter the password.

■ When Registering a Fax Number

- 1 Enter the name and fax number.
- 2 Set the fax sending details, as needed.
 - If a send error occurs or it takes time to send a fax to a registered fax number, set the fax sending details.

[ECM TX] *1

When this is selected and an error occurs for an image being sent, the machine corrects the image so as not to send a distorted image.

[Speed] *1

If it takes time to start sending a fax, such as when there is a poor phone line connection, the machine lowers the communication start speed.

[Long Distance]

If a communication error occurs when sending a fax to an international destination, select [International (1)]. If the error does not improve, select [International (2)] and [International (3)] in that order.

*1 If this is not set here, the setting in [Settings/Registration] ► [TX Settings] ► [Fax TX Settings] is applied.

- ▶ [ECM TX](P. 490)
- ▶ [TX Start Speed](P. 491)

7 Click [OK].

⇒ The destination is registered to the Address Book.

8 Log out from Remote UI.

NOTE

Editing or Deleting Registered Destinations

- If you select a destination and click [Edit] on the screen in Step 4, you can edit the registered information.
- In Step 4, click [Delete] to the right of the destination you want to delete, and the destination will be deleted.

Registering Groups to the Address Book (Remote UI)

A19R-03F


You can register a group of multiple destinations to the Address Book using Remote UI from a computer. You can register only the same type of destinations for a group. You cannot register file save locations (shared folder) to a group.

Administrator privileges are required to register a group using Remote UI.

Required Preparations

- Register the destinations to be added to a group to the Address Book of the machine. [▶Registering Destinations to the Address Book \(Remote UI\)\(P. 171\)](#)

- 1 Log in to Remote UI in System Manager Mode.** [▶Starting Remote UI\(P. 395\)](#)
- 2 On the Portal page of Remote UI, click [Address Book].** [▶Portal Page of Remote UI\(P. 397\)](#)
- 3 Click [One-Touch] or [Coded Dial].**
- 4 Click an item displayed as [Not Registered].**

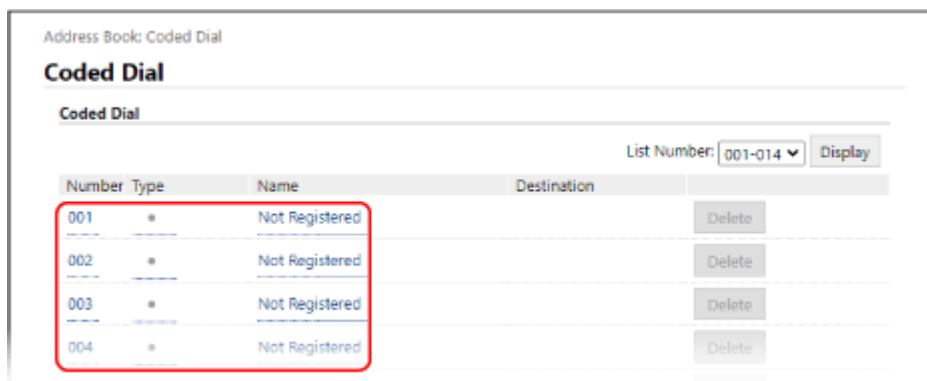

⇒ The [Register New Destination] screen is displayed.

If the [Enter PIN] screen is displayed, enter the Address Book PIN, and then click [OK].

- 5 Select [Group], and click [OK].**

⇒ The [Register New Destination: Group] screen is displayed.

- 6 In [Group], enter the group name.**

You can register a group without entering its name, but by entering the name, you can search for it by its initials when specifying the destination.

- 7 In [Member Settings], click [Select from Address Book].**

8 Change the display of the Address Book, as needed.

Address Book: One-Touch > Register New Destination > Register New Destination: Group > Select from Address Book

Select from Address Book

Select the destination and click [OK]. OK Cancel

Address Book

Type: One-Touch ▼ Display

One-Touch

Select	Number	Type	Name	Destination
<input type="checkbox"/>	01			abc@def

In [Type], select [One-Touch] or [Coded Dial], and click [Display] to change the display of the Address Book.

9 Select the checkboxes of the destinations to add to the group, and click [OK].

⇒ The destinations are added to [Member List] on the [Register New Destination: Group] screen.

You can select multiple destinations at the same time.

10 Click [OK].

⇒ The group is registered to the Address Book.

11 Log out from Remote UI.

Specifying Destinations

A19R-03H

When sending or saving scanned data or faxes, specify destinations using the method below. The method of specifying destinations and the number of destinations that can be specified vary depending on the function and destination.

Specifying Destinations

When sending scanned data by e-mail, you can specify destinations for the Cc and Bcc fields only from the Address Book.

Using the Address Book

Specify a destination registered to the Address Book of the machine.

➤ **Specifying Destinations (Address Book)(P. 178)**

Directly Entering a Destination

Enter the destination using the numeric keys on the control panel.

➤ **Specifying Destinations (Direct Input)(P. 182)**

Using the Address Book on a Mobile Device

When sending scanned data by e-mail, you can specify a destination registered to the address book on a mobile device.

➤ **Specifying Destinations (Address Book on a Mobile Device)(P. 183)**

Using the TX Job Log

You can call up the TX Job Log of scan or fax jobs and specify destinations that were specified in the past.

➤ **Specifying Destinations (TX Job Log)(P. 184)**

Specifying Multiple Destinations

You can specify multiple destinations by repeating the operation of specifying a destination. However, you cannot specify multiple file save locations (shared folder) as destinations.

When Removing a Specific Destination after Specifying Multiple Destinations

Use the following procedure:

On the scan or fax screen, select [Destination] ► [Confirm/Edit] ► press the destination or the group you want to remove ► [Remove] ► [Yes].

If you press [Number of Destinations] after pressing a group, you can check the destinations registered to the group. You cannot individually remove destinations registered to a group.

Confirming Destinations

The screen for confirming whether a specified destination is correct may be displayed depending on the settings of the machine.

In addition, the method for specifying destinations may be restricted, and sending may be restricted to only specific destinations.

➤ **Preventing Sending Data by Mistake and Leaking Information(P. 369)**

Specifying Destinations (Address Book)

A19R-03J

When specifying destinations with the Address Book, use the [Home] screen or the scan or fax screen on the control panel.

When specifying destinations by calling up the Address Book from the [Home] screen or the scan or fax screen, use the destination list.

You can specify a destination by entering a three-digit number from [Coded Dial] on the [Home] screen, or you can specify a destination which is predetermined to a [One-Touch] button.


- ▶ **Specifying Destinations from a List(P. 178)**
- ▶ **Specifying Destinations with Coded Dial Numbers(P. 179)**
- ▶ **Specifying Destinations with the One-Touch Button(P. 180)**

Specifying Destinations from a List

■ Selecting from the [Home] Screen

1 On the control panel, press [Addr. Book] in the [Home] screen. ▶[Home] Screen(P. 121)

2 Select a destination.

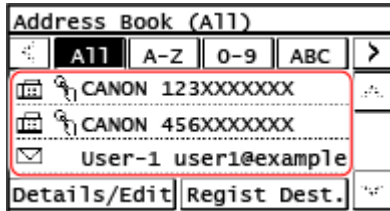

▶ The scan or fax screen is displayed with the specified destinations entered.

Select the index at the top of the screen of the Address Book to filter and display the destinations.

■ Selecting from the [Scan] or [Fax] Screen

1 On the control panel, press [Scan] or [Fax] in the [Home] screen. ▶[Home] Screen(P. 121)

2 When you are scanning, press [E-Mail] or [File].

3 Press [Destination] ▶ [Specify from Address Book].

■ When the To/Cc/Bcc screen is displayed

Select the type (To, Cc, or Bcc) of destination to be specified.

4 Select the destination.

⇒ The destinations are specified.


Select the index at the top of the screen of the Address Book to filter and display the destinations.

Specifying Destinations with Coded Dial Numbers

You can enter a three-digit Coded Dial number to specify a destination.


■ Selecting from the [Home] Screen

- 1 On the control panel, press [Coded Dial] in the [Home] screen. ◀[Home] Screen(P. 121)

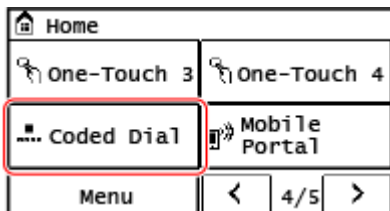


⇒ The [Enter Coded Dial No.] screen is displayed.

- 2 Enter a three-digit coded dial.

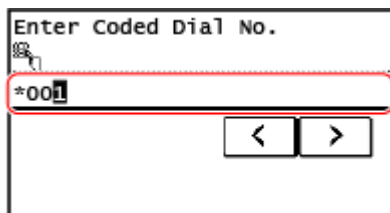


⇒ The destinations are specified.

If you entered an incorrect number, press  to clear the numbers.

■ When the Confirm Destination Screen Is Displayed

Check that the destination is correct, and then press [OK].

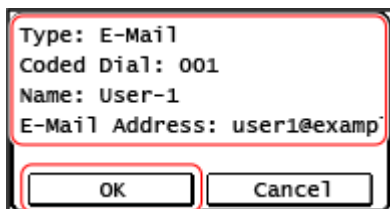

■ Selecting from the [Scan] or [Fax] Screen

- 1 On the control panel, press [Scan] or [Fax] in the [Home] screen. ◀[Home] Screen(P. 121)

2 When you are scanning, press [E-Mail] or [File].


3 Press [Destination] ▶ [Specify from Coded Dial].

⇒ The [Enter Coded Dial No.] screen is displayed.

■ **When the To/Cc/Bcc screen is displayed**

Select the type (To, Cc, or Bcc) of destination to be specified.

4 Enter a three-digit Coded Dial number.

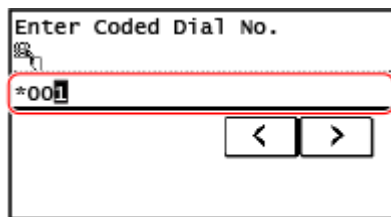


⇒ The destination is specified.

If you entered an incorrect number, press **C** to clear the numbers.

■ **When the Confirm Destination Screen Is Displayed**

Check that the destination is correct, and then press [OK].

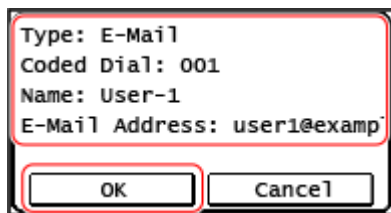


Specifying Destinations with the One-Touch Button

Required Preparations

- Register a destination to a [One-Touch] button. ▶ **Registering Destinations (Address Book)(P. 163)**


■ **Selecting from the [Home] Screen**

Press a [One-Touch] button on the [Home] screen.

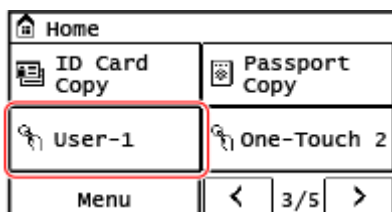


⇒ The destinations are specified.

The Scan or Fax screen is displayed with the specified destinations entered.



The [] icon is assigned to a [One-Touch] button. The name which is entered in [Name] when the destination is registered appears as the button name.

■ When the Confirm Destination Screen Is Displayed

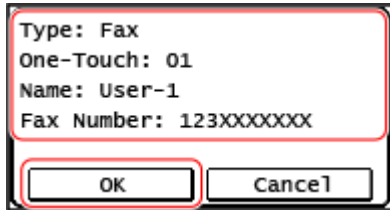Check that the destination is correct, and then press [OK].



■ Selecting from the [Scan] or [Fax] Screen

- 1 On the control panel, press [Scan] or [Fax] in the [Home] screen.  [Home] Screen(P. 121)
- 2 When you are scanning, press [E-Mail] or [File].
- 3 Press [Destination]  [Specify from One-Touch].

⇒ Only destinations registered to a One-Touch button are displayed.

■ When the To/Cc/Bcc screen is displayed

Select the type (To, Cc, or Bcc) of destination to be specified.

4 Select the destination.

⇒ The destinations are specified.

Specifying Destinations (Direct Input)

A19R-03K

To specify a destination not registered to the Address Book, directly enter the destination using the scan or fax screen of the control panel.


■ Using the Scan Screen

1 On the control panel, press [Scan] in the [Home] screen. ▶[Home] Screen(P. 121)

2 Press [E-Mail].

3 Enter an e-mail address, and press [Apply]. ▶Entering Characters(P. 132)

⇒ The destination is specified.


- If you entered an incorrect e-mail address, press  to clear the character.
- You cannot directly enter a second address. Select a second destination from [Destination].

■ Using the Fax Screen

1 On the control panel, press [Fax] in the [Home] screen. ▶[Home] Screen(P. 121)

2 Enter a fax number using the numeric keys and press [Apply].

⇒ The destination is specified.

- If you entered an incorrect fax number, press  to clear the number.
- If the [Confirm] screen is displayed, enter the fax number again, and press [Apply].
- To enter a second and subsequent destinations, press [Destination] ▶ [Specify Using Numeric Keys].
- When sending a fax to an international destination, enter the international access number, country code, and fax number in that order. If you are unable to connect, press [Pause] in between the numbers to add a pause. You can change the pause time. ▶[Set Pause Time](P. 490)

Specifying Destinations (Address Book on a Mobile Device)

A19R-03L

When sending scanned data by e-mail, you can specify destinations registered to the Address Book on a mobile device using the scan screen of the control panel.

Required Preparations

- Install Canon PRINT to the mobile device. ▶ [Using a Dedicated Application to Print and Scan \(Canon PRINT\)\(P. 335\)](#)
- Configure the settings to enable the machine to connect to the Address Book on the mobile device. ▶ [\[Link Mobile Device Address Book\]\(P. 485\)](#)

- 1** On the control panel, press [Scan] in the [Home] screen. ▶ [\[Home\] Screen\(P. 121\)](#)
- 2** Press [E-Mail].
- 3** Press [Destination] ▶ [Specify from Mobile Portal].
- 4** Connect to the mobile device. ▶ [Connecting a Mobile Device to the Machine\(P. 330\)](#)
- 5** Send the destination information from the mobile device to the machine.
 - For details about sending, see the Canon PRINT manual at the online manual site.
 - You can also send the subject, message, and file name entered on the mobile device to the machine.
- 6** Confirm the destination information displayed on the screen of the machine, and press [OK].
 - ⇒ The destinations are specified.

Specifying Destinations (TX Job Log)

A19R-03R

You can specify destinations used in the past by calling up the TX Job Log. The scan settings used when the destination was used are also recalled.

When you call up the TX Job Log, the specified destinations and scan settings are overwritten.

! IMPORTANT


- You cannot use the TX Job Log when sending from the log is restricted. ▶ **Prohibiting the Use of Destinations in the Send Log(P. 370)**

1 On the control panel, press [Scan] or [Fax] in the [Home] screen. ▶ **[Home] Screen(P. 121)**

2 When you are scanning, press [E-Mail] or [File].

3 Press [Destination] ▶ [Recall Set.].

4 Select the log you want to call up.

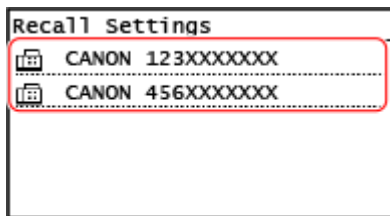

- ▶ The destinations and scan settings of the selected log are applied.
The Scan or Fax screen is displayed with the specified destinations entered.

When there are multiple destinations in the log, only the first destination is displayed, but all of the destinations are applied.

5 Change the destinations and scan settings, as needed.


You can change and send the called up destinations and scan settings.

NOTE

- The TX Job Log is cleared in the following cases:
 - When the power is turned OFF
 - When entry of new destinations is restricted ▶ **Sending Only to Registered Destinations(P. 371)**

Changing the Default Settings

You can change the default settings for scan, copy, and other functions called up using the control panel. By configuring the settings as standard or to save paper, for example, you can increase work efficiency and reduce costs.

You can also reset the settings to the settings set here by pressing  on any function screen.

This section describes how to configure the settings using the control panel.

You can also configure the settings using Remote UI from a computer. [▶Managing the Machine from a Computer \(Remote UI\)\(P. 394\)](#)

[▶Touch Panel Model\(P. 185\)](#)

[▶5 Lines LCD Model\(P. 186\)](#)

Touch Panel Model

1 On the control panel, press [Menu] in the [Home] screen. [▶\[Home\] Screen\(P. 121\)](#)

2 Press [Function Settings].

3 Select the default setting item you want to change.

Select from the following items according to the function you want to change.

Scan (Send E-mail)

[Send] ▶ [Scan and Send Settings] ▶ [E-Mail Settings] ▶ [Change Default Settings]

Scan (Save to Shared Folder)

[Send] ▶ [Scan and Send Settings] ▶ [File Settings] ▶ [Change Default Settings]


Fax

[Send] ▶ [Fax Settings] ▶ [Change Default Settings]

Copy

[Copy] ▶ [Change Default Settings]

4 Select the setting items to change, and change the default settings.

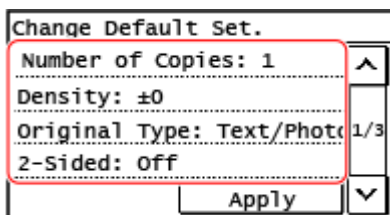

For details about the setting items of each function, see the following:

- Scan (Send E-Mail) [▶\[Change Default Settings\]\(P. 483\)](#)
- Scan (Save to Shared Folder) [▶\[Change Default Settings\]\(P. 485\)](#)
- Fax [▶\[Change Default Settings\]\(P. 489\)](#)
- Copy [▶\[Change Default Settings\]\(P. 466\)](#)

5 Press [Apply].

⇒ The default settings are changed.

NOTE

Restoring Default Settings to the Factory Settings

- You can perform the following operations from the screen in Step 3.

- Scan (Send E-Mail)

[Send] ▶ [Scan and Send Settings] ▶ [E-Mail Settings] ▶ [Initialize Default Settings] ▶ [Yes]

- Scan (Save to Shared Folder)

[Send] ▶ [Scan and Send Settings] ▶ [File Settings] ▶ [Initialize Default Settings] ▶ [Yes]

- Fax

[Send] ▶ [Fax Settings] ▶ [Change Default Settings] ▶ [Initialize] ▶ [Yes]

- Copy


[Copy] ▶ [Initialize Default Settings] ▶ [Yes]

5 Lines LCD Model

1 On the control panel, select [Menu] in the [Home] screen, and press **[OK]**. **[Home]** Screen(P. 121)

2 Select [Function Settings] ▶ **[OK]** ▶ [Copy] ▶ **[OK]** ▶ [Change Default Settings] ▶ **[OK]**.

3 Select the setting items to change, and change the default settings. **[Change Default Settings]**(P. 466)

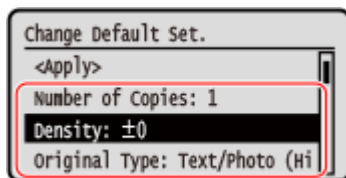

4 Select [**<Apply>**] and press **[OK]**.

NOTE

Restoring Default Settings to the Factory Settings

- You can perform the following operations.

Select [Menu] in the [Home] screen ▶ ▶ [Function Settings] ▶ ▶
[Copy] ▶ ▶ [Initialize Default Settings] ▶ ▶ [Yes] ▶

Adjusting the Volume (For Models with a Fax Function)

A19R-03U

You can adjust the volume of sounds emitted by the machine.
You can also set whether the machine emits sounds notifying you of operations and statuses.

- ▶ **Adjusting the Fax Volume(P. 188)**
- ▶ **Adjusting Other Fax Function Sounds(P. 188)**
- ▶ **Setting the Notification Sounds for Operations and Statuses(P. 189)**

Adjusting the Fax Volume

You can adjust the volume of the tone emitted when sending and receiving faxes.


This section describes how to adjust the volume using the control panel.
You can also adjust the volume using Remote UI from a computer. ▶ **Managing the Machine from a Computer (Remote UI)(P. 394)**

1 On the control panel, press [Menu] in the [Home] screen. ▶ **[Home] Screen(P. 121)**

2 **[Preferences] ▶ [Volume Settings] ▶ [Fax Tone]**

⇒ The [Fax Tone] screen is displayed.

3 Drag the slider to the left or right to adjust the volume, and press [Apply].

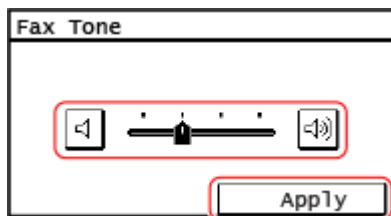

⇒ The volume is adjusted.

- Dragging the slider to the right increases the volume.
- Dragging the slider to the far left mutes the sound.

Adjusting Other Fax Function Sounds

You can adjust the volume of the incoming fax sound and the sounds notifying you when faxes are successfully sent and received, and when originals are successfully scanned.
You can also configure the setting to emit a sound only when an error occurs.

This section describes how to adjust the volume using the control panel.
You can also adjust the volume using Remote UI from a computer. ▶ **Managing the Machine from a Computer (Remote UI)(P. 394)**

1 On the control panel, press [Menu] in the [Home] screen. ▶ **[Home] Screen(P. 121)**

2 [Preferences] ► [Volume Settings].

► The [Volume Settings] screen is displayed.

3 Select the item whose volume you want to adjust.

[Ring Tone]

Adjust the volume of the sound notifying you of incoming faxes.

[TX Done Tone]

Adjust the volume of the sound notifying you that sending of a fax is complete.


[RX Done Tone]

Adjust the volume of the sound notifying you that receiving of a fax is complete.

[Scanning Done Tone]

Adjust the volume of the sound notifying you that scanning of a fax original is complete.

4 Drag the slider to the left or right to adjust the volume, and press [Apply].

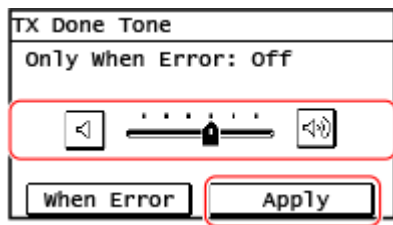

► The volume is adjusted.

- Dragging the slider to the right increases the volume.
- Dragging the slider to the far left mutes the sound.
- To emit a completion sound only when an error occurs, press [When Error] and set to [On].

Setting the Notification Sounds for Operations and Statuses

You can also set whether the machine emits sounds notifying you of operations and statuses, such as when operating the control panel and errors are detected.

This section describes how to configure the settings using the control panel.

You can also configure the settings using Remote UI from a computer. ► **Managing the Machine from a Computer (Remote UI)(P. 394)**

1 On the control panel, press [Menu] in the [Home] screen. ► [Home] Screen(P. 121)

2 [Preferences] ► [Volume Settings].

► The [Volume Settings] screen is displayed.

3 Set whether notification sounds are emitted. ► [Volume Settings] Screen(P. 191)

To emit notification sounds, select the item and press [On].


⇒ The volume is adjusted.

[Volume Settings] Screen

A19R-03W

When you press [Menu] ► [Preferences] ► [Volume Settings] on the [Home] screen of the control panel, the [Volume Settings] screen is displayed.

You can adjust the volume of notification sounds, such as when faxes are successfully sent and received, and set whether the machine emits sounds notifying you of operations and statuses.

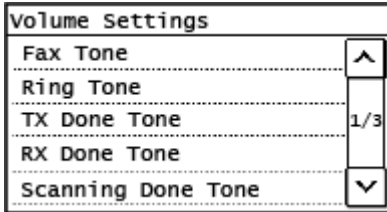

[Fax Tone] / [Ring Tone] / [TX Done Tone] / [RX Done Tone] / [Scanning Done Tone]

You can adjust the volume of the following notification sounds: When sending fax, when receiving a fax, when fax sending is complete, when fax receiving is completed, or when scanning fax originals is completed.

[Entry Tone]

Set whether to emit a sound when you press the keys and buttons on the control panel.

[Invalid Entry Tone]

Set whether to emit a sound when an invalid key is pressed, such as when you enter a value outside the setting range.

[Restock Supplies Tone]

Set whether to emit a sound when the toner cartridges are nearing the end of their lifetime.

[Warning Tone]

Set whether to emit a sound when the machine has a paper jam or other malfunction.

[Job Done Tone]

Set whether to emit a sound when the copy, scan, or other operation on the machine is completed.

[Energy Saver Alert]

Set whether to emit a sound when the machine enters and exits sleep mode.

[Original in Feeder Detection Tone]

Set whether to emit a sound when the machine detects an original that has been placed on the feeder.

Reducing the Operation Sound (Quiet Mode)

A19R-03X

Quiet Mode is a function which reduces the operation sound of the machine.

▶ **Configuring and Canceling the Quiet Mode(P. 192)**

▶ **Specifying the Time(P. 193)**

Configuring and Canceling the Quiet Mode

You can set the machine to enter or exit the quiet mode from the control panel.

Use the control panel to configure the settings. You cannot configure the settings using Remote UI from a computer.

▶ **Touch Panel Model(P. 192)**

▶ **5 Lines LCD Model(P. 192)**

■ Touch Panel Model

1 On the control panel, press [Menu] in the [Home] screen. ▶ [Home] Screen(P. 121)

2 Press [Adjustment/Maintenance] ▶ [Adjust Image Quality] ▶ [Special Processing] ▶ [Quiet Mode]. ▶ [Quiet Mode](P. 457)

 
 


3 Press [On] or [Off].

⇒ The settings are applied.

- If the message [When set to On, print speed slows down. Is it OK?] appears, press [Yes].

■ 5 Lines LCD Model

1 On the control panel, select [Menu] in the [Home] screen, and press . ▶ [Home] Screen(P. 121)

2 Select [Adjustment/Maintenance] ▶  ▶ [Adjust Image Quality] ▶  ▶ [Special Processing] ▶  ▶ [Quiet Mode] ▶ . ▶ [Quiet Mode](P. 457)

3 Select [On] or [Off], and press .

⇒ The settings are applied.

- If the message [When set to On, print speed slows down. Is it OK? Yes: Press OK] appears, press .

Specifying the Time

You can set the machine to enter or exit the quiet mode at a specified time.

This section describes how to configure using the Remote UI from a computer.

On the control panel, configure from [Menu] in the [Home] screen ▶ [Preferences]. ▶ [Timer/Energy Settings](P. 430)

* This setting is only available when [Quiet Mode] is set to [Off]. ▶ [Quiet Mode](P. 457)

1 Log in to Remote UI in System Manager Mode. ▶ Starting Remote UI(P. 395)

2 On the Portal page of Remote UI, click [Settings/Registration]. ▶ Portal Page of Remote UI(P. 397)

3 Click [Timer Settings] ▶ [Edit].

⇒ The [Edit Timer Settings] screen is displayed.

4 Specify the time.

■ Setting the machine to enter the quiet mode at the specified time

Select [Specify Quiet Mode Time Settings] and enter the time in [Start Time].

When the time is displayed in the 12-hour notation, select [AM] or [PM] after entering the time.

■ Setting the machine to exit the quiet mode at the specified time

Select [Specify Quiet Mode Time Settings] and enter the time in [End Time].

When the time is displayed in the 12-hour notation, select [AM] or [PM] after entering the time.

5 Click [OK].

⇒ The settings are applied.

6 Log out from Remote UI.

NOTE

- When the machine is in the quiet mode, each function operates slower than usual.
- The volume of the sounds, such as [Entry Tone] or [Warning Tone], which notify the operations on the machine or the machine status will not be reduced. ▶ Adjusting the Volume (For Models with a Fax Function)(P. 188)

Printing


Printing	195
Printing Preparations	196
Preparing to Print from a Computer	197
Configuring a Printer Port (Windows)	198
Setting Up a Print Server	201
Printing from a Computer	204
Registering Non-standard Size Paper to the Computer (Custom Size)	207
Canceling Printing	209
Viewing the Print Job Status and Log	212

Printing

You can print documents and photos from a computer.

For details on supported models, see the following: [Supported Functions\(P. 3\)](#)

Printing from a Computer

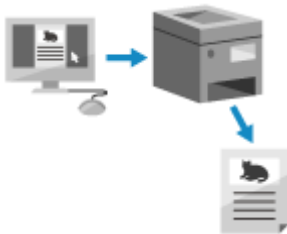

You can print documents and photos via a printer driver installed on a computer connected to the machine.

[Preparing to Print from a Computer\(P. 197\)](#)

[Printing from a Computer\(P. 204\)](#)

Setting Up a Print Server

By setting up a print server on a network, you can reduce the load on the computer that you print from. In Windows, you can install the printer driver via the print server, which saves you the trouble of downloading the printer driver to each computer on the network.

[Setting Up a Print Server\(P. 201\)](#)

Printing with the Standard Functions of the Operating System

You can print without having to install a dedicated application or printer driver.

Windows

This machine is compatible with Universal Print, a cloud service by Microsoft. You can print documents from a remote location as long as your computer is connected to the Internet.

[Preparations for Using Universal Print\(P. 322\)](#)

[Printing with Universal Print\(P. 337\)](#)

macOS

You can use AirPrint to print data. [Using AirPrint Application to Print and Scan Data and Send Faxes\(P. 338\)](#)

Chrome OS

Use the print function that is standard in the operating system. [Printing from a Chrome OS Device\(P. 343\)](#)

■ See Also

Printing from a Mobile Device

The machine can be operated from a smartphone, tablet, or other mobile device. By using a compatible application or service, you can easily print photos or documents from a mobile device.

[Linking with Mobile Devices and Integrating with a Cloud Service\(P. 317\)](#)

Printing Preparations

A19R-040

To print from the machine, you must make printing preparations according to your printing method and usage environment.

- ▶ **Preparing to Print from a Computer(P. 197)**
- ▶ **Setting Up a Print Server(P. 201)**
- ▶ **Preparations for Using Universal Print(P. 322)**

Preparing to Print from a Computer

A19R-041

Install the printer driver to the computer that will be used to print. ▶ **Installing Software and Drivers to the Computer(P. 107)**

Using a Print Server in Windows

Use a print server to install the printer driver.

Double-click the shared printer on the print server, and follow the instructions on the screen to install the printer driver. ▶ **Displaying a Shared Printer in the Print Server(P. 661)**

NOTE

Changing the Port Type and Number (Windows)

- If the machine is configured not to use LPD or RAW, or if the port number was changed, the settings on the computer may also have to be changed. ▶ **Changing the Port Type and Number(P. 200)**

If the IP Address of the Machine Is Changed after Installing the Printer Driver

- In Windows, the required action depends on the port you are using.
 - If you are using an MFNP port, the connection is maintained as long as the machine and computer belong to the same subnet, so no action is required on the computer.
 - If you are using a standard TCP/IP port, you must add a new port. ▶ **Adding a Port(P. 198)**

If you do not know which port is being used, see the following:

▶ **Viewing the Printer Port(P. 666)**

- In macOS, you must re-register the machine on the Mac. For details about registering the machine, see the manual of the driver at the online manual site.

<https://oip.manual.canon/>

* If you are using DHCP to automatically obtain the IP address of the machine, the IP address may be changed automatically.

Configuring a Printer Port (Windows)

A19R-042

If the IP address of the machine changed or a printer has been added in Windows, you may not be able to print from a computer. In this case, use the printer driver to add a new port.

In addition, you cannot print from a computer when the port type or port number of the printer driver differ from that of the machine setting. In this case, change the setting on the printer driver to match that of the machine.

▶ **Adding a Port(P. 198)**

▶ **Changing the Port Type and Number(P. 200)**

Adding a Port

The machine supports two types of ports: "MFNP Port" and "Standard TCP/IP Port." Select and add the port to use according to your usage environment.

MFNP Port (only for IPv4 environment)

You can only add this port when a printer driver is installed using the installer. The connection is maintained as long as the machine and computer belong to the same subnet, even if the IP address of the machine is changed.

Standard TCP/IP Port

This is a standard Windows port. You must add a new port every time the IP address of the machine is changed. Select this type of port when you cannot add an MFNP port.

Administrator privileges are required on each computer.

Required Preparations

- Prepare the following information and keep it close by. ▶ **Checking the Network Status and Settings(P. 97)**
 - When adding an MFNP port: the IP address or MAC address of the machine
 - When adding a standard TCP/IP port: the IP address or DNS name (host name) of the machine

1 Log on to the computer using an administrator account.

2 Click [Start] (Start) ▶ [Settings] (Settings) ▶ [Devices] ▶ [Printers & scanners].

⇒ The [Printers & scanners] screen is displayed.

3 Click the printer driver of the machine ▶ [Manage] ▶ [Printer properties].

⇒ The printer driver properties screen is displayed.


4 On the [Ports] tab, click [Add Port].

⇒ The [Printer Ports] screen is displayed.

5 Add a new port.

■When Adding an MFNP Port

- 1 Select [Canon MFNP Port], and click [New Port].
- 2 Select [Auto Detect] and the machine, and click [Next].

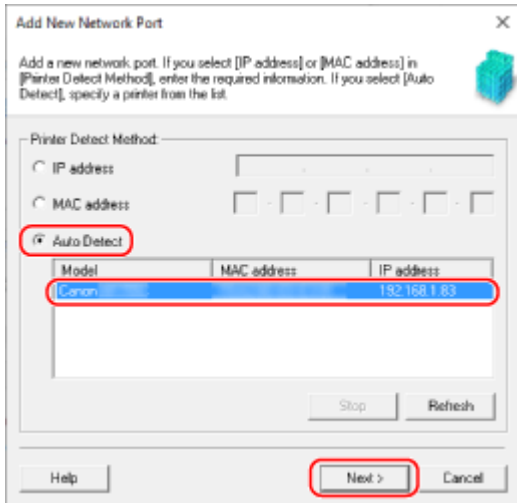


If the machine is not displayed, click [Refresh]. If the machine is still not displayed, select [IP address] or [MAC address], enter the IP address or MAC address of the machine, and then click [Next].

- 3 Click [Add].

■When Adding a Standard TCP/IP Port

- 1 Select [Standard TCP/IP Port], and click [New Port].
 ■ The [Add Standard TCP/IP Printer Port Wizard] screen is displayed.
- 2 Click [Next].
- 3 Enter the IP address or DNS name (host name), and then click [Next].

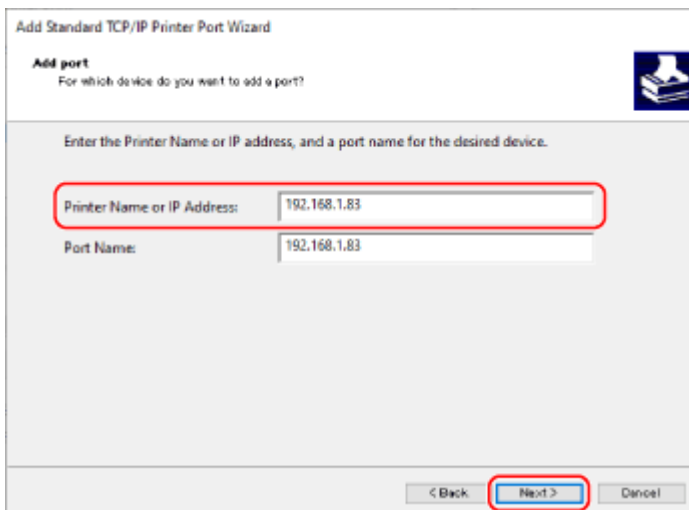

The port name is entered automatically, so change it, as needed.

When [Additional port information required] Appears

Take action following the instructions on the screen. To set [Device Type], select [Canon Network Printing Device with P9100] in [Standard].

- 6 Click [Finish].

⇒ A new port is added, and the [Printer Ports] screen is displayed.

7 Click [Close] ► [Close].

⇒ The settings are applied.

Changing the Port Type and Number

If the machine is configured not to use LPD or RAW, you must change the type of port on the computer to a protocol usable on the machine.

If the LPD or RAW port number was changed, the settings on the computer may have to be changed to match the settings on the machine.

* You do not need to change the port type or number on the computer for WSD ports.

Administrator privileges are required on each computer.

1 Log on to the computer using an administrator account.

2 Click [Start] (Start) ► [Settings] (Settings) ► [Devices] ► [Printers & scanners].

⇒ The [Printers & scanners] screen is displayed.

3 Click the printer driver of the machine ► [Manage] ► [Printer properties].

⇒ The printer driver properties screen is displayed.

4 On the [Ports] tab, click [Configure Port].

⇒ The [Configure Port] screen or [Configure Standard TCP/IP Port Monitor] screen is displayed.

5 Set the port type and number.

■ For an MFNP Port

In [Protocol Type], select [RAW] or [LPR], and change the port number.

■ For a Standard TCP/IP Port

In [Protocol Type], select [Raw] or [LPR].

- When [Raw] is selected, change the port number.
- When [LPR] is selected, enter "Ip" for [Queue Name].

6 Click [OK] ► [Close].

⇒ The settings are applied.

Setting Up a Print Server

A19R-043

By setting up a print server on the network, you can speed up print operations on a computer, thereby reducing the load on the computer.

In Windows, you can install the printer driver via the print server to save you the trouble of downloading the printer driver to each computer on the network.

To set up a print server, enable the print server to print from the machine, and then configure the settings for sharing the printer.

To use a print server in a domain environment, consult your network administrator.

▶ **Enabling the Print Server to Print from the Machine(P. 201)**

▶ **Configuring the Settings for Sharing the Printer(P. 201)**

Enabling the Print Server to Print from the Machine

Install the printer driver to the computer that will be the print server, and configure the settings according to your usage environment. ▶ **Preparing to Print from a Computer(P. 197)**

Configuring the Settings for Sharing the Printer

Configure the printer sharing settings on the computer that will be the print server so that other computers on the network can use the print server.

▶ **When Using Windows(P. 201)**

▶ **When Using macOS(P. 202)**

■ When Using Windows

Administrator privileges are required on the computer that will be the print server.

Required Preparations

- Check the operating system (32-bit or 64-bit) of the computer that will be the print server and the operating system of the computer that will use the print server (the client). ▶ **Viewing the System Information of the Computer(P. 662)**

1 Log on to the computer that will be the print server, using an administrator account.


2 Click [] (Start) ▶ [] (Settings) ▶ [Devices] ▶ [Printers & scanners].

⇒ The [Printers & scanners] screen is displayed.

3 Click the printer driver of the machine ▶ [Manage] ▶ [Printer properties].

⇒ The printer driver properties screen is displayed.

4 On the [Sharing] tab, select the [Share this printer] checkbox, and enter a shared name.

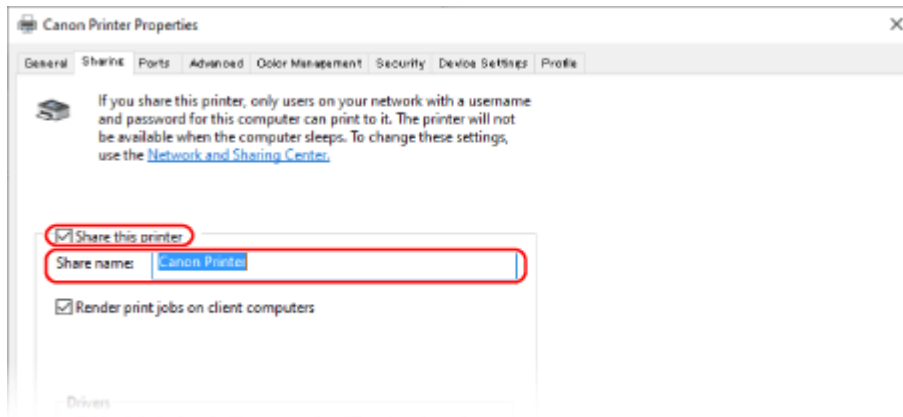

5 Install an additional driver, as needed.

If the client computer has an operating system (32-bit or 64-bit) that differs from that of the print server, install an additional driver.

1 Click [Additional Drivers].

⇒ The [Additional Drivers] screen is displayed.

2 Select the checkbox of the driver to be added, and click [OK].

- If the print server computer has a 32-bit operating system, select the [x64] (driver for 64-bit version) checkbox.
- If the print server computer has a 64-bit operating system, select the [x86] (driver for 32-bit version) checkbox.

3 Click [Browse], specify the folder where the driver is located, and click [OK].

- If the print server computer has a 32-bit operating system, specify the [x64] folder with the decompressed driver ► [Driver] folder.
- If the print server computer has a 64-bit operating system, specify the [32BIT] folder with the decompressed driver ► [Driver] folder.

4 Install the additional driver while following the instructions on the screen.

6 Click [OK].

⇒ The settings are applied.

■ When Using macOS

1 Click [Apple] ► [System Preferences] ► [Sharing].

⇒ The [Sharing] screen is displayed.

2 Select the [Printer Sharing] checkbox.

3 In [Printers], select the checkbox of the machine.

4 Restrict the users that can use the print server, as needed.

By default, all users can use the print server.


To enable specific users to use the print server, click [+] under [Users], and select the users who can use the print server.

5 Close the [Sharing] screen.

⇒ The settings are applied.

Printing from a Computer

A19R-047

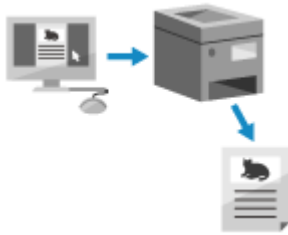

You can print documents from a computer using a printer driver. By changing the settings on the printer driver, you can print according to the document and purpose, such as by using 2-sided printing or adjusting the quality.

NOTE

- You can use the dedicated Canon application Canon PRINT to print and scan. ▶ **Using a Dedicated Application to Print and Scan (Canon PRINT)(P. 335)**

This section describes the general procedure for this operation. Check the manual of the application you are using for detailed operations on how to use it.

Required Preparations


- Install the printer driver on the computer, and configure the settings according to your usage environment. ▶ **Preparing to Print from a Computer(P. 197)**
- If the document or paper to print is a non-standard size, register the size to the printer driver. ▶ **Registering Non-standard Size Paper to the Computer (Custom Size)(P. 207)**

▶ **When Using Windows(P. 204)**

▶ **When Using macOS(P. 205)**

■ When Using Windows

- 1 On your computer, open the document you want to print.**
- 2 In the application used to open the document, select the command to print.**
- 3 Select the printer driver of the machine, and click [Preferences] or [Properties].**
 - ▶ The [Printing preferences] screen of the printer driver is displayed.
- 4 In [Page Size] on the [Basic Settings] tab, select the paper size of the document.**

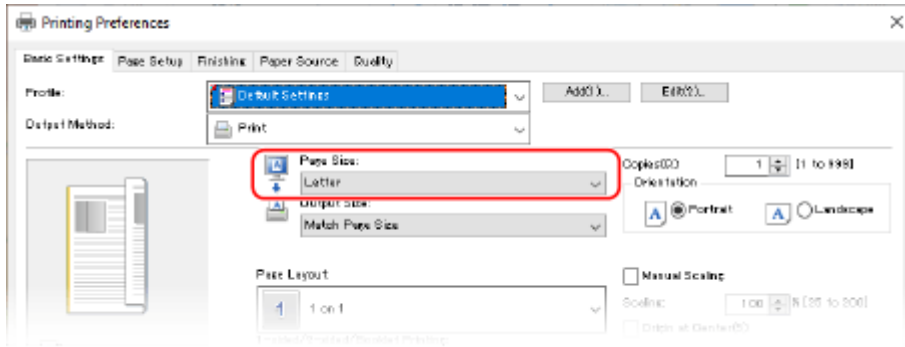

■ **When Printing on Paper of a Size Different from [Page Size]**


In [Output Size], select the paper size to print on. The document is enlarged or reduced to match the paper size in [Output Size].

5 Configure the other print settings, as needed.

Configure 2-sided printing and adjust the image quality and other settings to suit your document and purpose. For more information, click [Help] on the [Printing preferences] screen to display help.

6 Click [OK], and click [Print] or [OK].

⇒ Printing starts.

- You can cancel printing on the printing screen or from the printer icon in the Windows notification area. ▶ **Canceling Printing from a Computer(P. 209)**
- Use  on the control panel to view the print job status and log. ▶ **Viewing the Print Job Status and Log(P. 212)**

■ **When Using macOS**


1 On your computer, open the document you want to print.

2 From the menu in the application used to open the document, click [Print].

⇒ The printing dialog box appears.

3 In [Printer], select the printer driver of the machine.


4 In [Paper Size] of the print options, select the paper size of the document.

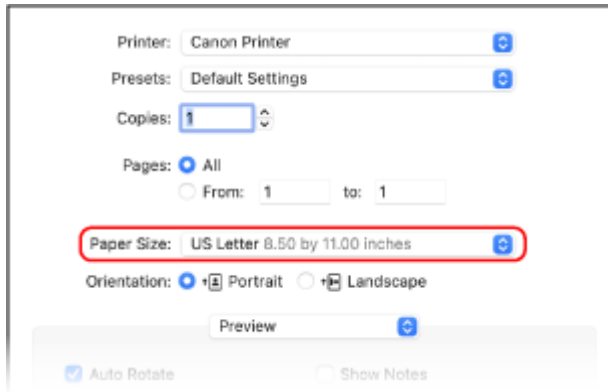

If print options are not displayed, click [Show Details] in the printing dialog box.

■ When Printing on Paper of a Size Different from [Paper Size]

- 1 From the print options pop-up menu, select [Paper Handling].

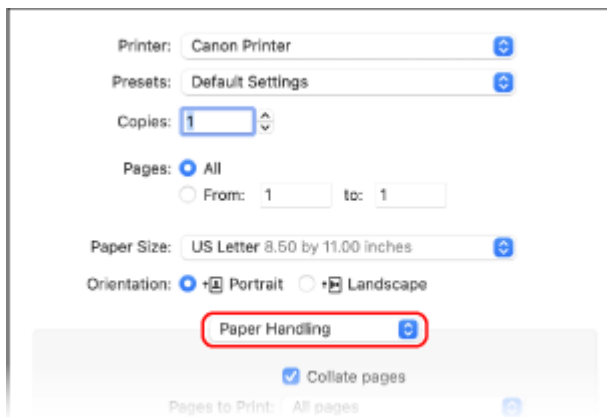


- 2 Select the [Scale to fit paper size] checkbox, and in [Destination Paper Size], select the paper size to print on.
The document is enlarged or reduced to match the paper size in [Destination Paper Size].

5 Configure the other print settings, as needed.

Configure 2-sided printing and adjust the image quality and other settings to suit your document and purpose. For more information, click [?] in the printing dialog box to display help.

6 Click [Print].

⇒ Printing starts.

- You can cancel printing from the printer icon in the Dock. ▶ **Canceling Printing from a Computer(P. 209)**
- Use  on the control panel to view the print job status and log. ▶ **Viewing the Print Job Status and Log(P. 212)**

Registering Non-standard Size Paper to the Computer (Custom Size)

A19R-048

Custom size paper is non-standard size paper whose side lengths can be freely defined.

If the document or paper to print is a non-standard size, you must register the size to the printer driver in advance.

▶ When Using Windows(P. 207)

▶ When Using macOS(P. 207)

■ When Using Windows

1 Click [] (Start) ▶ [] (Settings) ▶ [Devices] ▶ [Printers & scanners].


⇒ The [Printers & scanners] screen is displayed.

2 Click the printer driver of the machine ▶ [Manage] ▶ [Printing preferences].

⇒ The [Printing preferences] screen of the printer driver is displayed.

3 On the [Page Setup] tab, click [Custom Paper Size].

4 Enter the custom size paper name and paper size, and click [Register].

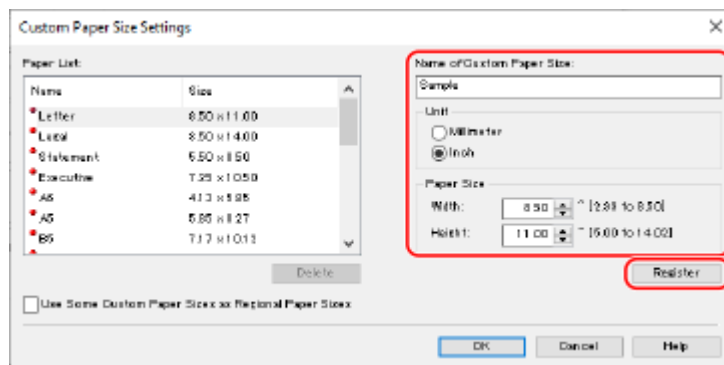

5 Click [OK] ▶ [OK].

⇒ The custom size paper is registered.

■ When Using macOS


1 On your computer, open the document you want to print.

2 From the menu in the application used to open the document, click [Print].

⇒ The printing dialog box appears.


3 In [Printer], select the printer driver of the machine.

4 In [Paper Size] of the print options, select [Manage Custom Sizes].

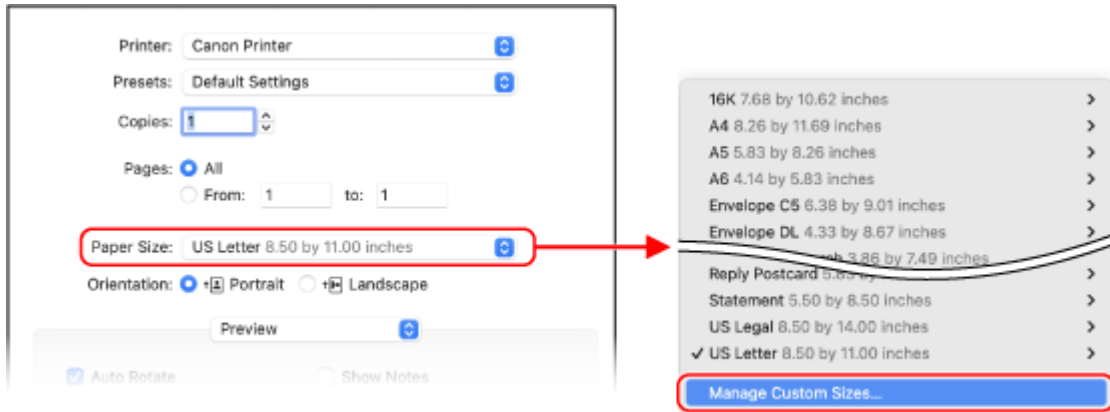

If print options are not displayed, click [Show Details] in the printing dialog box.

5 Click [+] at the bottom left, double-click [Untitled], and enter the custom size paper name.

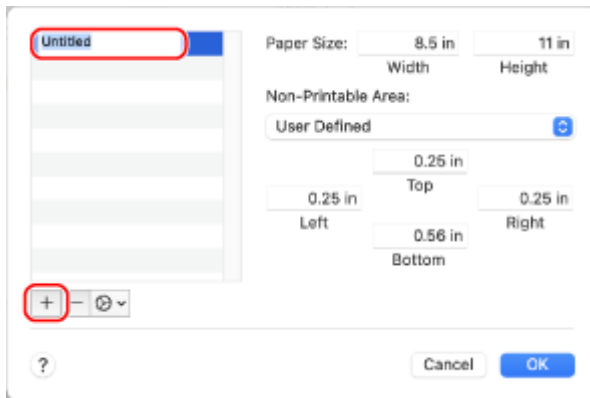

6 Enter the paper size, and click [OK].

⇒ The custom size paper is registered.

Canceling Printing

A19R-04A

You can cancel printing from a computer. To cancel printing after the print data has been sent to the machine, use the control panel or Remote UI.

- ▶ **Canceling Printing from a Computer(P. 209)**
- ▶ **Canceling Printing with the Control panel(P. 210)**
- ▶ **Canceling Printing with Remote UI(P. 211)**

Canceling Printing from a Computer


- ▶ **When Using Windows(P. 209)**
- ▶ **When Using macOS(P. 209)**

■ When Using Windows

If the printing screen is displayed, click [Cancel].



If the above screen is not displayed, double-click the printer icon in the Windows notification area, select the document to cancel, and click [Document] ▶ [Cancel] ▶ [Yes].

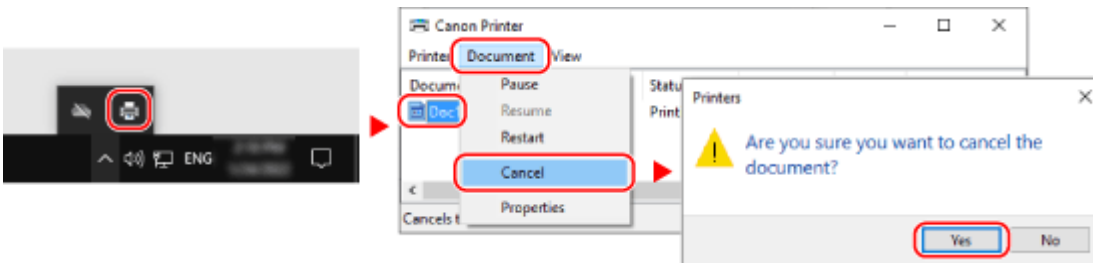


If the printer icon is not displayed in the Windows notification area or the document to be canceled is not displayed, the print data is sent to the machine after being processed on the computer.

In this case, cancel printing using the control panel of the machine or Remote UI. ▶ **Canceling Printing with the Control panel(P. 210)**

■ When Using macOS

Click the printer icon in the Dock, select the document to cancel, and click [⌘].

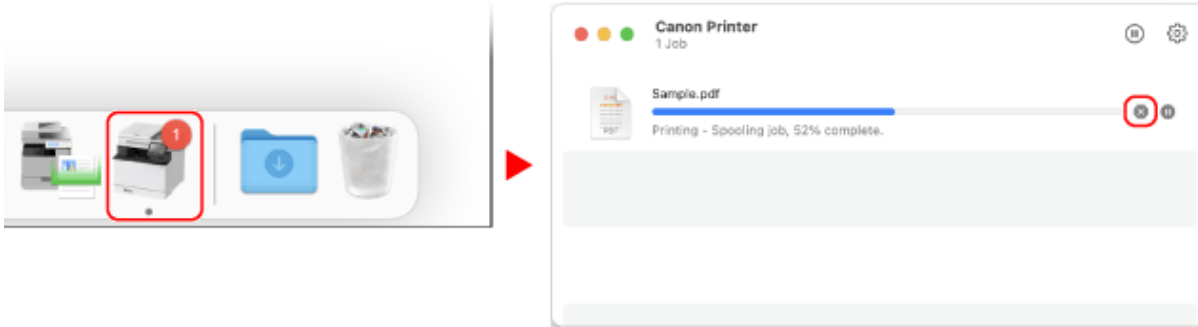


Canceling Printing with the Control panel


▶ Touch Panel Model(P. 210)

▶ 5 Lines LCD Model(P. 210)


■ Touch Panel Model

You can cancel printing using the procedure below.

On the control panel, press  ▶ [Yes].

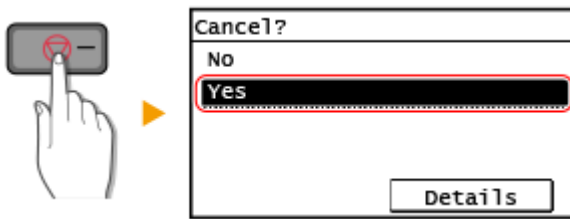


If the job list screen is displayed, select the job to cancel, and press [Yes].

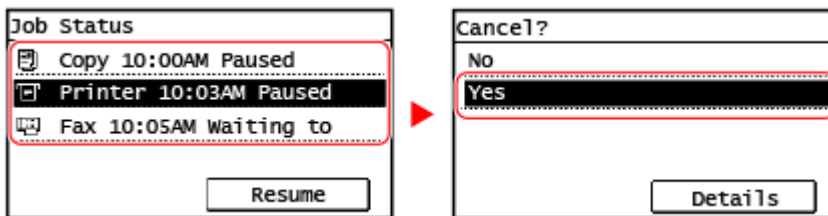


■ 5 Lines LCD Model


You can cancel printing using the procedure below.

On the control panel, press  ▶ [Yes] ▶ .

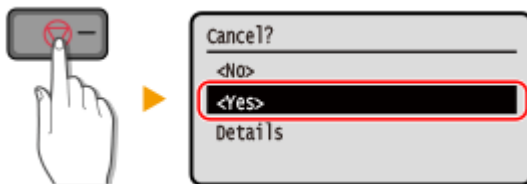

If the job list screen is displayed, select the job to cancel, and select [Yes],press .

Printing

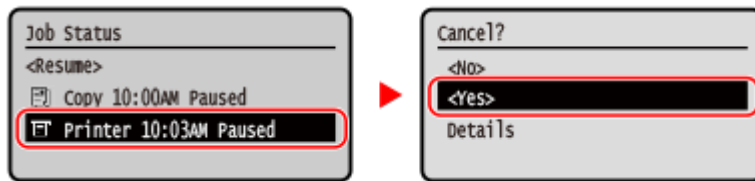

Canceling Printing with Remote UI

You can cancel printing with [Status Monitor/Cancel] ▶ [Job Status] screen in [Print] of Remote UI. ▶ **Checking Usage and Logs with Remote UI(P. 399)**

Viewing the Print Job Status and Log

A19R-04C

Processes handled by the machine, including printing, are managed as jobs. By checking the status and log of jobs, you can determine whether a print job was performed correctly and the cause of errors that occurred.

* If the log is set to not be displayed, you can only check the print job status. [▶\[Display Job Log\]\(P. 505\)](#)

This section describes how to view this information using the control panel.

You can also check this information using Remote UI from a computer. [▶Checking Usage and Logs with Remote UI\(P. 399\)](#)

[▶Touch Panel Model\(P. 212\)](#)

[▶5 Lines LCD Model\(P. 213\)](#)

■ Touch Panel Model

1 Press on the control panel.

⇒ The [Status Monitor] screen is displayed.

2 Press [Copy/Print Job].

3 Check the job status or the job log.

■ Viewing the Print Job Status

1 Press [Job Status].

⇒ A list of jobs being processed or waiting to be processed is displayed.

2 Select a job to view its details.

⇒ The job details are displayed.

3 View the file name, user name, and other information.

Depending on the type of characters being used, the file name and user name may not be correctly displayed.

■ Viewing the Print Job Log

1 Press [Print Job Log].

⇒ A list of jobs being processed or waiting to be processed is displayed.

* Up to 50 jobs are displayed in the print job log.

2 Select a job to view its details.

⇒ The job details are displayed.

3 View the file name, user name, and other information.

Depending on the type of characters being used, the file name and user name may not be correctly displayed.

If Print Job Log Displays Error Information

Printing was canceled, or an error occurred.


If a three-digit number starting with "#" (error code) is displayed, you can check the cause and solution using the error code. ▶ **An Error Code Is Displayed(P. 643)**

■ 5 Lines LCD Model**1 Press  on the control panel. ▶ Control Panel(P. 13)**

⇒ The [Status Monitor] screen is displayed.

2 Check the job status or the job log.**■ Viewing the Print Job Status****1** Select [Job Status], press .

⇒ A list of jobs being processed or waiting to be processed is displayed.

2 Select a job to view its details and press .

⇒ The job details are displayed.


3 View the file name, user name, and other information.

Depending on the type of characters being used, the file name and user name may not be correctly displayed.

■ Viewing the Print Job Log**1** Select [Print Job Log], press .

⇒ A list of jobs being processed or waiting to be processed is displayed.

* Up to 50 jobs are displayed in the print job log.

2 Select a job to view its details and press .

⇒ The job details are displayed.

3 View the file name, user name, and other information.

Depending on the type of characters being used, the file name and user name may not be correctly displayed.

If Print Job Log Displays Error Information

Printing was canceled, or an error occurred.

If a three-digit number starting with "#" (error code) is displayed, you can check the cause and solution using the error code. ▶ **An Error Code Is Displayed(P. 643)**

Scanning

Scanning	215
Preparations for Scanning	217
Preparing to Save Scanned Data to a Computer	218
Preparing for a Shortcut Key to Store Scanned Data to a Computer	220
Preparing to Send Scanned Data by E-mail	224
Configuring the Basic Settings for Sending E-mail (Send Function Setting Tool)	225
Using the Downloaded Send Function Setting Tool	227
Configuring Detailed Information of the E-mail Server (Remote UI)	228
Preparing to Save Scanned Data to a Shared Folder	230
Registering a Shared Folder to the Address Book (Send Function Setting Tool)	231
Scanning (Saving to a Computer)	233
Scanning (Sending by E-mail)	236
Scanning (Saving to a Shared Folder)	238
Scanning Using the Shortcut Key (Saving to a Computer)	240
Scanning from a Computer (Saving to a Computer)	243
Starting MF Scan Utility	246
Scan Settings (Touch Panel Model)	247
Canceling Scanning	251
Checking the Send and Save Status and Log of Scanned Data (Touch Panel Model)	252

Scanning

A19R-04E

You can scan documents, photos, and other printed material ("originals") and convert them into data. This converted data ("scanned data") can be saved as an image or PDF file and sent using the following methods. For details on supported models, see the following: [▶Supported Functions\(P. 3\)](#)


Saving to a Computer

Save scanned data to a computer connected to the machine.

You can configure the scan settings and save scanned data to a computer using the scanner driver and application installed on the computer.

The following three methods are available.

Scanning from the Machine

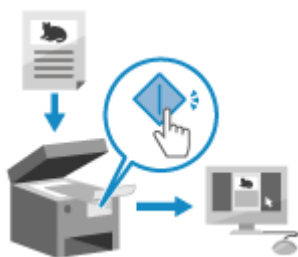


Scan using the format and save destination preset with the application.

This method saves scanned data to a computer by just operating the machine and is convenient when scanning multiple originals.

[▶Preparing to Save Scanned Data to a Computer\(P. 218\)](#)

[▶Scanning \(Saving to a Computer\)\(P. 233\)](#)

Scanning from the Machine with a Single Step

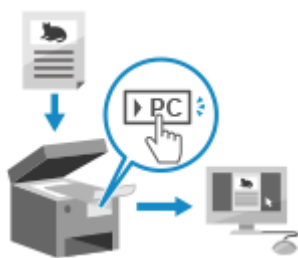

Only pressing a shortcut key allows scanning with predetermined settings to a designated destination. You can store scanned data to a specific computer with a single operation. It is useful to register frequently scanning settings and a frequently used destination computer.

[▶Preparing for a Shortcut Key to Store Scanned Data to a Computer\(P. 220\)](#)

[▶Scanning Using the Shortcut Key \(Saving to a Computer\)\(P. 240\)](#)

Scanning from a Computer



Scan using the format and save destination specified when scanning.


This method lets you see the scanned data immediately on the computer screen so you can check the image quality and make adjustments.

[▶Preparing to Save Scanned Data to a Computer\(P. 218\)](#)

[▶Scanning from a Computer \(Saving to a Computer\)\(P. 243\)](#)

* In macOS, you can use the AirPrint function, which is standard in the OS, to scan data from a computer without having to install a scanner driver or application. [▶Using AirPrint Application to Print and Scan Data and Send Faxes\(P. 338\)](#)


Sending by E-mail

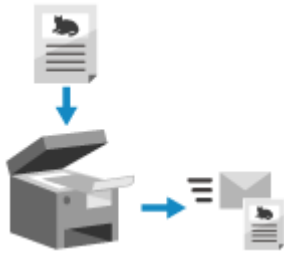

You can send scanned data by e-mail as an attachment. Just like when sending a regular e-mail, you can add a subject and message and specify multiple destinations.

- ▶ **Preparing to Send Scanned Data by E-mail(P. 224)**
- ▶ **Scanning (Sending by E-mail)(P. 236)**

Saving to a Shared Folder

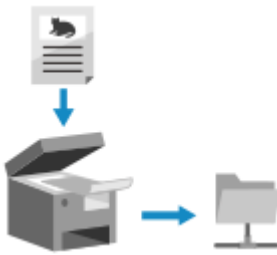

You can save scanned data to a shared folder on a computer. This is convenient for sharing the scanned data of a paper document on a network.

- ▶ **Preparing to Save Scanned Data to a Shared Folder(P. 230)**
- ▶ **Scanning (Saving to a Shared Folder)(P. 238)**

■ See Also

Scanning from a Mobile Device

The machine can be operated from a smartphone, tablet, or other mobile device. This makes it easy to scan photos or documents from a mobile device using a compatible application or service.

- ▶ **Linking with Mobile Devices and Integrating with a Cloud Service(P. 317)**

Preparations for Scanning

A19R-04F

You must set the scanned data save destination and sending method before scanning.

- ▶ **Preparing to Save Scanned Data to a Computer(P. 218)**
- ▶ **Preparing for a Shortcut Key to Store Scanned Data to a Computer(P. 220)**
- ▶ **Preparing to Send Scanned Data by E-mail(P. 224)**
- ▶ **Preparing to Save Scanned Data to a Shared Folder(P. 230)**

Preparing to Save Scanned Data to a Computer

A19R-04H

Make the following preparations for each computer to which to save scanned data.

- ▶ **Step 1: Installing the Driver and Application to the Computer(P. 218)**
- ▶ **Step 2: Registering the Machine with a Computer(P. 218)**

Step 1: Installing the Driver and Application to the Computer

Install the following driver and application on the computer to which to save scanned data. ▶ **Installing Software and Drivers to the Computer(P. 107)**

ScanGear MF

This scanner driver is required to save scanned data to a computer.

When scanning with a computer, you can use this driver to adjust the scan settings while checking the results.

MF Scan Utility

This is the application for scanning.

Use this to easily scan photos and documents from a computer. You can also change the scan settings for when performing scanning operations with the machine.

Step 2: Registering the Machine with a Computer

For both of the following cases, you must register the machine with the computer used as the save destination.


- Performing scanning operations with the machine
- Setting a computer connected to a network as the save destination

You do not have to register the machine when scanning from a computer or saving scanned data to a USB-connected computer.


- ▶ **When Using Windows(P. 218)**
- ▶ **When Using macOS(P. 219)**

■ When Using Windows

- 1** Click [] (Canon MF Network Scanner Selector) displayed in the Windows notification area.

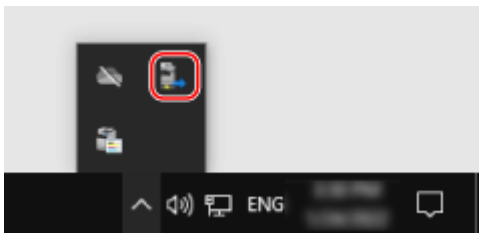

- 2** Select the checkbox for this machine, and click [OK].

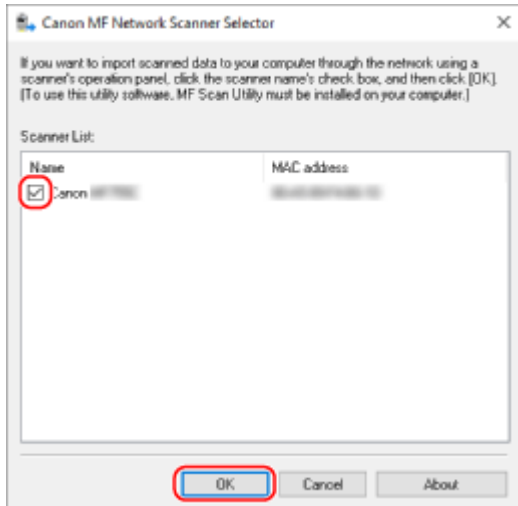

■ When Using macOS

Use MF Scan Utility to register the machine.

1 From the OS Applications folder, double-click [Canon MF Utilities] ▶ [Canon MF Scan Utility].

⇒ MF Scan Utility starts.

2 Click [Canon MF Scan Utility] ▶ [Network Scanner Settings].

3 Click [+] at the bottom left.

4 Add the machine on each tab according to the connection method.

■ Connecting with Bonjour

On the [Bonjour] tab, select the Bonjour name, and then click [Add].

■ Connecting with TCP/IP

On the [IP] tab, enter the IP address of the machine, and then click [Add].

5 Restart MF Scan Utility.

⇒ The added machine is displayed in [Product Name:] on the [Canon MF Scan Utility] main dialog box.

Preparing for a Shortcut Key to Store Scanned Data to a Computer

A19R-04J

This section describes how to register the information, such as the computer for storing the scanned data or the scan settings, to the button on the [Home] screen.

Use the control panel to configure the settings. You cannot configure the settings using Remote UI from a computer.

▶ **Touch Panel Model(P. 220)**

▶ **5 Lines LCD Model(P. 221)**

Touch Panel Model

Required Preparations

- Make preparations such as installing the scanner driver (ScanGear MF) and application (ScanGear MF) to the computer used as the save location. ▶ **Preparing to Save Scanned Data to a Computer(P. 218)**

1 On the control panel, press [Menu] in the [Home] screen. ▶ **[Home] Screen(P. 121)**


2 Press [Function Settings] ▶ [Send] ▶ [Scan and Send Settings] ▶ [Shortcut Key Settings].

⇒ The [Shortcut Key Settings] screen is displayed.

3 Press [Register].


⇒ The [Select Shortcut Key] screen is displayed.

4 Select the shortcut key to which you want to register settings.

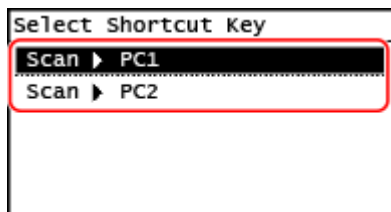

Select [Scan -> PC1] or [Scan -> PC2].

5 Select the connection method to a computer.

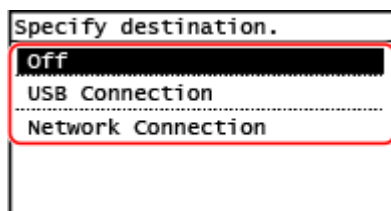


- If [Off] is selected, the shortcut key information registered in Step 4 is canceled.
- When [USB Connection] is selected, go to Step 7.

6 Select the destination computer.

Select from computers on the network where the machine participates.

7 Select the scan type.

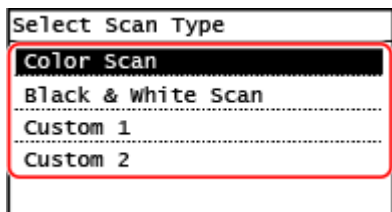

⇒ The [Shortcut Key Settings] screen is displayed.

8 Press on the control panel.

⇒ The [Home] screen is displayed.

NOTE

Confirming the registered information of the shortcut key

- You can confirm the registered information of the shortcut key selected in Step 4 by selecting the shortcut key on the screen displayed with the following steps:

[Menu] ▶ [Function Settings] ▶ [Send] ▶ [Scan and Send Settings] ▶ [Shortcut Key Settings]
▶ [Confirm Destination] from the [Home] screen

Checking or Changing Scan Setting or Save Location





- You can check and change the scan setting selected in step 7 by using the MF Scan Utility on the computer used as the save location. ▶ [Starting MF Scan Utility\(P. 246\)](#)

5 Lines LCD Model

Required Preparations

- Make preparations such as installing the scanner driver (ScanGear MF) and application (ScanGear MF) to the computer used as the save location. ▶ [Preparing to Save Scanned Data to a Computer\(P. 218\)](#)

1 On the control panel, select [Menu] in the [Home] screen, and press . ▶ [\[Home\] Screen\(P. 121\)](#)

2 Press [Function Settings] ▶  ▶ [Send] ▶  ▶ [Scan and Send Settings]
▶  ▶ [Shortcut Key Settings] ▶ .

⇒ The [Shortcut Key Settings] screen is displayed.


3 Select [Register] and press **OK**.

⇒ The [Select Shortcut Key] screen is displayed.

4 Select [Scan -> PC] and press **OK**.

5 Select the connection method to a computer and press **OK**.

- If [Off] is selected, the shortcut key information is canceled.
- When [USB Connection] is selected, go to Step 7.

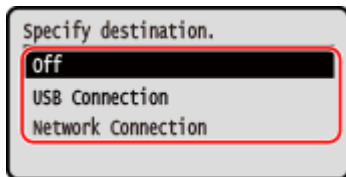


6 Select the destination computer and press **OK**.

Select from computers on the network where the machine participates.

7 Select the scan type and press **OK**.

⇒ The [Shortcut Key Settings] screen is displayed.

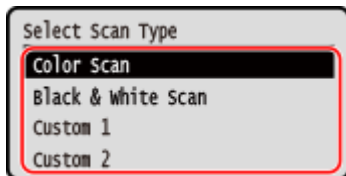

The registered information of the items available here can be confirmed or changed by using MF Scan Utility.

▶ **Starting MF Scan Utility(P. 246)**

8 Press **Home** (Home) on the control panel.

⇒ The [Home] screen is displayed.

NOTE

Confirming the registered information of the shortcut key

- You can confirm the registered information of the shortcut key on the screen displayed with the following steps:

Select [Menu] ▶ **OK** ▶ [Function Settings] ▶ **OK** ▶ [Send] ▶ **OK** ▶ [Scan and Send Settings] ▶ **OK** ▶ [Shortcut Key Settings] ▶ **OK** ▶ [Confirm Destination] ▶ **OK** ▶ [Scan -> PC] ▶ **OK** from the [Home] screen

Checking or Changing Scan Setting or Save Location

- You can check and change the scan setting selected in step 7 by using the MF Scan Utility on the computer used as the save location. ▶ **Starting MF Scan Utility(P. 246)**

Preparing to Send Scanned Data by E-mail


A19R-04K

Configure the settings of the e-mail server to be used to send e-mail. Depending on the settings, use either of the following methods to configure the settings from a computer. You cannot use the control panel to configure the settings.

Configuring the Basic Settings for Sending E-mail (Windows)

Configure the basic settings of the e-mail server. You can also register destination e-mail addresses to One-Touch in the Address Book. Use Send Function Setting Tool to configure the settings.

▶ Configuring the Basic Settings for Sending E-mail (Send Function Setting Tool)(P. 225)

* One-Touch is a list of destinations that can be recalled with [] in the Address Book or [One-Touch] in the [Home] Screen.

▶ Address Book Function(P. 164)

▶ [Home] Screen(P. 121)

Configuring Detailed Information of the E-mail Server

In addition to the basic information of the e-mail server, you can also configure POP authentication before sending and encryption communication settings. Use Remote UI to configure the settings.

▶ Configuring Detailed Information of the E-mail Server (Remote UI)(P. 228)

* Register destination e-mail addresses to the Address Book as needed.


▶ Registering Destinations to the Address Book (Control Panel)(P. 166)

▶ Registering Destinations to the Address Book (Remote UI)(P. 171)

Configuring the Basic Settings for Sending E-mail (Send Function Setting Tool)

A19R-04L

From a computer, configure the basic settings of the e-mail server using the Send Function Setting Tool. You can also register destination e-mail addresses to One-Touch in the Address Book.

* One-Touch is a list of destinations that can be recalled with [] in the Address Book or [One-Touch] in the [Home] Screen.

▶ **Address Book Function(P. 164)**

▶ **[Home] Screen(P. 121)**

Administrator privileges are required. The machine must be restarted to apply the settings.


If the SMTP port number of the e-mail server is other than 25, you must change the port number setting. ▶ **Changing the Port Number(P. 353)**

Required Preparations

- Connect the computer you are using to configure the settings to the machine over a network.
- Prepare the following information and keep it close by.
 - IP address of the machine ▶ **Checking the Network Status and Settings(P. 97)**
 - E-mail address to register as a destination
 - Setting information of the e-mail server (SMTP server name, authentication setting, user name and password to be used for authentication)
 - * For details about the setting information, contact your provider or network administrator. Depending on the usage environment, you can also refer to the information set in the computer e-mail software.

1 From a Web browser on a computer, access the following URL.

http://<IP address of this machine>/sendsupport_login.html

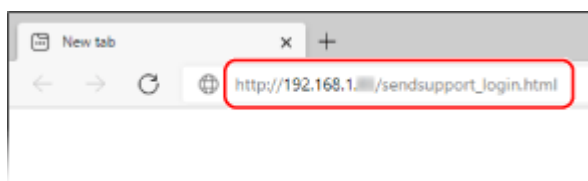

⇒ The [Start Settings] screen for the Send Function Setting Tool is displayed.

You can also use the downloaded file to start the Send Function Setting Tool. ▶ **Using the Downloaded Send Function Setting Tool(P. 227)**

■ When the [Start Settings] Screen of Send Function Setting Tool Is Not Displayed

When a message such as [Cannot continue the settings because the function to perform settings for the device is restricted.] is displayed and the [Start Settings] screen is not displayed, see the following:

▶ **Cannot Access Remote UI or Send Function Setting Tool(P. 618)**

2 Click [Start].

If the login screen appears, enter the System Manager ID and PIN, and then click [Logon].

3 Click [Send to E-mail Settings].

⇒ The [Send to E-mail Settings] screen is displayed.

If the [Enter Address Book Password] screen appears, enter the PIN, and then click [OK].

4 For [Registration], select a One-Touch number, and enter the name to be displayed in the Address Book.

Previously registered One-Touch numbers are not displayed.

5 For [Send Destination Settings], enter the e-mail address to be registered.

6 For [SMTP Server Settings], configure the e-mail server information.

[SMTP Server]

Enter the SMTP server name (the host name or IP address) to be used for sending e-mail, using single-byte alphanumeric characters.

Input example: Host name
smtp.example.com

[SMTP Authentication]

When using SMTP authentication, select [Set], and enter the user name and password for authentication using single-byte alphanumeric characters.

7 Click [Next] ► [Register].

8 Restart the machine. ▶ Restarting the Machine(P. 114)

⇒ The settings are applied.

Using the Downloaded Send Function Setting Tool

A19R-04R

You can use the downloaded Send Function Setting Tool to automatically search for and start the configuration of the machine.

Required Preparations

- Download the Send Function Setting Tool from the Canon website for your country/region.
<https://global.canon/en/support/>
- Double-click the downloaded file to extract the data.


1 In the extracted Send Function Setting Tool folder, open [SendSetting] ▶ [english], and double-click [SendSetting.exe].

⇒ A description of the Send Function Setting Tool is displayed.

2 Click [Next].

If a dialog box to cancel the Windows firewall appears, click [Yes].

3 From [Device List], select the machine, and click [Next].

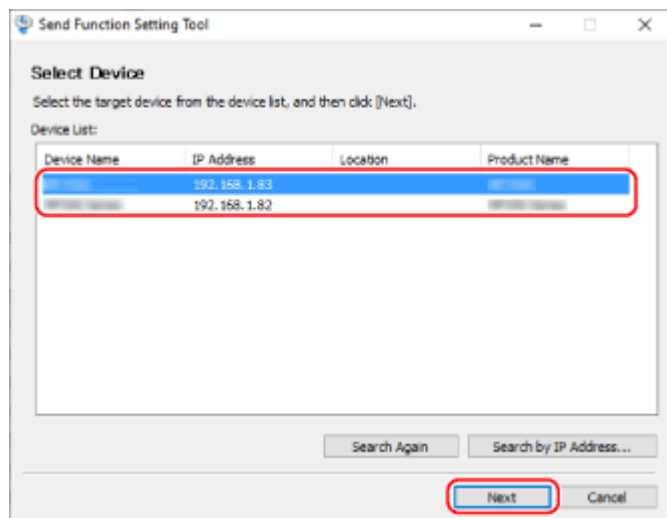

If the machine is not displayed in [Device List], click [Search Again]. If the machine is still not displayed, click [Search by IP Address], enter the IP address of the machine, and then click [OK].

4 Click [OK].

⇒ The [Start Settings] screen of the Send Function Setting Tool is displayed.

Configuring Detailed Information of the E-mail Server (Remote UI)

A19R-04S

Use Remote UI from a computer to configure the information of the e-mail server to use for sending scanned data by e-mail. You can also configure POP authentication before sending, SMTP authentication, and encryption communication settings.

Administrator privileges are required. The machine must be restarted to apply the settings.

If the SMTP port number of the e-mail server is other than 25 and/or the POP3 port number is other than 110, you must change the port number setting. [▶ Changing the Port Number\(P. 353\)](#)

Required Preparations

- Connect the computer you are using to configure the settings to the machine over a network.
- Prepare the following information and keep it close by.
 - IP address of the machine [▶ Checking the Network Status and Settings\(P. 97\)](#)
 - E-mail address of the machine
 - Setting information of the e-mail server (SMTP/POP3 server name, authentication setting, user name and password to be used for authentication, encrypted communication setting)
 - * For details about the setting information, contact your provider or network administrator. Depending on the usage environment, you can also refer to the information set in the computer e-mail software.

1 Log in to Remote UI in System Manager Mode. [▶ Starting Remote UI\(P. 395\)](#)

2 On the Portal page of Remote UI, click [Settings/Registration]. [▶ Portal Page of Remote UI\(P. 397\)](#)

3 Click [TX Settings] ▶ [E-Mail Settings] ▶ [Edit].

⇒ The [Edit E-Mail Settings] screen is displayed.

4 Enter the basic settings of the e-mail server.

[SMTP Server]

Enter the SMTP server name (the host name or IP address) to be used for sending e-mail, using single-byte alphanumeric characters.

Input example: Host name
smtp.example.com

[E-Mail Address]

Enter the e-mail address of the machine using single-byte alphanumeric characters.

[POP Server]

When using POP authentication before sending (POP before SMTP), enter the POP3 server name (the host name or IP address) using single-byte alphanumeric characters.

Input example: Host name
pop.example.com

[User Name]

Enter the user name used for authenticating the POP3 server using single-byte alphanumeric characters.

[Set/Change Password]

To set a password to use when authenticating the POP3 server, select this checkbox, and enter the password using single-byte alphanumeric characters.

5 Configure the authentication and encryption settings for sending e-mail according to your usage environment.

■ When using POP authentication (POP before SMTP) before sending

Select the [Use POP Authentication Before Sending] checkbox.

To use APOP authentication to encrypt password at authentication, also select the [Use APOP Authentication] checkbox.

■ When using SMTP authentication

Select the [Use SMTP Authentication (SMTP AUTH)] checkbox, and enter the user name to be used for SMTP authentication using single-byte alphanumeric characters.

To set a password to use for SMTP authentication, select the [Set/Change Password] checkbox, and enter the password using single-byte alphanumeric characters.

■ When encrypting communication with the e-mail server

Select the [Use TLS for SMTP TX] and/or [Use TLS for POP] checkboxes.

Configure whether to verify a certificate for TLS encryption communication or whether to add a common name (CN) to the verification items.

6 Click [OK].

By clicking [Check SMTP Connection] or [Check POP Connection], you can check the connection with the SMTP or POP3 server using the current settings.

7 Restart the machine. ▶ Restarting the Machine(P. 114)

⇒ The settings are applied.

Preparing to Save Scanned Data to a Shared Folder

A19R-04U


- **Create a shared folder as a save location of the scanned data as needed.** ▶ **Creating a Shared Folder(P. 659)**

- **Register the shared folder information to the Address Book**

Register the information for accessing the shared folder to the Address Book of the machine. Register from a computer using either of the following methods. You must register each shared folder that serves as a save location. You cannot use the control panel to register this information.

Using the Send Function Setting Tool (Windows)
 Register the shared folder information to One-Touch in the Address Book.
 ▶ **Registering a Shared Folder to the Address Book (Send Function Setting Tool)(P. 231)**

Using Remote UI
 Register the shared folder information to One-Touch in the Address Book or Coded Dial. ▶ **Registering Destinations to the Address Book (Remote UI)(P. 171)**


* One-Touch is a list of destinations that can be recalled with [] in the Address Book or [One-Touch] in the [Home] Screen.
 ▶ **Address Book Function(P. 164)**
 ▶ **[Home] Screen(P. 121)**

* Coded Dial is a destination with a three-digit number that can be directly recalled from the Address Book.

Registering a Shared Folder to the Address Book (Send Function Setting Tool)

A19R-04W

Use the Send Function Setting Tool from a computer to register the shared folder information to One-Touch in the Address Book.

* One-Touch is a list of destinations that can be recalled with [] in the Address Book or [One-Touch] in the [Home] Screen.

▶ **Address Book Function(P. 164)**

▶ **[Home] Screen(P. 121)**


Administrator privileges are required. The machine must be restarted to apply the settings.

Required Preparations

- Connect the computer you are using to configure the settings to the machine over a network.
- Prepare the following information and keep it close by.
 - IP address of the machine ▶ **Checking the Network Status and Settings(P. 97)**
 - Name or IP address of the computer with the shared folder
 - ▶ **Viewing the System Information of the Computer(P. 662)**
 - ▶ **Viewing the Network Connection Information of the Computer(P. 664)**
 - Path to the shared folder
 - User name and password used for accessing the shared folder (if Restrict Access is set)

1 From a Web browser on a computer, access the following URL.

http://<IP address of this machine>/sendsupport_login.html

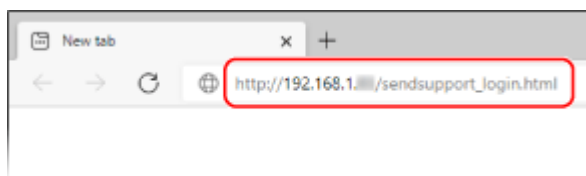

⇒ The [Start Settings] screen of the Send Function Setting Tool is displayed.

You can also use the downloaded file to start the Send Function Setting Tool. ▶ **Using the Downloaded Send Function Setting Tool(P. 227)**

2 Click [Start].

If the login screen appears, enter the System Manager ID and PIN, and then click [Logon].

3 Click [Store to Shared Folder Settings].

⇒ The [Store to Shared Folder Settings] screen is displayed.

If the [Enter Address Book Password] screen appears, enter the PIN, and then click [OK].

4 For [Registration], select a One-Touch number, and enter the name to be displayed in the Address Book.

Previously registered One-Touch numbers are not displayed.

5 Enter the shared folder information in [Store Destination Settings].

[Computer Name of Store Destination]

Enter the name or IP address of the computer with the shared folder.

* When using a DNS server, you can enter the host name or FQDN instead of the computer name or IP address.

[Shared Folder Name on Store Destination Computer]

Enter the path to the shared folder. Use "\" as a separator.

Input example: when the shared folder path is C:\users\public\share
users\public\share

If there is no folder at the entered path, a folder with the entered name is created when scanned data is saved for the first time.

* However, if there is no parent folder, or you do not have write permission to the parent folder, a sending error occurs without a folder being created.

6 In [Status of Settings for Shared Folder], specify whether to enable Restrict Access for the shared folder.

If Restrict Access is enabled for the shared folder, select [Set], and enter the user name and password used for accessing the shared folder using single-byte alphanumeric characters.


7 Click [Next] ► [Register].

8 Restart the machine. ► Restarting the Machine(P. 114)

► The settings are applied.

Scanning (Saving to a Computer)

A19R-04X

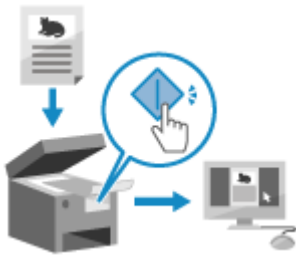

You can scan an original and save the scanned data to a computer connected to the machine. By just operating the machine, you can save scanned data to a computer. The original is scanned and the data is saved according to the settings of MF Scan Utility installed on the computer.

▶ **Touch Panel Model(P. 233)**

▶ **5 Lines LCD Model(P. 234)**

Touch Panel Model

Required Preparations

- Make preparations such as installing the scanner driver (ScanGear MF) and application (MF Scan Utility) to the computer used as the save location. ▶ **Preparing to Save Scanned Data to a Computer(P. 218)**
- If the ScanGear MF screen appears on the computer used as the save location, close the screen.

1 Place the original. ▶ **Placing Originals(P. 140)**

2 On the control panel, press [Scan] in the [Home] screen. ▶ **[Home] Screen(P. 121)**

⇒ The scan type selection screen is displayed.


3 Press [Computer].

⇒ The screen to select the computer to be used as the save location is displayed.

When you are using the machine only with a USB-connected computer, the scan screen is displayed.
Proceed to step 5.

4 Select the computer to be used as the save location.

5 Select the scan setting, and press  on the control panel.

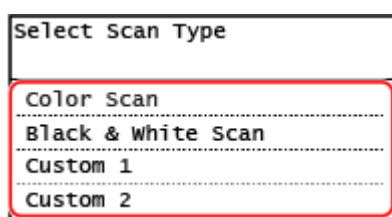


⇒ Scanning of the original starts.


- The scanned data format, save location on the computer, and other settings are set for each scan setting. The original is scanned according to the selected scan setting.
- To cancel scanning, press [Cancel] ► [Yes]. **▶Canceling Scanning(P. 251)**
- When scanning is completed, the destination folder is displayed on the screen of the selected computer.
* By default, a subfolder with the scanning date is created in the [Documents] folder (Windows) or the [Pictures] folder (macOS), and the scanned data is saved to that folder.

■When [Scan Next: Press Start] appears

When an original is placed on the platen glass and is scanned, the screen for scanning additional originals is displayed.

To continue scanning originals, place them on the platen glass, and press  on the control panel.

Press [Finish Scan] to save the scanned data.

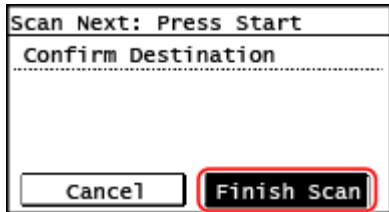

* If the size of the original is different, part of the image may be missing, or the image may be scanned smaller.

NOTE

Checking or Changing Scan Setting or Save Location

- You can check and change the scan setting selected in step 5 by using the MF Scan Utility on the computer used as the save location. **▶Starting MF Scan Utility(P. 246)**

5 Lines LCD Model

Required Preparations

- Make preparations such as installing the scanner driver (ScanGear MF) and application (MF Scan Utility) to the computer used as the save location. **▶Preparing to Save Scanned Data to a Computer(P. 218)**
- If the ScanGear MF screen appears on the computer used as the save location, close the screen.

1 Place the original. **▶Placing Originals(P. 140)**

2 On the control panel, press [Scan] in the [Home] screen and press . **▶[Home] Screen(P. 121)**

⇒ The scan type selection screen is displayed.


3 Select [Computer] and press .

⇒ The screen to select the computer to be used as the save location is displayed.

When you are using the machine only with a USB-connected computer, the scan screen is displayed. Proceed to step 5.

4 Select the computer to be used as the save location, and press **OK**.

5 Select the scan setting and press **OK**.

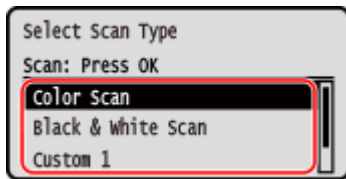

⇒ Scanning of the original starts.


- The scanned data format, save location on the computer, and other settings are set for each scan setting. The original is scanned according to the selected scan setting.
- To cancel scanning, press [**<Cancel>**] ► **OK** ► [**Yes**] ► **OK**. ▶ **Canceling Scanning(P. 251)**
- When scanning is completed, the destination folder is displayed on the screen of the selected computer.
 - * By default, a subfolder with the scanning date is created in the [Documents] folder (Windows) or the [Pictures] folder (macOS), and the scanned data is saved to that folder.

■ When [Scan Next: Press Start] appears

When an original is placed on the platen glass and is scanned, the screen for scanning additional originals is displayed.

To continue scanning originals, place them on the platen glass, and press **Start** on the control panel.

Select [**<Finish Scanning>**] and press **OK** to save the scanned data.

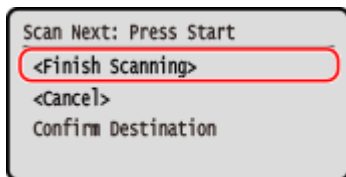

* If the size of the original is different, part of the image may be missing, or the image may be scanned smaller.


NOTE

Checking or Changing Scan Setting or Save Location

- You can check and change the scan setting selected in step 5 by using the MF Scan Utility on the computer used as the save location. ▶ **Starting MF Scan Utility(P. 246)**

Scanning (Sending by E-mail)

A19R-04Y

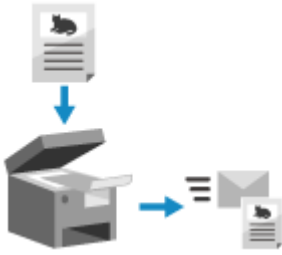

You can scan an original and send the scanned data by e-mail as an attachment. Just like when sending a regular e-mail, you can add a subject and message and specify multiple destinations.

Required Preparations

- On the machine, configure the settings of the e-mail server to be used to send e-mail. [▶Preparing to Send Scanned Data by E-mail\(P. 224\)](#)

1 Place the original. [▶Placing Originals\(P. 140\)](#)


2 On the control panel, press [Scan] in the [Home] screen. [▶\[Home\] Screen\(P. 121\)](#)

⇒ The scan type selection screen is displayed.

3 Press [E-Mail].


⇒ The scan screen is displayed.

4 Specify the destination. [▶Specifying Destinations\(P. 177\)](#)

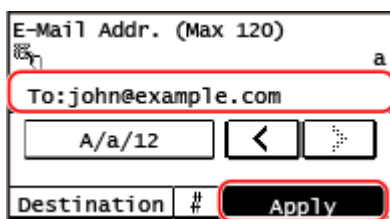


Use [Specify from Address Book] or [Specify from Coded Dial] to specify the Cc and Bcc destinations.

5 Configure the scan settings. [▶Scan Settings \(Touch Panel Model\)\(P. 247\)](#)

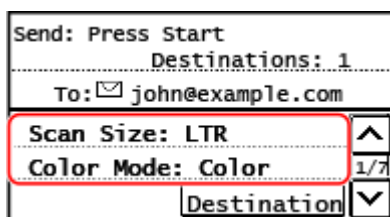


- You can also set the subject and main body of the e-mail on this screen. [▶E-mail Settings\(P. 249\)](#)
- Scanned data is sent with the following file name. You can also specify a custom string and add it to the start. [▶Setting File / Division\(P. 249\)](#)

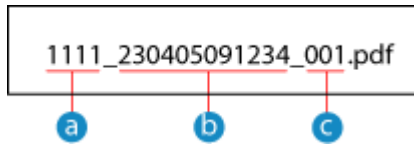

- a** Communications management number
- b** Date sent (in this example, "April 5, 2023, 9:12:34 AM")
- c** File sequence number (if one file, then "001")

6 Press on the control panel.

⇒ Scanning of the original starts.


- To cancel scanning, press [Cancel] ► [Yes]. **▶Canceling Scanning(P. 251)**
- When scanning is completed, the scanned data is sent. Press  on the control panel to view the sending status and log.

■When [Confirm Destination] appears


Check that the destination is correct, and then press [Start Scan].

■When [Scan Next: Press Start] appears

After the original is placed on the platen glass and is scanned in PDF or TIFF format, the screen for scanning additional originals is displayed.

To continue scanning originals, place on the platen glass, and press .

When scanning of all originals is completed, press [Start TX].

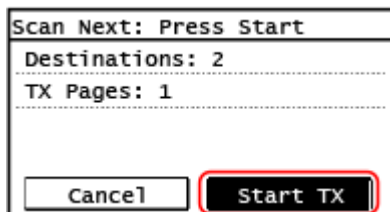


* If the size of the original is different, part of the image may be missing, or the image may be scanned smaller.

■When [Status Mntr.] appears

To view the save status and log, press [Status Mntr.]. **▶Checking the Send and Save Status and Log of Scanned Data (Touch Panel Model)(P. 252)**

Pressing [Close] displays the scan screen.

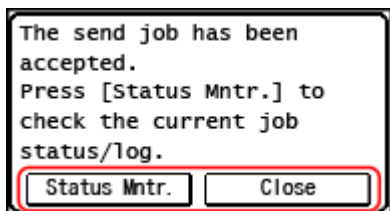


NOTE

When a Sending Error Occurs

- Depending on the e-mail server settings, a notification e-mail may be sent to the e-mail address set on the machine when a sending error occurs. If notification e-mails are left in the server, the mailbox may become full, so it is recommended to periodically empty the mailbox. **▶Clearing the Mail Box(P. 409)**

Scanning (Saving to a Shared Folder)

A19R-050

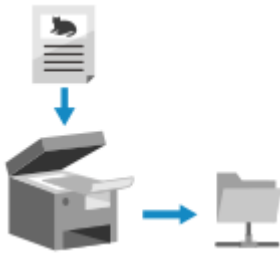

You can scan an original and save the scanned data to a shared folder on a computer.

This is convenient for sharing the scanned data of a paper document on a network.

Required Preparations

- Register the information for accessing the shared folder to the Address Book of the machine.
 - ▶ **Preparing to Save Scanned Data to a Shared Folder(P. 230)**

1 Place the original. ▶ **Placing Originals(P. 140)**


2 On the control panel, press [Scan] in the [Home] screen. ▶ **[Home] Screen(P. 121)**

⇒ The scan type selection screen is displayed.


3 Press [File].

⇒ The scan screen is displayed.


4 Specify the destination. ▶ **Specifying Destinations(P. 177)**

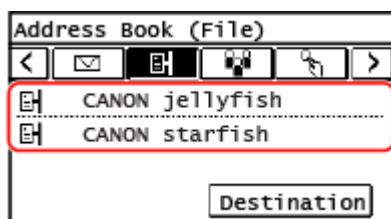

5 Configure the scan settings. ▶ **Scan Settings (Touch Panel Model)(P. 247)**

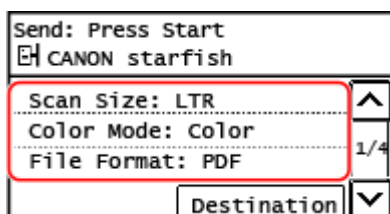


Scanned data is saved with the following file name. You can also add a specified custom string to the start. ▶ **Setting File / Division(P. 249)**

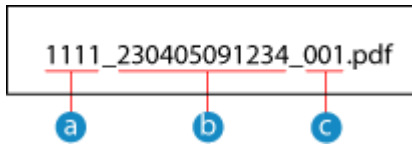

- a Communications management number
- b Date saved (in this example, "April 5, 2023, 9:12:34 AM")
- c File sequence number (if one file, then "001")

6 Press on the control panel.

⇒ Scanning of the original starts.

- To cancel scanning, press [Cancel] ► [Yes]. **▶Canceling Scanning(P. 251)**
- When scanning is completed, the scanned data is saved. Press  on the control panel to view the save status and log. **▶Checking the Send and Save Status and Log of Scanned Data (Touch Panel Model) (P. 252)**

■When [Confirm Destination] appears


Check that the destination is correct, and then press [Start Scan].

■When [Scan Next: Press Start] appears

After the original is placed on the platen glass and is scanned in PDF or TIFF format, the screen for scanning additional originals is displayed.

To continue scanning originals, place on the platen glass, and press  on the control panel.

When scanning of all originals is completed, press [Start TX].

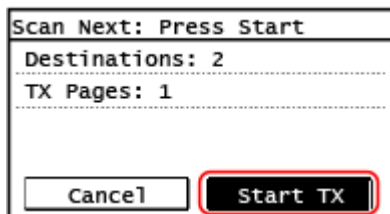


* If the original has different size pages, part of the image may be missing, or the image may be scanned smaller.

■When [Status Mnr.] appears

To view the save status and log, press [Status Mnr.]. **▶Checking the Send and Save Status and Log of Scanned Data (Touch Panel Model)(P. 252)**

Pressing [Close] displays the scan screen.

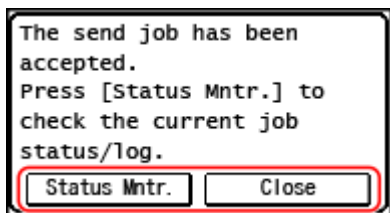

Scanning Using the Shortcut Key (Saving to a Computer)

A19R-051

Scanning Using the Shortcut Key (Saving to a Computer)



You can scan an original and store the scanned data to a computer connected to the machine. You only have to operate on the machine. According to the settings registered to the shortcut key on the [Home] screen on the control panel, the scanned data is stored to a computer designated beforehand.

▶ **Touch Panel Model(P. 240)**

▶ **5 Lines LCD Model(P. 241)**

Touch Panel Model

Required Preparations

- To the shortcut key, you need to register the destination computer and the scan settings beforehand. ▶ **Preparing for a Shortcut Key to Store Scanned Data to a Computer(P. 220)**
- If the ScanGear MF screen appears on the computer used as the save location, close the screen.

1 Place the original. ▶ **Placing Originals(P. 140)**


2 On the control panel, press [Scan -> PC1] or [Scan -> PC2] in the [Home] screen. ▶ **[Home] Screen(P. 121)**

⇒ Scanning of the original starts.


- The scan data format and the destination computer are registered to each shortcut key. Scanning is performed according to the settings registered to a selected shortcut key.
- To cancel scanning, press [Cancel] ▶ [Yes]. ▶ **Canceling Scanning(P. 251)**
- When scanning is completed, the destination folder is displayed on the screen of the selected computer.
 - * By default, a subfolder with the scanning date is created in the [Documents] folder (Windows) or the [Pictures] folder (macOS), and the scanned data is saved to that folder.

■ **When [Scan Next: Press Start] appears**

When an original is placed on the platen glass and is scanned, the screen for scanning additional originals is displayed.

To continue scanning originals, place them on the platen glass, and press  on the control panel.

Press [Finish Scan] to save the scanned data.

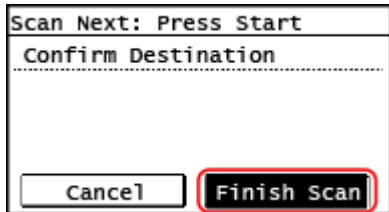

* If the size of the original is different, part of the image may be missing, or the image may be scanned smaller.

NOTE

Confirming the registered information of the shortcut key

- You can confirm the registered information of the shortcut key selected in Step 2 by selecting the shortcut key on the screen displayed with the following steps:

[Menu] ▶ [Function Settings] ▶ [Send] ▶ [Scan and Send Settings] ▶ [Shortcut Key Settings] ▶ [Confirm Destination] from the [Home] screen

Checking or Changing Scan Setting or Save Location

- You can check and change the scan setting by using the MF Scan Utility on the computer used as the save location. ▶ **Starting MF Scan Utility(P. 246)**

5 Lines LCD Model

Required Preparations

- To the shortcut key, you need to register the destination computer and the scan settings beforehand. ▶ **Preparing for a Shortcut Key to Store Scanned Data to a Computer(P. 220)**
- If the ScanGear MF screen appears on the computer used as the save location, close the screen.

1 Place the original. ▶ **Placing Originals(P. 140)**


2 On the control panel, press [Scan -> PC] ▶ **OK** in the [Home] screen. ▶ **[Home] Screen(P. 121)**

⇒ Scanning of the original starts.


- To cancel scanning, press [<Cancel>] ▶ **OK** ▶ [Yes] ▶ **OK**. ▶ **Canceling Scanning(P. 251)**
- When scanning is completed, the destination folder is displayed on the screen of the selected computer.
 - * By default, a subfolder with the scanning date is created in the [Documents] folder (Windows) or the [Pictures] folder (macOS), and the scanned data is saved to that folder.

■ When [Scan Next: Press Start] appears

When an original is placed on the platen glass and is scanned, the screen for scanning additional originals is displayed.

To continue scanning originals, place them on the platen glass, and press  on the control panel.

Select [<Finish Scanning>] and press **OK** to save the scanned data.

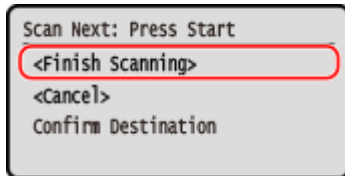

* If the size of the original is different, part of the image may be missing, or the image may be scanned smaller.

NOTE

Confirming the registered information of the shortcut key

- You can confirm the registered information of the shortcut key on the screen displayed with the following steps:

Select [Menu] ► **OK** ► [Function Settings] ► **OK** ► [Send] ► **OK** ► [Scan and Send Settings] ► **OK** ► [Shortcut Key Settings] ► **OK** ► [Confirm Destination] ► **OK** ► [Scan -> PC] ► **OK** from the [Home] screen

Checking or Changing Scan Setting or Save Location

- You can check and change the scan setting by using the MF Scan Utility on the computer used as the save location. ▶ **Starting MF Scan Utility(P. 246)**

Scanning from a Computer (Saving to a Computer)

A19R-052



You can scan an original and save the scanned data to a computer connected to the machine. You can set the format and save location when scanning from a computer. This method lets you see the scanned data immediately on the computer screen so you can check the image quality and make adjustments.

Use either of the following applications to perform scanning.

Dedicated application (Canon PRINT)

You can use the dedicated Canon application Canon PRINT to print and scan. [▶Using a Dedicated Application to Print and Scan \(Canon PRINT\)\(P. 335\)](#)

Dedicated application (MF Scan Utility)

Scan easily using the setting to suit your purpose. Send scanned data to a specified application to display it and send it by e-mail. You can also use the ScanGear MF screen to configure advanced settings.

[▶Using a Dedicated Application to Perform Scanning - MF Scan Utility\(P. 243\)](#)

Other TWAIN- and WIA-supported Applications

You can also use image processing software, document software, and other applications that support TWAIN*¹ or WIA*². Scanned data is imported directly to the application for immediate editing and processing. Check the manual of the application you are using to see if it supports TWAIN or WIA.

[▶Scanning Using Other TWAIN- and WIA-supported Applications\(P. 244\)](#)

*¹ TWAIN is a standard for connecting a scanner or other image input device to a computer.

*² WIA is a function that comes standard in Windows.


Using a Dedicated Application to Perform Scanning - MF Scan Utility

After placing an original on the machine, scan using MF Scan Utility on a computer.

Required Preparations

- Install the scanner driver (ScanGear MF) and application (MF Scan Utility) on the computer. [▶Installing Software and Drivers to the Computer\(P. 107\)](#)

- 1 Place the original on the machine.** [▶Placing Originals\(P. 140\)](#)
- 2 Start MF Scan Utility on a computer.** [▶Starting MF Scan Utility\(P. 246\)](#)
- 3 For [Product Name], select the machine.**
- 4 Click the button corresponding to the original type and purpose to start scanning.**

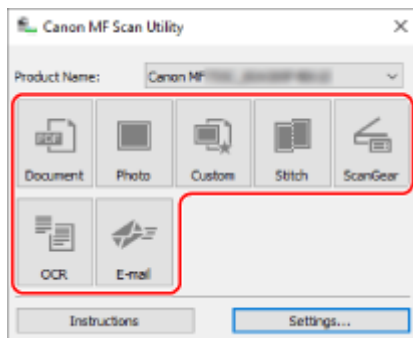

Click [ScanGear] to display ScanGear MF and configure the advanced scan settings. For more information, click [?] on ScanGear MF to display help.

NOTE

When Scanning Cannot Be Performed

- The machine may not be online (scan standby mode). On the control panel, select [Scan] in the [Home] screen, and press [Remote Scanner] to turn the machine online, and then repeat the operation.

Scanning Using Other TWAIN- and WIA-supported Applications

After placing an original on the machine, scan using other TWAIN- and WIA-supported application on your computer. This section describes the general procedure for this operation. Check the manual of the application you are using for detailed operations on how to use it.

Required Preparations

- Install the scanner driver (ScanGear MF) on the computer. ▶ **Installing Software and Drivers to the Computer(P. 107)**

- 1 Place the original on the machine.** ▶ **Placing Originals(P. 140)**
- 2 On the computer, start the application used to import the scanned data.**
- 3 In the application, select the command to start the scanning operation.**
- 4 Select the scanner driver (ScanGear MF or WIA) of the machine, and configure the scan settings.**

For more advanced scan settings, select ScanGear MF. For more information, click [?] on ScanGear MF to display help.

- 5 Start scanning.**

⇒ When scanning is completed, the scanned data is imported to the application.

If the next pages of the original are not scanned or an error message appears after scanning is completed, place the originals on the machine one at a time and perform scanning.

NOTE

When Scanning Cannot Be Performed


- The machine may not be online (scan standby mode). On the control panel, select [Scan] in the [Home] screen, and press [Remote Scanner] to turn the machine online, and then repeat the operation.

Starting MF Scan Utility

A19R-053

Start MF Scan Utility installed on the computer.

■ When Using Windows

Click [] (Start) ▶ [Canon] ▶ [MF Scan Utility].

■ When Using macOS

From the OS Applications folder, double-click [Canon MF Utilities] ▶ [Canon MF Scan Utility].

NOTE

- For more information on the operations and settings of MF Scan Utility, click [Instructions] on the MF Scan Utility screen to display help.

Scan Settings (Touch Panel Model)

A19R-054

When scanning with the machine, you can use the scanning screen to set the original size and adjust the image quality.



If the scanned data does not appear as expected, you can change the settings and scan again.

* To save scanned data to a computer, configure the settings with MF Scan Utility or ScanGear MF installed on the computer. You cannot use the control panel to configure the settings.

- ▶ **Setting the Original Size and Orientation(P. 247)**
- ▶ **Adjusting Image Quality(P. 248)**
- ▶ **2-Sided Scan Settings(P. 248)**
- ▶ **Setting File / Division(P. 249)**
- ▶ **E-mail Settings(P. 249)**

NOTE

Registering the Frequently Used Scan Settings as the Default Settings

- You can change the default scan settings according to the frequently used scan settings. ▶ **Changing the Default Settings(P. 185)**

Recalling Past Settings - TX Job Log

- You can use the TX Job Log to recall the scan settings used to send or save scanned data in the past. ▶ **Specifying Destinations (TX Job Log)(P. 184)**

Setting the Original Size and Orientation

Set the size and orientation according to the original to be scanned.

[Scan Size]

Select the size of the placed original.

[Original Orientation]

Select [Portrait] or [Landscape] to suit the placed original.



Adjusting Image Quality

You can adjust the image quality such as when the scanned data image is not clear or the text is difficult to read.

[Color Mode]

Select the scanning color mode (Black & White/Color).

[Density]

Adjust the density to suit the original.

Press [+] to increase the density and [-] to lower it.

[Original Type]

Select the original type.

Scanning is performed using the image quality to suit the content of the original.

[Sharpness]


Adjust the sharpness.

Emphasize the contours and lines to make them clearer, or weaken them to make them softer.

Adjustment example:


- **To make blurry text or shapes clearer**

Press [+].

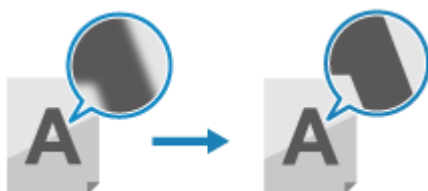

- **To reduce moire (vertical pattern noise) in pictures**

Press [-].

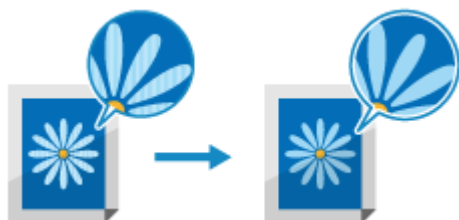

NOTE

When the File Format of the Scanned Data Is JPEG

- The image quality varies depending on the compression ratio selected in [Data Size]. [▶Setting File / Division\(P. 249\)](#)

2-Sided Scan Settings

When scanning a 2-sided original, place the original on the feeder, and set [2-Sided Original].

* This setting is available only when the machine is equipped with a feeder that supports 2-sided scanning. [▶](#)

Supported Functions(P. 3)

[2-Sided Original]

When scanning a 2-sided original, select [Book Type] or [Calendar Type]. Select this according to the top and bottom orientation of the front and back sides of the placed original.

[Book Type]

Top and bottom have same orientation

[Calendar Type]

Top and bottom have opposite orientation

To cancel scanning of a 2-sided original, select [Off].

Setting File / Division

Set the scanned data format and file name.

You can compress data and enable recognition of text in an original. You can also combine multiple originals into one file or create separate files for each original.

[File Format]

Select the scanned data format from PDF, JPEG, or TIFF according to your purpose and environment.

Reducing the Data Size

- **When using PDF format**

Select [PDF (Compact)].

The data size is reduced, but the image quality and the number of sheets that can be scanned at a time may also be reduced depending on the original type.

- **When using JPEG format**

Select [JPEG], and set [Data Size] to [Small: Memory Priority].

Combining Multiple Originals into One File

Select PDF or TIFF format.

Dividing the Original into Separate Files

- **When using PDF format or TIFF Format**

Select [Set PDF/TIFF Details] ► select PDF format or TIFF Format ► press [On] in [Divide into Pages].

- **When using JPEG format**

Select [JPEG].

[Data Size]

Select the data size when using JPEG format for the scanned data. The compression ratio varies according to the selected data size.

[Small: Memory Priority]

Increases the compression ratio but lowers the image quality.

[Large: Image Quality Priority]

Lowers the compression ratio but increases the data size.

[File Name]

Specify a string to add to the start of the file name of the scanned data.

E-mail Settings

You can configure the e-mail settings when sending scanned data by e-mail.

[Subject/Message]

Set the subject and main body of the e-mail.

[Reply To]

Select an e-mail address (Reply-To) from the Address Book to be used for e-mail recipients to reply to.

If no e-mail address is selected here, the e-mail address of the machine is used as the Reply-To e-mail address.

* If the e-mail address you want to use is not registered in the Address Book, register it, and then select it. **▶Address Book Function(P. 164)**

[Priority]

Select the priority level.

NOTE

E-mail Sender

- The e-mail address of the machine becomes the sender e-mail address (From) regardless of the [Reply To] setting.
- To send the sender's name along with the e-mail address of the machine, use the following procedure to set the unit name.

Log in to Remote UI ▶ [Settings/Registration] ▶ [TX Settings] ▶ [Scan and Send Settings] ▶ [Edit] under [Unit Name Settings] ▶ enter the unit name ▶ [OK].

On the control panel, select [Menu] in the [Home] screen, and then select [Function Settings] to configure the settings. **▶[Register Unit Name (E-Mail)](P. 483)**

- The e-mail sender is the setting shared with the machine.

Canceling Scanning


A19R-055

Follow the instructions on screen to cancel a scanning operation.


- ▶ Touch Panel Model(P. 251)
- ▶ 5 Lines LCD Model(P. 251)

Touch Panel Model


Press [Cancel] ▶ [Yes].

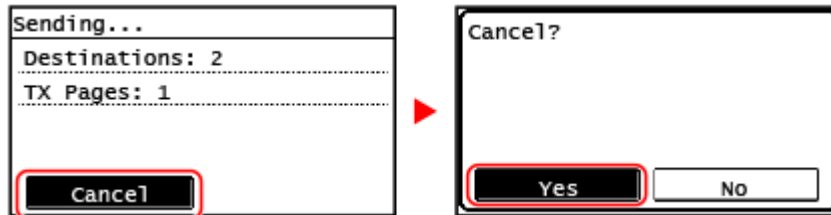

If the above screen is not displayed, press  on the control panel, and then press [Yes].

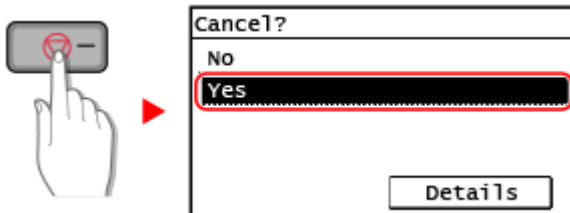


If the job list screen is displayed, select the job to cancel, and press [Yes].

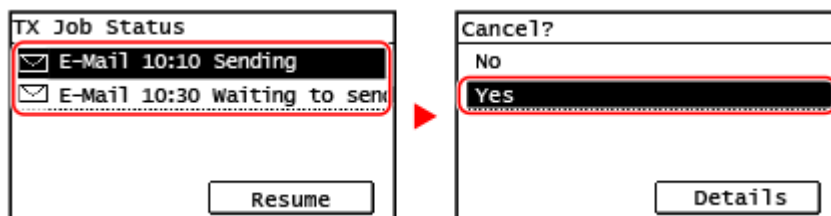


5 Lines LCD Model

Press [<Cancel>] ▶ [OK] ▶ [Yes] ▶ [OK] .

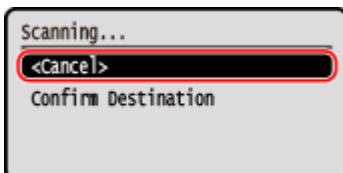

If the above screen is not displayed, press  on the control panel, and then select [Yes] and press [OK] .

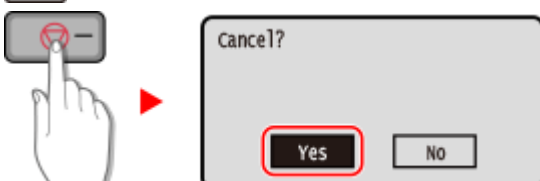

Checking the Send and Save Status and Log of Scanned Data (Touch Panel Model)

A19R-056

You can check the send or save status and log of data scanned with the machine.

Processes handled by the machine, including sending and saving scanned data, are managed as jobs. By checking the status and log of jobs, you can determine whether a scan job was performed correctly and the cause of errors that occur.

* If the log is hidden, you can only check the send and save status. [▶\[Display Job Log\]\(P. 505\)](#)

This section describes how to check the status and log using the control panel.

You can also use Remote UI from a computer to check the status and log. [▶Checking Usage and Logs with Remote UI\(P. 399\)](#)

1 Press on the control panel. [▶Control Panel\(P. 13\)](#)

⇒ The [Status Monitor] screen is displayed.

2 Press [TX Job].

3 Check the status and log on the [Job Status] or [Job Log].

■Checking the Send and Save Status

1 Press [Job Status], check the job being processed or waiting to be processed.

2 Select a job to view its details.

⇒ The job details are displayed.

3 Check the number of pages and the destination.

For jobs with multiple destinations, press [Number of Destinations] to display the list of destinations.

■Checking the Send and Save Log

1 Press [Job Log], check the completed send and save jobs.

* Up to 100 jobs are displayed in the log. (The log includes fax jobs.)

2 Select a job to view its details.

⇒ The job details are displayed.

3 Check the number of pages and the destination.

For jobs with multiple destinations, press [Number of Destinations] to display the list of destinations.

If Send or Save Log Displays [Error]

Sending or saving was canceled, or an error occurred.

If a three-digit number starting with "#" (error code) is displayed, you can check the cause and solution using the error code. [▶An Error Code Is Displayed\(P. 643\)](#)

NOTE

Registering Destinations to the Address Book

- On the screen displaying the job details, press [Reg Adr Book] to register the destination to the Address Book.
 - * This operation is not available when there are multiple destinations.

Faxing

Faxing	255
Preparing to Send and Receive Faxes	256
Preparing to Send Faxes from a Computer	257
Changing Fax RX Mode and Setting the Action when Receiving a Fax	259
Changing the Fax Number and Unit Name	261
Forwarding Faxes and Configuring the Backup Settings	262
Backing Up Sent Faxes	263
Auto Forwarding and Backing Up Received Faxes	265
Sending Faxes	267
Sending a Fax after a Phone Conversation (Manual Sending)	269
Sending Faxes from a Computer (PC Faxing)	271
Securely Sending PC Faxes	274
Fax Original Scan Settings	275
Receiving Faxes	277
Receiving Faxes via Telephone (Remote RX)	278
Changing the Print Settings for Received Faxes	279
Canceling Fax Sending	281
Checking the Status and Log for Sent and Received Faxes	282

Faxing

Faxing is the sending and receiving of documents and photos as black and white images over a telephone line. For details on supported models, see the following: [▶Supported Functions\(P. 3\)](#)

Sending Faxes

The following two methods are available:

Sending a Fax from the Machine



You can scan a document, photo, or other printed materials (originals) with the machine, converting it to a black and white image, and then send it.

[▶Sending Faxes\(P. 267\)](#)

Sent faxes can also be forwarded or saved automatically to a specific destination.

[▶Backing Up Sent Faxes\(P. 263\)](#)

Sending a Fax from a Computer



You can convert a document or photo to a black and white image and send it via a fax driver installed on a computer connected to the machine.

You can send a fax in the same way as printing a document or photo from a computer. To send a fax, you do not need to prepare printed materials.

[▶Preparing to Send Faxes from a Computer\(P. 257\)](#)

[▶Sending Faxes from a Computer \(PC Faxing\)\(P. 271\)](#)

* In macOS, you can use the AirPrint function that is standard in the OS to send data from a computer without having to install a fax driver. [▶Using AirPrint Application to Print and Scan Data and Send Faxes\(P. 338\)](#)

Receiving Faxes

When the machine is set to receive faxes automatically, faxes are received without the incoming ringing. If the machine rings, you can pick up the handset to determine whether it is a call or a fax. If it is a fax, you can receive it.

[▶Receiving Faxes\(P. 277\)](#)

Received faxes can also be forwarded or saved automatically to a specific destination.

[▶Auto Forwarding and Backing Up Received Faxes\(P. 265\)](#)

■ See Also

Restricting Printing of Received Faxes

You can temporarily save received faxes in the memory of the machine without printing them.

[▶Saving Received Documents in the Machine \(Memory Lock\)\(P. 378\)](#)

Preparing to Send and Receive Faxes

A19R-058

To send and receive faxes with the machine, you must use the control panel (Fax Setup Guide) to configure the initial settings. You cannot configure the initial settings using Remote UI from a computer. [▶Configuring the Fax Settings \(Fax Setup Guide\)\(P. 103\)](#)

When Sending Faxes from a Computer

You must make the necessary preparations on each computer used to send faxes.

[▶Preparing to Send Faxes from a Computer\(P. 257\)](#)

To Change the Initial Settings

You can change the settings configured with Fax Setup Guide individually.

[▶Changing Fax RX Mode and Setting the Action when Receiving a Fax\(P. 259\)](#)

[▶Changing the Fax Number and Unit Name\(P. 261\)](#)

NOTE

- The sender's information, including the sent date and time and fax number of the machine, is printed together with the fax data at the destination. You can change the print position and the mark added to the fax number or choose to not print this. [▶\[TX Terminal ID\]\(P. 493\)](#)
- To automatically forward or save sent and received faxes, you must configure separate settings. [▶Forwarding Faxes and Configuring the Backup Settings\(P. 262\)](#)

Preparing to Send Faxes from a Computer

A19R-059

Make the following preparations for each computer used to send faxes.

- ▶ **Step 1: Installing the Driver to the Computer(P. 257)**
- ▶ **Step 2: Configuring the Settings for Secure Sending(P. 257)**
- ▶ **Step 3: Test Fax Sending(P. 258)**

Step 1: Installing the Driver to the Computer

Install the fax driver to the computer that will be used to send faxes. ▶ **Installing Software and Drivers to the Computer(P. 107)**

Step 2: Configuring the Settings for Secure Sending

While sending faxes from a computer can be convenient, there is a risk of sending them to incorrect numbers. To reduce this risk, it is recommended that you configure the following settings using the fax driver.

- ▶ **When Using Windows(P. 257)**
- ▶ **When Using macOS(P. 257)**

■ When Using Windows

1 Click [Start] (Start) ▶ [Settings] (Settings) ▶ [Devices] ▶ [Printers & scanners].

⇒ The [Printers & scanners] screen is displayed.

2 Click the fax driver of the machine ▶ [Manage] ▶ [Printing preferences].

⇒ The [Printing preferences] screen of the fax driver is displayed.

3 Configure the settings for secure sending.

- Enable confirmation of fax number.
- Set an external connecting number.
- Keep a TX Job Log.

For more information, click [Help] on the [Printing preferences] screen to display help.

■ When Using macOS

Configure the settings to safely send faxes using the print dialog box (fax driver setting screen).

- Enable confirmation of fax number.
- Set an external connecting number.

For more information, click [?] in the print dialog box to display help.

Step 3: Test Fax Sending

When installation and setup are complete, you can test to see if you can send faxes correctly. [▶ Sending Faxes from a Computer \(PC Faxing\)\(P. 271\)](#)

Changing Fax RX Mode and Setting the Action when Receiving a Fax

A19R-05A

You can change the RX mode from the default setting.

When [Fax/Tel (Auto Switch)] is enabled to determine whether the incoming call is a fax, you can also configure settings such as the ring time.

Use the control panel to configure the settings. You cannot configure the settings using Remote UI from a computer.

1 On the control panel, press [Fax] in the [Home] screen. ▶[Home] Screen(P. 121)

2 Press [RX Mode].

▣ The [RX Mode] screen is displayed.

3 Select the RX mode.

■When Using the Machine without Connecting a Telephone

Select [Auto]. Used for fax only.

- Faxes are automatically received.
- Incoming telephone calls cannot be answered.

■When Connecting a Regular Telephone

When Automatically Receiving Faxes

Select [Fax/Tel (Auto Switch)]. Enables use of both fax and phone.

- Faxes are automatically received.
- When a telephone call is received, the machine rings. Pick up the handset to answer the call.

When Manually Receiving Faxes

Select [Manual]. Enables use of both fax and phone.

- The machine rings when receiving both fax and phone calls.
- If you hear a fax tone when picking up the handset, receive the fax manually. ▶**Receiving Faxes(P. 277)**
- You can also configure the setting to receive faxes automatically after the machine rings for a certain period of time. ▶**[Switch to Auto RX](P. 498)**

■When Connecting an Answering Machine

Select [Answering Machine]. Enables use of both fax and phone.

- Faxes are automatically received.
- When a telephone call is received, the answering machine function can be used to record messages. You can answer the call by picking up the handset before recording starts.

* Set the answering machine so that the recording function activates after the machine rings one or two times.

* When recording your message, it is recommended that you keep about four seconds of silence, or keep the entire message within 20 seconds.

4 Set the ring time and action when receiving a fax, and press [Apply].

Set this when [Fax/Tel (Auto Switch)] is selected for RX mode. If you selected another RX mode, this step is not required.

Fax/Tel (Auto Switch)
Ring Start Time: 6
Incoming Ring Time: 15
After Ring: Receive
Apply

[Ring Start Time]

Specify the time to determine whether an incoming call is a fax or a phone call. The machine does not ring at this time.

Reception starts when the machine determines that the call is a fax.

[Incoming Ring Time]

Specify the ring time for incoming calls when it is determined that the call is not a fax.

[After Ring]

Select the action to take when the handset is not picked up while ringing.

Select [End] to disconnect the call, or select [Receive] to receive the fax.

NOTE

Connecting a Telephone

- For details about connecting a telephone, use the procedure to connect to the telephone line. **▶ Step 4: Connecting to Telephone Line(P. 105)**

[DRPD: Select Fax]

- If you subscribe to a Distinctive Ring Pattern Detection (DRPD) service provided by your telephone company, DRPD is also available for the RX mode. This service assigns two or more telephone numbers with distinctive ring patterns to a single telephone line. You can use one of these numbers for faxes and one for telephone calls. Select [DRPD: Select Fax], and then select the ring pattern assigned by the telephone company to your fax number.
- For more information about this service, contact your telephone company.
- You must connect the machine to an external telephone in advance.

Changing the Fax Number and Unit Name

A19R-05C

You can change the information registered to the machine such as when the fax number changes after a move or you want to change the name notified to the destination.

This section describes how to configure the settings using Remote UI from a computer.

On the control panel, select [Menu] in the [Home] screen, and then select [Function Settings] to configure the settings.

▶[Set Line](P. 491)

Administrator privileges are required.

1 Log in to Remote UI in System Manager Mode. ▶Starting Remote UI(P. 395)

2 On the Portal page of Remote UI, click [Settings/Registration]. ▶Portal Page of Remote UI(P. 397)

3 Click [TX Settings] ▶ [Fax TX Settings] ▶ [Edit].

⇒ The [Edit Fax TX Settings] screen is displayed.

4 Change the fax number and unit name.

- Enter the fax number in [Unit Telephone Number] in [Set Line].
- Enter the unit name in [Unit Name] in [Basic Settings].

5 Click [OK].

⇒ The settings are applied.

6 Log out from Remote UI.

Forwarding Faxes and Configuring the Backup Settings

A19R-05E

Faxes can be forwarded and saved automatically to a specific destination when they are sent and received. This is convenient when you want to check received faxes from a remote location or you want to back up faxes you sent or received.

▶ **Backing Up Sent Faxes(P. 263)**

▶ **Auto Forwarding and Backing Up Received Faxes(P. 265)**

NOTE

Forwarding Essential Faxes Only

- You can also select a specific fax from the RX Job Log and send it to a specific destination. ▶ **Checking the Status and Log for Sent and Received Faxes(P. 282)**

Backing Up Sent Faxes

A19R-05F

You can configure the settings to automatically forward and save a sent fax to a destination specified in advance. The following can be specified as forwarding and save destinations:

- Fax number
- E-mail address (e-mail)
- Shared folder on a computer

For destinations other than a fax number, the fax is forwarded or saved as a black and white PDF file.

This section describes how to configure the settings using Remote UI from a computer.

On the control panel, select [Menu] in the [Home] screen, and then select [Function Settings] to configure the settings.

▶ **[Archive TX Document](P. 492)**

Administrator privileges are required.

Required Preparations

- When specifying a backup destination other than a fax number, prepare the fax to be sent or saved to that destination.
 - The required preparations are the same as when sending and saving scanned data.
 - ▶ **Preparing to Send Scanned Data by E-mail(P. 224)**
 - ▶ **Preparing to Save Scanned Data to a Shared Folder(P. 230)**
- Register the destination to be specified to the Address Book of the machine. ▶ **Registering Destinations (Address Book)(P. 163)**

1 Log in to Remote UI in System Manager Mode. ▶ Starting Remote UI(P. 395)

2 On the Portal page of Remote UI, click [Settings/Registration]. ▶ Portal Page of Remote UI(P. 397)

3 Click [TX Settings] ▶ [Fax TX Settings] ▶ [Edit].

⇒ The [Edit Fax TX Settings] screen is displayed.

4 In [Communication Management Settings], select the [Archive TX Document] checkbox, and click [Select from Address Book].

⇒ The [Select from Address Book] screen is displayed.


5 Select the destination, and click [OK].

⇒ The [Edit Fax TX Settings] screen reappears.

6 Enter any string in [File Name], as needed.

- If you selected a fax number as the destination, this step is not required. Proceed to Step 7.

- If you selected a destination other than a fax number, a PDF file is forwarded or saved with the following file name.

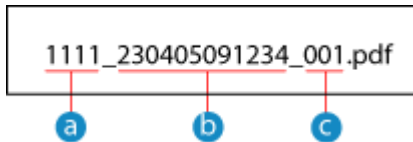

- a** Communications management number
- b** Date sent (in this example, "April 5, 2023, 9:12:34 AM")
- c** File sequence number (if one file, then "001")

When you enter a string in [File Name], the specified string is appended to the start of the above file name.

7 Click [OK].

⇒ The settings are applied.

8 Log out from Remote UI.

NOTE

Backing Up Received Faxes

- The above section describes the settings for forwarding and saving sent faxes. To back up received faxes, separate settings are required. ▶ **Auto Forwarding and Backing Up Received Faxes(P. 265)**

Auto Forwarding and Backing Up Received Faxes

A19R-05H

You can configure the settings to automatically forward and save a received fax to a destination specified in advance. You can also specify whether to print the received fax on the machine.

The following can be specified as forwarding and save destinations:

- Fax number
- E-mail address (e-mail)
- Shared folder on a computer

For destinations other than a fax number, the fax is forwarded or saved as a black and white PDF file.

This section describes how to configure the settings using Remote UI from a computer.

On the control panel, select [Menu] in the [Home] screen, and then select [Function Settings] to configure the settings.

▶ **[Forwarding Settings](P. 499)**

Administrator privileges are required.

Required Preparations

- When specifying a forwarding or backup destination other than a fax number, prepare the fax to be sent or saved to that destination.
 - The required preparations are the same as when sending and saving scanned data.
 - ▶ **Preparing to Send Scanned Data by E-mail(P. 224)**
 - ▶ **Preparing to Save Scanned Data to a Shared Folder(P. 230)**
- Register the destination to be specified to the Address Book of the machine. ▶ **Registering Destinations (Address Book)(P. 163)**

- 1 Log in to Remote UI in System Manager Mode. ▶ Starting Remote UI(P. 395)**

- 2 On the Portal page of Remote UI, click [Settings/Registration]. ▶ Portal Page of Remote UI(P. 397)**

- 3 Click [RX/Forwarding Settings] ▶ [Fax RX Settings] ▶ [Edit] in [Forwarding Settings].**
 - ⇒ The [Edit Forwarding Settings] screen is displayed.

- 4 Select the [Use Forwarding Function] checkbox, and click [Select from Address Book].**
 - ⇒ The [Select from Address Book] screen is displayed.

- 5 Select the destination, and click [OK].**
 - ⇒ The [Edit Forwarding Settings] screen reappears.

- 6 Set whether to print faxes or save them in memory.**

■ When Printing Faxes on the Machine

In [Print Images], select [On]. To print only when forwarding fails, select [Print Only When Error Occurs].


■ When Saving Faxes that Cannot Be Forwarded to the Memory of the Machine

In [Store Images in Memory], select [Store Only When Error Occurs].

Faxes saved to the memory can be viewed in [Status Monitor]. **▶ Checking Faxes that Failed to Be Forwarded(P. 283)**

7 Enter any string in [File Name], as needed.

- If you selected a fax number as the destination, this step is not required. Proceed to Step 8.
- If you selected a destination other than a fax number, a PDF file is forwarded or saved with the following file name.

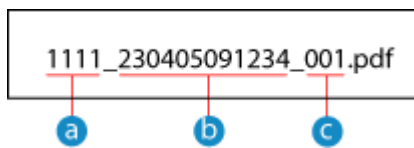

- a** Communications management number
- b** Date sent (in this example, "April 5, 2023, 9:12:34 AM")
- c** File sequence number (if one file, then "001")

When you enter a string in [File Name], the specified string is appended to the start of the above file name.

8 Click [OK].

⇒ The settings are applied.

9 Log out from Remote UI.

NOTE

Backing Up Sent Faxes

- The above section describes the settings for forwarding and saving received faxes. To back up sent faxes, separate settings are required. **▶ Backing Up Sent Faxes(P. 263)**

Sending Faxes

A19R-05J



You can scan a document, photo, or other printed materials (originals) with the machine, converting it to a black and white image, and then send it. You can also send a fax after a phone conversation. **▶ Sending a Fax after a Phone Conversation (Manual Sending)(P. 269)**

1 Place the original. ▶ Placing Originals(P. 140)


2 On the control panel, press [Fax] in the [Home] screen. ▶ [Home] Screen(P. 121)

⇒ The Fax screen appears.

3 Press on the control panel.

If the destination setting for the previously sent fax remains, a fax may be sent to an incorrect destination. Reset the setting before operating.

4 Specify the destination. ▶ Specifying Destinations(P. 177)

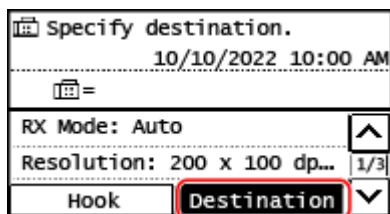


Enter the fax number with the numeric keys, or select the destination registered in the Address Book by pressing [Destination].

■ When [Confirm] appears

Enter the fax number again, and press [Apply].


5 Configure the original scan settings. ▶ Fax Original Scan Settings(P. 275)

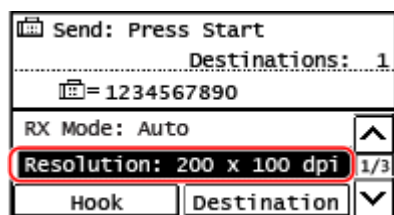

6 Press on the control panel.

⇒ Scanning of the original starts.

- To cancel sending of a fax, press [Cancel] ▶ [Yes]. ▶ Canceling Fax Sending(P. 281)

- When scanning of the original is completed, the fax is sent. Press  on the control panel to view the sending status and log. **▶Checking the Status and Log for Sent and Received Faxes(P. 282)**

■ **When [Confirm Destination] appears**


Check that the destination is correct, and then press [Start Scan].

■ **When [Scan Size] appears**


Select the size of the placed original.

■ **When [Scan Next: Press Start] appears**

When an original is placed on the platen glass and scanned, the screen for scanning additional originals is displayed.

To scan additional originals, place them on the platen glass, and press  on the control panel.

When scanning of all originals is completed, press [Start TX].

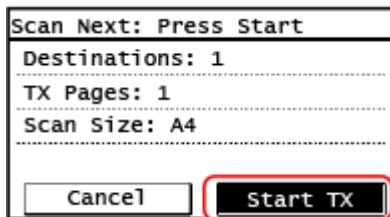


* If the size of the original is different, part of the image may be missing, or the image may be scanned smaller.

■ **When [Status Mntr.] appears**

To view the sending status and log, press [Status Mntr.]. **▶Checking the Status and Log for Sent and Received Faxes(P. 282)**

Pressing [Close] displays the fax screen.

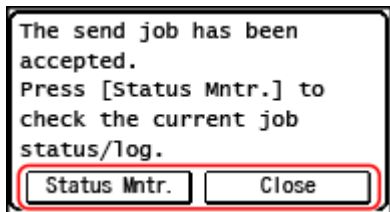

Sending a Fax after a Phone Conversation (Manual Sending)

A19R-05K

You can send a fax after a phone conversation. To make a phone call, an external telephone is required. This section describes how to send a fax after a phone conversation.

When sending a fax during an incoming call, first pick up the handset to answer the call, and then perform the steps below. You do not need to perform Steps 4 and 5 to make a phone call.

! IMPORTANT


- The pages that can be scanned and sent for manual sending are restricted as follows:
 - When an original is placed on the feeder, only one side is scanned.
 - When an original is placed on the platen glass, only one page of the placed original can be sent.

1 Place the original. ▶ Placing Originals(P. 140)

2 On the control panel, press [Fax] in the [Home] screen. ▶ [Home] Screen(P. 121)


⇒ The fax screen appears.

3 Configure the original scan settings. ▶ Fax Original Scan Settings(P. 275)

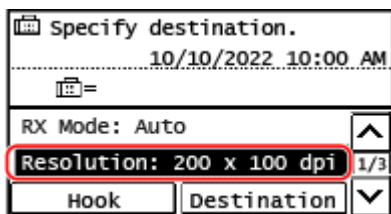

4 Pick up the handset.

5 Specify the destination. ▶ Specifying Destinations(P. 177)

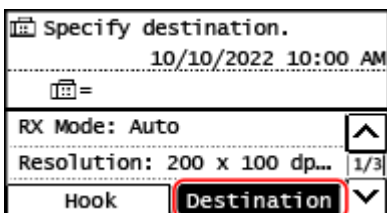

Enter the fax number with the numeric keys or select the destination registered in the Address Book by pressing [Destination] to make a phone call.


■ When [Confirm] appears

Enter the fax number again, and press [Apply].

6 After the phone conversation, ask the recipient to set their fax machine to receive your fax.

7 When you hear a beep, press  on the control panel, and hang up the handset.

⇒ Scanning of the original starts.

- To cancel sending of a fax, press [Cancel] ► [Yes]. **▶ Canceling Fax Sending(P. 281)**
- When scanning of the original is completed, the fax is sent. Press  on the control panel to view the sending status and log. **▶ Checking the Status and Log for Sent and Received Faxes(P. 282)**

■ When [Scan Size] appears


Select the size of the placed original.

NOTE

- The destinations and the settings in Manual Sending are not left in the TX Job Log.

Sending Faxes from a Computer (PC Faxing)

A19R-05L

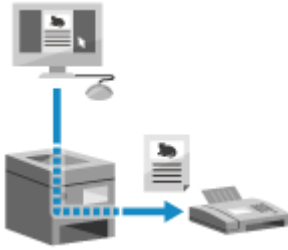

You can send a document as a fax from a computer using a fax driver. As it is easy to send a document, be sure to thoroughly check the item you are sending beforehand. ▶ **Securely Sending PC Faxes(P. 274)**

This section describes the general procedure for this operation. Check the manual of the application you are using for detailed operations on how to use it.

Required Preparations

- Install the fax driver to the computer and configure the settings according to your usage environment and purpose. ▶ **Preparing to Send Faxes from a Computer(P. 257)**

▶ **When Using Windows(P. 271)**

▶ **When Using macOS(P. 272)**

■ When Using Windows

- 1 Open the document you are sending on your computer.**
- 2 In the application used to open the document, select the command to print.**
- 3 Select the fax driver of the machine, and click [Print].**

⇒ The [Fax Sending Settings] screen of the fax driver appears.

4 Specify a destination.

- This section describes how to enter a fax number. You can specify a destination registered to the Address Book from the [Select Destination] tab.
- If an outside line number is required, enter this number before the fax number. If the outside line number has been set in advance, you do not need to enter it here.

■ When Entering One Fax Number

On the [Enter Destination] tab, enter a fax number. When [Confirm Fax Number] can be entered, enter the same fax number. ▶ **Step 2: Configuring the Settings for Secure Sending(P. 257)**

■ When Entering Multiple Fax Numbers

- 1 In [Select Destination] tab, click [Add Destination].
 ⇒ The [Add Destination] screen is displayed.
- 2 Enter the destination name and fax number, and click [Add Next Destination].
 When [Confirm Fax Number] can be entered, enter the same fax number.
- 3 Repeat Step 2, and after entering all destinations, click [OK].


5 Configure the cover sheet, the setting for saving the TX Job Log, and other fax setting, as needed.

- To configure the cover sheet details, click [Cover Sheet].
- To save the TX Job Log to the computer, select the [Store Sent Fax Information and Image] checkbox.
- For more information about the other fax settings, click [Help] on the [Fax Sending Settings] screen to display help.

6 Click [Send].

⇒ A screen confirming the send destination is displayed.

7 Check that the destination is correct, and click [OK].

- ⇒ The fax is sent via the machine.
- Press  on the control panel to view the sending status and log. **▶ Checking the Status and Log for Sent and Received Faxes(P. 282)**
- When sending a fax with the [Store Sent Fax Information and Image] checkbox selected, you can view the log also from the [Sent Fax Information and Image] tab of the fax driver.

■ When Using macOS


1 Open the document you are sending on your computer.

2 In the application used to open the document, click [Print].

⇒ The printing dialog box appears.

3 In [Printer], select the fax driver of the machine.

4 From the print options pop-up menu, select [General Settings].

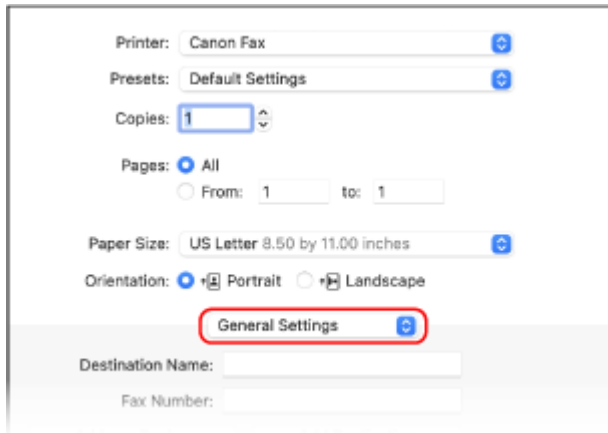

If print options are not displayed, click [Show Details] in the printing dialog box.

5 Enter the fax number, and click [Add Destination].


- To specify multiple destinations, repeat this step. You can specify a destination registered to the Address Book from [Address Book].
- If an outside line number is required, enter this number before the fax number.

6 Configure the cover sheet and other fax settings, as needed.

- To set the cover sheet details, select [Cover Sheet] from the pop-up menu of the print option.
- For more information about the other fax settings, click [?] in the printing dialog box to display help.

7 Click [Print].

⇒ The fax is sent via the machine.

Press  on the control panel to view the sending status and log. **▶ Checking the Status and Log for Sent and Received Faxes(P. 282)**

Securely Sending PC Faxes

A19R-05R

While sending faxes from a computer can be convenient, there is a risk of sending it to an incorrect number. To reduce this risk, it is recommended that you check the following when sending faxes.

- ▶ **Checking the Content You Are Sending(P. 274)**
- ▶ **Confirming the Destination(P. 274)**
- ▶ **Confirming TX Job Log after Sending(P. 274)**

Checking the Content You Are Sending

Unlike when scanning a document and sending it, you can only check the content to be sent on the screen of the computer. Therefore, check the content before sending the document.

Checking with Preview

Check that the content to be sent is as intended. If the paper size is not appropriate, part of the document sticking beyond the paper may be divided and sent separately.

Checking with PDF

You can convert the document into a PDF and then send it to reduce the risk of sending unintended sheets in an Excel file, for example. When you cannot preview the document with the print function of the application or you want to send only certain pages of the document, you can check the content to be sent before sending.

Confirming the Destination

You can require the user to enter the fax number twice when specifying a destination or require the user to confirm the destination before sending to reduce the risk of sending a fax to an incorrect destination. For details about the settings to confirm the destination, see the procedures when preparing to send PC faxes. ▶ **Step 2: Configuring the Settings for Secure Sending(P. 257)**

Confirming TX Job Log after Sending

When the machine is set to save a TX Job Log, you can check the log to confirm whether the intended content was sent correctly. For details about the settings to confirm the TX job log after sending PC faxes, see the procedures when preparing to send PC faxes. ▶ **Step 2: Configuring the Settings for Secure Sending(P. 257)**

Fax Original Scan Settings

A19R-05S

When sending a fax using the machine, you can adjust the image quality and set 2-sided scanning.

Specify destination.	
10/10/2022 10:00 AM	
=	
RX Mode: Auto	▲
Resolution: 200 x 100 dpi	1/3
Hook	Destination ▼

If the recipient cannot read the text or the sent fax was not as intended, the settings can be adjusted and the fax resent.

▶ **Adjusting Image Quality**(P. 275)

▶ **2-sided Scan Settings**(P. 276)

NOTE

Registering the Frequently Used Scan Settings as the Default Settings

- You can change the default settings for scanning fax originals according to the frequently used scan settings. ▶ **Changing the Default Settings**(P. 185)

Recalling Past Settings (TX Job Log)

- You can use the TX Job Log to recall the settings used to send faxes in the past. ▶ **Specifying Destinations (TX Job Log)**(P. 184)

Adjusting Image Quality

You can adjust the image quality such as when the fax image is not clear or the text is difficult to read.

[Resolution]

Select the resolution for scanning originals.

The higher the resolution, the sharper the image, but the longer it takes to send the data.

[Density]

Adjust the density to suit the original.

Press [+] to increase the density and [-] to lower it.

[Sharpness]


Adjust the sharpness.

Emphasize the contours and lines to make them clearer, or weaken them to make them softer.

Adjustment example:


- **To make blurry text or shapes clearer**

Press [+].

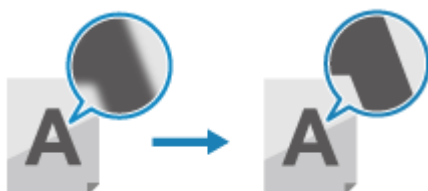

- **To reduce moire (vertical pattern noise) in photos**

Press [-].

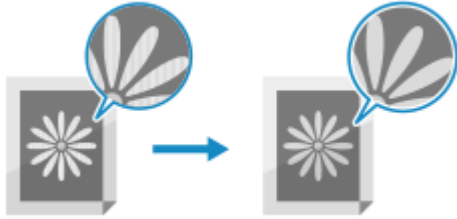

2-sided Scan Settings

When scanning a 2-sided original, place the original on the feeder, and set [2-Sided Original].

* This setting is available only when the machine is equipped with a feeder that supports 2-sided scanning. ▶

Supported Functions(P. 3)

* 2-sided scanning is not available when sending a fax after a phone conversation.

[2-Sided Original]

To perform 2-sided scanning, select [Book Type] or [Calendar Type]. Select this according to the top and bottom orientation of the front and back sides of the placed original.

[Book Type]



Top and bottom have same orientation

[Calendar Type]



Top and bottom have opposite orientation

To cancel scanning of a 2-sided original, select [Off].

Receiving Faxes

A19R-05U

When the RX mode is set to receive faxes manually, you must perform operations to receive them. When the RX mode is not set to receive faxes manually, you do not need to perform operations to receive them. When there is an incoming fax, it is automatically received without ringing and then printed once receiving is completed. Place A4 or letter size paper in the paper source to prevent the image from being missing or divided. You can also change the settings to print a received fax on both sides of the paper and print the received date and time and page number. **▶ Changing the Print Settings for Received Faxes(P. 279)**

■ When the Machine Rings

Receive the fax manually.

If a telephone is connected to the machine, you can receive the fax by operating the telephone without operating the machine. **▶ Receiving Faxes via Telephone (Remote RX)(P. 278)**

1 When the machine rings, pick up the handset.

If it is a phone call, you can take the call.

2 If you hear a beep, on the control panel, press [Fax] in the [Home] screen. **▶ [Home] Screen(P. 121)**

⇒ The fax screen appears.

3 Press on the control panel, and hang up the handset.

⇒ The machine starts receiving the fax. When receiving is completed, the fax is printed automatically.

NOTE

When a Fax Is Not Received or Printed

▶ Cannot Receive a Fax(P. 611)


To Not Print a Received Fax

- Save the received fax to the memory of the machine or forward it to a specific destination.
 - ▶ Saving Received Documents in the Machine (Memory Lock)(P. 378)**
 - ▶ Auto Forwarding and Backing Up Received Faxes(P. 265)**

Receiving Faxes via Telephone (Remote RX)

A19R-05W

Remote RX allows you to use the numeric keys of the telephone connected to the machine to receive faxes by dialing a predetermined number (Remote RX ID).

The Remote RX ID is set to [25] by default. You can change this to a custom number.  [Remote RX](P. 498)

1 When the machine rings, pick up the handset of the telephone.

If it is a phone call, you can take the call.

2 When you hear a beep, dial the Remote RX ID using the numeric keys of the telephone.

▣ The machine starts receiving the fax. When receiving is completed, the fax is printed automatically.

If you do not hear a set of tones when entering the Remote RX ID, press the tone button (*) of the telephone, and then enter the Remote RX ID again.

3 Hang up the handset.

Changing the Print Settings for Received Faxes

A19R-05X

Received faxes are printed on one side of the paper by default. You can change the settings to print on both sides of the paper, and print the received date and time and page number.

- ▶ **Printing on Both Sides(P. 279)**
- ▶ **Printing the Received Date and Time and Page Number(P. 279)**

Printing on Both Sides

This section describes how to configure the settings using Remote UI from a computer. On the control panel, select [Menu] in the [Home] screen, and then select [Function Settings] to configure the settings.

▶ **[Print on Both Sides](P. 497)**
Administrator privileges are required.

- 1 Log in to Remote UI in System Manager Mode.** ▶ **Starting Remote UI(P. 395)**
- 2 On the Portal page of Remote UI, click [Settings/Registration].** ▶ **Portal Page of Remote UI(P. 397)**
- 3 Click [RX/Forwarding Settings] ▶ [Fax RX Settings] ▶ [Edit] in [Basic Settings].**
 ▶ The [Edit Basic Settings] screen is displayed.
- 4 Select the [Print on Both Sides] checkbox.**
- 5 Click [OK].**
 ▶ The settings are applied.
- 6 Log out from Remote UI.**

Printing the Received Date and Time and Page Number

Select whether to print the following information at the bottom of received faxes:

- Reception date and time
- Received reception number
- Page number

This section describes how to configure the settings using Remote UI from a computer. On the control panel, select [Menu] in the [Home] screen, and then select [Function Settings] to configure the settings.

▶ **[Print RX Page Footer](P. 496)**
Administrator privileges are required.


- 1 Log in to Remote UI in System Manager Mode. ▶ Starting Remote UI(P. 395)**
- 2 On the Portal page of Remote UI, click [Settings/Registration]. ▶ Portal Page of Remote UI(P. 397)**
- 3 Click [RX/Forwarding Settings] ▶ [Common Settings] ▶ [Edit] in [Common Settings].**
 - ▶▶ The [Edit Common Settings] screen is displayed.
- 4 Select the [Add RX Page Footer] checkbox.**
- 5 Click [OK].**
 - ▶▶ The settings are applied.
- 6 Log out from Remote UI.**

Canceling Fax Sending


A19R-05Y

You can cancel sending of a fax by following the on-screen instructions.


Press [Cancel] ► [Yes].

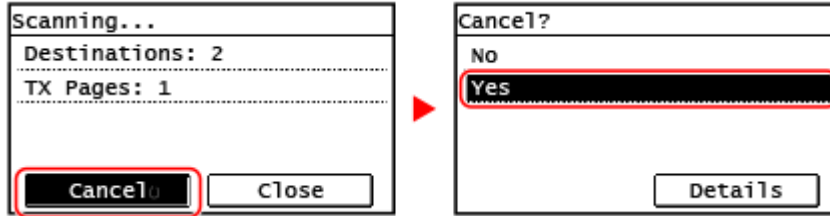

If the above screen is not displayed, press  on the control panel, and then press [Yes].

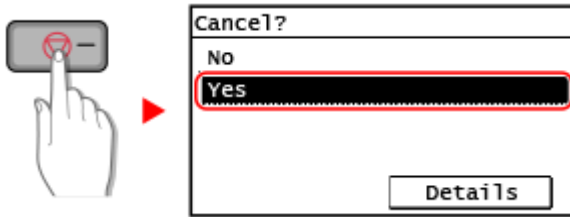

If a job list screen is displayed, select the job to cancel, and press [Yes].

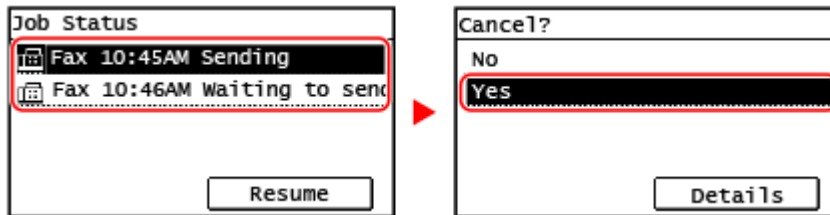

Checking the Status and Log for Sent and Received Faxes

A19R-060

Processes handled by the machine, including sending and receiving faxes, are managed as jobs. By checking the status and log of jobs, you can determine whether a job was sent or received correctly and the cause of errors that occur.

When the settings are configured to save faxes that could not be forwarded, these faxes can be printed on the machine or forwarded to a different destination instead.

* If the log is set to not be displayed, you can only check the send and receive status. ▶[Display Job Log](P. 505)

▶**Checking Sent and Received Faxes(P. 282)**

▶**Checking Faxes that Failed to Be Forwarded(P. 283)**

Checking Sent and Received Faxes

You can check the status and log of sent and received faxes.

You can also check the number of pages of the fax and the fax numbers of the destination and sender, and forward faxes waiting to be received and printed.

This section describes how to check the status and log using the control panel.

You can also use Remote UI from a computer to check the status and log. To print faxes saved in the memory, use Remote UI. ▶**Checking Usage and Logs with Remote UI(P. 399)**

1 Press  on the control panel. ▶**Control Panel(P. 13)**

⇒ The [Status Monitor] screen is displayed.

2 Press [TX Job] or [RX Job].

3 Check the status and log.

■When Checking the Status of Sent and Received Faxes

1 Press [Job Status], and check the jobs being processed or waiting to be processed.

Faxes saved in the memory are displayed as [Waiting to print].

2 Select a job to view its details.

⇒ The job details are displayed.

3 View the number of pages, the fax numbers of the destination and sender, and other information.

- When there are multiple fax destinations, press [Number of Destinations] to display them in a list.
- Press [Forward] to forward faxes waiting to be received or printed to a destination registered in the Address Book. You cannot forward faxes being received or printed.

■When Checking the Log of Sent and Received Faxes

1 Press [Job Log], and check the completed sent and received jobs.

2 Select a job to view its details.

⇒ The job details are displayed.

- 3 View the number of pages and the fax numbers of the destination and sender.
When there are multiple fax destinations, press [Number of Destinations] to display them in a list.

When the TX/RX Job Log displays [Error]

Sending or receiving was canceled, or an error occurred.

If a three-digit number starting with "#" (error code) is displayed, you can check the cause and solution using the error code. ▶ **An Error Code Is Displayed(P. 643)**

NOTE

Registering Destinations to the Address Book

- On the screen displaying the job details, press [Reg Adr Book] to register the destination to the Address Book.
- * This operation is not available when there are multiple destinations.

Checking Faxes that Failed to Be Forwarded

If a fax could not be forwarded but remains in the memory, you can print it or forward it to a different destination, and view its content.

This section describes how to check the fax content using the control panel.

You can also use Remote UI from a computer to check the fax content. To preview the fax content, use the Remote UI.

▶ **Checking Usage and Logs with Remote UI(P. 399)**

Required Preparations

- Configure the settings to save faxes that could not be forwarded in the memory of the machine. ▶ **Auto Forwarding and Backing Up Received Faxes(P. 265)**

1 Press on the control panel. ▶ **Control Panel(P. 13)**

⇒ The [Status Monitor] screen is displayed.

2 Press [Fax Forwarding Errors].

⇒ A list of jobs of faxes that could not be forwarded is displayed.

3 Select a job you want to check.

⇒ The job details are displayed.

4 Print or forward the fax to a different destination, and view the fax content.

- To print with the machine, press [Print/Fwd] ▶ [Print] ▶ [Yes].
- To send or save the fax to a destination different from the one set as the forwarding destination, press [Print/Fwd] ▶ [Forward], select the destination from the Address Book.

Copying

Copying	285
Copy Operations	286
Additional Copying Features	289
Paper Save Copy	300
Copying Both Sides of ID Cards onto One Sheet	304
Copying Multiple Passports onto One Sheet	308
Canceling Copy Operations	312
Checking the Copy Status	314

Copying

You can easily copy documents, photos, and other printed materials ("originals") using the copy function of the machine. In addition to basic copy settings, the machine also has settings for copying according to your original and purpose. Configure these settings when copying for more efficient operations and to save paper. For details on supported models, see the following: [▶Supported Functions\(P. 3\)](#)

Basic Copy Operations

You can set the copy ratio (for enlarging or reducing), number of copies, and other basic settings.

[▶Copy Operations\(P. 286\)](#)

Copying According to Your Original and Purpose

You can perform 2-sided copying and adjust the image quality and other settings to suit your original and purpose.

[▶Additional Copying Features\(P. 289\)](#)

Copying for Specific Operations

You can use the following copy functions quickly from the [Home] screen on the control panel.

Paper Save Copy



Multiple pages of an original are copied on a single sheet by shrinking several pages in one side or printing them on both sides. It is useful to save printed paper.

[▶Paper Save Copy\(P. 300\)](#)

ID Card Copy



Copies the front and back sides of a driver's license or other ID card on the same sheet of paper at 100% magnification. This is convenient, for example, when copying ID cards at reception.

[▶Copying Both Sides of ID Cards onto One Sheet\(P. 304\)](#)

Passport Copy



Copies multiple passports together onto one sheet of paper.

[▶Copying Multiple Passports onto One Sheet\(P. 308\)](#)

Copy Operations

A19R-062

This section describes the basic copy operations when copying documents, photos, and other printed materials ("originals").

! IMPORTANT

- When copying originals that have text or images extending to the edges without margins, the copy may be printed with an area missing around the edge. For the size of the margin, see the basic specifications. [Basic Specifications\(P. 24\)](#)

[Touch Panel Model\(P. 286\)](#)

[5 Lines LCD Model\(P. 287\)](#)


Touch Panel Model

1 Place the original. [Placing Originals\(P. 140\)](#)


2 On the control panel, press [Copy] in the [Home] screen. [\[Home\] Screen\(P. 121\)](#)

⇒ The copy screen is displayed.

3 Enter the number of copies using the numeric keys.

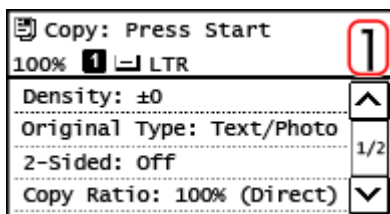

4 Set the Copy Ratio.

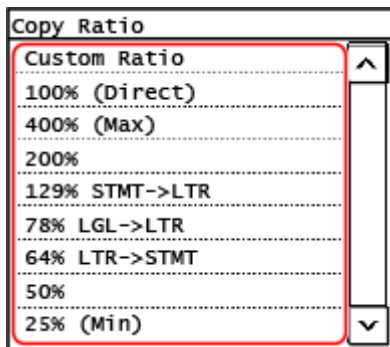

Set the ratio for enlarging or reducing copies.

Select a fixed copy ratio from the list or select [Custom Ratio] and enter a custom ratio using the numeric keys.


You can specify a value from 25% to 400% in 1% increments.

5 Configure the other copy settings, as needed. [▶Additional Copying Features\(P. 289\)](#)

You can perform 2-sided copying and adjust the image quality and other settings to suit your original and purpose.


6 Press on the control panel.


⇒ Copying starts.

- To cancel copying, press [Cancel] ▶ [Yes]. [▶Canceling Copy Operations\(P. 312\)](#)
- Press  on the control panel to view the copy job status. [▶Checking the Copy Status\(P. 314\)](#)

■When [Scan Next: Press Start] appears

When an original is placed on the platen glass and copied using 2-sided copying or N on 1, the screen is displayed for scanning the next original.

- 1 Place the next original on the platen glass, and press  on the control panel.

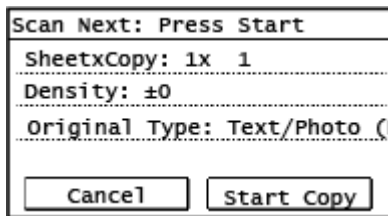

⇒ The next original is scanned, and the same screen is displayed.

Repeat this process until scanning of all originals is completed.


- You can press [Density] and [Original Type] to change the settings for each original.
- If the size of the original is different, part of the image may be missing, or the image may be printed smaller on the paper.

- 2 Press [Start Copy].

⇒ The scanned originals are printed.


5 Lines LCD Model

- 1 Place the original. [▶Placing Originals\(P. 140\)](#)

- 2 On the control panel, select [Copy] in the [Home] screen and press . [▶\[Home\] Screen\(P. 121\)](#)

⇒ The copy screen is displayed.


- 3 Enter the number of copies using the numeric keys.

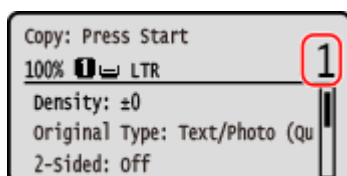

4 Select [Copy Ratio] and press .

⇒ The [Copy Ratio] screen is displayed.

5 Select the copy ratio to suit your purpose and press .

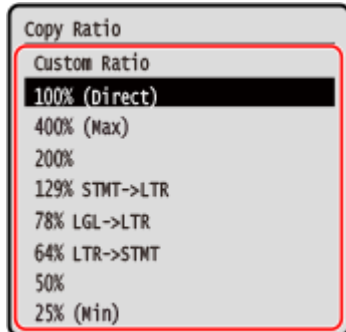

Set the ratio for enlarging or reducing copies.

Select a fixed copy ratio from the list or select [Custom Ratio] and enter a custom ratio using the numeric keys.




You can specify a value from 25% to 400% in 1% increments.

6 Configure the other copy settings, as needed. ▶ **Additional Copying Features(P. 289)**

You can perform 2-sided copying and adjust the image quality and other settings to suit your original and purpose.


7 Press on the control panel.


⇒ Copying starts.

- To cancel copying, press [<Cancel>] ▶  ▶ [<Yes>] ▶  . ▶ **Canceling Copy Operations(P. 312)**
- Press  on the control panel to view the copy job status. ▶ **Checking the Copy Status(P. 314)**

■ **When [Scan Next: Press Start] appears**



When an original is placed on the platen glass and copied using 2-sided copying or N on 1, the screen is displayed for scanning the next original.

- 1 Place the next original on the platen glass, and press  on the control panel.

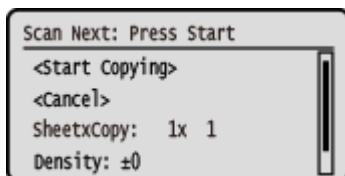

⇒ The next original is scanned, and the same screen is displayed.

  Repeat this process until scanning of all originals is completed.

- You can press [Density] ▶  and [Original Type] ▶  to change the settings for each original.
- If the size of the original is different, part of the image may be missing, or the image may be printed smaller on the paper.


- 2 Select [<Start Copying>] press .

⇒ The scanned originals are printed.

Additional Copying Features

A19R-063

In addition to basic copy settings, the machine also has settings for 2-sided copying, image quality adjustment, and other settings according to your original and purpose. Use the copy screen to configure these settings.

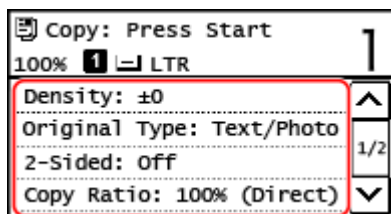

* To make copies using the ID Card Copy function, you can simply adjust the density and image quality.

- ▶ **Making 2-sided Copies(P. 289)**
- ▶ **Copying Multiple Originals onto One Sheet (N on 1)(P. 291)**
- ▶ **Collating Copies by Page (Collate)(P. 293)**
- ▶ **Adjusting the Density(P. 294)**
- ▶ **Adjusting the Image Quality(P. 296)**

NOTE

Registering the Frequently Used Scan Settings as the Default Settings

- You can change the default copy settings according to the frequently used scan settings. ▶ **Changing the Default Settings(P. 185)**

Basic Copy Operations

- For the basic operations when copying, see the following:
 - ▶ **Copy Operations(P. 286)**

Making 2-sided Copies

You can copy two 1-sided originals on both sides of one sheet of paper.

You can also copy a 2-sided original on both sides of one sheet of paper, or on two separate sheets of paper.

* 2-sided copying may not be available with some sizes and types of paper. ▶ **Usable Paper(P. 19)**

- ▶ **Touch Panel Model(P. 289)**
- ▶ **5 Lines LCD Model(P. 290)**

■ Touch Panel Model

1 Press [2-Sided] on the copy screen.

⇒ The [2-Sided] screen is displayed.

2 Select the pattern of 2-Sided copying.

[Off]

Copies 1-sided originals to separate sheets of paper.

[1->2-Sided]

Copies two 1-sided originals on both sides of one sheet of paper.

[2->2-Sided] *1

Copies the front and back of 2-sided originals on both sides of one sheet of paper.

[2->1-Sided] *1

Copies the front and back of 2-sided originals on two separate sheets of paper.

*1 This setting is displayed only when the machine is equipped with a feeder that supports 2-sided scanning. **Supported Functions(P. 3)**


3 Set the original orientation and opening type, and copy opening type, as needed.

- 1 On the copy screen, press [2-Sided] ▶ [Original/Finishing Type].


⇒ The [Orig./Finishing Type] screen is displayed.

- 2 Select the combination of the 2-Sided settings between an original and a copy, and then specify the orientation and the opening type of the copy.


[1->2-Sided]

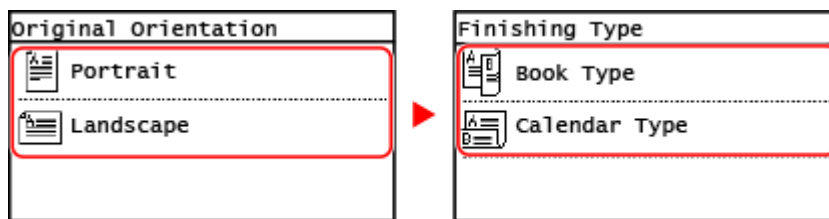

[2->2-Sided] *1

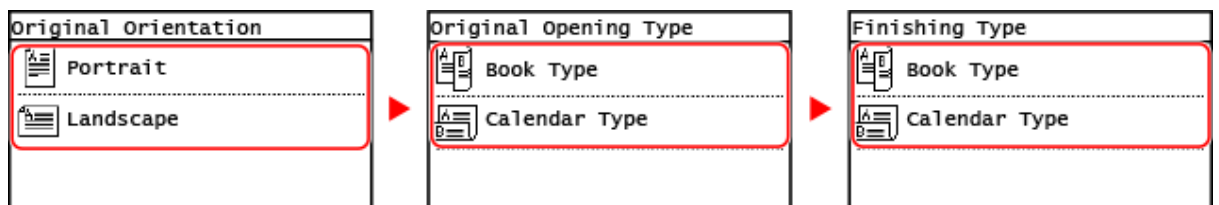

[2->1-Sided] *1

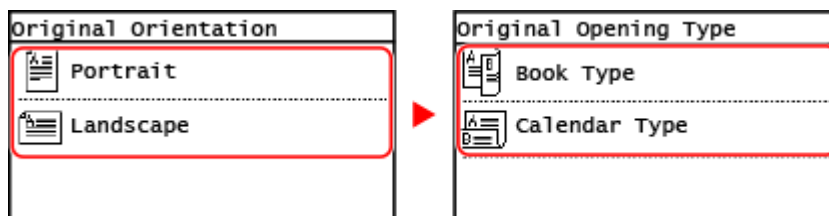

*1 This setting is displayed only when the machine is equipped with a feeder that supports 2-sided scanning. **Supported Functions(P. 3)**

■ 5 Lines LCD Model

- 1 On the copy screen, select [2-Sided] and press **OK**.

⇒ The [2-Sided] screen is displayed.

2 Select the way of 2-Sided copying and press **OK**.

⇒ The copy screen is displayed.

[Off]

Copies 1-sided originals to separate sheets of paper.

[1->2-Sided]

Copies two 1-sided originals on both sides of one sheet of paper.

3 Set the original orientation and copy opening type, as needed.


- 1 On the copy screen, press [2-Sided] ► **OK** ► [Original/Finishing Type] ► **OK**.

⇒ The [Orig./Finishing Type] screen is displayed.

- 2 Select [1->2-Sided] and press **OK**.


⇒ The [Original Orientation] screen is displayed.

- 3 Select the orientation of the set original and press **OK**.

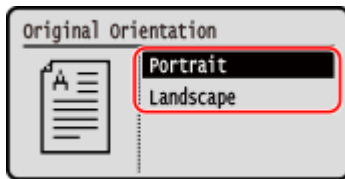

- 4 Select the finishing type after copying and press **OK**.

⇒ The copy screen is displayed.

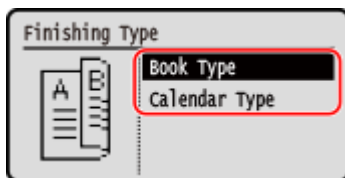

Copying Multiple Originals onto One Sheet (N on 1)

You can reduce the size of a multiple-page original and arrange the pages on one sheet of paper when copying.

N on 1 is convenient when you want to save paper by copying on fewer sheets of paper than the original.

If you want to save more paper by combining N on 1 copying and 2-Sided copying, Paper Save Copy is useful, allowing to perform the combination of the copy settings with a single operation. ► **Paper Save Copy(P. 300)**

* This cannot be set at the same time as Erase Frame.

► **Touch Panel Model(P. 286)**

► **5 Lines LCD Model(P. 287)**

■ Touch Panel Model

- 1 Press [N on 1] on the copy screen.

⇒ The [N on 1] screen is displayed.

2 Select the number of pages to be combined.

[Off]

Pages are not combined.

[2 on 1]


Combines a 2-page original onto one sheet of paper.

[4 on 1]

Combines a 4-page original onto one sheet of paper.

3 Select the size of the placed original.

4 Configure the layout (page order) when combining originals, as needed.

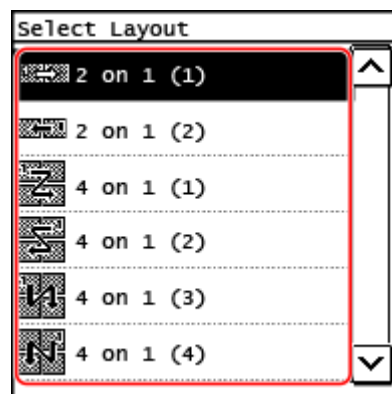

- 1 Press [N on 1] on the copy screen.
⇒ The [N on 1] screen is displayed.
- 2 Press [Select Layout], and select the page order.
⇒ The [Select Layout] screen is displayed.
- 3 Select the size of the placed original.

NOTE

- When combining pages, the copy ratio is set automatically according to the following. You can also change the copy ratio setting manually.
 - Number of pages to be combined
 - Original size setting
 - Size of paper used for copying
- When pages are combined, a margin may be created around the copied images.

■ 5 Lines LCD Model

1 On the copy screen, select [N on 1] and press **OK**.

⇒ The [N on 1] screen is displayed.

2 Select the number of pages to be combined and press **OK**.

[Off]

Pages are not combined.

[2 on 1]

Combines a 2-page original onto one sheet of paper.

[4 on 1]

Combines a 4-page original onto one sheet of paper.

3 Select the size of the placed original.

4 Configure the layout (page order) when combining originals, as needed.

1 Select [N on 1] and press **OK**.

⇒ The [N on 1] screen is displayed.

2 Press [Select Layout], and press **OK**.

⇒ The [Select Layout] screen is displayed.

3 Select the page order and press **OK**.

4 Select the size of the placed original.

NOTE


- When combining pages, the copy ratio is set automatically according to the following. You can also change the copy ratio setting manually.
 - Number of pages to be combined
 - Original size setting
 - Size of paper used for copying
- When pages are combined, a margin may be created around the copied images.

Collating Copies by Page (Collate)

When copying multiple copies of a multi-page original, you can collate the copies in the page order of the original. This is convenient when copying handouts for meetings.

When Copying without Collating


The copies are grouped by the page of the original in the number of specified copies and not collated. For example, when you are making three copies of a three-page original, the printouts are arranged in the following order: 1, 1, 1, 2, 2, 2, 3, 3, 3.

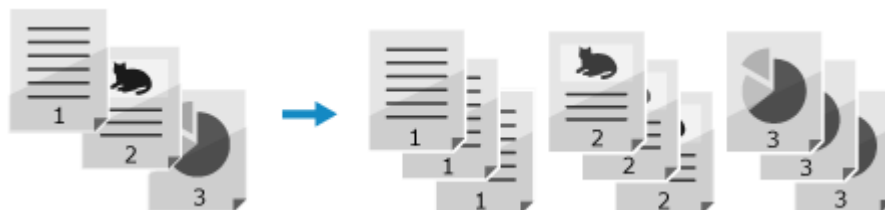

When Copying with Collating

The copies are collated into sets in the page order of the original.

For example, when you are making three copies of a three-page original, the printouts are arranged in the following order: 1, 2, 3, 1, 2, 3, 1, 2, 3.

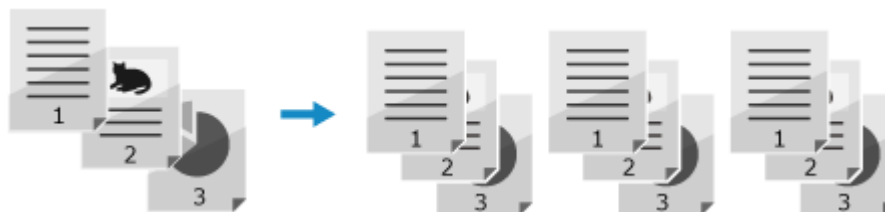

▶ Touch Panel Model(P. 294)

▶ 5 Lines LCD Model(P. 294)

■ Touch Panel Model

1 Press [Collate] on the copy screen.

⇒ The [Collate] screen is displayed.

2 Press [On].

■ 5 Lines LCD Model

1 On the copy screen, select [Collate] and press .

⇒ The [Collate] screen is displayed.

2 Select [On] and press .

Adjusting the Density

You can adjust the density to suit the original when copying.

If text or images in the original are too faint or dark, adjust the density of the entire original.

To create clean copies of an original with a colored background or a newspaper, adjust the density of the background.

▶ Touch Panel Model(P. 295)

▶ 5 Lines LCD Model(P. 295)

■ Touch Panel Model

1 Press [Density] on the copy screen.

⇒ The [Density] screen is displayed.

■ Adjusting the Density of the Entire Original

Drag the slider to the left or right to adjust the density.
Press [+] to increase the density and [-] to lower it.

■ Adjusting the Density of the Background

1 Press [Background] ► [Adjust (Manual)].

⇒ The [Adjust] screen is displayed.

2 Drag the slider to the left or right to adjust the density.

- Press [+] to increase the density and [-] to lower it.

2 Press [Apply].

NOTE

- When you adjust the density of the background, parts other than the background may also be affected.

■ 5 Lines LCD Model

1 On the copy screen, select [Density] and press **OK**.

⇒ The [Density] screen is displayed.

■ Adjusting the Density of the Entire Original

Move the slider to the left or right to adjust the density.
On the control panel, press ► to increase the density or press ◀ to lower it.

■ Adjusting the Density of the Background

1 On the control panel, press [Background] ► **OK** ► [Adjust (Manual)] ► **OK**.

⇒ The [Adjust] screen is displayed.

2 Move the slider to the left or right to adjust the density.

- On the control panel, press ► to increase the density or press ◀ to lower it.

2 Press **OK**.

NOTE

- When you adjust the density of the background, parts other than the background may also be affected.

Adjusting the Image Quality

You can adjust the image quality such as when the copied image is not clear or the text is difficult to read. You can also erase dark borders and shadows that appear around the edges of the original.

* Erase Frame is not available when making copies using the ID Card Copy function.

■ Selecting the Image Quality for the Original Type

Touch Panel Model

1 Press [Original Type] on the copy screen.

⇒ The [Original Type] screen is displayed.

2 Select the original type.

⇒ The copy screen is displayed.

■ When copying an original containing both text and photos with priority to the print speed

Select [Text/Photo (High Speed)].

■ When copying an original containing both text and photos with priority to the print quality

Select [Text/Photo (Quality)], adjust to make text or photos more visible, and press [Apply].

■ Copying Photos Containing Halftone Dots such as in Magazines

Select [Photo].

■ Copying Originals with Large Volumes of Text such as Research Papers

Select [Text].

5 Lines LCD Model

1 On the copy screen, select [Original Type] and press **OK**.

⇒ The [Original Type] screen is displayed.

2 Select the original type and press **OK**.

■ Copying an original containing both text and photos with priority to the copy speed


Select [Text/Photo (High Speed)] and press **OK**.

■ Copying an original containing both text and photos with priority to the print quality

1 Select [Text/Photo (Quality)] and press **OK**.

2 Adjust to make text or photos more visible, and press **OK**.

■ Copying Photos Containing Halftone Dots such as in Magazines

Select [Photo] and press .

■ Copying Originals with Large Volumes of Text such as Research Papers

Select [Text] and press .

■ Erasing Dark Borders and Shadows around Edges of the Original (Erase Frame)

This function erases the dark borders and shadows that appear around the edges in the copied image when copying originals that are smaller than the paper size or thick originals.

* This cannot be set at the same time as N on 1.

Touch Panel Model

1 Press [Erase Frame] on the copy screen.

⇒ The [Erase Frame] screen is displayed.

2 Press [On].

⇒ The screen for specifying the frame width to erase is displayed.

3 Enter the frame width to erase, and press [Apply].

⇒ The [Scan Size] screen is displayed.

When you are copying at an enlarged or reduced size, the function automatically changes the size of the frame width to erase to match the copy ratio setting.

4 Select the size of the placed original.

5 Lines LCD Model

1 On the copy screen, select [Erase Frame] and press .

⇒ The [Erase Frame] screen is displayed.

2 Select [On] and press .

⇒ The screen for specifying the frame width to erase is displayed.

3 Enter the frame width to erase, and press .

⇒ The [Scan Size] screen is displayed.

When you are copying at an enlarged or reduced size, the function automatically changes the size of the frame width to erase to match the copy ratio setting.

4 Select the size of the placed original.

■ Adjusting the Sharpness

You can emphasize the contours and lines to make them clearer in the copied image, or weaken them to make them softer.

Touch Panel Model


1 Press [Sharpness] on the copy screen.

⇒ The [Sharpness] screen is displayed.


2 Drag the slider to the left or right to adjust the sharpness.

Adjustment example:

- **To Make Blurry Text or Shapes Clearer**
Press [+].

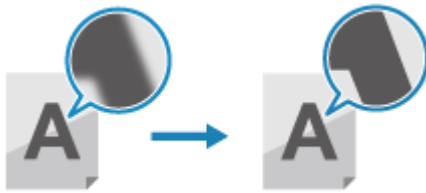

- **To reduce moire (vertical pattern noise) in photos**
Press [-].

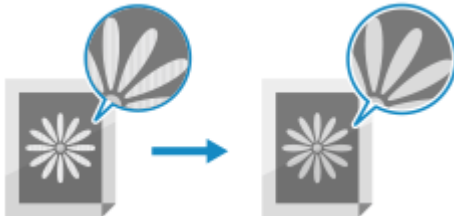

3 Press [Apply].

5 Lines LCD Model


1 On the copy screen, select [Sharpness] and press **OK**.

⇒ The [Sharpness] screen is displayed.


2 Move the slider to the left or right to adjust the sharpness.

Adjustment example:

- **To Make Blurry Text or Shapes Clearer**
Press **▶** on the control panel.

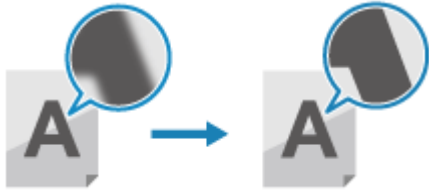

- **To reduce moire (vertical pattern noise) in photos**
Press ◀ on the control panel.

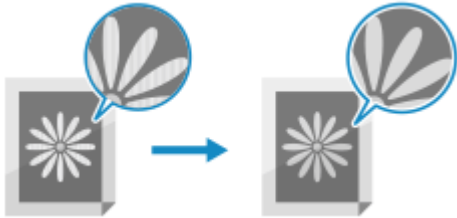

3 Press **OK**.

Paper Save Copy

A19R-064




If you want to save paper when multiple originals, use the paper save copy function. You can perform N on 1 copying and 2-sided copying at the same time from the [Home] screen on the control panel, allowing you to save paper.

▶ Touch Panel Model(P. 300)

▶ 5 Lines LCD Model(P. 302)

Touch Panel Model

- 1 Place the original.** ▶ Placing Originals(P. 140)
- 2 On the control panel, press [Paper Save] in the [Home] screen.** ▶ [Home] Screen(P. 121)
 - ⇒ The [Paper Save Copy] screen is displayed.
- 3 Select the combination of N on 1 copying and 2-sided copying.**

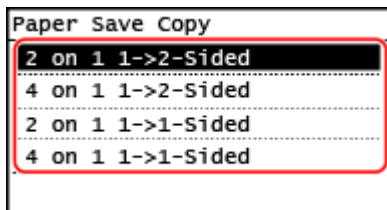

[2 on 1 1->2-Sided]

Four pages of an original are printed on a single sheet with two pages printed on both sides.



[4 on 1 1->2-Sided]

Eight pages of an original are printed on a single sheet with four pages printed on both sides.



[2 on 1 1->1-Sided]

Two pages of an original are printed on a single sheet with two pages printed on one side.



[4 on 1 1->1-Sided]

Four pages of an original are printed on a single sheet with four pages printed on one side.



4 Select the size of the placed original.

⇒ The copy screen is displayed.


5 Enter the number of copies using the numeric keys.

6 Configure the other copy settings, as needed. ▶ Additional Copying Features(P. 289)

⇒ You can adjust the density and image quality and other settings.


7 Press  on the control panel.


⇒ Copying starts.

- To cancel copying, press [Cancel] ▶ [Yes]. ▶ **Canceling Copy Operations(P. 312)**
- Press  on the control panel to view the copy job status. ▶ **Viewing the Print Job Status and Log(P. 212)**

■ When [Scan Next: Press Start] appears

When an original is placed on the platen glass and copied using 2-sided copying or N on 1, the screen is displayed for scanning the next original.

- 1** Place the next original on the platen glass, and press  on the control panel.

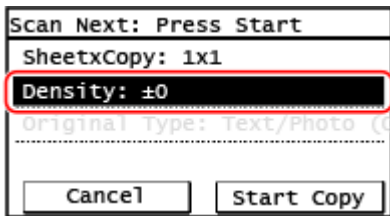

⇒ The next original is scanned, and the same screen is displayed.
Repeat this process until scanning of all originals is completed.

- You can press [Density] to change the settings for each original.

- 2** Press [Start Copy].

⇒ The scanned originals are printed.


5 Lines LCD Model

1 Place the original. ▶ **Placing Originals(P. 140)**

2 On the control panel, select [Paper Save Copy] in the [Home] screen, and press .
 ▶ **[Home] Screen(P. 121)**

⇒ The [Paper Save Copy] screen is displayed.

3 Select the combination of N on 1 copying and 2-sided copying.

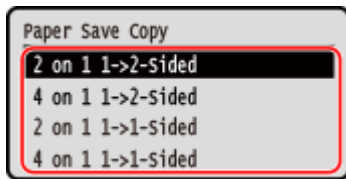

[2 on 1 1->2-Sided]

Four pages of an original are printed on a single sheet with two pages printed on both sides.



[4 on 1 1->2-Sided]

Eight pages of an original are printed on a single sheet with four pages printed on both sides.



[2 on 1 1->1-Sided]

Two pages of an original are printed on a single sheet with two pages printed on one side.



[4 on 1 1->1-Sided]

Four pages of an original are printed on a single sheet with four pages printed on one side.



4 Select the size of the placed original, and press .

⇒ The copy screen is displayed.




5 Enter the number of copies using the numeric keys.

6 Configure the other copy settings, as needed. [▶ Additional Copying Features\(P. 289\)](#)

⇒ You can adjust the density and image quality and other settings.


7 Press on the control panel.


⇒ Copying starts.

- To cancel copying, press [<Cancel>] ▶  ▶ [<Yes>] ▶  . [▶ Canceling Copy Operations\(P. 312\)](#)
- Press  on the control panel to view the copy job status. [▶ Viewing the Print Job Status and Log\(P. 212\)](#)

■ When [Scan Next: Press Start] appears



When an original is placed on the platen glass and copied using 2-sided copying or N on 1, the screen is displayed for scanning the next original.

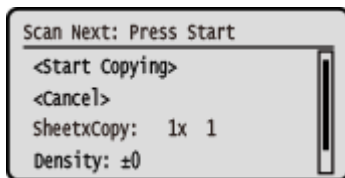- 1 Place the next original on the platen glass, and press  on the control panel.



⇒ The next original is scanned, and the same screen is displayed.

Repeat this process until scanning of all originals is completed.

- You can also press [Density] ▶  and [Original Type] ▶  to change the settings for each original.


- 2 Press [<Start Copying>] and press  .

⇒ The scanned originals are printed.

Copying Both Sides of ID Cards onto One Sheet

A19R-065



You can use the ID Card Copy function to copy the front and back sides of a driver's license or other ID card on the same sheet of paper at 100% magnification. This can be quickly performed from the [Home] screen or  (ID Card Copy key) on the control panel and is convenient, for example, when copying ID cards at reception.


◀ Touch Panel Model (P. 304)

◀ 5 Lines LCD Model (P. 306)


Touch Panel Model

1 Place the ID card on the platen glass.

- 1 Open the feeder.

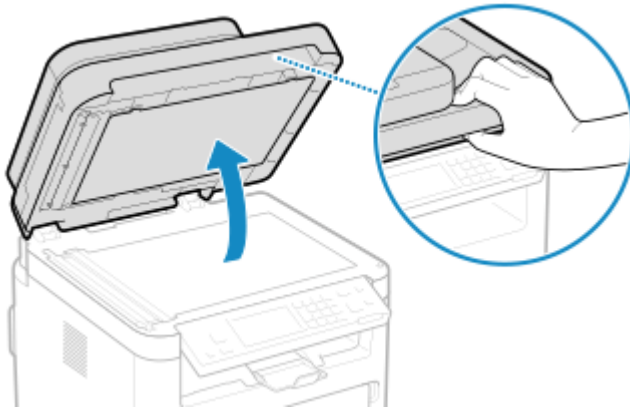

- 2 Place the front of the ID card face down on the platen glass in the portrait orientation while aligning the corner of the ID card with the top left corner of the platen glass.

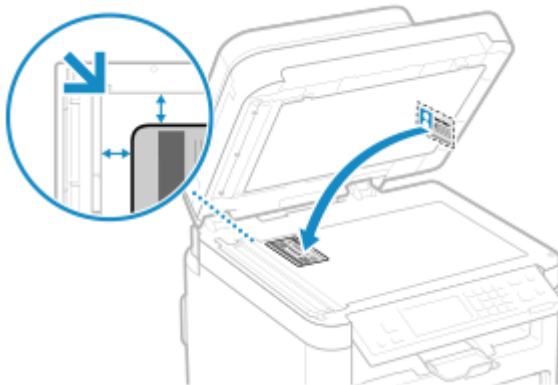


Place the ID card slightly away from the edge of the platen glass.

- 3 Gently close the feeder.

2 On the control panel, press [ID Card Copy] in the [Home] screen.  [Home] Screen(P. 121)

⇒ The copy screen is displayed.

3 Enter the number of copies using the numeric keys.

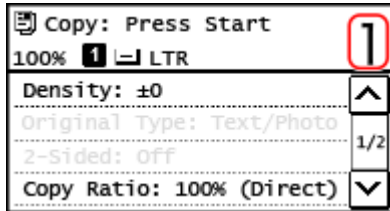

* When you make copies using the ID Card Copy function, the copy ratio is fixed at 100%.


4 Adjust the density and image quality, as needed.

-  **Adjusting the Density(P. 294)**
-  **Adjusting the Image Quality(P. 296)**

5 Press  on the control panel.


⇒ The front of the ID card is scanned.

6 When [Scan Next: Press Start] is displayed, turn over the ID card and place it on the platen glass.

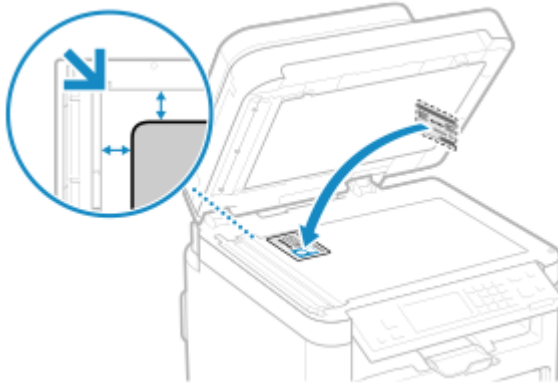

Place the back of the ID card face down in the same way as the front.

7 Press  on the control panel.

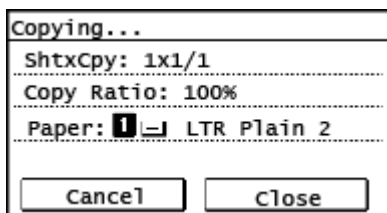

⇒ The back of the ID card is scanned and copying starts.


- To cancel copying, press [Cancel]  [Yes].  **Canceling Copy Operations(P. 312)**

- Press  to view the copy job status. [Viewing the Print Job Status and Log\(P. 212\)](#)


5 Lines LCD Model

1 Place the ID card on the platen glass.

- 1 Open the feeder or the platen cover.

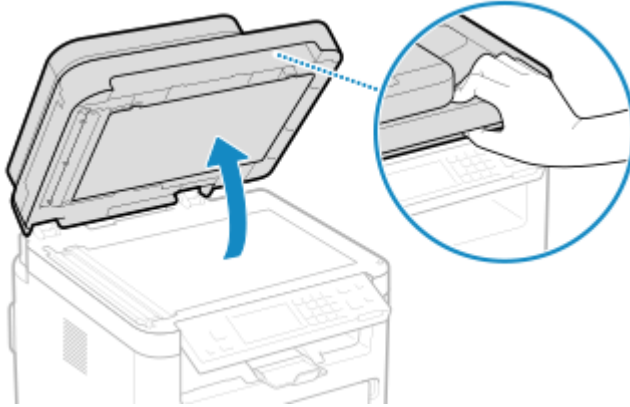

- 2 Place the front of the ID card face down on the platen glass in the portrait orientation while aligning the corner of the ID card with the top left corner of the platen glass.

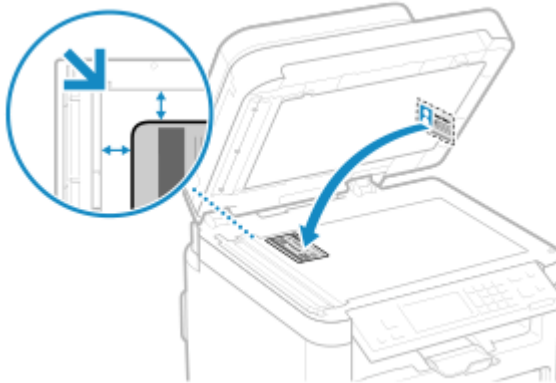


Place the ID card slightly away from the edge of the platen glass.

- 3 Gently close the feeder or the platen cover.

2 Press (ID Card Copy key) on the control panel. [Control Panel\(P. 13\)](#)

⇒ The copy screen is displayed.

3 Enter the number of copies using the numeric keys.

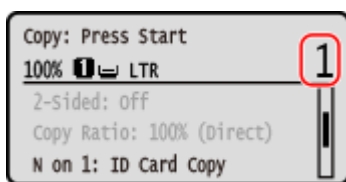


4 Adjust the density and image quality, as needed.

- ▶ **Adjusting the Density(P. 294)**
- ▶ **Adjusting the Image Quality(P. 296)**


5 Press  on the control panel.


⇒ The front of the ID card is scanned.

6 When [Scan Next: Press Start] is displayed, turn over the ID card and place it on the platen glass.

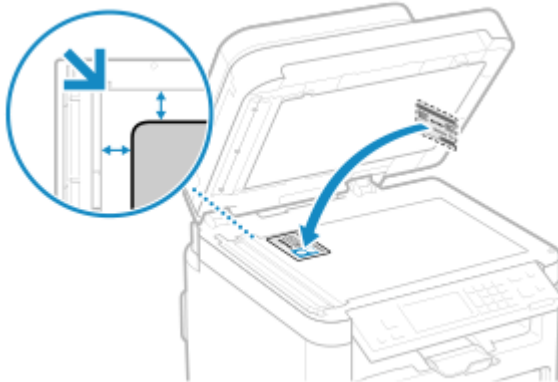




Place the back of the ID card face down in the same way as the front.

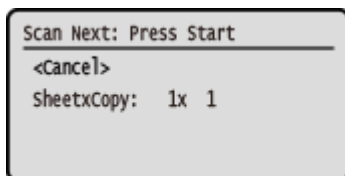7 Press  on the control panel.



⇒ Copying starts.

- To cancel copying, press [<Cancel>] ▶  ▶ [<Yes>] ▶  . ▶ **Canceling Copy Operations(P. 312)**
- Press  on the control panel to view the copy job status. ▶ **Viewing the Print Job Status and Log(P. 212)**

Copying Multiple Passports onto One Sheet

A19R-066




You can use the Passport Copy function to copy multiple passports together onto one sheet of paper. This can be quickly performed from the [Home] screen on the control panel.

- ▶ Touch Panel Model(P. 308)
- ▶ 5 Lines LCD Model(P. 310)


Touch Panel Model

1 Place a passport on the platen glass.

- 1 Open the feeder.

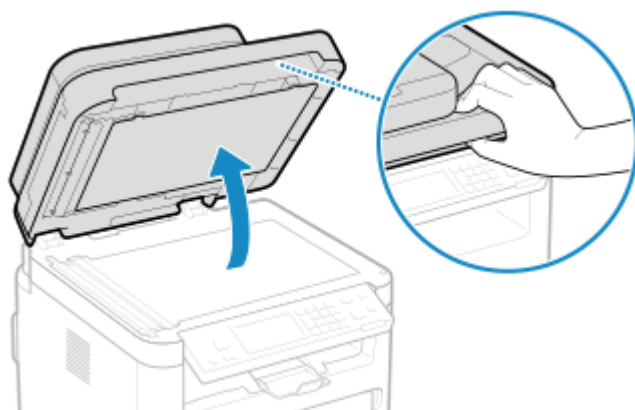

- 2 Place the page to be scanned face down while aligning the corner of the passport with the top left corner of the platen glass, as shown.

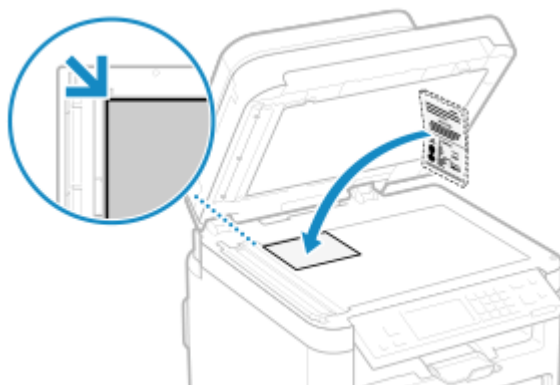

- 3 Gently close the feeder.

2 On the control panel, press [Passport Copy] in the [Home] screen. ▶[Home] Screen(P. 121)

⇒ The [Passport Copy] screen is displayed.

3 Select a combination of the number of passports and whether to use 2-sided printing.

[2 on 1 (2-Sided)]

Combines two passports onto one side of a sheet of paper by copying with 2-sided printing. Copies four passports onto both sides of a sheet of paper with 2-sided printing.

[4 on 1 (2-Sided)]

Combines four passports onto one side of a sheet of paper by copying with 2-sided printing. Copies eight passports onto both sides of a sheet of paper with 2-sided printing.


[2 on 1]

Combines two passports onto one side of a sheet of paper.

[4 on 1]

Combines four passports onto one side of a sheet of paper.

4 Enter the number of copies using the numeric keys.

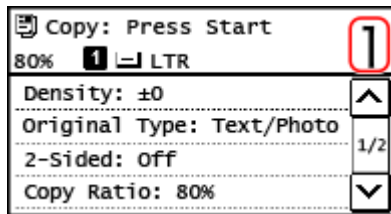

* When you use Passport Copy to make copies, the copy ratio is set automatically according to the size of the paper used for copying and the number of passports to combine. You can also press [Custom Ratio] to change the copy ratio manually.


5 Configure the other copy settings, as needed. ▶ Additional Copying Features(P. 289)

- You can adjust the density and image quality.
- You can change the number of passports to combine (N on 1) and the 2-sided copy settings selected in 3.

6 Press on the control panel.

⇒ The first passport is scanned.


7 When [Scan Next: Press Start] is displayed, place the next passport on the platen glass, and press on the control panel.

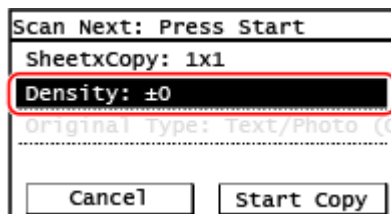

⇒ The next passport is scanned, and the same screen is displayed.
Repeat this process until scanning of all passports is completed.

- You can press [Density] to change the settings for each passport.


8 Press [Start Copy].

- ⇒ The scanned passports are printed.
- To cancel copying, press [Cancel] ► [Yes]. ▶ **Canceling Copy Operations(P. 312)**
- Press  to view the copy job status. ▶ **Viewing the Print Job Status and Log(P. 212)**


5 Lines LCD Model

1 Place a passport on the platen glass.

- 1 Open the feeder or the platen cover.

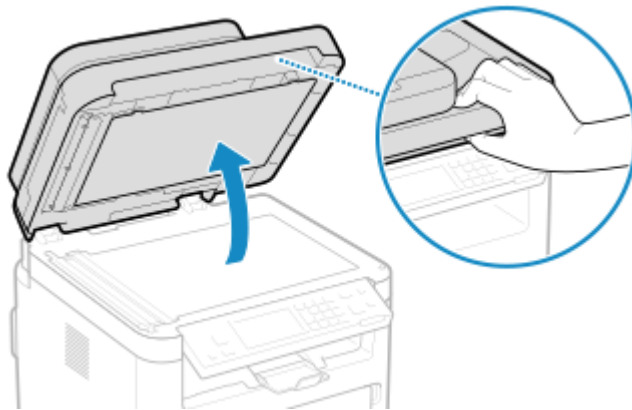

- 2 Place the page to be scanned face down while aligning the corner of the passport with the top left corner of the platen glass, as shown.

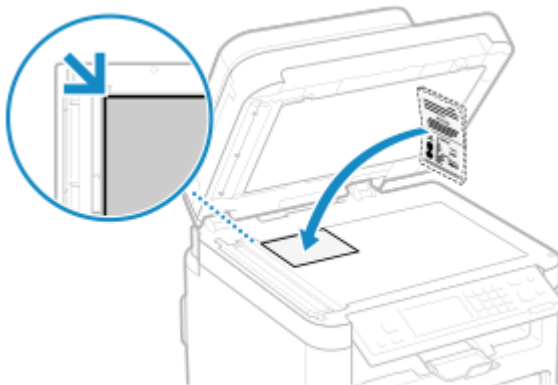

Place the ID card slightly away from the edge of the platen glass.

- 3 Gently close the feeder or the platen cover.

2 On the control panel, press [Passport Copy] in the [Home] screen and press . ▶ **[Home] Screen(P. 121)**

⇒ The [Passport Copy] screen is displayed.

3 Select a combination of the number of passports and whether to use 2-sided printing.

[2 on 1 (2-Sided)]

Combines two passports onto one side of a sheet of paper by copying with 2-sided printing. Copies four passports onto both sides of a sheet of paper with 2-sided printing.

[4 on 1 (2-Sided)]

Combines four passports onto one side of a sheet of paper by copying with 2-sided printing. Copies eight passports onto both sides of a sheet of paper with 2-sided printing.


[2 on 1]

Combines two passports onto one side of a sheet of paper.

[4 on 1]

Combines four passports onto one side of a sheet of paper.

4 Enter the number of copies using the numeric keys.

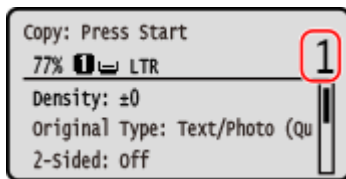


* When you use Passport Copy to make copies, the copy ratio is set automatically according to the size of the paper used for copying and the number of passports to combine. You can also press [Custom Ratio] to change the copy ratio manually.


5 Configure the other copy settings, as needed. ▶ Additional Copying Features(P. 289)

- You can adjust the density and image quality.
- You can change the number of passports to combine (N on 1) and the 2-sided copy settings selected in 3.

6 Press  on the control panel.

⇒ The first passport is scanned.

7 When [Scan Next: Press Start] is displayed, place the next passport on the platen glass, and press  on the control panel.


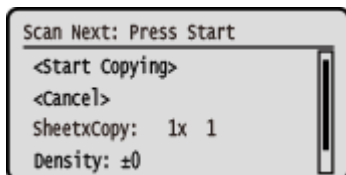



⇒ The next passport is scanned, and the same screen is displayed.
Repeat this process until scanning of all passports is completed.

- You can press [Density] and press  to change the settings for each passport.

8 Select [<Start Copying>] and press .

  ⇒ The scanned passports are printed.

- To cancel copying, press [<Cancel>] ▶  ▶ [<Yes>] ▶  . ▶ **Canceling Copy Operations(P. 312)**
- Press  on the control panel to view the copy job status. ▶ **Viewing the Print Job Status and Log(P. 212)**

Canceling Copy Operations


A19R-067

Follow the instructions on screen to cancel a copy operation.


- ▶ Touch Panel Model(P. 312)
- ▶ 5 Lines LCD Model(P. 312)

Touch Panel Model


Press [Cancel] ▶ [Yes].

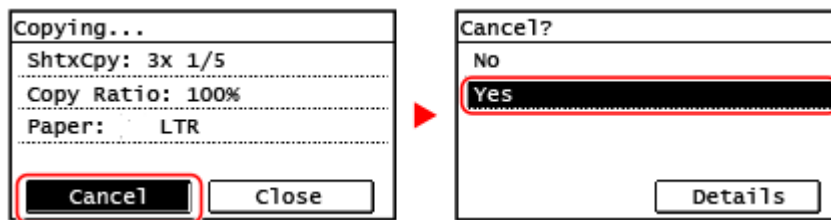

If the above screen is not displayed, on the control panel, press  ▶ [Yes].

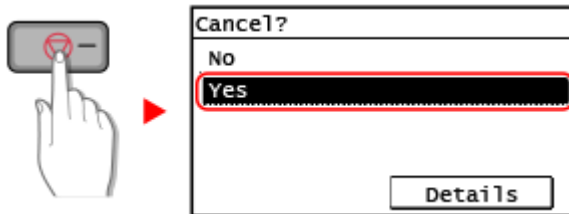


If the job list screen is displayed, select the job to cancel, and press [Yes].

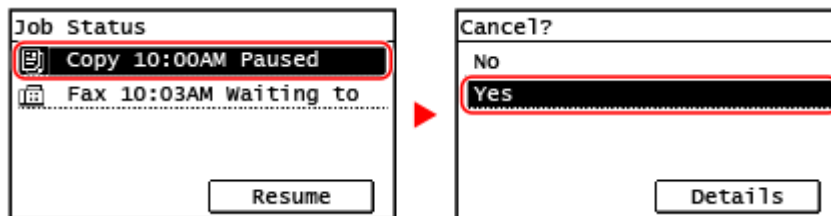


5 Lines LCD Model

Press [<Cancel>] ▶ [OK] ▶ [<Yes>] ▶ [OK] .

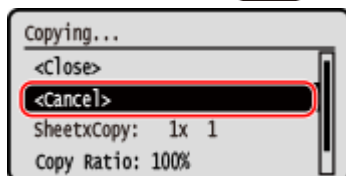


If the above screen is not displayed, press  on the control panel, and then select [<Yes>] and press [OK] .

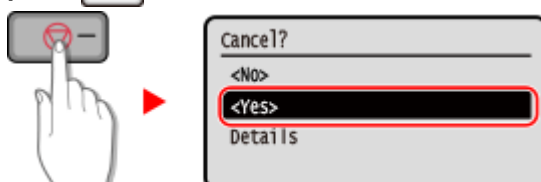

If the job list screen is displayed, select the job to cancel, and select [<Yes>] and press [OK] .

Copying

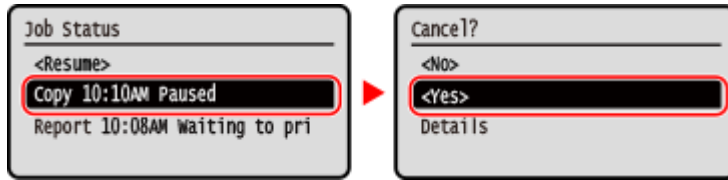

Checking the Copy Status

A19R-068

Processes handled by the machine, including copying, are managed as jobs. By checking the status of jobs, you can determine whether a copy job was performed correctly and the cause of errors that occur.

This section describes how to view this information using the control panel. You cannot check this information using Remote UI from a computer.

▶ **Touch Panel Model(P. 314)**

▶ **5 Lines LCD Model(P. 314)**

Touch Panel Model

1 Press  on the control panel. ▶ **Control Panel(P. 13)**

⇒ The [Status Monitor] screen is displayed.

2 Press [Copy/Print Job].

3 Press [Job Status].

⇒ Check the job being processed or waiting to be processed.

4 Select a job to view its details.

⇒ The job details are displayed.

5 Check the number of originals, number of copies, and other settings.

5 Lines LCD Model

1 Press  on the control panel. ▶ **Control Panel(P. 13)**

⇒ The [Status Monitor] screen is displayed.

2 Press [Copy/Print Job] and press .

3 Press [Job Status] and press .

⇒ Check the job being processed or waiting to be processed.

4 Select a job and press  to view its details.

⇒ The job details are displayed.

5 Check the number of originals, number of copies, and other settings.

Linking with Mobile Devices and Integrating with a Cloud Service

Linking with Mobile Devices and Integrating with a Cloud Service	317
Preparations for Linking with Mobile Devices and Integrating with a Cloud Service	318
Preparations for Direct Connection	319
Preparations for Using Universal Print	322
Registering the Machine to Microsoft Entra ID	323
Registering the Machine to the Computer	326
Preparations for Using AirPrint	327
Connecting a Mobile Device to the Machine	330
Connecting a Mobile Device via Wireless LAN Router (LAN Connection)	331
Connecting a Mobile Device Directly to the Machine (Direct Connection)	332
Using a Dedicated Application to Print and Scan (Canon PRINT)	335
Using the Cloud Integration Service to Print and Scan	336
Printing with Universal Print	337
Using AirPrint Application to Print and Scan Data and Send Faxes	338
Printing from an Android Device	342
Printing from a Chrome OS Device	343

Linking with Mobile Devices and Integrating with a Cloud Service

A19R-0FR

The machine can be operated from a smartphone, tablet, or other mobile device, or from a cloud service. You can use a compatible application or service to easily print or scan photos and documents. For details on supported models, see the following: **Supported Functions(P. 3)**

Canon PRINT

Dedicated Canon application. Enables printing and scanning.

Using a Dedicated Application to Print and Scan (Canon PRINT)(P. 335)

Cloud Integration Service

Enables printing and scanning from mobile devices using the Canon cloud integration service.

Using the Cloud Integration Service to Print and Scan(P. 336)

Universal Print

Enables you to print documents from Windows devices via the Microsoft Cloud. If your device is connected to the Internet, you can print documents when you are away from the machine.

Preparations for Using Universal Print(P. 322)

Printing with Universal Print(P. 337)

AirPrint

This is a standard function on an iPhone, iPad, iPod touch, and Mac. You can print from applications that support AirPrint without having to install a dedicated application or driver. You can also scan data and send faxes with a Mac.

Preparations for Using AirPrint(P. 327)

Using AirPrint Application to Print and Scan Data and Send Faxes(P. 338)

Canon Print Service

Dedicated Canon plugin for Android devices. Enables printing from any application.

Using a Dedicated Plugin to Print (Canon Print Service)(P. 342)

Mopria® Print Service

Common plugin for Mopria® certified printers and multifunction machines. Enables printing from any application on an Android device without having to install a dedicated plugin or application for individual manufacturers.

Using a Common Plugin to Print (Mopria® Print Service)(P. 342)

Chrome OS

You can use the function standard equipped in the Chrome operating system to print without having to install a dedicated application or printer driver.

Printing from a Chrome OS Device(P. 343)

■ See Also

Managing the Machine from a Mobile Device (Remote UI)

You can use Remote UI from a Web browser on a mobile device. With Remote UI, you can check the operation status of the machine, change the machine settings, and register destinations to the Address Book. For details about starting and operating Remote UI, see the instructions for using Remote UI on a computer.

Managing the Machine from a Computer (Remote UI)(P. 394)

* Some display items are omitted in the mobile version of Remote UI. To check all items, tap [PC Version] at the bottom of the screen and switch to the computer version of Remote UI.

Preparations for Linking with Mobile Devices and Integrating with a Cloud Service

A19R-06A

To directly connect a mobile device to the machine or to use Universal Print or AirPrint, you must first configure the settings on the machine.

- ▶ **Preparations for Direct Connection(P. 319)**
- ▶ **Preparations for Using Universal Print(P. 322)**
- ▶ **Preparations for Using AirPrint(P. 327)**

Preparations for Direct Connection

A19R-06C

Enable the Direct Connection function on the machine. If the machine is not connected to a network, you need to check the Network Connection Type settings.

*The Direct Connection function is not available for the models which are not equipped with a wireless LAN capability.

▶ **Enabling the Direct Connection Function(P. 319)**

▶ **Checking the Network Connection Type of the Machine(P. 320)**

Enabling the Direct Connection Function

This section describes how to configure the settings using Remote UI from a computer.

On the control panel, select [Menu] in the [Home] screen, and then select [Preferences] to configure the settings. ▶

[Direct Connection Settings](P. 433)

Administrator privileges are required. The machine must be restarted to apply the settings.

1 Log in to Remote UI in System Manager Mode. ▶ Starting Remote UI(P. 395)

2 On the Portal page of Remote UI, click [Settings/Registration]. ▶ Portal Page of Remote UI(P. 397)

3 Click [Network Settings] ▶ [Direct Connection Settings] ▶ [Edit].

⇒ The [Edit Direct Connection Settings] screen is displayed.

4 Select the [Use Direct Connection] checkbox.

5 Configure the Direct Connection function, as needed.

When connecting multiple mobile devices at the same time, you must specify the SSID and network key.

■ To Terminate the Connection Automatically

Select the [Terminate Direct Connection Session] checkbox, and enter the time period of the direct connection until it is terminated. When multiple mobile devices are connected, they will be disconnected after the time period elapses since the last started connection.

■ To Change the IP Address for Connection

In [IP Address for Direct Connection], enter any IP address.

■ To specify the SSID and Network Key (When Connecting Multiple Mobile Devices at the Same Time)

By default, the SSID and network key of the machine are automatically assigned a random character string each time direct connection is performed.

To specify the SSID and network key manually, in [Access Point Mode Settings], select the [Specify SSID to Use] or [Specify Network Key to Use] checkbox, and enter an SSID or network key using single-byte alphanumeric characters.

■ To Allow Mobile Devices to Always Connect to the Machine

By default, you must use the control panel to put the machine into waiting state when you want to establish a direct connection.

To allow mobile devices to always connect to the machine, in [Access Point Mode Settings], specify the SSID and network key, and select the [Always Keep Enabled If SSID/Network Key Is Specified] checkbox in [Keep Connection Enabled].

6 Click [OK].

7 Restart the machine. ▶ **Restarting the Machine(P. 114)**

⇒ The settings are applied.

Checking the Network Connection Type of the Machine

If the machine is not connected to a network (wired or wireless LAN), check that the network connection type is set to wired LAN.

If the machine is connected to a network, you do not have to check this.

▶ **Touch Panel Model(P. 320)**

▶ **5 Lines LCD Model(P. 320)**

■ Touch Panel Model

1 Press on the control panel. ▶ **Control Panel(P. 13)**

⇒ The [Status Monitor] screen is displayed.

2 Press [Network Information] ▶ [Network Connection Method].

⇒ The [Network Conn. Method] screen is displayed.

3 Check that [Wired LAN] is displayed.

If the connection type is set to wired LAN, you can establish a direct connection even if the machine is not connected to a network.

■ **When [Wireless LAN] Is Displayed in [Network Conn. Method]**

When the machine is not connected to a wireless LAN, a direct connection cannot be established. Connect the machine to a wireless LAN or switch the connection type to wired LAN.

▶ **Connecting to a Wireless LAN(P. 61)**

▶ **Selecting Wired or Wireless LAN(P. 58)**

■ 5 Lines LCD Model

1 Press on the control panel. ▶ **Control Panel(P. 13)**

⇒ The [Status Monitor] screen is displayed.

2 Press [Network Information] ▶ ▶ [Network Connection Method] ▶ .

⇒ The [Network Conn. Method] screen is displayed.

3 Check that [Wired LAN] is displayed.

If the connection type is set to wired LAN, you can establish a direct connection even if the machine is not connected to a network.

■ When [Wireless LAN] Is Displayed in [Network Conn. Method]

When the machine is not connected to a wireless LAN, a direct connection cannot be established. Connect the machine to a wireless LAN or switch the connection type to wired LAN.

- ▶ **Connecting to a Wireless LAN(P. 61)**
- ▶ **Selecting Wired or Wireless LAN(P. 58)**

Preparations for Using Universal Print

A19R-044

Configure the machine to be able to use Microsoft's cloud service, Universal Print, and register the machine to each computer that will be used to print.

You must be a registered user of Microsoft 365 and use Microsoft Entra ID.

- ▶ **Registering the Machine to Microsoft Entra ID(P. 323)**
- ▶ **Registering the Machine to the Computer(P. 326)**

Registering the Machine to Microsoft Entra ID

A19R-045

Register the machine to the cloud-based authentication and management service, Microsoft Entra ID, and set the members or groups that will use the machine.

- 🔴 **Step 1: Registering the Machine to Microsoft Entra ID(P. 323)**
- 🔴 **Step 2: Specifying the Members and Groups to Use the Machine(P. 325)**

Step 1: Registering the Machine to Microsoft Entra ID

Configure this setting using Remote UI from a computer. You cannot use the control panel to configure the settings.

Administrator privileges are required.

1 Log in to Remote UI in System Manager Mode. 🔴 Starting Remote UI(P. 395)

2 On the Portal page of Remote UI, click [Settings/Registration]. 🔴 Portal Page of Remote UI(P. 397)

3 Click [Network Settings] ▶ [Universal Print Settings].

⇒ The [Universal Print Settings] screen is displayed.

4 Click [Edit] in [Basic Settings].

5 Select the [Use Universal Print] checkbox, and enter the printer name.

- For the printer name, enter a name to identify the machine, using single-byte alphanumeric characters.
- To verify the certificate sent from the server, select the [Verify Server Certificate] checkbox. To add a Common Name (CN) to the verification items, select the [Add CN to Verification Items] checkbox as well.
- Note that you may need to change [Application ID], [Microsoft Entra ID Authentication URL], or [Microsoft Entra ID Registration URL] depending on your cloud environment.
- If you change [Application ID], [Microsoft Entra ID Authentication URL], or [Microsoft Entra ID Registration URL] by mistake, manually set the initial values shown below.
 - [Application ID]: f9fc375c-c7ba-4e5c-b213-23affd792cc1
 - [Microsoft Entra ID Authentication URL]: <https://login.microsoftonline.com/organizations/oauth2/v2.0>
 - [Microsoft Entra ID Registration URL]: <https://register.print.microsoft.com/api/v1.0/register>


6 Click [OK].

⇒ The [Universal Print Settings] screen is displayed.

7 Click [Register] in [Registration Status].

⇒ The [Information for Registration] screen is displayed.


8 Wait several seconds, and then click [↻].

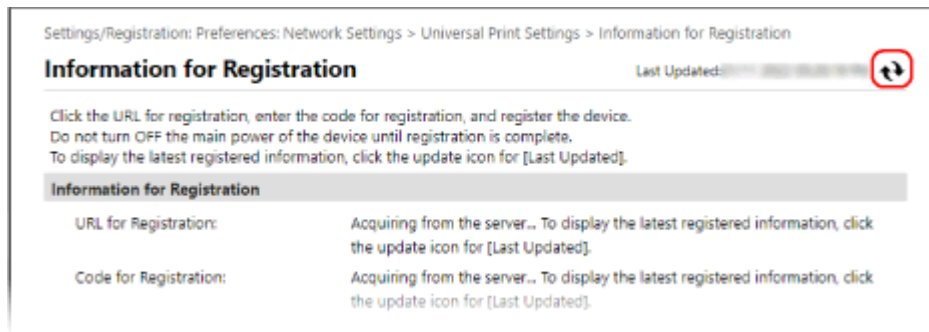

9 Click the link displayed in [URL for Registration].

10 Register the machine according to the instructions on the screen.

11 Click [Universal Print Settings] at the top of the Remote UI screen.

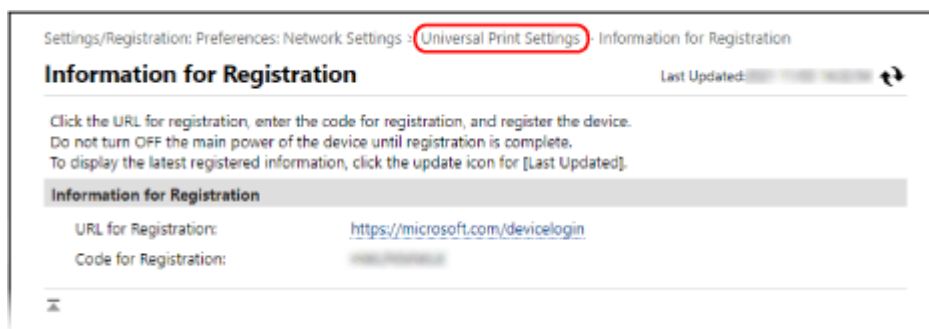

⇒ The [Universal Print Settings] screen is displayed.

12 Wait a few minutes, and then click [↻].

⇒ When registration is complete, [Registered] is displayed in [Registration Status].

13 Log out from Remote UI.

NOTE

Canceling the Registration

- Click [Unregister] on the [Universal Print Settings] screen ► [OK]. On the Microsoft Entra ID device management screen, select the machine and click [Delete].

Step 2: Specifying the Members and Groups to Use the Machine

- 1 Display the Universal Print management screen of Microsoft Entra ID in a Web browser on a computer.**
- 2 Select the machine, and click [Share Printer].**
To change the name of the machine displayed on the computer, change [Printer Share Name].
- 3 Click [Members] ► [Add].**
- 4 From the list, select the members and groups who will use the printer.**

Registering the Machine to the Computer

A19R-046

Register the machine, which is registered to Microsoft Entra ID, to the computer to be used for Universal Print.

Required Preparations

- Register the machine to Microsoft Entra ID. [▶ Registering the Machine to Microsoft Entra ID\(P. 323\)](#)

1 Click [] (Start) ▶ [] (Settings) ▶ [Accounts].

⇒ The [Your info] screen is displayed.

2 Click [Access work or school] ▶ [Connect].

3 Follow the on-screen instructions to sign in to your Microsoft 365 account.

4 Click [Home] ▶ [Devices] ▶ [Printers & scanners].

⇒ The [Printers & scanners] screen is displayed.

5 Click [Add a printer or scanner].

⇒ The printer list screen is displayed.

6 Select the machine and click [Add device].

⇒ The machine is registered to the computer.

NOTE

When Using a Proxy Server

- To use Universal Print via a proxy server, you must configure the proxy settings on each computer. For details, contact the network administrator.

Preparations for Using AirPrint

A19R-06E

Set the basic information that is required to use AirPrint. Configure the settings related to the functions and security that will be used, according to your usage and environment.

- ◉ **Setting the Basic Information of AirPrint(P. 327)**
- ◉ **Setting the Functions and Security to Be Used with AirPrint(P. 328)**

Setting the Basic Information of AirPrint

Configure these settings using Remote UI from a computer. You cannot use the control panel to configure the settings.

Administrator privileges are required.

1 Log in to Remote UI in System Manager Mode. ◉ **Starting Remote UI(P. 395)**

2 On the Portal page of Remote UI, click [Settings/Registration]. ◉ **Portal Page of Remote UI(P. 397)**

3 Click [Network Settings] ▶ [AirPrint Settings] ▶ [Edit].

⇒ The [Edit AirPrint Settings] screen is displayed.

4 Select the [Use AirPrint] checkbox, and enter the printer name.

- For the printer name, enter a name to identify the machine, using single-byte alphanumeric characters.
- If mDNS of IPv4 is set, the mDNS name is entered for the printer name. If you change the printer name, the mDNS name is also changed.

* When you change the set printer name or mDNS name, the Mac that was connected to the machine may no longer be able to connect to it. In this case, you must register the machine on the Mac.

5 Enter the location and longitude and latitude of the machine, as needed.

If the location of the machine is set in [Settings/Registration] ▶ [Device Management] ▶ [Device Information Settings], the same character string is entered in the location. When you change the location in AirPrint Settings, the location in Device Information Settings is also changed.

6 Click [OK].

⇒ The settings are applied.

7 Log out from Remote UI.

NOTE

- When the AirPrint function is enabled, the following network settings are also enabled:

- ▶[Use HTTP](P. 445)
- ▶[IPP Print Settings](P. 445)
- ▶[mDNS Settings](P. 441)
- ▶[Network Link Scan Settings](P. 445)

Setting the Functions and Security to Be Used with AirPrint

AirPrint uses the following protocols:

- IPP (printing and sending faxes)
- Network Link Scan (scanning)

The protocol to use varies with the function. Therefore, you can restrict the available functions by disabling the protocols. In addition, you can configure the settings to encrypt communication with TLS and configure IPP authentication when using a protocol.

Configure these settings using Remote UI from a computer. You cannot use the control panel to configure the settings.

Administrator privileges are required.

Required Preparations

- When encrypting communication with TLS, specify the key and certificate to use for TLS encrypted communication. ▶**Using TLS(P. 356)**

1 Log in to Remote UI in System Manager Mode. ▶**Starting Remote UI(P. 395)**

2 On the Portal page of Remote UI, click [Settings/Registration]. ▶**Portal Page of Remote UI(P. 397)**

3 Click [Network Settings] ▶ [IPP Print Settings] or [Network Link Scan Settings] ▶ [Edit].

⇒ The [Edit IPP Print Settings] screen or [Edit Network Link Scan Settings] screen is displayed.

4 Configure the IPP or Network Link Scan settings.

■When Restricting the Functions to Use

Clear the [Use IPP Printing] or [Use Network Link Scan] checkboxes.

- When you clear the [Use IPP Printing] checkbox, printing and sending faxes with AirPrint are no longer possible.
- When you clear the [Use Network Link Scan] checkbox, scanning is no longer possible with AirPrint.

■When Encrypting Communication with TLS

Select the [Allow Only When Using TLS] or [Use TLS] checkbox.

■When Setting IPP Authentication

Select the [Use Authentication] checkbox, and set the user name to be used for IPP authentication using single-byte alphanumeric characters.

To set a password, select the [Set/Change Password] checkbox, and enter the same password in both [Password] and [Confirm] using single-byte alphanumeric characters. Printing or sending faxes with AirPrint now requires authentication, and only users who know the user name and password of IPP authentication can use these functions.

5 Click [OK].

▣▣▣▣ The settings are applied.

6 Log out from Remote UI.

Connecting a Mobile Device to the Machine

A19R-06F

To use the machine from a mobile device, you must connect it to the machine using either of the following methods:

Connecting via Wireless LAN Router (LAN Connection)

Connect a mobile device to the machine via a wireless LAN router in the same way as you connect a computer to the machine. By configuring a mobile device to connect automatically to the wireless LAN router, you do not need to manually connect it next time.

▶ Connecting a Mobile Device via Wireless LAN Router (LAN Connection)(P. 331)



Connecting Directly (Direct Connection)

Connect a mobile device directly to the machine via Wi-Fi. You can directly connect to the machine without using wireless LAN. You must manually connect the mobile device each time you use the machine.

▶ Preparations for Direct Connection(P. 319)

▶ Connecting a Mobile Device Directly to the Machine (Direct Connection)(P. 332)



Connecting a Mobile Device via Wireless LAN Router (LAN Connection)

A19R-06H

Connect a mobile device to the machine via a wireless LAN router in the same way as you connect a computer to the machine. By configuring a mobile device to connect automatically to the wireless LAN router, you do not need to manually connect it next time.



Required Preparations

- Connect the machine to the network using wireless or wired LAN. ▶ **Setting Up the Network(P. 56)**
 - * When using a wired LAN, check that a wireless LAN router is connected to the same network.
- Set an IPv4 address to the machine. ▶ **Setting IPv4 Addresses(P. 77)**

Connect the mobile device to either of the following wireless LAN routers:

- A wireless LAN router connected to the machine
- (When the machine is connected to a wired LAN) A wireless LAN router on the network connected to the machine

For details about how to connect a mobile device to a wireless LAN router, see the manual of the mobile device.

Connecting a Mobile Device Directly to the Machine (Direct Connection)

A19R-06J

Connect a mobile device directly to the machine via Wi-Fi. You can directly connect it to the machine without using wireless LAN. You must manually connect the mobile device each time you use the machine.

By default, only one mobile device can be directly connected to the machine at any one time.

*The Direct Connection function is not available for the models which are not equipped with a wireless LAN capability.



To establish a direct connection, put the machine into waiting state using the control panel, search the machine from a mobile device, and then connect to the machine by manually entering the network key.

Required Preparations

- Make preparations such as enabling the Direct Connection function on the machine. [▶Preparations for Direct Connection\(P. 319\)](#)


[▶Touch Panel Model\(P. 332\)](#)

[▶5 Lines LCD Model\(P. 333\)](#)

■ Touch Panel Model

1 On the control panel, press [Mobile Portal] in the [Home] screen. [▶\[Home\] Screen\(P. 121\)](#)

2 Press [Start].

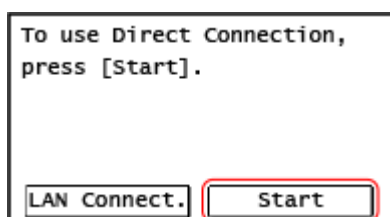

⇒ The machine enters waiting state for Direct Connection.

Within 5 minutes of pressing [Start], you must directly connect the mobile device.

■ When [Disconnect] Is Displayed


- You can skip this step when [Connect from device you want to connect.] is displayed. Proceed to Step 3.
- When [Maximum number of wireless devices connected using Direct Connection has been reached.] is displayed, you cannot connect a new mobile device until a connected mobile device is disconnected. To disconnect a connected mobile device, press [Disconnect] ▶ [Yes].

* By default, only one mobile device can be directly connected to the machine at any one time.

3 Directly connect the mobile device.

■ Manually Configuring the Wi-Fi Settings

- 1 Press [Display SSID/Network Key] to check the SSID and the network key of the machine.

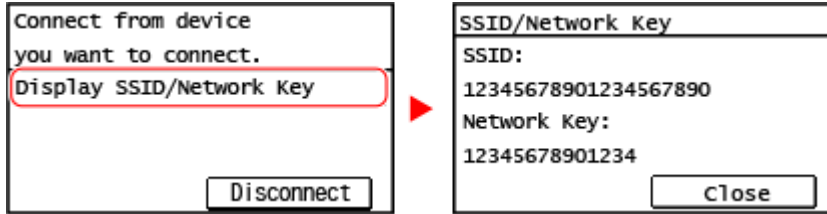

- 2 In the Wi-Fi settings of the mobile device, select the SSID of the machine, and enter the network key. For details about how to configure the Wi-Fi settings, see the manual of the mobile device.

4 When [Connected.] appears on the control panel, press [Close].

⇒ The direct connection screen reappears.

By default, only one mobile device can be directly connected to the machine at any one time. [Maximum number of wireless devices connected using Direct Connection has been reached.] is displayed on the screen.

5 When you have completed your operations on the mobile device, press [Disconnect] ▶ [Yes].

⇒ The direct connection is terminated.

If multiple mobile devices are connected, all devices are disconnected.

■ 5 Lines LCD Model

1 On the control panel, select [Mobile Portal] in the [Home] screen, and press **OK** . ▶ [Home] Screen(P. 121)

2 Select [<Connect>] and press **OK** .

⇒ The machine enters waiting state for Direct Connection.

- Within 5 minutes of pressing [<Connect>], you must directly connect the mobile device.
- You can skip this step when [Connect from device you want to connect.] is displayed. Press **OK** and proceed to Step 3.
- When [Maximum number of wireless devices connected using Direct Connection has been reached.] is displayed, you cannot connect a new mobile device until a connected mobile device is disconnected. To disconnect a connected mobile device, press [<Disconnect>] ▶ **OK** ▶ [Yes] ▶ **OK** .

* By default, only one mobile device can be directly connected to the machine at any one time.

3 Directly connect the mobile device.

■ Manually Configuring the Wi-Fi Settings

- 1 Check the SSID and network key of the machine.
- 2 In the Wi-Fi settings of the mobile device, select the SSID of the machine, and enter the network key. For details about how to configure the Wi-Fi settings, see the manual of the mobile device.

4 When [Connected.] appears on the control panel, press [Close].

⇒ The direct connection screen reappears.

By default, only one mobile device can be directly connected to the machine at any one time. [Maximum number of wireless devices connected using Direct Connection has been reached.] is displayed on the screen.

5 When you have completed your operations on the mobile device, press [<Disconnect>] ▶ .

⇒ The direct connection is terminated.

If multiple mobile devices are connected, all devices are disconnected.

IMPORTANT

- You may not be able to connect to the Internet with Direct Connection depending on the mobile device.
- The power-saving effect of sleep mode decreases when using Direct Connection.
- The IP address of the mobile device is set automatically. If you set the IP address manually, communication using Direct Connection may not be performed correctly.

NOTE

Checking a Mobile Device Connected to the Machine

- When using Direct Connection, press [Connection Information] to display the information of the mobile device connected to the machine with Direct Connection.

If the Direct Connection Is Automatically Disconnected

- The direct connection is automatically terminated in the following cases:
 - When the Direct Connection Termination is set
 - When no data is sent or received between the mobile device and the machine for a while
 - When the wireless LAN connection of the machine is terminated

Using a Dedicated Application to Print and Scan (Canon PRINT)

A19R-06K

You can use the dedicated Canon application Canon PRINT to print and scan.

▶ **When Using a Computer (Windows)(P. 335)**

▶ **When Using a Mobile Device(P. 335)**

When Using a Computer (Windows)

Compatible Operating Systems and Download Site

Search for "Canon PRINT" from Microsoft Store.

When Using a Mobile Device

Compatible Operating Systems and Download Site

- When using iOS/iPadOS
Search for "Canon PRINT" from App Store.
- When using Android
Search for "Canon PRINT" from Google Play.

Usage

 
 
 
 
- Connect a mobile device to the machine. ▶ **Connecting a Mobile Device to the Machine(P. 330)**
- Register the machine to Canon PRINT.
When the mobile device is connected to the machine via LAN, the IP address information of the machine is required to register the machine to Canon PRINT. You can view the IP address with [Home] screen ▶ [Mobile Portal] ▶ [LAN Connect.] ▶ [Display Device Name/IP Address].
For the 5 Lines LCD Model, you can check the IP address from [Mobile Portal] in the [Home] screen
▶ **OK** ▶ [<LAN Connection>] ▶ **OK** ▶ [Display Device Name/IP Address] ▶ **OK**.
- If you want to scan, select [Menu] in the [Home] screen ▶ [Management Settings] ▶ [Device Management] ▶ set [Scan with Canon PRINT] to [On].
For the 5 Lines LCD Model, select [Menu] in the [Home] screen ▶ **OK** ▶ [Management Settings] ▶ **OK** ▶ [Device Management] ▶ **OK** ▶ set [Scan with Canon PRINT] to [On].
- For details about registering the machine, printing, and scanning, see the Help menu item in the application.

Using the Cloud Integration Service to Print and Scan

A19R-0FS

You can use the Canon cloud integration service to print documents and photos stored in cloud services. You can also use it to store scanned data in cloud services.

Usage

- To use the cloud integration service, the machine must be registered.
- You can issue the registration code used to register the machine with [Menu] ▶ [Preferences] ▶ [Network] ▶ [Web Service Setup] ▶ [Issue Registration Code]. For the 5 Lines LCD Model you can issue the registration code with [Menu] ▶  ▶ [Preferences] ▶  ▶ [Network] ▶  ▶ [Web Service Setup] ▶  ▶ [Issue Registration Code].
▶[Web Service Setup](P. 437)
- For information on how to register the machine and how to print and scan, see [here](#) .
* Depending on the country or region, this service may not be available and the available applications may vary.

Printing with Universal Print

A19R-049

Universal Print is a Microsoft service that enables you to print documents via the cloud. There is no need to install a printer driver to print documents from your computer. You can also print documents from a remote location as long as your computer is connected to the Internet.

To use Universal Print, you must be a registered user of Microsoft 365 and use Microsoft Entra ID.

Required Preparations

- Register the machine to Microsoft Entra ID, and set the members or groups that will use the machine. ▶
Registering the Machine to Microsoft Entra ID(P. 323)
- To each computer that will use Universal Print, register the machine that is registered to Microsoft Entra ID.
▶**Registering the Machine to the Computer(P. 326)**


For details about how to print with Universal Print and the supported operating systems, see the Microsoft website.
<https://docs.microsoft.com/>

Using AirPrint Application to Print and Scan Data and Send Faxes

A19R-06L

AirPrint is a print function standard in Apple operating systems. You can print from applications that support AirPrint instead of having to install a dedicated application or driver.

In addition, you can use AirPrint to print from a Mac. You can also scan data and send faxes with a Mac.

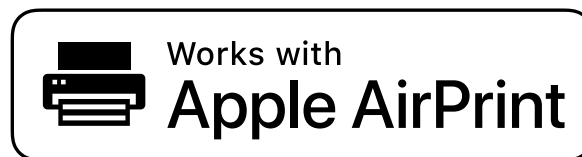

▶ **When Using an iPhone, iPad, or iPod touch(P. 338)**

▶ **When Using a Mac(P. 339)**

When Using an iPhone, iPad, or iPod touch

Use AirPrint to print from an iPhone, iPad, or iPod touch connected to the machine via LAN or direct connection.

Operating Environment

You can use AirPrint with the following iPhone, iPad, and iPod touch models:

- iPhone: 3GS or later
- iPad: All models
- iPod touch: Third generation or later

Required Preparations

- Set the machine to enable use of AirPrint. ▶ **Preparations for Using AirPrint(P. 327)**
- Connect the machine to an iPhone, iPad, or iPod touch. ▶ **Connecting a Mobile Device to the Machine(P. 330)**

1 Open the data to be printed on the iPhone, iPad, or iPod touch.

2 In the application with the data to be printed open, tap [🖨️].

⇒ The menu options are displayed.

3 Tap [Print].

⇒ The print options are displayed.

If print options are not displayed, the application does not support AirPrint. In this case, you cannot use AirPrint to print data.


4 Tap [Printer], and select the machine.

5 Configure the print settings.

The available settings and usable paper sizes vary depending on the application you are using.

6 Tap [Print].

⇒ Printing starts.

You can check the print status or the print log by pressing  on the control panel. ▶ **Viewing the Print Job Status and Log(P. 212)**

When Using a Mac

You can use AirPrint to print and scan data and send faxes from a Mac connected to the network on the same LAN as the machine or a Mac connected to the machine via USB.

Operating Environment

You can use AirPrint on a Mac with the following operating systems installed:

- Printing: OS X 10.7 or later*¹
- Scanning: OS X 10.9 or later*²
- Sending faxes: OS X 10.9 or later

*¹ When printing from a Mac connected to the machine via USB, OS X 10.9 or later.

*² When scanning with TLS encrypted communication, OS X 10.11 or later.

Required Preparations

- Set the machine to enable use of AirPrint. ▶ **Preparations for Using AirPrint(P. 327)**
- Connect the machine to a Mac. ▶ **Setting Up the Network(P. 56)**
When connecting via USB, connect to the USB port for computer connection on the back of the machine with a USB cable. ▶ **Rear Side(P. 11)**
- In [System Preferences] ▶ [Printers & Scanners] on the Mac, click [+] to register the machine.

▶ **Using AirPrint to Print Data(P. 339)**

▶ **Using AirPrint to Scan Data(P. 340)**

▶ **Using AirPrint to Send Faxes(P. 341)**

■ Using AirPrint to Print Data

1 Open the document you want to print on your Mac.

2 In the application used to open the document, click [Print].


⇒ The printing dialog box appears.

3 In [Printer], select the machine.**4 Configure the print settings.**

The available settings and usable paper sizes vary depending on the application you are using.

5 Click [Print].

⇒ Printing starts.

You can check the print status or the print log by pressing  on the control panel. ▶ **Viewing the Print Job Status and Log(P. 212)**

■ Using AirPrint to Scan Data**1 Place the original on the machine. ▶ Placing Originals(P. 140)****2 On your Mac, Click [System Preferences] ▶ [Printers & Scanners].**

⇒ The [Printers & Scanners] screen is displayed.

 
 
3 Select the machine.**4 On the [Scan] tab, click [Open Scanner].**

⇒ The [Scanner] screen is displayed.

5 Configure the scan settings.**6 Click [Scan].**

⇒ Scanning starts.

NOTE**When Scanning Cannot Be Performed**

- The machine may not be online (scan standby mode). On the control panel, select [Scan] in the [Home] screen, and press [Remote Scanner] to turn the machine online, and then repeat the operation. For the 5 Lines LCD Model, repeat the procedure again after turning the machine online from [Scan] on the [Home] screen ▶  ▶ [Remote Scanner] ▶ .

■ Using AirPrint to Send Faxes

1 Open the document you are sending on your Mac.

2 From the menu in the application used to open the document, click [Print].

⇒ The printing dialog box appears.


3 In [Printer], select the machine.

Select the printer whose name ends with "Fax."

4 In [To], enter the fax number.

5 Click [Fax].

⇒ The fax is sent via the machine.

You can check the sending status or the sending log by pressing  on the control panel. ▶ **Checking the Status and Log for Sent and Received Faxes(P. 282)**

Printing from an Android Device

A19R-06R

Install a plugin on a mobile device to enable printing from an application that has a print function. This machine supports Canon plugins as well as Mopria®, which is supported by various manufacturers.

- ▶ **Using a Dedicated Plugin to Print (Canon Print Service)(P. 342)**
- ▶ **Using a Common Plugin to Print (Mopria® Print Service)(P. 342)**

Using a Dedicated Plugin to Print (Canon Print Service)

You can use the dedicated Canon plugin Canon Print Service to print from any application.

Compatible Operating Systems and Download Site

See the Canon website.

<https://global.canon/psmp/>

Usage

- Connect a mobile device to the machine. ▶ **Connecting a Mobile Device to the Machine(P. 330)**
- Register the machine to Canon Print Service.
When the mobile device is connected to the machine via LAN, the IP address information of the machine is required to register the machine to Canon Print Service. You can view the IP address with [Home] screen ▶ [Mobile Portal] ▶ [LAN Connect.] ▶ [Display Device Name/IP Address].
For the 5 Lines LCD Model, you can view the IP address with [Mobile Portal] on the [Home] screen ▶ ▶ [<LAN Connection>] ▶ ▶ [Display Device Name/IP Address] ▶ .
- For details about registering the machine and the printing method, see the Canon Print Service manual in "Mobile Apps" at the online manual site.

<https://oip.manual.canon/>

Using a Common Plugin to Print (Mopria® Print Service)

The machine supports Mopria® Print Service, a plugin that enables printing from any application on a Mopria® certified printer or multifunction machine.

You can print on a Mopria® certified printer available from various manufacturers, which is convenient when printing on the go, without having to install a dedicated application or plugin.



Usage

- Connect a mobile device to the machine. ▶ **Connecting a Mobile Device to the Machine(P. 330)**
- For details about how to print and Mopria® certified printers, see the following website:

<https://mopria.org/>

NOTE

- By using Mopria® Scan, you can directly import scanned data to an Android device.

Printing from a Chrome OS Device

A19R-06S

You can use a Chromebook or other device equipped with Chrome OS to print without having to install a dedicated application or printer driver.

IMPORTANT

Printing from a Chrome OS Device

- Printing from a Chrome OS device may not be supported depending on your country or region.

Usage

- Connect a Chromebook to the machine.
 - ▶ **Connecting a Mobile Device via Wireless LAN Router (LAN Connection)(P. 331)**
When connecting via USB, connect to the USB port for computer connection on the back of the machine with a USB cable. ▶ **Rear Side(P. 11)**
- For details about how to print using the Chromebook, see Chromebook Help.
<https://support.google.com/chromebook/answer/7225252>

NOTE

- You can also scan from a Chrome OS device without installing dedicated software.
For information on how to scan, see the Chromebook Help page.
<https://support.google.com/chromebook/answer/7225252/>

Security

Security	345
Setting the Department ID and PIN for the Administrator	346
Protecting the Network	349
Setting the Firewall	350
Changing the Port Number	353
Using a Proxy	354
Using TLS	356
Using IEEE 802.1X	358
Managing and Verifying a Key and Certificate	360
Generating a Key and Certificate	361
Generating a Key and Certificate Signing Request (CSR) and Obtaining and Registering a Certificate ...	363
Registering a Key and Certificate or CA Certificate Obtained from an Issuing Authority	366
Verifying a Received Certificate with OCSP	368
Preventing Sending Data by Mistake and Leaking Information	369
Limiting Available Destinations	370
Confirming the Destination before Sending	372
Restricting Fax Sending	374
Restricting Use from a Mobile Device	376
Restricting Printing	377
Saving Received Documents in the Machine (Memory Lock)	378
Preventing Unauthorized Use	381
Restricting Address Book Registration and Editing	382
Restricting Use of Remote UI	384
Preventing Connection to Computer via USB Port	387
Configuring LPD, RAW, or WSD	388
Disabling HTTP Communication	390

Security

A19R-06U

This machine is an information device that uses communication functions and handles various data. Therefore, it is important to provide measures to prevent unauthorized access when using the machine in a network environment and measures against security risks such as sending data by mistake and leaking information. This machine is equipped with various functions and settings to reduce these threats and vulnerabilities. Configure the settings and use them appropriately according to your usage environment and conditions for safer operation of the machine.

Creating an Administrator System

Use an administrator account to manage the machine and configure the settings. Operate the machine using a system in which only a specific administrator(s) knows the ID and PIN.

▶ **Setting the Department ID and PIN for the Administrator(P. 346)**

Network Settings

Applying the network security settings according to the usage environment can reduce the threat of unauthorized access and eavesdropping.

▶ **Protecting the Network(P. 349)**

Managing Usage Status

When using the function to send a fax or scanned data, measures are needed to prevent sending data by mistake or leaking information. In addition, using a PIN or password and setting usage restrictions can help prevent unauthorized use of the Address Book and Remote UI. Implementing measures that include operations according to usage status of the machine can improve security.

▶ **Preventing Sending Data by Mistake and Leaking Information(P. 369)**

▶ **Preventing Unauthorized Use(P. 381)**

Setting the Department ID and PIN for the Administrator

A19R-06W

Set the System Manager ID and System Manager PIN to create an administrator account. By creating an administrator account, only those users who know these credentials can log in to System Manager Mode to view and change important settings. [▶System Manager ID and PIN\(P. 5\)](#)

This section describes how to configure the settings using the control panel. You can also configure the settings using Remote UI from a computer after the System Manager ID and PIN have been set on the machine. [▶Managing the Machine from a Computer \(Remote UI\)\(P. 394\)](#)
Administrator privileges are required.

[▶Touch Panel Model\(P. 346\)](#)

[▶5 Lines LCD Model\(P. 347\)](#)

Touch Panel Model

- 1 On the control panel, press [Menu] in the [Home] screen. [▶\[Home\] Screen\(P. 121\)](#)
- 2 Press [Management Settings] ▶ [User Management] ▶ [System Manager Information Settings].
 ⇒ The [Sys. Manager Info Set.] screen is displayed.
 If the login screen appears, enter the currently set System Manager ID and PIN, and then press [Log In]. [▶Logging In to the Machine\(P. 138\)](#)
- 3 Press [System Manager ID and PIN]
- 4 Enter the System Manager ID, and press [Apply].
 Specify any number. You cannot set a System Manager ID consisting of all zeros, such as "00" or "0000000."
- 5 Enter the System Manager PIN, and press [Apply].
 Specify any number other than "7654321." You cannot set a PIN consisting of all zeros, such as "00" or "0000000."
- 6 Enter the PIN again, and press [Apply].
 ⇒ The settings are applied.

IMPORTANT

- Do not forget the System Manager ID and PIN. If you forget your System Manager ID and PIN, contact your dealer or service representative. [▶If the Problem Persists\(P. 652\)](#)

NOTE

Setting the System Manager Information



 
- On the [Sys. Manager Info Set.] screen, press [System Manager Name] to set the name of the system manager.
- You can also configure the e-mail address and other system manager information by using Remote UI from a computer.
 - The set information is displayed in [Status Monitor/Cancel] ▶ [Device Information] of Remote UI. [▶ Checking Usage and Logs with Remote UI\(P. 399\)](#)
 - The set e-mail address becomes the destination that is selected by clicking [Mail to System Manager] on the Portal page of Remote UI. [▶ Portal Page of Remote UI\(P. 397\)](#)

Clearing the System Manager ID and PIN Settings


- Clear the entered values of the System Manager ID and PIN, and then press [Apply] with the fields left empty.

5 Lines LCD Model

1 On the control panel, select [Menu] in the [Home] screen, and press . [▶ \[Home\] Screen\(P. 121\)](#)

2 Press [Management Settings] ▶  ▶ [User Management] ▶  ▶ [System Manager Information Settings] ▶ .

 ⇒ The [Sys. Manager Info Set.] screen is displayed.

If the login screen appears, enter the currently set System Manager ID and PIN, then select [<Log In>] and press . [▶ Logging In to the Machine\(P. 138\)](#)

3 Select [System Manager ID and PIN] and press .

4 Enter the System Manager ID, and press .

Specify any number. You cannot set a System Manager ID consisting of all zeros, such as "00" or "0000000."

5 Enter the System Manager PIN, and press .

Specify any number other than "7654321." You cannot set a PIN consisting of all zeros, such as "00" or "0000000."

6 Enter the PIN again, and press .

⇒ The settings are applied.



- Do not forget the System Manager ID and PIN. If you forget your System Manager ID and PIN, contact your dealer or service representative. **▶If the Problem Persists(P. 652)**

NOTE

Setting the System Manager Information

- On the [Sys. Manager Info Set.] screen, press [System Manager Name] to set the name of the system manager.
- You can also configure the e-mail address and other system manager information by using Remote UI from a computer.
 - The set information is displayed in [Status Monitor/Cancel] ▶ [Device Information] of Remote UI. **▶ Checking Usage and Logs with Remote UI(P. 399)**
 - The set e-mail address becomes the destination that is selected by clicking [Mail to System Manager] on the Portal page of Remote UI. **▶Portal Page of Remote UI(P. 397)**

Clearing the System Manager ID and PIN Settings

- Clear the entered values of the System Manager ID and PIN, and then press with the fields left empty.

Protecting the Network

A19R-06X

Connecting the machine to a network allows you link it to computers and mobile devices for more convenient operations. However, this also creates risks of unauthorized access and eavesdropping over the network. By configuring the security settings according to your network environment, you can reduce these risks to ensure safer use of the machine.

Filtering Using the Firewall Settings

Allows communications only with devices that have a specific IP address or MAC address to prevent unauthorized access.

▶ **Setting the Firewall(P. 350)**

Port Control

If the port number being used by a communicating device, such as a computer or server, is changed, change the setting on the machine too. In addition, if it is clear that there is an unneeded protocol, use of the protocol is prohibited on the machine and that port is closed to prevent intrusion from the outside.

▶ **Changing the Port Number(P. 353)**

Using a Proxy Server

Using a proxy server to connect the machine to a network not only facilitates managing communication with external networks but blocks unauthorized access and consolidates anti-virus protection for enhanced security.

▶ **Using a Proxy(P. 354)**

Encryption of Communication Using TLS

You can use TLS to encrypt communication when using Remote UI. This reduces the risks of data eavesdropping and tampering during communication.

▶ **Using TLS(P. 356)**

Using the Machine in a Network with IEEE 802.1X Authentication

When connecting the machine to a network that uses IEEE 802.1X authentication, you must configure the settings on the machine such as the authentication method managed by the authentication server.

▶ **Using IEEE 802.1X(P. 358)**

Managing and Verifying the Key and Certificate

You can generate a key and certificate used to encrypt communication and register a key and certificate obtained from a certification authority. By configuring the settings to check the revocation status of a certificate (using OCSP), you can check to see if a certificate received from a certification authority has been revoked.

▶ **Managing and Verifying a Key and Certificate(P. 360)**

■ See Also

For the network settings at setup, see the following.

▶ **Configuring Your Machine for Your Network Environment(P. 83)**

Setting the Firewall

A19R-06Y

Set up the packet-filtering firewall to prevent unauthorized access.

First, as a prerequisite, set whether to allow or block communication with other devices. Next, specify the IP addresses or MAC addresses of devices you want to block or allow as exceptions.

For the number of addresses that can be specified and the protocols whose communication can be restricted, see the firewall specifications. [▶Firewall\(P. 32\)](#)

[▶Setting IP Address Filtering\(P. 350\)](#)

[▶Setting MAC Address Filtering\(P. 351\)](#)

IMPORTANT

- MAC address filtering is not available when connecting the machine to a wireless LAN.
- Multicast and broadcast addresses are not restricted even when the setting is configured to block the sending of data from the machine to other devices.

Setting IP Address Filtering

Set IPv4 address filtering or IPv6 address filtering according to your usage environment.

This section describes how to configure the settings using Remote UI from a computer.

On the control panel, select [Menu] in the [Home] screen, and then select [Preferences] to configure the settings.

However, the control panel can only be used to enable or disable the filter. [▶\[Firewall Settings\]\(P. 436\)](#)

Administrator privileges are required. The machine must be restarted to apply the settings.

IMPORTANT

- If you set an incorrect IP address, you will no longer be able to access Remote UI. If this happens, use the control panel to disable the firewall settings, and then use Remote UI to set the IP address again.

1 Log in to Remote UI in System Manager Mode. [▶Starting Remote UI\(P. 395\)](#)

2 On the Portal page of Remote UI, click [Settings/Registration]. [▶Portal Page of Remote UI\(P. 397\)](#)

3 Click [Network Settings] ▶ [Firewall Settings].

⇒ The [Firewall Settings] screen is displayed.

4 Click [Edit] for the IP address send or receive filter.

- To restrict sending of data from the machine to other devices, click [Edit] for the send filter.
- To restrict receiving of data from other devices, click [Edit] for the receive filter.

5 Select the [Use Filter] checkbox.

☞ The IP address is enabled.

6 In [Default Policy], set the filtering prerequisites.

As a filtering prerequisite, select whether to allow or block communication with other devices.

7 Register [Exception Addresses].

- In [Address to Register], enter an IP address, and then click [Add].
- You can also specify a range of IP addresses by using a hyphen (-) or prefix length.

Input example:

- **One IPv4 address**
192.168.0.10
- **One IPv6 address**
fe80::10
- **Specifying a range**
192.168.0.10-192.168.0.20
192.168.0.32/27
fe80::1234/64

8 Click [OK].

9 Restart the machine. ▶ [Restarting the Machine\(P. 114\)](#)

☞ The settings are applied.

Setting MAC Address Filtering

This section describes how to configure the settings using Remote UI from a computer. On the control panel, select [Menu] in the [Home] screen, and then select [Preferences] to configure the settings. You cannot use the control panel to configure some of the settings. ▶ [\[Firewall Settings\]\(P. 436\)](#) Administrator privileges are required. The machine must be restarted to apply the settings.

IMPORTANT

- If you set an incorrect MAC address, you will no longer be able to access Remote UI. If this happens, use the control panel to disable the firewall settings, and then use Remote UI to set the MAC address again.

1 Log in to Remote UI in System Manager Mode. ▶ [Starting Remote UI\(P. 395\)](#)

2 On the Portal page of Remote UI, click [Settings/Registration]. ▶ [Portal Page of Remote UI\(P. 397\)](#)

3 Click [Network Settings] ► [Firewall Settings].

⇒ The [Firewall Settings] screen is displayed.

4 Click [Edit] for the MAC address send or receive filter.

- To restrict sending of data from the machine to other devices, click [Edit] for the send filter.
- To restrict receiving of data from other devices, click [Edit] for the receive filter.

5 Select the [Use Filter] checkbox.

⇒ The MAC address is enabled.

6 In [Default Policy], set the filtering prerequisites.

As a filtering prerequisite, select whether to allow or block communication with other devices.

7 Register [Exception Addresses].

- In [Address to Register], enter a MAC address, and then click [Add].
- Enter MAC addresses without separating with hyphens (-) or colons (:).

Input example:

123A456B789C

8 Click [OK].

9 Restart the machine. ► [Restarting the Machine\(P. 114\)](#)

⇒ The settings are applied.

Changing the Port Number

A19R-070

Typically, conventional port numbers are used for major protocols, but these port numbers may be changed to enhance security. As the port numbers must be the same on communicating devices, such as a computer or server, when the port number is changed, the setting on the machine also needs to be changed.

This section describes how to configure the settings using Remote UI from a computer.

On the control panel, select [Menu] in the [Home] screen, and then select [Preferences] to configure the settings. ▶ **[Port Number Settings](P. 445)**

Administrator privileges are required. The machine must be restarted to apply the settings.

1 Log in to Remote UI in System Manager Mode. ▶ Starting Remote UI(P. 395)

2 On the Portal page of Remote UI, click [Settings/Registration]. ▶ Portal Page of Remote UI(P. 397)

3 Click [Network Settings] ▶ [Port Number Settings] ▶ [Edit].

⇒ The [Edit Port Number Settings] screen is displayed.

4 Change the port number of the protocol, and click [OK].

5 Restart the machine. ▶ Restarting the Machine(P. 114)

⇒ The settings are applied.

NOTE

Protocol Settings

- For the protocol settings and settings of the functions using the protocol, see the following:
[LPD/RAW/WSD ▶ Configuring LPD, RAW, or WSD\(P. 388\)](#)
[HTTP ▶ Disabling HTTP Communication\(P. 390\)](#)
[POP3/SMTP ▶ Configuring Detailed Information of the E-mail Server \(Remote UI\)\(P. 228\)](#)
[SNMP ▶ Configuring SNMP\(P. 91\)](#)

Changing the Port Number of the Proxy Server

- To change the port number of the proxy server, see the following:
[▶ Using a Proxy\(P. 354\)](#)

Changing the Port Number of the Printer Driver (Windows)

- When the port number of the print protocol (LPD or RAW) is changed on the machine, change the port number setting on the computer too. [▶ Configuring a Printer Port \(Windows\)\(P. 198\)](#)

Using a Proxy

A19R-071

Using a proxy server to connect to a network not only facilitates managing communications with external networks but blocks unauthorized access and consolidates anti-virus protection for enhanced security.

Configure these settings using Remote UI from a computer. You cannot use the control panel to configure the settings.

Administrator privileges are required.

Required Preparations

- Prepare the address, port number, and authentication information of the proxy server.

1 Log in to Remote UI in System Manager Mode. ▶ Starting Remote UI(P. 395)

2 On the Portal page of Remote UI, click [Settings/Registration]. ▶ Portal Page of Remote UI(P. 397)

3 Click [Network Settings] ▶ [Proxy Settings] ▶ [Edit].

⇒ The [Edit Proxy Settings] screen is displayed.

4 Select the [Use Proxy] checkbox.

5 Enter the address and port number of the proxy server.

- In [HTTP Proxy Server Address], enter the IP address and host name.
- In [HTTP Proxy Server Port Number], enter the port number.

6 Set the applicable range and authentication information according to your usage environment.

■ **When using a proxy server also specified for communication with devices on the same domain**

Select the [Use Proxy within Same Domain] checkbox.

■ **When authentication is required to connect to a proxy server**

Select the [Use Proxy Authentication] checkbox, and enter the user name to be used for authentication using single-byte alphanumeric characters.

To set a password to use for authentication, select the [Set/Change Password] checkbox, and enter the password using single-byte alphanumeric characters.

7 Click [OK].

⇒ The settings are applied.

8 Log out from Remote UI.

Using TLS

A19R-072

Transport Layer Security (TLS) is a mechanism for encrypting data sent or received over the network. Encrypting communication with TLS when using Remote UI reduces the risks of data eavesdropping and tampering during communication.

To use TLS encrypted communication for Remote UI, specify the key and certificate (server certificate) you want to use, and then enable TLS on Remote UI.

This section describes how to configure the settings using Remote UI from a computer.

On the control panel, select [Menu] in the [Home] screen, and then select [Management Settings] to configure the settings. However, the control panel can only be used to enable or disable TLS on Remote UI. [▶\[Use Remote UI\] \(P. 509\)](#)

Administrator privileges are required. The machine must be restarted to apply the settings.

Required Preparations

- Prepare the key and certificate to use for TLS encrypted communication. [▶Managing and Verifying a Key and Certificate\(P. 360\)](#)

1 Log in to Remote UI in System Manager Mode. [▶Starting Remote UI\(P. 395\)](#)

2 On the Portal page of Remote UI, click [Settings/Registration]. [▶Portal Page of Remote UI\(P. 397\)](#)

3 In [Network Settings], click [TLS Settings].

⇒ The [TLS Settings] screen is displayed.

4 Specify the key and certificate to use for TLS encrypted communication.

1 In [Key and Certificate Settings], click [Key and Certificate].

⇒ The [Key and Certificate Settings] screen is displayed.

2 To the right of the key and certificate to use, click [Register Default Key].

- When you click the key name (or certificate icon), the certificate details appear.
- On the certificate details screen, click [Verify Certificate] to verify that the certificate is valid.

5 Set the TLS version and algorithm.

1 Click [TLS Details] ▶ [Edit].

⇒ The [Edit TLS Details] screen is displayed.

2 Set the usable version and algorithm, and click [OK].

Some combinations of versions and algorithms cannot be used. For the supported combinations of versions and algorithms, see the TLS specifications. [▶TLS\(P. 33\)](#)

[Allowed Versions]

Specify the maximum and minimum versions of TLS.

[Algorithm Settings]

Select the checkbox of the algorithm to use for TLS.

6 Enable TLS on Remote UI.

- 1 Click [License/Other] ► [Remote UI Settings] ► [Edit].
 ⇒ The [Edit Remote UI Settings] screen is displayed.
- 2 Select the [Use TLS] checkbox, and click [OK].

7 Restart the machine. ► Restarting the Machine(P. 114)

⇒ The settings are applied.

NOTE

When a Warning Message Appears at Remote UI Startup

- A warning message about the security certificate may appear when starting up Remote UI with TLS enabled. If there are no problems with the certificate or TLS settings, you can continue operations.

Using TLS to Encrypt Sent and Received E-mails

- If the SMTP server and POP3 server support TLS, TLS can be used for communication with these servers. ► **Configuring Detailed Information of the E-mail Server (Remote UI)(P. 228)**

Using IEEE 802.1X

A19R-073

In a network environment with IEEE 802.1X authentication, only client devices (supplicants) authenticated by the authentication server (RADIUS server) are allowed to connect to the network via the LAN switch (authenticator), thereby blocking unauthorized access. When connecting the machine to a network that uses IEEE 802.1X authentication, you must configure the settings on the machine such as the authentication method managed by the authentication server.

▶ **IEEE 802.1X Authentication Methods(P. 358)**

▶ **Setting IEEE 802.1X(P. 358)**

IEEE 802.1X Authentication Methods

The following IEEE 802.1X authentication methods are supported:

TLS

The machine and authentication server authenticate each other by mutually verifying their certificates. This cannot be used together with another authentication method.

TTLS

This authentication method uses a user name and password for machine authentication and a CA certificate for the server authentication. MSCHAPv2 or PAP can be selected as the internal protocol, and TTLS can be used together with PEAP.

PEAP

The required settings are almost the same as those for TTLS, with MSCHAPv2 used as the internal protocol.

Setting IEEE 802.1X

First enable IEEE 802.1X, and then set the authentication method.

This section describes how to configure the settings using Remote UI from a computer.

On the control panel, select [Menu] in the [Home] screen, and then select [Preferences] to configure the settings.

However, the control panel can only be used to enable or disable IEEE 802.1X. ▶ **[IEEE 802.1X Settings](P. 436)**

Administrator privileges are required. The machine must be restarted to apply the settings.

Required Preparations

- When using TLS as the authentication method, prepare the key and certificate issued by the certificate authority and used for authentication of the machine. ▶ **Managing and Verifying a Key and Certificate(P. 360)**
 - * A preinstalled CA certificate or a CA certificate installed from Remote UI is used for server authentication.
- When using TTLS or PEAP as the authentication method, TLS-encrypt communication using Remote UI. ▶ **Using TLS(P. 356)**

1 Log in to Remote UI in System Manager Mode. ▶ **Starting Remote UI(P. 395)**

2 On the Portal page of Remote UI, click [Settings/Registration]. ▶ **Portal Page of Remote UI(P. 397)**

3 Click [Network Settings] ▶ [IEEE 802.1X Settings] ▶ [Edit].

⇒ The [Edit IEEE 802.1X Settings] screen is displayed.

4 Select the [Use IEEE 802.1X] checkbox, and enter the login name.

For the login name, enter a name to identify the user (EAP Identity) using single-byte alphanumeric characters.

■ When verifying the certificate of an authentication server

Select the [Verify Authentication Server Certificate] checkbox.

When verifying the common name of the certificate, select the [Verify Authentication Server Name] checkbox, and enter the name of the authentication server to which the user is registered.

5 Configure the settings according to the authentication method to be used.

■ When using TLS

- 1 Select the [Use TLS] checkbox.
- 2 In [Name of Key to Use], click [Key and Certificate].
 - ⇒ The [Key and Certificate Settings] screen is displayed.
- 3 To the right of the key and certificate to use, click [Register Default Key].
 - Click the key name (or certificate icon) to display the certificate details.
 - On the certificate details screen, click [Verify Certificate] to verify that the certificate is valid.

■ When using TTLS or PEAP

- 1 Select the [Use TTLS] or [Use PEAP] checkbox.
When using TTLS, select the internal protocol to be used.
- 2 Use [Use Login Name as User Name] to specify whether to use the login name of IEEE 802.1X authentication for the user name.
- 3 In [User Name/Password Settings], click [Change User Name/Password].
 - ⇒ The [Change User Name/Password] screen is displayed.
- 4 Set the user name and password, and select the [OK] checkbox.
 - Enter the user name using single-byte alphanumeric characters.
 - To set a password, select the [Change Password] checkbox, and enter the same password in both [Password] and [Confirm] using single-byte alphanumeric characters.

6 Click [OK].

7 Restart the machine. ▶ Restarting the Machine(P. 114)

⇒ The settings are applied.

Managing and Verifying a Key and Certificate

A19R-074

To encrypt communication with TLS when using Remote UI, or to use TLS as the IEEE 802.1X authentication method, a key and certificate are required. In addition, depending on the communicating device, encrypted communication using a specified certificate may be requested, thereby requiring a key and certificate. For details on supported models, see the following: [Supported Functions\(P. 3\)](#)

Managing a Key and Certificate

You can prepare a key and certificate using the following methods:

Generating a Key and Certificate on the Machine

Generate the key and certificate required for TLS on the machine. You can immediately communicate where self-signed certificates are allowed.

[Generating a Key and Certificate\(P. 361\)](#)

Registering a Certificate Issued by a Certificate Authority in a Self-generated Key

When a key is generated on the machine, generate a Certificate Signing Request (CSR), have the certificate authority issue a certificate, and then register that certificate in the key.

[Generating a Key and Certificate Signing Request \(CSR\) and Obtaining and Registering a Certificate\(P. 363\)](#)

Registering a Key and Certificate or CA Certificate Obtained from an Issuing Authority

Register a key and certificate obtained from an issuing authority or a CA certificate issued by a certificate authority, without self-generating the key and certificate. You can use a digital certificate that matches the communicating device and authentication level.

[Registering a Key and Certificate or CA Certificate Obtained from an Issuing Authority\(P. 366\)](#)

Verifying a Certificate

You can configure the settings to verify the validity of a certificate that the machine receives from a certificate authority, using the Online Certificate Status Protocol (OCSP).

[Verifying a Received Certificate with OCSP\(P. 368\)](#)

Generating a Key and Certificate

A19R-075

Generate the key and certificate required for TLS-encrypted communication on the machine. A self-signed certificate is used for the self-generated key.

For the algorithm of the keys and certificates that can be generated with this machine, see the specifications of the self-generated key and self-signed certificate. [▶Keys and Certificates\(P. 32\)](#)

Generate a key and certificate using Remote UI from a computer. You cannot use the control panel to generate a key and certificate.

Administrator privileges are required.

1 Log in to Remote UI in System Manager Mode. [▶Starting Remote UI\(P. 395\)](#)

2 On the Portal page of Remote UI, click [Settings/Registration]. [▶Portal Page of Remote UI\(P. 397\)](#)

3 Click [Device Management] ▶ [Key and Certificate Settings] ▶ [Generate Key].

⇒ The [Generate Key] screen is displayed.

4 Select [Network Communication], and click [OK].

⇒ The [Generate Network Communication Key] screen is displayed.

5 In [Key Settings], enter the name of the key, and select the signature and key algorithm.

- Enter the key name using single-byte alphanumeric characters.
- For the key algorithm, select [RSA] or [ECDSA], and select the key length from the pulldown menu. The longer the key length, the better the security, but this slows down communication processing.

6 In [Certificate Settings], set the certificate information.

[Validity Start Date (YYYY/MM/DD)]/[Validity End Date (YYYY/MM/DD)]

Enter the start and end dates of the certificate validity period.

[Country/Region]

Select [Select Country/Region], and then select the country or region from the pulldown menu, or select [Enter Internet Country Code], and enter the country code.

[State]/[City]/[Organization]/[Organization Unit]

Enter the items as needed using single-byte alphanumeric characters.

[Common Name]

Enter the name of the certificate subject as needed using single-byte alphanumeric characters. This corresponds to the Common Name (CN).

7 Click [OK].

- ➡ The generated key and certificate are added to [Registered Key and Certificate] on the [Key and Certificate Settings] screen.

8 Log out from Remote UI.

NOTE

Viewing and Verifying Detailed Information of a Generated Certificate

- When you click the key name (or certificate icon) in [Registered Key and Certificate] on the [Key and Certificate Settings] screen, the certificate details appear.
- On the certificate details screen, click [Verify Certificate] to verify that the certificate is valid.

When the Key and Certificate Cannot Be Deleted

- You cannot delete a key and certificate being used. Disable the function being used, or delete these after switching to another key and certificate.

Generating a Key and Certificate Signing Request (CSR) and Obtaining and Registering a Certificate

A19R-076

As a certificate generated on the machine does not have a signature from a certificate authority, the machine may not be able to communicate depending on the communicating device. In this case, registering a signed certificate issued by a certificate authority to the key enables communication even with a self-generated key.

For the certificate authority to issue a signed certificate, you must make a request attached with a Certificate Signing Request (CSR). The machine generates a CSR at the same time it generates a key.

For more information about the keys that can be generated by the machine and the CSR algorithm, see self-generated key and CSR specifications. [▶Keys and Certificates\(P. 32\)](#)

[▶Generating a Key and CSR\(P. 363\)](#)

[▶Registering a Certificate Issued by a Certificate Authority to a Key\(P. 364\)](#)

Generating a Key and CSR

Generate a key and CSR using Remote UI from a computer. You cannot use the control panel to generate a key and CSR.

Administrator privileges are required.

1 Log in to Remote UI in System Manager Mode. [▶Starting Remote UI\(P. 395\)](#)

2 On the Portal page of Remote UI, click [Settings/Registration]. [▶Portal Page of Remote UI\(P. 397\)](#)

3 Click [Device Management] ▶ [Key and Certificate Settings] ▶ [Generate Key].

⇒ The [Generate Key] screen is displayed.

4 Select [Key and Certificate Signing Request (CSR)], and click [OK].

⇒ The [Generate Key and Certificate Signing Request (CSR)] screen is displayed.

5 In [Key Settings], enter the name of the key, and select the signature algorithm and key algorithm.

- Enter the key name using single-byte alphanumeric characters.
- For the key algorithm, select [RSA] or [ECDSA], and select the key length from the pulldown menu. The longer the key length, the better the security, but this slows down communication processing.

6 In [Certificate Signing Request (CSR) Settings], set the CSR information.

[Country/Region]

Select [Select Country/Region], and either select the country or region from the pulldown menu, or select [Enter Internet Country Code] and enter the country code.

[State]/[City]/[Organization]/[Organization Unit]

Enter the items as needed using single-byte alphanumeric characters.

[Common Name]

Enter the name of the certificate subject as needed using single-byte alphanumeric characters. This corresponds to the Common Name (CN).

7 Click [OK].

⇒ The [Key and Certificate Signing Request (CSR) Details] screen is displayed.

8 Click [Store in File] to save the CSR file to a computer.

9 Log out from Remote UI.

10 Submit the application with CSR file attached to the certificate authority.

NOTE

- When the CSR is generated, the key is registered to the machine, but it cannot be used until the certificate issued by the certificate authority is registered.

Registering a Certificate Issued by a Certificate Authority to a Key

Register the certificate using Remote UI from a computer. You cannot use the control panel to register it. Administrator privileges are required.


1 Log in to Remote UI in System Manager Mode. ▶ Starting Remote UI(P. 395)

2 On the Portal page of Remote UI, click [Settings/Registration]. ▶ Portal Page of Remote UI(P. 397)

3 Click [Device Management] ▶ [Key and Certificate Settings].

⇒ The [Key and Certificate Settings] screen is displayed.

4 Click the key name (or certificate icon) to which to register the certificate.

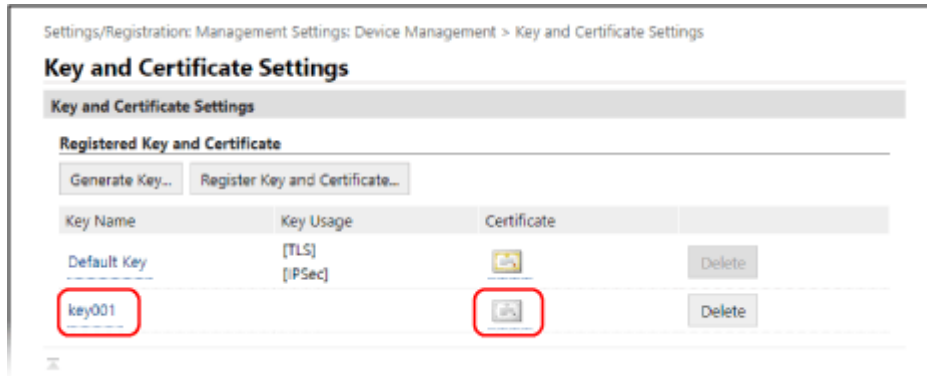



⇒ The [Key and Certificate Signing Request (CSR) Details] screen is displayed.

5 Click [Register Certificate].

6 In [Specify File], click [Browse], and specify the file of the certificate issued by the certificate authority.

7 Click [Register].

⇒ The icon of the certificate displayed in [Registered Key and Certificate] on the [Key and Certificate Settings] screen changes from [] to [].

8 Log out from Remote UI.

NOTE

Viewing and Verifying Detailed Information of a Registered Certificate

- Click the key name (or certificate icon) in [Registered Key and Certificate] on the [Key and Certificate Settings] screen to display the certificate details.
- On the certificate details screen, click [Verify Certificate] to verify that the certificate is valid.

When the Key and Certificate Cannot Be Deleted

- You cannot delete a key and certificate being used. Disable the function being used, or delete these after switching to another key and certificate.

Registering a Key and Certificate or CA Certificate Obtained from an Issuing Authority

A19R-077

Install and register a key and certificate or CA certificate obtained from a digital certificate issuing authority to the machine before starting to use them.

Register the key and certificate or CA certificate using Remote UI from a computer. You cannot use the control panel to register these. Administrator privileges are required.

Required Preparations

- Check the conditions of the key and certificate or CA certificate usable with the machine. [▶Keys and Certificates\(P. 32\)](#)
- When registering a key and certificate, check the password for the private key set in the file.

1 Log in to Remote UI in System Manager Mode. [▶Starting Remote UI\(P. 395\)](#)

2 On the Portal page of Remote UI, click [Settings/Registration]. [▶Portal Page of Remote UI\(P. 397\)](#)

3 Click [Device Management] ▶ [Key and Certificate Settings] or [CA Certificate Settings].

⇒ The [Key and Certificate Settings] screen or [CA Certificate Settings] screen is displayed.

4 Click [Register Key and Certificate] or [Register CA Certificate].

⇒ The [Register Key and Certificate] screen or [Register CA Certificate] screen is displayed.

5 Install the key and certificate file or CA certificate file.

1 Click [Install].

2 Click [Browse] in [Specify File], and specify the file to be installed.

3 Click [Start Installation].

⇒ The installed file is added to [Installed Key and Certificate] on the [Register Key and Certificate] screen or [Installed CA Certificate] on the [Register CA Certificate] screen.

6 Registering the key and certificate or CA certificate.

■ When registering a key and certificate

1 To the right of the key and certificate file to register, click [Register].

⇒ The [Enter Private Key Password] screen is displayed.

2 Enter the key name password using single-byte alphanumeric characters, and click [OK].

⇒ The registered key and certificate are added to [Registered Key and Certificate] on the [Key and Certificate Settings] screen.

■ When registering a CA certificate

To the right of the CA certificate file to register, click [Register].

⇒ The registered CA certificate is added to [Registered CA Certificate] on the [CA Certificate Settings] screen.

7 Log out from Remote UI.

NOTE

Viewing and Verifying Detailed Information of a Registered Certificate

- When you click the key name (or certificate icon) in [Registered Key and Certificate] on the [Key and Certificate Settings] screen, the certificate details appear.
- On the certificate details screen, click [Verify Certificate] to verify that the certificate is valid.

Viewing and Verifying Detailed Information of a Registered CA Certificate

- When you click the issued to location in [Registered CA Certificate] on the [CA Certificate Settings] screen, the CA certificate details appear.
- On the CA certificate details screen, click [Verify Certificate] to verify that the CA certificate is valid.

When the Key and Certificate or CA Certificate Cannot Be Deleted

- You cannot delete a key and certificate being used. Disable the function being used, or delete these after switching to another key and certificate.
- A preinstalled CA certificate cannot be deleted. If a preinstalled CA certificate is not required, click [Disable] to the right of the CA certificate.

Verifying a Received Certificate with OCSP

A19R-078

Online Certificate Status Protocol (OCSP) is a protocol for inquiring to an OCSP responder (server that supports OCSP) about the revocation status of a certificate received from a certificate authority. You can configure the settings to verify the validity of a certificate that the machine receives from a certificate authority, using the OCSP.

Configure these settings using Remote UI from a computer. You cannot use the control panel to configure the settings. Administrator privileges are required.

- 1 Log in to Remote UI in System Manager Mode. ▶ Starting Remote UI(P. 395)**
- 2 On the Portal page of Remote UI, click [Settings/Registration]. ▶ Portal Page of Remote UI(P. 397)**
- 3 Click [Device Management] ▶ [OCSP (Online Certificate Status Protocol) Settings] ▶ [Edit].**

⇒ The [Edit OCSP (Online Certificate Status Protocol) Settings] screen is displayed.

- 4 Select the [Use OCSP (Online Certificate Status Protocol)] checkbox.**
- 5 Set the certificate verification level and the OCSP responder.**

[Certificate Verification Level]

Set whether to validate the certificate even if its revocation status cannot be confirmed, such as when the machine is unable to connect to an OCSP responder.

[OCSP Responder Settings]

Specify the URL of the OCSP responder.

[Custom URL]

When [Use Custom URL] or [Use Certificate URL (Use Custom URL If Certificate URL Cannot Be Retrieved)] is selected, enter the URL of the OCSP responder.

[Communication Timeout]

Enter the time from search start to timeout in seconds.

- 6 Click [OK].**

⇒ The settings are applied.

- 7 Log out from Remote UI.**

Preventing Sending Data by Mistake and Leaking Information

A19R-079

Unintentionally sending a fax to the wrong destination or leaving a received fax document on the machine poses a risk of information leakage. In addition, while sending a fax from a computer and using mobile devices are easy and convenient, these can lead to operation errors and information theft.

You can take measures to prevent sending data by mistake and leaking information, according to the usage status of the function, to ensure safer use of the machine.

Restricting and Confirming the Destination

You can restrict the destinations to which scanned data and faxes are sent and have a screen confirming the destination displayed when sending these.

- ▶ **Limiting Available Destinations(P. 370)**
- ▶ **Confirming the Destination before Sending(P. 372)**

Appropriately Restricting Functions

You can restrict access to part or all of a function when sending a fax or using mobile devices.

- ▶ **Restricting Fax Sending(P. 374)**
- ▶ **Restricting Use from a Mobile Device(P. 376)**

Preventing Unattended Printed Documents and Information Theft

You can store received faxes on the machine without printing them immediately.

- ▶ **Restricting Printing(P. 377)**

Limiting Available Destinations

A19R-07A

You can prevent sending faxes or scanned data by mistake and leaking data by not allowing users to use destinations in the send function log and by limiting send destinations to those registered in the Address Book.

- ▶ **Prohibiting the Use of Destinations in the Send Log(P. 370)**
- ▶ **Sending Only to Registered Destinations(P. 371)**

IMPORTANT

You cannot limit destinations for faxes sent by computer.

- Even when the use of new destinations or destinations from the send function log is prohibited, users can send faxes from a computer (PC faxing) to a destination of their choice. To more strictly limit the available destinations, you must also prohibit the sending of faxes from the computer. ▶ **Prohibit Fax Sending from a Computer(P. 374)**

Prohibiting the Use of Destinations in the Send Log

Prevent specifying destinations in the TX Job Log of scan or fax jobs.

This section describes how to configure the settings using Remote UI from a computer.

On the control panel, select [Menu] in the [Home] screen, and then select [Function Settings] to configure the settings.

▶ **[Restrict Resending from Log](P. 481)**

Administrator privileges are required.

1 Log in to Remote UI in System Manager Mode. ▶ Starting Remote UI(P. 395)

2 On the Portal page of Remote UI, click [Settings/Registration]. ▶ Portal Page of Remote UI(P. 397)

3 Click [TX Settings] ▶ [Common Settings] ▶ [Edit].

⇒ The [Edit Common Settings] screen is displayed.

4 In [Common Settings], select the [Restrict Resending from Log] checkbox.

5 Click [OK].

⇒ The settings are applied.

6 Log out from Remote UI.

Sending Only to Registered Destinations

This limits the available send destinations to the following:

- Destinations in the Address Book.

When this function is enabled, users cannot enter a destination using the numeric keys or register or edit the Address Book. In addition, the TX Job Log recorded before enabling this function is deleted, leaving only the aforementioned available destinations in the TX Job Log.

This section describes how to configure the settings using Remote UI from a computer.

On the control panel, select [Menu] in the [Home] screen, and then select [Function Settings] to configure the settings.

▶ **[Restrict New Destinations](P. 481)**

Administrator privileges are required.



- 1 Log in to Remote UI in System Manager Mode. ▶ Starting Remote UI(P. 395)**
- 2 On the Portal page of Remote UI, click [Settings/Registration]. ▶ Portal Page of Remote UI(P. 397)**
- 3 Click [TX Settings] ▶ [Restrict New Destinations] ▶ [Edit].**
 - ▶ The [Edit Settings for New Destinations Restrictions] screen is displayed.
- 4 Select the [Restrict New Destinations] checkbox.**
- 5 Click [OK].**
 - ▶ The settings are applied.
- 6 Log out from Remote UI.**

Confirming the Destination before Sending

A19R-07C

Configure the settings to display a screen confirming the destination before an e-mail or fax is sent. Confirm that there are no mistakes in the specified destination and entered information to prevent sending by mistake.

Choosing When to Display the Confirmation Screen

- When specifying a destination with a coded dial number or one-touch dial**
 When a destination is specified with a coded dial number or one-touch dial, the registered destination and destination name are displayed on the confirmation screen. When a group is registered to a coded dial number or one-touch dial, the group name and number of destinations are displayed.
- When sending an e-mail or fax**
 When you press  to send an e-mail or fax a screen confirming the destination is displayed. Set whether to display this only when sending to multiple destinations (Sequential Broadcast) or whenever sending a fax or e-mail.
- When entering a fax number using the numeric keys**
 When you enter a fax number using the numeric keys and press , a screen appears prompting you to enter the number again. When you enter a second and subsequent destinations, they are displayed before the next destination is entered.

This section describes how to configure the settings using Remote UI from a computer.

On the control panel, select [Menu] in the [Home] screen, and then select [Function Settings] to configure the settings.

 [Common Settings](P. 481) /  [Confirm Entered Fax Number](P. 492)

Administrator privileges are required.

1 Log in to Remote UI in System Manager Mode. Starting Remote UI(P. 395)

2 On the Portal page of Remote UI, click [Settings/Registration]. Portal Page of Remote UI(P. 397)

3 Click [TX Settings].

⇒ The [TX Settings] screen is displayed.

4 Configure the setting so that the screen confirming the destination is displayed.

■ To display the screen when specifying the destination using a coded dial number or one-touch dial

1 Click [Common Settings] ► [Edit].

⇒ The [Edit Common Settings] screen is displayed.

2 In [Common Settings], select the [Confirm When Using One-Touch/Coded Dial TX] checkbox.

3 Click [OK].

■ To display the screen when sending an e-mail or fax

- 1 Click [Common Settings] ► [Edit].
 ▣► The [Edit Common Settings] screen is displayed.
- 2 In [Common Settings], select the [Confirm Destination Before Sending] checkbox, and select the item to display.
- 3 Click [OK].

■ To display the screen when entering a fax number using the numeric keys

- 1 Click [Fax TX Settings] ► [Edit].
 ▣► The [Edit Fax TX Settings] screen is displayed.
- 2 In [Basic Settings], select the [Confirm Entered Fax Number] checkbox.
- 3 Click [OK].

5 Log out from Remote UI.

Restricting Fax Sending

A19R-07E

You can prohibit fax sending from a computer (PC faxing) and the function for collectively sending a fax to multiple destinations (Sequential Broadcast) to prevent information leakage via fax.

- ▶ **Prohibit Fax Sending from a Computer(P. 374)**
- ▶ **Prohibiting Fax Sending to Multiple Destinations(P. 374)**

Prohibit Fax Sending from a Computer

You can prohibit users from sending a fax from a fax driver, thereby disabling PC faxing.

This section describes how to configure the settings using Remote UI from a computer. On the control panel, select [Menu] in the [Home] screen, and then select [Function Settings] to configure the settings.

▶ **[Allow Fax Driver TX](P. 492)**
Administrator privileges are required.

- 1 Log in to Remote UI in System Manager Mode. ▶ Starting Remote UI(P. 395)**
- 2 On the Portal page of Remote UI, click [Settings/Registration]. ▶ Portal Page of Remote UI(P. 397)**
- 3 Click [TX Settings] ▶ [Fax TX Settings] ▶ [Edit].**
 ▶ The [Edit Fax TX Settings] screen is displayed.
- 4 In [Basic Settings], clear the [Allow Fax Driver TX] checkbox.**
- 5 Click [OK].**
 ▶ The settings are applied.
- 6 Log out from Remote UI.**

Prohibiting Fax Sending to Multiple Destinations

This section describes how to configure the settings using Remote UI from a computer. On the control panel, select [Menu] in the [Home] screen, and then select [Function Settings] to configure the settings.

▶ **[Restrict Sequential Broadcast](P. 492)**
Administrator privileges are required.

- 1 Log in to Remote UI in System Manager Mode. ▶ Starting Remote UI(P. 395)**

2 On the Portal page of Remote UI, click [Settings/Registration]. ▶ Portal Page of Remote UI(P. 397)

3 Click [TX Settings] ▶ [Fax TX Settings] ▶ [Edit].

⇒ The [Edit Fax TX Settings] screen is displayed.

4 In [Basic Settings], set [Restrict Sequential Broadcast] to [Reject Sequential Broadcast].

5 Click [OK].

⇒ The settings are applied.

6 Log out from Remote UI.

Restricting Use from a Mobile Device

A19R-07F

The machine supports the Mopria® plugin, which is supported by various manufacturers.

Mopria® enables printing from any application, such as on a smartphone, or a device equipped with Chrome OS without having to install a dedicated Canon plugin.

Printing from a mobile device can be easy and convenient, but it can also lead to information leakage. You can also prohibit use of Mopria®.

Configure this setting using Remote UI from a computer. You cannot use the control panel to configure the setting. Administrator privileges are required.

1 Log in to Remote UI in System Manager Mode.  **Starting Remote UI(P. 395)**

2 On the Portal page of Remote UI, click [Settings/Registration].  **Portal Page of Remote UI(P. 397)**

3 Click [Network Settings] ▶ [Mopria Settings] ▶ [Edit].


⇒ The [Edit Mopria Settings] screen is displayed.

4 Clear the [Use Mopria] checkbox, and click [OK].

⇒ The settings are applied.

5 Log out from Remote UI.

NOTE

- When the Mopria® setting is enabled, the HTTP, IPP printing, mDNS (IPv4/IPv6) network settings, and Network Link Scan settings are also enabled.
 -  **[TCP/IP Settings](P. 440)**

Restricting Printing

A19R-07H

You can configure the machine not to immediately print received faxes. This can prevent not only unattended printed documents and information theft, but also unneeded printing, thereby saving paper.

▶ **Saving Received Documents in the Machine (Memory Lock)(P. 378)**

Saving Received Documents in the Machine (Memory Lock)

A19R-07J

Memory Lock temporarily saves received faxes in the memory of the machine without printing them immediately. Faxes saved in the memory can be printed later, thereby preventing unattended printed documents and information theft. In addition, unneeded faxes can be deleted without printing to help save paper.

▶ **Setting Memory Lock(P. 378)**

▶ **Viewing and Printing Faxes Saved in the Memory(P. 379)**

Setting Memory Lock

This section describes how to configure the settings using Remote UI from a computer.

On the control panel, select [Menu] in the [Home] screen, and then select [Function Settings] to configure the settings.

▶ **[Fax Memory Lock Settings](P. 495)**

Administrator privileges are required.

1 Log in to Remote UI in System Manager Mode. ▶ Starting Remote UI(P. 395)

2 On the Portal page of Remote UI, click [Settings/Registration]. ▶ Portal Page of Remote UI(P. 397)

3 In [RX/Forwarding Settings], click [Common Settings].

⇒ The [Common Settings] screen is displayed.

4 In [Memory Lock Settings], click [Edit].

⇒ The [Edit Memory Lock Settings] screen is displayed.

5 Select the [Use Memory Lock] checkbox.

6 Configure the functions related to Memory Lock, as needed.

■ To enable fax preview

Select the [Use Fax Preview] checkbox.

You can preview the fax on Remote UI. When you enable preview, you can also see the details of the fax and print with the Memory Lock setting enabled.

* This cannot be set at the same time as [Specify Memory Lock Time].

■ To print an RX Result Report to provide notification of Memory Lock

Select the [Print Report] checkbox.

* To use this function, RX Result Report must be enabled. ▶ **Printing and Viewing Reports and Lists(P. 404)**

■ To enable Memory Lock only at a specified time period

Select the [Specify Memory Lock Time] checkbox and enter a start and end time.

7 Click [OK].

⇒ The settings are applied.

8 Log out from Remote UI.


! IMPORTANT

- When Memory Lock is disabled, all faxes saved in the memory are printed automatically. Memory Lock is disabled in the following cases:
 - When the [Use Memory Lock] checkbox is cleared
 - When the end time of [Specify Memory Lock Time] has been reached

Viewing and Printing Faxes Saved in the Memory

When you enable preview in Memory Lock, you can see the details of the fax and print with the Memory Lock setting enabled.

This section describes how to view this information and print using Remote UI from a computer.

On the control panel, press  to view this information. You cannot use the control panel to view some items. In addition, you cannot use the control panel to print documents. **▶Checking the Status and Log for Sent and Received Faxes(P. 282)**

Administrator privileges are required.


1 Log in to Remote UI in System Manager Mode. ▶Starting Remote UI(P. 395)

2 On the Portal page of Remote UI, click [Status Monitor/Cancel]. ▶Portal Page of Remote UI(P. 397)

3 In [RX], click [Job Status].

⇒ The [RX: Job Status] screen is displayed.

4 View or print the fax.

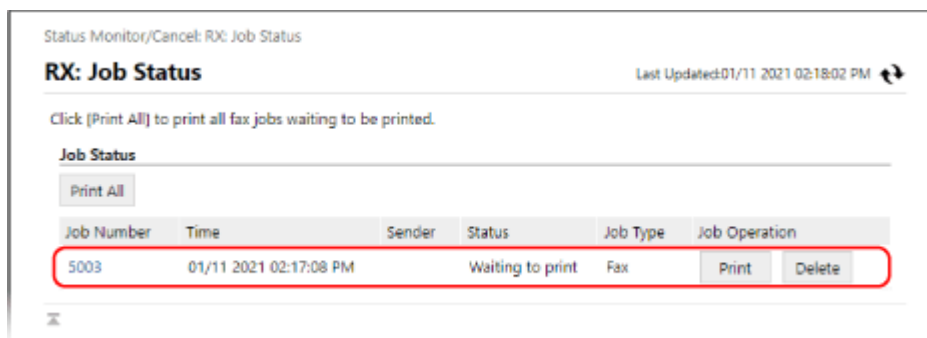

Status Monitor/Cancel: RX: Job Status

RX: Job Status Last Updated:01/11 2021 02:18:02 PM ↻

Click [Print All] to print all fax jobs waiting to be printed.

Job Status

Print All

Job Number	Time	Sender	Status	Job Type	Job Operation
5003	01/11 2021 02:17:08 PM		Waiting to print	Fax	Print Delete

- When you click the job number, the [Job Details] screen is displayed. You can view the reception time and number of pages, and preview the fax.

- When you click [Print All], all faxes saved in the memory are printed.
- Click [Delete] to delete the fax.

5 Log out from Remote UI after viewing the information or printing.

Preventing Unauthorized Use

A19R-07K

The machine handles a variety of information including the Address Book and print data. It also provides various settings to ensure efficient management and operation. While this information and the settings provide convenience, they can also lead to information leakage and other security issues if the information and settings can be accessed by anyone.

You can take measures to restrict access and disable functions according to the usage status of the function, to ensure safer use of the machine.

Restricting Access to Information and Settings

Restricting users and operations accessing information and settings on the machine can help prevent unauthorized use and protect confidential information.

- ▶ **Restricting Address Book Registration and Editing(P. 382)**
- ▶ **Restricting Use of Remote UI(P. 384)**

Disabling Unused Functions

You can disable unused functions to prevent intrusion from the outside.

- ▶ **Preventing Connection to Computer via USB Port(P. 387)**
- ▶ **Configuring LPD, RAW, or WSD(P. 388)**
- ▶ **Disabling HTTP Communication(P. 390)**

■ See Also

For details about the administrator account and how to manage users and groups with access to the machine, see the following.

- ▶ **Setting the Department ID and PIN for the Administrator(P. 346)**

Restricting Address Book Registration and Editing

A19R-07L

To prevent unauthorized adding of new entries in the Address Book and editing of existing entries, you can set a PIN and restrict the method for adding new entries.

- ▶ **Restricting Address Book Registration and Editing by Setting a PIN(P. 382)**
- ▶ **Prohibiting Registering Fax Sending Log Destinations to Address Book(P. 383)**

NOTE

- To better prevent sending data by mistake and information leakage, allow to send only to registered destinations, and prohibit the adding and editing of entries in the Address Book. ▶ **Limiting Available Destinations(P. 370)**

Restricting Address Book Registration and Editing by Setting a PIN

You can require the entry of PIN to add a new entry to the Address Book or edit existing entries.

This section describes how to configure the settings using Remote UI from a computer. On the control panel, select [Menu] in the [Home] screen, and then select [Set Destination] to configure the settings. ▶ **[Address Book PIN](P. 501)**
Administrator privileges are required.

- 1 Log in to Remote UI in System Manager Mode. ▶ Starting Remote UI(P. 395)**
- 2 On the Portal page of Remote UI, click [Settings/Registration]. ▶ Portal Page of Remote UI(P. 397)**
- 3 Click [Address Book PIN] ▶ [Edit].**
 - ⇒ The [Edit Address Book PIN] screen is displayed.
- 4 Select the [Set/Change PIN] checkbox, and set a PIN.**
 - Enter the same number in [Address Book PIN] and [Confirm].
 - * You cannot set a PIN consisting of all zeros, such as "00" or "0000000."
- 5 Click [OK].**
 - ⇒ The settings are applied.
- 6 Log out from Remote UI.**

NOTE

Clearing the PIN Setting

- Clear the entered values of [Address Book PIN], and then click [OK] with the fields left empty.

Prohibiting Registering Fax Sending Log Destinations to Address Book

You can restrict the registration of destinations in the fax sending log to Address Book.

This section describes how to configure the settings using Remote UI from a computer.

On the control panel, select [Menu] in the [Home] screen, and then select [Function Settings] to configure the settings.

▶ **[Register Log Dest to Addr Book](P. 493)**

Administrator privileges are required.

- 1 Log in to Remote UI in System Manager Mode.** ▶ **Starting Remote UI(P. 395)**
- 2 On the Portal page of Remote UI, click [Settings/Registration].** ▶ **Portal Page of Remote UI(P. 397)**
- 3 Click [TX Settings] ▶ [Fax TX Settings] ▶ [Edit].**
⇒ The [Edit Fax TX Settings] screen is displayed.
- 4 Select the [Restrict Registration of Log Destinations to Address Book] checkbox.**
- 5 Click [OK].**
⇒ The settings are applied.
- 6 Log out from Remote UI.**

Restricting Use of Remote UI

A19R-07R

While Remote UI is convenient for operating the machine from a computer, it also poses a risk of third-party access to the machine.

You can configure the setting to require users to enter a password when using Remote UI to prevent unauthorized access by a third party.

If you do not use Remote UI, it is recommended that you disable the function.

▶ **Setting the Password to Use for Remote UI(P. 384)**

▶ **Disabling Remote UI(P. 385)**

Setting the Password to Use for Remote UI

You can restrict the use of Remote UI to only those users who know the Remote UI password.

This section describes how to configure the settings using the control panel.

You can also configure the settings using Remote UI from a computer after the password has been set on the machine. ▶ **Managing the Machine from a Computer (Remote UI)(P. 394)**

Administrator privileges are required.

▶ **Touch Panel Model(P. 384)**

▶ **5 Lines LCD Model(P. 385)**

■ Touch Panel Model

1 On the control panel, press [Menu] in the [Home] screen. ▶ **[Home] Screen(P. 121)**

2 Press [Management Settings] ▶ [Remote UI Settings/Update Firmware] ▶ [Remote UI Settings] ▶ [Use Password].

⇒ The [Use Password] screen is displayed.

If the login screen appears, enter the System Manager ID and PIN, and then press [Log In]. ▶ **Logging In to the Machine(P. 138)**

3 Press [On].

4 Enter the Remote UI password, and press [Apply].

5 Enter the same password, and press [Apply].



⇒ The settings are applied.

NOTE

When [Management Settings] of the Settings Menu Is Initialized



- Use the settings menu on the control panel to reset the Remote UI password. ▶ **[Use Password](P. 509)**


■ 5 Lines LCD Model

1 On the control panel, select [Menu] in the [Home] screen, and press .  [Home] Screen(P. 121)

2 Press [Management Settings] ▶  ▶ [Remote UI Settings/Update Firmware] ▶  ▶ [Remote UI Settings] ▶ [Use Password] ▶ .

⇒ The [Use Password] screen is displayed.

If the login screen appears, enter the System Manager ID and PIN, and then select [<Log In>] and press .  **Logging In to the Machine(P. 138)**

3 Select [On] and press .


4 Enter the Remote UI password, select [<Apply>] and press .

5 Enter the same password, and press [<Apply>] and press .

⇒ The settings are applied.

NOTE

When [Management Settings] of the Settings Menu Is Initialized


- Use the settings menu on the control panel to reset the Remote UI password.  **[Use Password](P. 509)**

Disabling Remote UI

You can disable Remote UI to reduce the risk of unauthorized access to the machine via the network.

Use the control panel to configure the settings. You cannot configure the settings using Remote UI from a computer. Administrator privileges are required. The machine must be restarted to apply the settings.

 **Touch Panel Model(P. 385)**

 **5 Lines LCD Model(P. 386)**

■ Touch Panel Model

1 On the control panel, press [Menu] in the [Home] screen.  [Home] Screen(P. 121)

2 Press [Management Settings] ▶ [Remote UI Settings/Update Firmware] ▶ [Remote UI Settings] ▶ [Use Remote UI].

⇒ The [Use Remote UI] screen is displayed.

If the login screen appears, enter the System Manager ID and PIN, and then press [Log In]. **▶ Logging In to the Machine(P. 138)**

3 Press [Off].

4 Restart the machine. **▶ Restarting the Machine(P. 114)**

⇒ The settings are applied.

■ 5 Lines LCD Model

1 On the control panel, select [Menu] in the [Home] screen, and press . **▶ [Home] Screen(P. 121)**

2 Press [Management Settings] ▶ ▶ [Remote UI Settings/Update Firmware] ▶ ▶ [Remote UI Settings] ▶ ▶ [Use Remote UI] ▶ .

⇒ The [Use Remote UI] screen is displayed.

If the login screen appears, enter the System Manager ID and PIN, and then select [<Log In>] and press . **▶ Logging In to the Machine(P. 138)**

3 Select [Off] and press .

4 Restart the machine. **▶ Restarting the Machine(P. 114)**

⇒ The settings are applied.

Preventing Connection to Computer via USB Port

A19R-07S

You can disable the USB port for computer connection on the back of the machine to reduce the risk of an external connection without going through a network with security measures.

This section describes how to configure the settings using Remote UI from a computer.

On the control panel, select [Menu] in the [Home] screen, and then select [Preferences] to configure the settings. ▶
[USB Settings](P. 447)

Administrator privileges are required. The machine must be restarted to apply the settings.

1 Log in to Remote UI in System Manager Mode. ▶Starting Remote UI(P. 395)

2 On the Portal page of Remote UI, click [Settings/Registration]. ▶Portal Page of Remote UI(P. 397)

3 Click [External Interface Settings] ▶ [Edit].

⇒ The [Edit External Interface Settings] screen is displayed.

4 Clear the [Use as USB Device] checkbox, and click [OK].

5 Restart the machine. ▶Restarting the Machine(P. 114)

⇒ The settings are applied.

Configuring LPD, RAW, or WSD

A19R-07U

Select whether to use any of the protocols below on the machine when printing or scanning documents from a computer.

You are recommended to disable any protocols you will not be using.

When using LPD or RAW, you can configure the time until reception of print data is canceled.

LPD

This protocol is not dependent on the hardware, operating system, or other platform. It is commonly used in TCP/IP network environments.

RAW

This is Windows' proprietary print data type protocol. It is used as standard in a Windows environment.

WSD

This protocol enables automatic detection of network-connected printers and scanners in a Windows environment.

This section describes how to configure the settings using Remote UI from a computer.

On the control panel, select [Menu] in the [Home] screen, and then select [Preferences] to configure the settings. ▶
[TCP/IP Settings](P. 440)

Administrator privileges are required. The machine must be restarted to apply the settings.

- 1 Log in to Remote UI in System Manager Mode. ▶ Starting Remote UI(P. 395)
- 2 On the Portal page of Remote UI, click [Settings/Registration]. ▶ Portal Page of Remote UI(P. 397)
- 3 Click [Network Settings].
- 4 Configure LPD, RAW, or WSD.

■ When Configuring LPD

- 1 Click [LPD Settings] ▶ [Edit].
⇒ The [Edit LPD Settings] screen is displayed.
- 2 Set whether to use LPD.
When not using LPD, clear the [Use LPD Printing] checkbox, and proceed to step 5.
- 3 Enter the time in [RX Timeout].
Enter the time in minutes from the start of reception standby, after print data reception is canceled, to the timeout.

■ When Configuring RAW

- 1 Click [RAW Settings] ▶ [Edit].
⇒ The [Edit RAW Settings] screen is displayed.
- 2 Set whether to use RAW.

When not using RAW, clear the [Use RAW Printing] checkbox, and proceed to step 5.

- 3 Enter the time in [RX Timeout].
Enter the time in minutes from the start of reception standby, after print data reception is canceled, to the timeout.

■ When Configuring WSD

- 1 Click [WSD Settings] ► [Edit].
 ►► The [Edit WSD Settings] screen is displayed.
- 2 Set whether to use WSD for each function.
When not using WSD, clear the checkbox of the function for restricting use of WSD.

Using WSD to Print Data

Select the [Use WSD Printing] checkbox.

The [Use WSD Browsing] checkbox is selected automatically, and WSD is used to obtain the information of the machine from the computer.

Using WSD to Scan Data

Select the [Use WSD Scanning] checkbox. You can perform scanning from a computer without having to install a scanner driver.

To be able to specify a computer connected via WSD as the store location when scanning from the machine, also select the [Use Computer Scanning] checkbox.

When Responding to a Search Request of the Machine by Multicast Discovery

Select the [Use Multicast Discovery] checkbox.

To keep the machine in sleep mode without responding to received multicast discovery packets, clear the checkbox.



- 5 Click [OK].

- 6 Restart the machine. ► **Restarting the Machine(P. 114)**

►► The settings are applied.

NOTE

Adding a WSD Network Device

- Click [] (Start) ► [] (Settings) ► [Devices] ► [Printers & scanners] ► [Add printers & scanners], and perform the operations following the instructions on the screen.
- For details about installing the driver via a WSD network, see the manual of the driver at the online manual site.
<https://oip.manual.canon/>

Changing the Port Number

- To change the port number of each protocol, see the following:
► **Changing the Port Number(P. 353)**

Disabling HTTP Communication

A19R-07W

It is recommended to disable HTTP communication when using only the USB connection or when not using functions that require HTTP communication, such as Remote UI, WSD printing, and AirPrint.

This section describes how to configure the settings using the control panel.

You can also configure the settings using Remote UI from a computer. [▶Managing the Machine from a Computer \(Remote UI\)\(P. 394\)](#)

Administrator privileges are required.

[▶Touch Panel Model\(P. 390\)](#)

[▶5 Lines LCD Model\(P. 390\)](#)

Touch Panel Model

1 On the control panel, press [Menu] in the [Home] screen. [▶\[Home\] Screen\(P. 121\)](#)

2 Press [Preferences] ▶ [Network] ▶ [TCP/IP Settings] ▶ [Use HTTP].

⇒ The [Use HTTP] screen is displayed.

If the login screen appears, enter the System Manager ID and PIN, and then click [Log In]. [▶Logging In to the Machine\(P. 138\)](#)

3 Press [Off] ▶ [Yes].

5 Lines LCD Model

1 On the control panel, select [Menu] in the [Home] screen, and press . [▶\[Home\] Screen\(P. 121\)](#)

2 Press [Preferences] ▶ ▶ [Network] ▶ ▶ [TCP/IP Settings] ▶ ▶ [Use HTTP] ▶ .

⇒ The [Use HTTP] screen is displayed.

If the login screen appears, enter the currently set System Manager ID and PIN, then select [<Log In>] and press . [▶Logging In to the Machine\(P. 138\)](#)

3 Select [Off] and press .

4 Select [Yes] and press .

Managing the Machine

Managing the Machine	392
Setting the Date and Time	393
Managing the Machine from a Computer (Remote UI)	394
Starting Remote UI	395
Portal Page of Remote UI	397
Checking Usage and Logs with Remote UI	399
Monitoring the Usage	401
Checking the Number of Printed Pages (Check Counter)	402
Printing and Viewing Reports and Lists	404
Changing the Report and List Print Settings	407
Clearing the Mail Box	409
Importing and Exporting the Address Book	410
Updating the Firmware (Touch Panel Model)	412
Updating the Firmware (5 Lines LCD Model)	415
Initializing the Settings and Data	418

Managing the Machine

This section describes the management functions that are required to operate the machine.

Monitoring the Operation Status and Usage of the Machine, and Configuring the Settings

Setting the Date and Time

Set the date and time for the machine. The date and time are used as the reference for the functions using date and time information, and therefore, they need to be set accurately.

▶ **Setting the Date and Time(P. 393)**

Checking the Operation Status and Changing the Settings (Remote UI)

You can use a Web browser on a computer to check the operation status of the machine, change the machine settings, and register destinations to the Address Book. You can manage the machine from a remote location and efficiently perform time-consuming settings and registration on your computer.

▶ **Managing the Machine from a Computer (Remote UI)(P. 394)**

Monitoring the Usage (Control Panel)

You can use the control panel of the machine to check the total number of printed pages and print communication results, settings, and other reports and lists.

▶ **Monitoring the Usage(P. 401)**

Managing Servers, Various Data, and Firmware

Clearing the Server Mail Box

Delete mail from the server mail box as needed so that the mail box does not become full with notification mail sent to the e-mail address of the machine.

▶ **Clearing the Mail Box(P. 409)**

Managing the Address Book and Settings

You can use the import and export functions to regularly back up the Address Book. In addition, you can share the Address Book with other devices to save time on registering destinations and configuring the settings.

▶ **Importing and Exporting the Address Book(P. 410)**

Updating the Firmware

Update the firmware to add new functions to the machine and to fix bugs. By updating to the latest firmware, you can use the machine with more stable and comfortable operations.

▶ **Updating the Firmware (Touch Panel Model)(P. 412)**

▶ **Updating the Firmware (5 Lines LCD Model)(P. 415)**

Initializing the Settings and Data

You can initialize all settings and data when replacing or disposing of the machine. Initializing the machine prevents access to confidential information and unauthorized use by third parties.

▶ **Initializing the Settings and Data(P. 418)**

■ See Also

For the settings required to operate the machine, such as the network settings and fax settings, see the following:

▶ **Setting Up(P. 43)**

Setting the Date and Time

A19R-07Y

Set the date and time for the machine. The date and time set here are used as the reference for the functions using date and time information, and therefore, they need to be set accurately.

This section describes how to configure the settings using Remote UI from a computer.

On the control panel, select [Menu] in the [Home] screen, and then select [Preferences] to configure the settings. ▶
[Timer/Energy Settings](P. 430)

1 Log in to Remote UI. ▶Starting Remote UI(P. 395)

2 On the Portal page of Remote UI, click [Settings/Registration]. ▶Portal Page of Remote UI(P. 397)

3 Click [Timer Settings] ▶ [Edit].

⇒ The [Edit Timer Settings] screen is displayed.

4 Enter the current date and time.

5 Set the time zone according to the region where the machine is used.

Communicating over the Internet is premised on setting the UTC (Coordinated Universal Time) correctly. The UTC is the coordinated time standard used to regulate time in all parts of the world. There is a time difference depending on the country or region where the machine is used.

6 Set daylight saving time as needed.

- Select the [Use Daylight Saving Time] checkbox if the machine is in a country or region with daylight saving time, and then set the start and end dates.

7 Click [OK].

⇒ The settings are applied.

8 Log out from Remote UI.

Managing the Machine from a Computer (Remote UI)

A19R-080

With Remote UI, you can use a Web browser on a computer to check the function operation status of the machine, change the machine settings, and register destinations to the Address Book. You can manage the machine from a remote location and efficiently perform time-consuming settings and registration on your computer. For details on supported models, see the following: [▶Supported Functions\(P. 3\)](#)

Remote UI has the following two modes. The functions available with Remote UI vary depending on the mode you logged in to.

- **System Manager Mode**
You can use all functions of Remote UI.
- **General User Mode**
You can monitor usage, view logs, cancel printing, and change some settings.

- ▶[Starting Remote UI\(P. 395\)](#)
- ▶[Portal Page of Remote UI\(P. 397\)](#)
- ▶[Checking Usage and Logs with Remote UI\(P. 399\)](#)

■ See Also

It is recommended that you set up the following functions to prevent unauthorized use of Remote UI by a third party:

System Manager ID

Set the System Manager ID, which is the exclusive administrator account, so that only users with the ID can log in to System Manager Mode.

- ▶[Setting the Department ID and PIN for the Administrator\(P. 346\)](#)

Remote UI Password

Configure this setting to require password entry when logging in to Remote UI so that only users with the password can use Remote UI.

- ▶[Setting the Password to Use for Remote UI\(P. 384\)](#)

Starting Remote UI

A19R-081


To use Remote UI, enter the IP address of the machine into a Web browser on a computer, and log in with System Manager Mode or General User Mode. The functions available with Remote UI vary depending on the mode you logged in to.

Required Preparations

- Check the operating environment of Remote UI. [▶Supported Environment\(P. 35\)](#)
- Connect the computer you are using to operate Remote UI to the machine over a network. [▶Setting Up the Network\(P. 56\)](#)
- Check the IP address of the machine. [▶Checking the Network Status and Settings\(P. 97\)](#)

1 From a Web browser on a computer, access the following URL.

http://<IP address of the machine>/

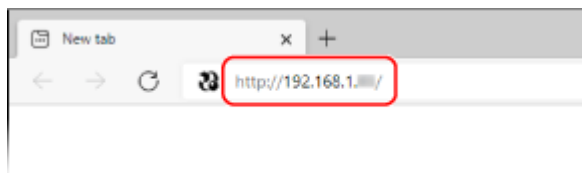

⇒ The Remote UI login screen appears.

When Remote UI communication is encrypted, a warning message about the security certificate may appear. If there are no problems with the certificate or TLS settings, you can continue operations.

When entering an IPv6 address, enclose the IP address in brackets [].

Example:

http://[fe80:2e9e:fcff:fe4e:dbce]/


■ If the Remote UI Login Screen Is Not Displayed

When a message such as [Cannot access Remote UI.] is displayed and the login screen is not displayed, see the following:

- [Cannot Access Remote UI or Send Function Setting Tool\(P. 618\)](#)

2 Enter the items required for login.

Select [System Manager Mode] or [General User Mode], and enter the required items according to the setting status.

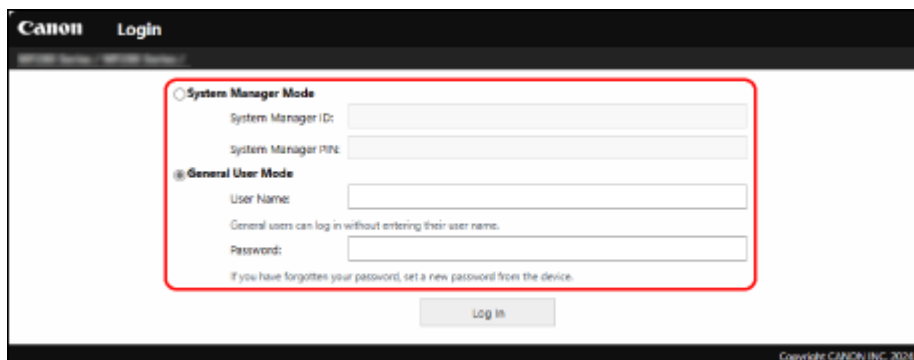

[System Manager Mode]

When the System Manager ID is set, enter the System Manager ID and System Manager PIN. **System Manager ID and PIN(P. 5)**

* When logging in with System Manager Mode, you must change the System Manager PIN from the default setting. **Setting the Department ID and PIN for the Administrator(P. 346)**

[General User Mode]

You can log in without entering a user name, but enter a print user name when checking and canceling jobs waiting to be printed.

* If a user name is not set in the printer driver, the logon user name of the computer that sent the print data is set automatically.

[Password]

When the Remote UI password is set, enter the password.

3 Click [Log In].

⇒ The Portal page of Remote UI appears. **Portal Page of Remote UI(P. 397)**

4 When you have completed your operations, click [Log Out].

⇒ The login screen appears after logging out from Remote UI.

! IMPORTANT

- Do not access other websites when using Remote UI.

NOTE

Setting the Time Until the User Is Automatically Logged Out


- The user is automatically logged out from Remote UI if no operations are performed for a certain period of time. Use the following procedure to set the time until the user is logged out.

Log in to Remote UI in System Manager Mode ▶ [Settings/Registration] ▶ [Network Settings] ▶ [Session Settings] ▶ [Edit] ▶ enter the time until the user is logged out ▶ [OK]

Portal Page of Remote UI

A19R-082

When you log in to Remote UI, the Portal page (Remote UI top page) appears. From here you can check the operations status of the machine, view various information, and change the settings with button operations.

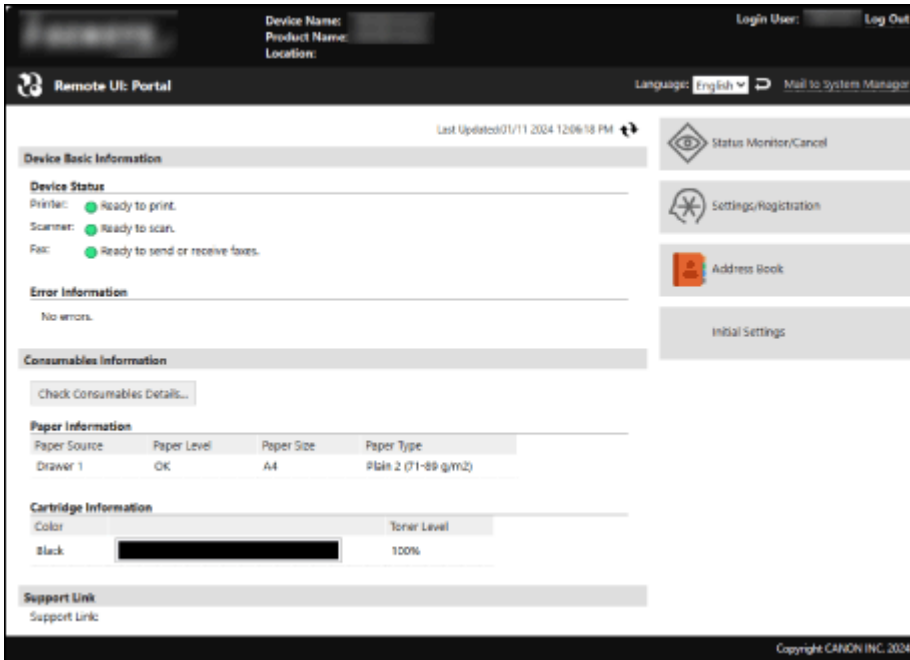

[Device Name]

Displays the device name set in [Settings/Registration] ► [Device Management] ► [Device Information Settings].

[Product Name]

Displays the product name of the machine.

[Location]

Displays the installation location set in [Settings/Registration] ► [Device Management] ► [Device Information Settings].

[Login User]

Displays the information of the logged in user.

[Log Out]

You are logged out of Remote UI, and the login screen is displayed.

[Language]

You can change the display language of Remote UI.

* The display languages of the computer and Remote UI must be the same. If the display languages are not the same, the entered information may not be displayed correctly, or you may not be able to reference a folder, server, or other specified destination.

[Mail to System Manager]

Creates e-mail for the administrator indicated in [Settings/Registration] ► [User Management] ► [System Manager Information].

[Last Updated]

Displays the date and time that the information displayed on the Portal page was last updated.

Click [↻] to the right of the date and time to update these.

[Device Basic Information]

Displays the current status and error information of the machine.

When an error occurs, this displays a link to the error information screen.

[Consumables Information]

Displays the paper source information and the remaining amount in the toner cartridge. Click [Check Consumables Details] to display the toner cartridge name.

[Support Link]

Displays a link to support information for this machine that is set in [Settings/Registration] ▶ [License/Other] ▶ [Support Link].

[Status Monitor/Cancel]

Click this to display the [Status Monitor/Cancel] screen.

From here, you can check the status and logs of a function, operation status of the machine, and error information. ▶


Checking Usage and Logs with Remote UI(P. 399)

[Settings/Registration]

Click this to display the [Settings/Registration] screen.

If you logged in with System Manager Mode, you can change any settings and perform operations such as saving and importing data.

- The items that can be set in the [Settings/Registration] screen are nearly the same as those of the control panel, but some items can only be set with either the control panel or Remote UI. ▶ **Settings Menu Items(P. 423)**
- Depending on the item, you may have to restart the machine for the settings to be applied. If a restart is required, a message appears at the top of the screen.

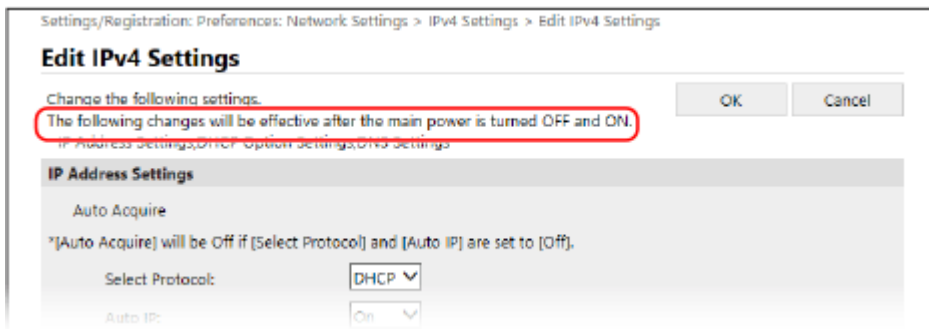

[Address Book]

Click this to display the [Address Book] screen.

If you logged in with System Manager Mode, you can register and edit destinations in the Address Book. ▶

Registering Destinations to the Address Book (Remote UI)(P. 171)

[Initial Settings]

Click this to display the [Initial Settings] screen.

This is displayed only when you log in with System Manager Mode.


You can configure the initial settings for Remote UI, fax, scan, and Web service usage. ▶ **Configuring the Initial Settings for Remote UI, Fax, Scan, and Web Service Usage(P. 50)**

Checking Usage and Logs with Remote UI

A19R-083

From Status Monitor/Cancel in Remote UI, you can check the status and logs of a function, operation status of the machine, and error information.

- 1 Log in to Remote UI. ▶Starting Remote UI(P. 395)
- 2 On the Portal page of Remote UI, click [Status Monitor/Cancel]. ▶Portal Page of Remote UI(P. 397)
- 3 Select an item to view the status or log.

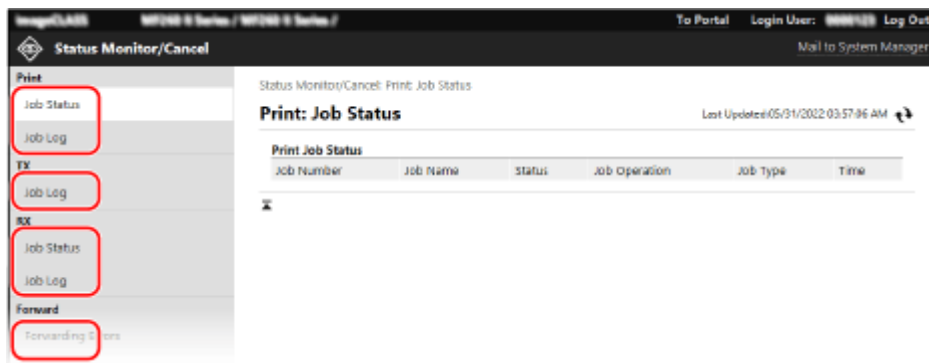

[Print]

[Job Status]

Displays the status (Printing or Waiting) of printed data.

When you log in Remote UI using the System Manager Mode, the status of all print jobs is displayed.

If you entered your user name in [User Name] when you logged in with General User Mode, only the print job status for that user is visible.

- Click [Cancel] in [Job Operation] to delete the print data for jobs that are printing or waiting.

[Job Log]

Displays the print job log.

[TX]

[Job Log]

Displays the TX job log for scan and fax jobs.

[RX]

[Job Status]

Displays the RX job status for fax jobs.

With preview in Memory Lock enabled, you can view the fax details and print the fax when logged in with System Manager Mode. ▶Saving Received Documents in the Machine (Memory Lock)(P. 378)

[Job Log]

Displays the RX job log for fax jobs.

[Forward]

[Forwarding Errors]

Displays information of the data being forwarded that ended with an error.

With preview in Memory Lock enable, you can perform the following operations when logged in with System Manager Mode. **▶ Saving Received Documents in the Machine (Memory Lock)(P. 378)**

- Click [Job Number] to view details and a preview of the data to be forwarded.
- Click [Delete] to delete the data to be forwarded.

* If data cannot be forwarded but remains in the memory, it can be printed. **▶ Checking Faxes that Failed to Be Forwarded(P. 283)**

[Error Information]

Displays information of errors occurring on the machine.

* You can view the same information by clicking the link displayed in [Error Information] on the Portal page.

[Consumables]

Displays the paper size and type of the paper source and the toner cartridge name.

* You can view the same information by clicking [Check Consumables Details] on the Portal page.

[Device Features]

Displays the specifications of the machine.

[Device Information]

Displays information of the machine, such as the product name and serial number, as well as the firmware version and system manager information.

- [Device Name] and [Location] display the information set in [Settings/Registration] ▶ [Device Management] ▶ [Device Information Settings].
- [System Manager Information] displays the information set in [Settings/Registration] ▶ [User Management] ▶ [System Manager Information].

[Check Counter]

Displays the total number of pages copied and printed to date. **▶ Checking the Number of Printed Pages (Check Counter)(P. 402)**

[Cartridge Log]

Displays a usage record for the toner cartridge.

To change the displayed cartridge, select the cartridge from the pulldown menu, and click [Display].

[Eco Information]

Displays the average number of sheets output and average power consumption per month.

You can change the settings of the following items in [Device Settings Status] to save paper and power.

- [N on 1 in Copy Settings]
- [2-Sided in Copy Settings]
- [Use Fax Preview in Memory Lock Settings] **▶ Saving Received Documents in the Machine (Memory Lock)(P. 378)**

4 Log out from Remote UI after viewing the usage.

Monitoring the Usage

A19R-084

You can use the control panel of the machine to check the total number of copied and printed pages and print communication results, settings, and other reports and lists.

- ▶ **Checking the Number of Printed Pages (Check Counter)(P. 402)**
- ▶ **Printing and Viewing Reports and Lists(P. 404)**

■ See Also

You can also check the counter using Remote UI from a computer. In Remote UI, you can also check the status and logs of a function, operation status of the machine, and error information.

- ▶ **Checking Usage and Logs with Remote UI(P. 399)**

Checking the Number of Printed Pages (Check Counter)

A19R-085

You can display a counter showing the total number of pages copied and printed.
The number of printed pages includes received faxes and printed reports and lists.

This section describes how to check the number of printed pages using the control panel.
You can also check this information using Remote UI from a computer. [▶Checking Usage and Logs with Remote UI\(P. 399\)](#)

[▶Touch Panel Model\(P. 402\)](#)

[▶5 Lines LCD Model\(P. 402\)](#)


Touch Panel Model

1 Press  on the control panel. [▶Control Panel\(P. 13\)](#)

⇒ The [Status Monitor] screen is displayed.

2 Press [Device Status] ▶ [Check Counter].

3 Select the counter to check.

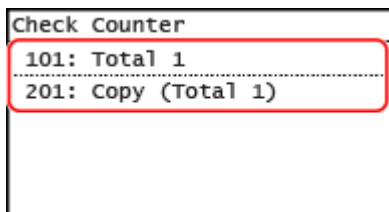


[101: Total 1]

Displays the total number of pages copied and printed.

[201: Copy (Total 1)]

Displays the total number of pages copied.

4 Check the number of printed pages, and press [Close].

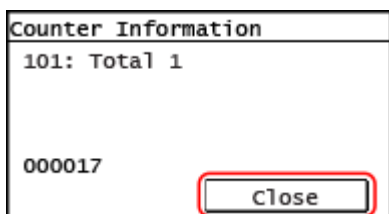


5 Lines LCD Model

1 Press  on the control panel. [▶Control Panel\(P. 13\)](#)

⇒ The [Status Monitor] screen is displayed.

2 Press [Device Status] ► ► [Check Counter] ► .

3 Select the item you want to check, and press .

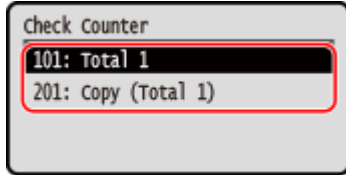


[101: Total 1]

Displays the total number of pages copied and printed.

[201: Copy (Total 1)]

Displays the total number of pages copied.

4 Check the number of printed pages.

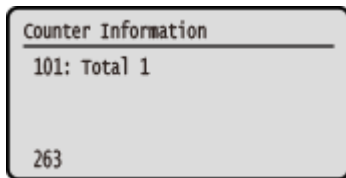

Printing and Viewing Reports and Lists

A19R-086

You can print and view reports and lists including machine usage, communication results, and settings.

▶ **Types of Reports and Lists(P. 404)**

▶ **Printing Reports and Lists(P. 405)**

NOTE

2-Sided Printing of Reports and Lists

- Reports and lists are printed on paper on one side by default. You can change the setting to print on both sides. ▶ **Changing the Report and List Print Settings(P. 407)**

Types of Reports and Lists

Machine Usage Reports

You can print and view the following reports related to usage of the machine including power consumption and status of consumables:

- **Eco Report**
Displays the number of printed pages and power consumption per month. You can see how to save paper and power based on this information.
- **Consumables Status Report**
Displays the status of consumables installed in the machine.
- **Cartridge Log Report**
Displays a log of toner cartridge usage.

Communication Results Reports

You can print and view the following reports related to communication results including sending and receiving results and saving results.

With the exception of communication management reports, communication results reports cannot be printed manually. You must configure the settings in advance to print the reports automatically. ▶ **Changing the Report and List Print Settings(P. 407)**

- **Communication Management Report**
Displays all communication results for faxes and scanned data.
By default, this is printed automatically after every 40 communication events.
You can also configure the settings to print sending and saving results and receiving results in a different format.
- **Fax TX Result Report**
Displays the fax sending results.
By default, this is printed automatically only when an error occurs.
This can be set to print part of the original in the report.
* The results reports do not include sending results of faxes sent from a computer.
- **E-mail, File Sending Result Report**
Displays the sending results of e-mails and the saving results of the shared folder.
By default, this is printed automatically only when an error occurs.
* When an error occurs during sending or saving, the error code is not displayed in the e-mail or file sending result report. To view the error code, print a communication management report.
- **RX Result Report**
Displays the receiving results for faxes.
By default, this is not printed automatically.

Settings Lists

You can print and view the following lists that summarize the registration information and settings of the machine:

- **Address Book List**
Displays the destination information registered in the Address Book by [Coded Dial], [One-Touch], and [Group].
- **User Data List**
Displays the serial number and other machine information as well as the settings that do not require administrator privileges.
- **System Manager Data List**
Displays the serial number and other machine information as well as the settings that require administrator privileges.

Printing Reports and Lists

Print reports and lists using the control panel. You cannot print these using Remote UI from a computer. Administrator privileges are required to print the following reports and lists:

- System Manager Data List

▶ **Touch Panel Model(P. 405)**

▶ **5 Lines LCD Model(P. 405)**

■ Touch Panel Model

1 On the control panel, press [Menu] in the [Home] screen. ▶ [Home] Screen(P. 121)

2 Press [Output Rprt.] ▶ [Print List].

⇒ The [Print List] screen is displayed.

3 Select the report or list to print.

⇒ A screen confirming the paper available for printing is displayed.

If the login screen appears, enter the System Manager ID and PIN, and then press [Log In]. ▶ **Logging In to the Machine(P. 138)**

■ To Print Address Book List

Select [Address Book List], and select the items to print.

4 Check that printable paper is set in the machine, and press [OK] ▶ [Yes].

⇒ The report or list is printed.

■ 5 Lines LCD Model

1 On the control panel, select [Menu] in the [Home] screen, and press . ▶ [Home] Screen(P. 121)

2 Press **[Output Reports]** ▶ **OK** ▶ **[Print List]** ▶ **OK**.

⇒ The [Print List] screen is displayed.

3 Select the report or list to print, and press **OK**.

⇒ A screen confirming the paper available for printing is displayed.

If the login screen appears, enter the System Manager ID and PIN, then select [**<Log In>**] and press **OK**. ▶
Logging In to the Machine(P. 138)

4 Check that printable paper is set in the machine, and press **[OK]** ▶ **OK** ▶ **[Yes]**
▶ **OK**.

⇒ The report or list is printed.

Changing the Report and List Print Settings

A19R-087

Reports and lists are printed on paper on one side by default. You can change the setting to print on both sides. You can also change the setting to automatically print communication results reports.*1

*1 For the 5 Lines LCD Model, the reports of communication results are not available.

Use the control panel to configure the settings. You cannot configure the settings using Remote UI from a computer.

▶ **Touch Panel Model(P. 407)**

▶ **5 Lines LCD Model(P. 408)**

Touch Panel Model

1 On the control panel, press [Menu] in the [Home] screen. ▶ [Home] Screen(P. 121)

2 Press [Output Rprt.] ▶ [Report Settings].

⇒ The [Report Settings] screen is displayed.

3 Change the report and list print settings.

■ To Print Reports and Lists on Both Sides

1 Press [Default Settings for Report Output] ▶ [2-Sided Printing].

⇒ The [2-Sided Printing] screen is displayed.

2 Press [On].

■ To Change the Communication Management Report Settings

1 Press [Communication Management Report].

⇒ The [Comm. Mngt. Report] screen is displayed.

2 Configure the report settings.

- To print automatically after every 40 communication events, press [Auto Print (40 Transmissions)] ▶ [On].
- To configure the settings to print sending and saving results and receiving results in a different format, press [Separate TX/RX] ▶ [On].

■ To Change the Fax TX Result Report Settings

1 Press [Fax TX Result Report].

⇒ The [Fax TX Result Report] screen is displayed.

- 2 Select whether to print this report automatically.
 - To print automatically after each send job, select [On]. To print automatically only when an error occurs, select [Only When Error Occurs].
 - When [On] or [Only When Error Occurs] is selected, in [Include TX Image], select whether to print part of the original on the report.














■ To Change the E-mail or File Sending Result Report Settings

- 1 Press [E-Mail/File TX Result Report].
 - ⇒ The [E-Mail/File TX Report] screen is displayed.
- 2 Select whether to print this report automatically.
 - To print automatically after each send or save job, select [On]. To print automatically only when an error occurs, select [Only When Error Occurs].

■ To Change the RX Result Report Settings

- 1 Press [RX Result Report].
 - ⇒ The [RX Result Report] screen is displayed.
- 2 Select whether to print this report automatically.
 - To print automatically after each receive job, select [On]. To print automatically only when an error occurs, select [Only When Error Occurs].

5 Lines LCD Model

- 1 On the control panel, select [Menu] in the [Home] screen, and press .  [Home] Screen(P. 121)
- 2 Press [Only When Error Occurs]    [Report Settings]  .
 - ⇒ The [Report Settings] screen is displayed.
- 3 Select [Default Settings for Report Output] and press .
 - ⇒ The [Default Settings for Report Output] screen is displayed.
- 4 Press [2-Sided Printing]    [On]  .

Clearing the Mail Box

A19R-088

When scanned data is sent by e-mail and a send error occurs, the mail server may send an error notification e-mail to the e-mail address of the machine. Delete all mail from the server mail box, as needed, so that the mail box does not become full with notification mail.

Clear the mail box using Remote UI from a computer. You cannot use the control panel to clear the mail box. Administrator privileges are required.

IMPORTANT

- When the mail box is cleared, all mail in the e-mail inbox of the server is deleted. Be careful not to delete needed unread mail.

- 1 Log in to Remote UI in System Manager Mode.** ▶ Starting Remote UI(P. 395)
- 2 On the Portal page of Remote UI, click [Settings/Registration].** ▶ Portal Page of Remote UI(P. 397)
- 3 Click [TX Settings] ▶ [E-Mail Settings].**
⇒ The [E-Mail Settings] screen is displayed.
- 4 In [Clear Mail Box], click [Clear].**
- 5 Click [OK].**
⇒ All mail in the mail box on the server is deleted.
- 6 Log out from Remote UI.**

Importing and Exporting the Address Book

A19R-089

You can write the Address Book to files and save (export) them to a computer. You can also load an exported file and apply (import) the Address Book to the machine.

You can use the import and export functions to back up the Address Book in case of an accident.

In addition, an exported file can be imported to another device^{*1} to enable sharing of the Address Book with another device without having to register destinations.

^{*1} Some models may not be able to import the Address Book saved from this machine.

▶ **Exporting the Address Book(P. 410)**

▶ **Importing the Address Book(P. 411)**

IMPORTANT

Do Not Turn OFF the Machine until the Import or Export Is Complete.

- It may take a few minutes until the process is completed. Turning OFF the machine during processing may cause data corruption or damage the machine.

Do Not Operate the Machine during Import or Export.

- Before import or export, check that the machine is not printing or performing other operations.

Exporting the Address Book

Write the Address Book to a file.

Configure these settings using Remote UI from a computer. You cannot use the control panel to configure the settings.

Administrator privileges are required.

- 1 Log in to Remote UI in System Manager Mode. ▶ Starting Remote UI(P. 395)**
- 2 On the Portal page of Remote UI, click [Settings/Registration]. ▶ Portal Page of Remote UI(P. 397)**
- 3 Click [Data Management] ▶ [Export].**
 - ⇒ The [Export] screen is displayed.
- 4 Click [Start Exporting] to save the exported data as a file to a computer.**
 - ⇒ The Address Book is exported as a Canon Address Book file (*.abk).
If a PIN is set for the Address Book, enter the Address Book PIN.
- 5 Log out from Remote UI.**

Importing the Address Book

Specify the exported Address Book file.

File formats for import

- Canon Address Book file (*.abk)

Configure these settings using Remote UI from a computer. You cannot use the control panel to configure the settings.

Administrator privileges are required.

- 1 Log in to Remote UI in System Manager Mode.** ▶ Starting Remote UI(P. 395)
- 2 On the Portal page of Remote UI, click [Settings/Registration].** ▶ Portal Page of Remote UI(P. 397)
- 3 Click [Data Management] ▶ [Import].**
⇒ The [Import] screen is displayed.
- 4 Click [Browse] in [File Path], and specify the file to be imported.**
- 5 Click [Start Importing] ▶ [OK].**
⇒ The selected file is imported to the machine.
If a PIN is set for the Address Book, enter the Address Book PIN.
- 6 When the screen indicating that importing has completed appears, click [OK].**
- 7 Log out from Remote UI.**

Updating the Firmware (Touch Panel Model)

A19R-08A

When functions are added or the software version is upgraded, the firmware of the machine is updated. Check the version of the firmware, and update the firmware via the Internet or a computer according to the usage environment of the machine.

✓ : Can be updated — : Cannot be updated

Usage environment of the machine	Connection via Internet	Connection via computer
Wired LAN connection	✓	✓
Wireless LAN connection	✓	—
USB connection	—	✓
Use IPv6	—	—

* You cannot update the firmware in an IPv6 Environment. Connect the machine to a computer via USB, and update from the computer.

- ▶ **Checking the Firmware Version(P. 412)**
- ▶ **Updating the Firmware via the Internet(P. 413)**
- ▶ **Updating the Firmware via a Computer(P. 413)**

Checking the Firmware Version

Check the current version of the firmware before updating it, and then check the version after updating to see if the update was performed correctly.

This section describes how to check the firmware version using the control panel.

You can also use Remote UI from a computer to check the firmware version. ▶ **Managing the Machine from a Computer (Remote UI)(P. 394)**

Administrator privileges are required.

1 On the control panel, press [Menu] in the [Home] screen. ▶ **[Home] Screen(P. 121)**

2 Press [Management Settings] ▶ [Remote UI Settings/Update Firmware] ▶ [Update Firmware].

⇒ The [Update Firmware] screen is displayed.

If the login screen appears, enter the System Manager ID and PIN, and then press [Log In]. ▶ **Logging In to the Machine(P. 138)**

3 Select [Version Information].

⇒ Displays the current version of the firmware.

Updating the Firmware via the Internet

Use the control panel to update the firmware via the Internet. You cannot update it using Remote UI from a computer. Administrator privileges are required. When the firmware has been updated, the machine restarts automatically.

Required Preparations

- Connect the machine to the Internet. ▶ **Setting Up the Network(P. 56)**

1 On the control panel, press [Update Firmware] in the [Home] screen. ▶ [Home] Screen(P. 121)

- ⇒ The machine accesses the Canon server to see if new firmware is available.
When [This is the latest firmware version.] appears, no update is available.

If the login screen appears, enter the System Manager ID and PIN, and then press [Log In]. ▶ **System Manager ID and PIN(P. 5)**

2 Press [Yes].

3 In the licensing screen, press [Accept].

- ⇒ The firmware update confirmation screen is displayed.

4 Press [OK].

- ⇒ Downloading of the firmware starts.
When the download is complete, the machine restarts automatically, and the firmware is updated.

IMPORTANT

- Do not turn OFF the machine until the restart is complete.

Updating the Firmware via a Computer

Update the firmware from a computer connected to the machine via wired LAN or USB.

Required Preparations

- Download the latest firmware from the Canon website for your country/region to the computer performing the update.
<https://global.canon/en/support/>

■ How to Update from a Computer

See the "User Support Tool Operation Guide" included with the firmware.

■ To Put the Machine into Update Waiting State (Download Mode)

Use the following procedure.

Use the control panel to perform this operation. You cannot perform this operation using Remote UI from a computer. Administrator privileges are required.

1 On the control panel, press [Menu] in the [Home] screen. ▶ [Home] Screen(P. 121)

2 Press [Management Settings] ▶ [Remote UI Settings/Update Firmware] ▶ [Update Firmware].

⇒ The [Update Firmware] screen is displayed.

If the login screen appears, enter the System Manager ID and PIN, and then press [Log In]. ▶ **Logging In to the Machine(P. 138)**

3 Press [Via PC] ▶ [Yes].

⇒ Switches the machine to download mode and puts it into update waiting state.

Updating the Firmware (5 Lines LCD Model)

A19R-08C

When functions are added or the software version is upgraded, the firmware of the machine is updated. Check the version of the firmware, and update the firmware via the Internet or a computer according to the usage environment of the machine.

✓ : Can be updated — : Cannot be updated

Usage environment of the machine	Connection via Internet	Connection via computer
Wired LAN connection	✓	✓
Wireless LAN connection	✓	—
USB connection	—	✓
Use IPv6	—	—

* You cannot update the firmware in an IPv6 Environment. Connect the machine to a computer via USB, and update from the computer.

- ▶ **Checking the Firmware Version(P. 415)**
- ▶ **Updating the Firmware via the Internet(P. 416)**
- ▶ **Updating the Firmware via a Computer(P. 416)**

Checking the Firmware Version

Check the current version of the firmware before updating it, and then check the version after updating to see if the update was performed correctly.

This section describes how to check the firmware version using the control panel.

 
You can also use Remote UI from a computer to check the firmware version. ▶ **Managing the Machine from a Computer (Remote UI)(P. 394)**

Administrator privileges are required.

1 On the control panel, select [Menu] in the [Home] screen, and press . ▶ [Home] Screen(P. 121)

2 Press [Management Settings] ▶  ▶ [Remote UI Settings/Update Firmware] ▶  ▶ [Update Firmware] ▶ .

⇒ The [Update Firmware] screen is displayed.

If the login screen appears, enter the System Manager ID and PIN, then select [<Log In>] and press . ▶ **Logging In to the Machine(P. 138)**

3 Select [Version Information] and press .

⇒ Displays the current version of the firmware.

Updating the Firmware via the Internet

Use the control panel to update the firmware via the Internet. You cannot update it using Remote UI from a computer. Administrator privileges are required. When the firmware has been updated, the machine restarts automatically.

Required Preparations


- Connect the machine to the Internet. ▶ **Setting Up the Network(P. 56)**

1 On the control panel, select [Update Firmware] in the [Home] screen, and press .

▶[Home] Screen(P. 121)

⇒ The machine accesses the Canon server to see if new firmware is available.

When [This is the latest firmware version.] appears, no update is available.

If the login screen appears, enter the System Manager ID and PIN, then select [<Log In>] and press .

▶ **Logging In to the Machine(P. 138)**

2 Select [Yes] and press .

3 In the licensing screen, press .

⇒ The firmware update confirmation screen is displayed.

4 Press .

⇒ Downloading of the firmware starts.

When the download is complete, the machine restarts automatically, and the firmware is updated.

IMPORTANT

- Do not turn OFF the machine until the restart is complete.

Updating the Firmware via a Computer

Update the firmware from a computer connected to the machine via wired LAN or USB.

Required Preparations

- Download the latest firmware from the Canon website for your country/region to the computer performing the update.
<https://global.canon/en/support/>


■ How to Update from a Computer

See the "User Support Tool Operation Guide" included with the firmware.

■ To Put the Machine into Update Waiting State (Download Mode)

 

Use the following procedure.

Use the control panel to perform this operation. You cannot perform this operation using Remote UI from a computer. Administrator privileges are required.

1 On the control panel, select [Menu] in the [Home] screen, and press  .  [Home] Screen(P. 121)

2 Press [Management Settings]    [Remote UI Settings/Update Firmware]    [Update Firmware]  .

⇒ The [Update Firmware] screen is displayed.

If the login screen appears, enter the System Manager ID and PIN, then select [<Log In>] and press  .  **Logging In to the Machine(P. 138)**

3 Press [Via PC]    [Yes]  .

⇒ Switches the machine to download mode and puts it into update waiting state.

Initializing the Settings and Data

A19R-08E

You can initialize the settings and registered data to reset the machine to the factory settings. You can initialize specified settings and data only or initialize all settings and data.

Initializing Specific Settings and Data

You can initialize the following items separately:

- Settings menu: Initializes the settings of [Menu] in the [Home] screen.
- Key and Certificate: Initializes the settings of the key and certificate as well as CA certificate, and clears everything except the pre-installed key and certificate.
- Address Book: Clears the destinations registered in the Address Book.

▶ Initializing Specific Settings and Data(P. 418)

Initializing All Settings and Data

You can reset all settings to the factory settings, and clear all stored data including logs. Initialization is performed to prevent access to confidential information and unauthorized use such as when replacing or disposing of the machine.

▶ Initializing All Settings and Data(P. 419)

Initializing Specific Settings and Data

This section describes how to initialize settings and data using Remote UI from a computer.

On the control panel, select [Menu] in the [Home] screen, and then perform initialization from [Preferences] or [Management Settings]. ▶[Initialize Network Settings](P. 437) / ▶[Data Management](P. 510)

Administrator privileges are required. Depending on the item to be initialized, you may have to restart the machine.

1 Log in to Remote UI in System Manager Mode. ▶Starting Remote UI(P. 395)

2 On the Portal page of Remote UI, click [Settings/Registration]. ▶Portal Page of Remote UI(P. 397)

3 Click [Data Management].

⇒ The [Data Management] screen is displayed.

4 Select the item to initialize.

■ Initializing the Settings Menu

Click [Initialize Menu], and select the setting to be initialized from [Menu to Initialize].

■ When Initializing a Key and Certificate

Click [Initialize Key and Certificate].

■ When Initializing the Address Book

Click [Initialize Address Book].

If the [Enter PIN] screen appears, enter the Address Book PIN, and then click [OK].

5 Click [Initialize] ▶ [OK].

⇒ The specified item is initialized.

6 Log out from Remote UI.

■ When the Settings Menu Is Initialized

When any of the following is initialized, restart the machine to apply the initialized settings. ▶ **Restarting the Machine(P. 114)**

- [Preferences]
- [Function Settings]
- [Management Settings]
- [Network Settings]

NOTE

When Initializing a Key and Certificate

- Functions using a key and certificate such as TLS is disabled. To use these functions again, you must set the key and certificate, and then enable the function.

When [Management Settings] of the Settings Menu Is Initialized

- This also initializes the Remote UI password. To use Remote UI, you must set the Remote UI password again. ▶ **Setting the Password to Use for Remote UI(P. 384)**

Initializing All Settings and Data

Use the control panel to initialize all settings and data. You cannot initialize these using Remote UI from a computer. Administrator privileges are required. When these are initialized, the machine restarts automatically.

- ▶ **Touch Panel Model(P. 419)**
- ▶ **5 Lines LCD Model(P. 420)**

■ Touch Panel Model

! IMPORTANT

- Before initialization, check that there is no data being processed or waiting to be processed. This data is deleted when the initialization is performed.

1 On the control panel, press [Menu] in the [Home] screen. ▶ **[Home] Screen(P. 121)**

2 Press [Management Settings] ▶ [Initialize All Data/Settings].

⇒ The initialization confirmation screen is displayed.

If the login screen appears, enter the System Manager ID and PIN, and then press [Log In]. ▶ **Logging In to the Machine(P. 138)**

3 Press [Yes] ▶ [Yes].

⇒ All settings and data are initialized.

 

When initialization is complete, the machine restarts automatically.

■ 5 Lines LCD Model

1 On the control panel, select [Menu] in the [Home] screen, and press . [Home] Screen(P. 121)

2 Press [Management Settings] ▶ ▶ [Initialize All Data/Settings] ▶ .

⇒ The initialization confirmation screen is displayed.

If the login screen appears, enter the currently set System Manager ID and PIN, then select [<Log In>] and press .  **Logging In to the Machine(P. 138)**

3 Press [Yes] ▶ ▶ [Yes] ▶ .

⇒ All settings and data are initialized.

When initialization is complete, the machine restarts automatically.

Settings Menu Items

Settings Menu Items	423
[Preferences]	424
[Display Settings]	426
[Timer/Energy Settings]	430
[Network]	433
[Wireless LAN Settings]	438
[TCP/IP Settings]	440
[External Interface]	447
[Accessibility]	448
[Volume Settings]	450
[Adjustment/Maintenance]	453
[Adjust Image Quality]	454
[Special Processing]	455
[Maintenance]	459
[Function Settings]	460
[Common]	461
[Paper Feed Settings]	462
[Print Settings]	463
[Scan Settings]	464
[Generate File]	465
[Copy]	466
[Printer]	468
[Printer Settings]	469
[PDL Selection (Plug and Play)]	479
[Send]	480
[Common Settings]	481
[Scan and Send Settings]	483
[Fax Settings]	489
[Receive/Forward]	494
[Common Settings]	495
[Fax Settings]	497
[Set Destination]	501
[Management Settings]	502
[User Management]	504
[Device Management]	505

Settings Menu Items

[Remote UI Settings/Update Firmware]	508
[Remote UI Settings]	509
[Data Management]	510
[Security Settings]	511
[Authentication/Password Settings]	513
[Toner Deliv. Set.] or [Toner Delivery Set.]	514

Settings Menu Items

A19R-0FX

This section describes the items available in the settings menu displayed when you press [Menu] in the [Home] screen on the control panel.

From the settings menu, you can run functions and modify the settings according to the machine's operating environment or its usage.

Administrator privileges are required to view or change some settings. Note also that the machine may need to be restarted for changed settings to take effect.

- ▶ [Preferences](P. 424)
- ▶ [Adjustment/Maintenance](P. 453)
- ▶ [Function Settings](P. 460)
- ▶ [Set Destination](P. 501)
- ▶ [Management Settings](P. 502)
- ▶ [Toner Deliv. Set.] or [Toner Delivery Set.](P. 514)

Menu Route Map (List)

This list shows you the settings menu items and the values set.
Click the icon below to view the corresponding Menu Route Map (PDF).

Touch Panel Model



5 Lines LCD Model



■ See Also

If a Login Screen Appears

If a System Manager ID has been set, a login screen may appear when certain items are selected. Once you enter the required information and the login is authenticated, you can view or change the settings.


- ▶ **Logging In to the Machine(P. 138)**

If the Machine Must be Restarted


After changing the settings, restart the machine.

- ▶ **Restarting the Machine(P. 114)**

Settings Not Included in the Menus

The Paper Settings items appear when you press [Paper Set.] or [Paper Settings] ▶  in the [Home] screen.

- ▶ **Specifying the Paper Size and Type(P. 154)**

The toner delivery settings screen is displayed by pressing [Toner Deliv. Set.] on the [Home] screen or pressing [Toner Delivery Set.] ▶  on the [Home] screen.

Configuring Settings from Remote UI

The settings menu items can also be specified from a computer using Remote UI. In Remote UI, specify the settings from [Settings/Registration] in the Portal page.

The items that can be specified in [Settings/Registration] in Remote UI are almost identical to those in the control panel settings menu, but there are also items that can be specified only from the control panel or only from Remote UI. Note also that some of the item names differ in Remote UI.

- ▶ **Managing the Machine from a Computer (Remote UI)(P. 394)**

Checking the Settings

You can check a list of the current settings by printing them out.

- ▶ **Printing and Viewing Reports and Lists(P. 404)**

[Preferences]

A19R-08H

These are settings used to configure features such as the control panel screen displays and the network settings according to the environment in which the machine is used.

- ▶ [Display Settings](P. 424)
- ▶ [Timer/Energy Settings](P. 424)
- ▶ [Network](P. 424)
- ▶ [External Interface](P. 424)
- ▶ [Accessibility](P. 424)
- ▶ [Volume Settings](P. 425)

[Display Settings]

[Menu] ▶ [Preferences]

Configure the control panel screen displays.

- ▶ [Display Settings](P. 426)

[Timer/Energy Settings]

[Menu] ▶ [Preferences]

Set the date and time and specify the Energy Saver settings.

- ▶ [Timer/Energy Settings](P. 430)

[Network]

[Menu] ▶ [Preferences]

Configure the network environment for the machine.

- ▶ [Network](P. 433)

[External Interface]

[Menu] ▶ [Preferences]

Configure the USB connection.

- ▶ [External Interface](P. 447)

[Accessibility]

[Menu] ▶ [Preferences]

Configure control panel screen features such as screen color inversion and message display time to make the screen easier to see.

- ▶ [Accessibility](P. 448)

[Volume Settings]

[Menu] ▶ [Preferences]

Set whether the machine emits sounds notifying you of operations and statuses.

🔘 **[Volume Settings](P. 450)**

* [Volume Settings] may not be displayed depending on the model, and other settings.

[Display Settings]

A19R-08J

Configure the control panel screen displays.
 * Values in bold red text are the default settings for each item.

- ▶ [Default Screen after Startup/Restoration] (P. 426)
- ▶ [Button Display Order on Home Screen](P. 426)
- ▶ [Language](P. 427)
- ▶ [Remote UI Language](P. 427)
- ▶ [Millimeter/Inch Entry Switch](P. 428)
- ▶ [Gram/Pound Switch](P. 428)
- ▶ [Displ. Timing for Cartridge Prep. Notif.](P. 428)
- ▶ [Show Warnings](P. 428)
- ▶ [Action When Warning](P. 429)
- ▶ [Display IP Address](P. 429)
- ▶ [Notify to Clean Original Scanning Area](P. 429)

[Default Screen after Startup/Restoration]

[Menu] ▶ [Preferences] ▶ [Display Settings]

Specify the screen displayed after the start screen appears when the machine is turned ON and immediately after an Auto Reset.
 Setting this for the [Status Monitor] enables you to also specify the screen displayed immediately after the [Status Monitor] screen is closed.

[Home]

[Copy]

[Fax]*1

[Scan]

[Status Monitor]

 [Home]

 [Copy]

 [Fax]*1

 [Scan]

*1 May not be displayed depending on the model, and other settings.

[Button Display Order on Home Screen]

[Menu] ▶ [Preferences] ▶ [Display Settings]

Rearrange the buttons so that you can run frequently used functions more quickly from the [Home] screen of the control panel. ▶ **Customizing the [Home] Screen(P. 136)**

Touch Panel Model

[Set Display Order]

[Insert and Delete Blank]

5 Lines LCD Model

[Copy]
 [Scan]
 [Menu]
 [Paper Settings]
 [Scan -> PC]
 [Paper Save Copy]
 [Passport Copy]
 [Mobile Portal]
 [Display Order (Home)]
 [Update Firmware]
 [Wireless LAN Set.]
 [Toner Delivery Set.]*¹

*¹ [Toner Delivery Set.] is only displayed when [Select Country/Region] is set to [United States (US)].

[Language]

[Menu] ► [Preferences] ► [Display Settings]

Change the language shown on the control panel and used in printed reports.

* Depending on your country or region, the [Language] setting may not be available, or its content or default setting may be different.

[Deutsch]
[English]
 [Español]
 [Français]
 [Italiano]
 [Português]
 [日本語]
 [中文(繁體)]
 [中文(简体)]
 [한국어]

[Remote UI Language]

[Menu] ► [Preferences] ► [Display Settings]

Change the language shown on Remote UI screens.

* Depending on your country or region, the [Remote UI Language] setting may not be available, or its content or default setting may be different.

[English]
 [Japanese]
 [French]
 [Spanish]
 [German]
 [Italian]
 [Portuguese]
 [Chinese (Simplified)]
 [Chinese (Traditional)]
 [Korean]

[Millimeter/Inch Entry Switch]

[Menu] ▶ [Preferences] ▶ [Display Settings]

Change the units shown on the screen for entering length and width.

[Millimeter]
[Inch]

[Gram/Pound Switch]

[Menu] ▶ [Preferences] ▶ [Display Settings]

You can change the units displayed such as for the paper weight.

* [Gram/Pound Switch] is only displayed when [Select Country/Region] is set to [United States (US)] or [Canada (CA)].

[Gram]
[Pound]

[Displ. Timing for Cartridge Prep. Notif.]

[Menu] ▶ [Preferences] ▶ [Display Settings]

When the toner in a toner cartridge runs low, a message appears notifying you to prepare a new toner cartridge. To manually specify when this message appears (the toner level in a cartridge), specify the timing in [Custom]. When [Auto] is set, the machine automatically decides when to display the message.

Touch Panel Model

[Auto]
[Custom]
20 to 99(%)


5 Lines LCD Model

[Auto]
[Custom]
2 to 20 to 99(%)

[Show Warnings]

[Menu] ▶ [Preferences] ▶ [Display Settings]

Specify whether a notification message is displayed when a toner cartridge is low on toner.

* If the machine is configured to stop printing when a toner cartridge is low on toner, this cannot be set to [Off].  **[Action When Warning](P. 429)**

* If the machine is configured not to print incoming faxes when a toner cartridge is low on toner, the message appears even when this is set to [Off].  **[Continue Print. When Amount in Cart. Low](P. 495)**

[Low Cartridge Level]
[Off]
[On]

[Action When Warning]

[Menu] ▶ [Preferences] ▶ [Display Settings]

Specify whether to continue printing when a toner cartridge is low on toner.

If this is set to [Stop Printing], a notification message appears when the toner cartridge runs low on toner. ▶[**Show Warnings**](P. 428)

[Low Cartridge Level]
[Continue Printing]
[Stop Printing]

[Display IP Address]

[Menu] ▶ [Preferences] ▶ [Display Settings]

Specify whether to display the machine's IPv4 address in the [Status Monitor] screen. ▶[**Status Monitor Screen**](P. 125)

[Off]
[On]

[Notify to Clean Original Scanning Area]

[Menu] ▶ [Preferences] ▶ [Display Settings]

Specify whether a message is displayed to notify you if soiling is detected during feeder use.

* [Notify to Clean Original Scanning Area] may not be displayed depending on the model, and other settings.

[Off]
[On]

[Timer/Energy Settings]

A19R-08K

Set the date and time and specify the Energy Saver settings.

* Values in bold red text are the default settings for each item.

- ▶ [Quiet Mode Time](P. 430)
- ▶ [Current Date/Time Settings](P. 430)
- ▶ [Date/Time Settings](P. 430)
- ▶ [Date Format](P. 431)
- ▶ [Time Format](P. 431)
- ▶ [Auto Reset Time](P. 431)
- ▶ [Function After Auto Reset](P. 432)
- ▶ [Auto Sleep Time](P. 432)

[Quiet Mode Time]

[Menu] ▶ [Preferences] ▶ [Timer/Energy Settings]

Specify the period of time where the machine enters and exits the quiet mode in order to reduce the operation sound of the machine. ▶ **Reducing the Operation Sound (Quiet Mode)(P. 192)**

* This setting is only available when [Quiet Mode] is set to [Off]. ▶ [Quiet Mode](P. 457)

[Off]

[On]

[Start Time]

0:00 to 12:59 AM/PM

[End Time]

0:00 to 12:59 AM/PM

[Current Date/Time Settings]

[Menu] ▶ [Preferences] ▶ [Timer/Energy Settings]

Set the date and time for the machine. The date and time set here are used as a reference for the functions that use date and time information. ▶ **Setting the Date and Time(P. 393)**

Before configuring this setting, check that the correct time zone is selected. ▶ [Date/Time Settings](P. 430)

* The current date and time cannot be changed for one hour after Daylight Saving Time is set.

[Date/Time Settings]

[Menu] ▶ [Preferences] ▶ [Timer/Energy Settings]

Set the time zone (UTC*¹) and Daylight Saving Time according to the region where the machine is installed.

*¹ The UTC (Coordinated Universal Time) is the coordinated time standard used to regulate time in all parts of the world. Internet-based communication relies on the UTC being set correctly.

* Depending on your country or region, the [Date/Time Settings] setting may not be displayed, or its content or default setting may be different.

* When you change the time zone, the current time setting is automatically changed accordingly. ▶ **[Current Date/Time Settings](P. 430)** .

* If daylight saving time is enabled, specify the dates from which and to which daylight saving time is in effect.

[Time Zone]
 [(UTC-12:00) International Date Line West] to **[(UTC) Coordinated Universal Time]** to [(UTC+14:00) Kiritimati Island]
 [Daylight Saving Time Settings]
[Off]
 [On]
 [Start]: Month, Week, Day
 [End]: Month, Week, Day

[Date Format]

[Menu] ▶ [Preferences] ▶ [Timer/Energy Settings]

Set the order in which the year, month, and day are displayed.

* Depending on your country or region, the [Date Format] setting may not be available, or its content or default setting may be different.

[YYYY MM/DD]
[MM/DD/YYYY]
 [DD/MM YYYY]

[Time Format]

[Menu] ▶ [Preferences] ▶ [Timer/Energy Settings]

Set 12 Hour or 24 Hour as the format for displayed time.

[12 Hour (AM/PM)]
 [24 Hour]

[Auto Reset Time]

[Menu] ▶ [Preferences] ▶ [Timer/Energy Settings]

If the control panel is not used for a set period, a function called "Auto Reset Time" automatically restores the default settings.

You can specify the amount of time that elapses before Auto Reset is performed.

* You can also change the screen that is displayed after an Auto Reset. ▶ **[Function After Auto Reset](P. 432)**

0 (Off)
 1 to **2** to 9 (min.)

NOTE

Situations Where Auto Reset is Not Triggered

- When the Error lamp on the control panel is flashing ▶ **Control Panel(P. 13)**
- When the [Menu] screen or an error message^{*1} is displayed on the control panel

- When processing of some sort (such as printing or sending and receiving faxes) is in progress

*1 Auto Reset is performed for some messages.

[Function After Auto Reset]

[Menu] ▶ [Preferences] ▶ [Timer/Energy Settings]

Set the screen displayed after an Auto Reset.

- To view the specified screen, specify the screen in [Default Function]. Specify the displayed screen in [Default Screen after Startup/Restoration]. ▶**[Default Screen after Startup/Restoration](P. 426)**
- To display the screen for the function being used before the Auto Reset, specify the screen in [Selected Function].

[Default Function]

[Selected Function]

[Auto Sleep Time]

[Menu] ▶ [Preferences] ▶ [Timer/Energy Settings]

Set the time after which the machine automatically goes into sleep mode. ▶**Reducing Power Consumption (Sleep Mode)(P. 115)**

* Use of the default settings is recommended to achieve the most effective power savings.

1 to 120 (min.)

[Network]

A19R-08L

Specify the settings for the machine's network environment.

* Values in bold red text are the default settings for each item.

- ▶ [Select Wired/Wireless LAN](P. 433)
- ▶ [Wireless LAN Settings](P. 433)
- ▶ [Direct Connection Settings](P. 433)
- ▶ [Easy Connection via PC](P. 434)
- ▶ [TCP/IP Settings](P. 434)
- ▶ [SNMP Settings](P. 434)
- ▶ [Dedicated Port Settings](P. 435)
- ▶ [Dedicated Port Authentication Method](P. 435)
- ▶ [Waiting Time for Connection at Startup] (P. 435)
- ▶ [Ethernet Driver Settings](P. 435)
- ▶ [IEEE 802.1X Settings](P. 436)
- ▶ [Firewall Settings](P. 436)
- ▶ [Web Service Setup](P. 437)
- ▶ [Web Service Inquiry](P. 437)
- ▶ [RMT-SW](P. 437)
- ▶ [Initialize Network Settings](P. 437)

[Select Wired/Wireless LAN]

[Menu] ▶ [Preferences] ▶ [Network]

Set whether to connect the machine to the network using a wired or wireless LAN. ▶ **Selecting Wired or Wireless LAN(P. 58)**

* If you are switching from a wired LAN to a wireless LAN, you can make the change within the procedure for configuring the wireless LAN.

<p>[Wired LAN]</p> <p>[Wireless LAN]</p>
--

[Wireless LAN Settings]

[Menu] ▶ [Preferences] ▶ [Network]

Specify the settings for connecting the machine to a wireless LAN and to save energy while the machine is connected to a wireless LAN.

▶ [Wireless LAN Settings](P. 438)

[Direct Connection Settings]

[Menu] ▶ [Preferences] ▶ [Network]

Specify the settings for using a direct connection and for the connection function. ▶ **Enabling the Direct Connection Function(P. 319)**

<p>[Use Direct Connection]</p> <p>[Off]</p> <p>[On]</p> <p>[Time Until Direct Connection Termination]</p> <p>0 (Off)</p> <p>1 to 60 (min.)</p> <p>[Access Point Mode Settings]</p>
--

[Use Custom SSID]
[Off]
[On]
[SSID (1-20 Characters)]
[Use Custom Network Key]
[Off]
[On]
[Network Key (10 Char.)]
[Keep Enabled If SSID/Ntwk Key Spcfd]* ¹
[Off]
[On]
[Config. IP Address For Direct Conn.]
192.168.22.1

*¹ May not be displayed depending on the model, and other settings.

[Easy Connection via PC]

[Menu] ► [Preferences] ► [Network]

Start cableless setup mode.

To configure the network settings using the application, select cableless setup mode.

[TCP/IP Settings]

[Menu] ► [Preferences] ► [Network]

Specify the settings for using the machine on a TCP/IP network.

► **[TCP/IP Settings](P. 440)**

[SNMP Settings]

[Menu] ► [Preferences] ► [Network]

Specify the settings for setting up, monitoring, and controlling the machine using SNMP management software. ►

Configuring SNMP(P. 91)

To ensure compliance with the protocol's advanced specifications (RFC2790) when the machine's status is being monitored, set [Format Host Resources MIB to RFC2790] to [On].

[SNMPv1 Settings]
[Off]
[On]
[SNMPv3 Settings]
[Off]
[On]
[Acquire Printer Mngt. Info. from Host]
[Off]
[On]

[Format Host Resources MIB to RFC2790]
 [Off]
 [On]

[Dedicated Port Settings]

[Menu] ▶ [Preferences] ▶ [Network]

Specify whether to use a dedicated port.

Use a dedicated port for tasks such as printing from a computer, scanning using the MF Scan Utility, and configuring or browsing the machine's settings.

[Off]
 [On]

[Dedicated Port Authentication Method]

[Menu] ▶ [Preferences] ▶ [Network]

Set the authentication method when using a dedicated port.

If you specify [Mode 2], communication via the dedicated port will be limited to secure authentication methods only. This may mean that you cannot connect to the machine from device management software, drivers or other software.

[Mode 1]
 [Mode 2]

[Waiting Time for Connection at Startup]

[Menu] ▶ [Preferences] ▶ [Network]

Set the waiting time until a connection is established when the machine starts up.

If the machine is connected via a device such as a switching hub, you may not be able to connect to the network even when the setting on the machine is correct. If so, set the waiting time and reconnect.

0 to 300 (sec.)

[Ethernet Driver Settings]

[Menu] ▶ [Preferences] ▶ [Network]

Set the Ethernet communication method. [▶ Manually Configuring the Ethernet Settings\(P. 84\)](#)

This also allows you to check the MAC address on a wired LAN. [▶ Viewing the MAC Address of the Wired LAN\(P. 99\)](#)

Touch Panel Model

[MAC Address]
 [Auto Detect]
 [Off]
 [Communication Mode]
 [Half Duplex]
 [Full Duplex]
 [Ethernet Type]
 [10BASE-T]

[100BASE-TX]
[On]

5 Lines LCD Model

[Auto Detect]
[Off]
[Communication Mode]
[Half Duplex]
[Full Duplex]
[Ethernet Type]
[10BASE-T]
[100BASE-TX]
[On]
[MAC Address]

[IEEE 802.1X Settings]

[Menu] ► [Preferences] ► [Network]

Specify whether to use IEEE 802.1X.

Use Remote UI from a computer to set the IEEE 802.1X authentication method. [▶ Using IEEE 802.1X\(P. 358\)](#)

* [IEEE 802.1X Settings] may not be displayed depending on the model, and other settings.

[Off]
[On]

[Firewall Settings]

[Menu] ► [Preferences] ► [Network]

Specify whether to enable an IP address filter and MAC address filter.

Use Remote UI from a computer to set the default policy for filtering and the exception addresses. [▶ Setting the Firewall\(P. 350\)](#)

[IPv4 Address Filter]
[Outbound Filter]
[Off]
[On]
[Inbound Filter]
[Off]
[On]
[IPv6 Address Filter]
[Outbound Filter]
[Off]
[On]
[Inbound Filter]
[Off]
[On]

[MAC Address Filter]
[Outbound Filter]
[Off]
[On]
[Inbound Filter]
[Off]
[On]

[Web Service Setup]

[Menu] ▶ [Preferences] ▶ [Network]

Specify whether to use the Canon cloud integration service.

- To use the Canon cloud integration service, you must register the machine to a dedicated server. You can use [Issue Registration Code] to issue a code to use for registration. **▶Using the Cloud Integration Service to Print and Scan(P. 336)**

* Depending on the country or region, this service may not be available and the available applications may vary.

[Web Service Usage]
[Off]
[On]
[Issue Registration Code]

[Web Service Inquiry]

[Menu] ▶ [Preferences] ▶ [Network]

The machine accesses the server of the Canon cloud integration service to see if the sent print data is available. If print data is available, printing is performed. **▶Using the Cloud Integration Service to Print and Scan(P. 336)**

* Depending on the country or region, this service may not be available and the available applications may vary.

[RMT-SW]

[Menu] ▶ [Preferences] ▶ [Network]

Normally, use the machine with this set to [Off].

When your service representative carries out device maintenance remotely, he or she may change this to [On].

[Off]
[On]

[Initialize Network Settings]

[Menu] ▶ [Preferences] ▶ [Network]

Use this to restore the network settings to the factory settings. **▶Initializing Specific Settings and Data(P. 418)**

[Wireless LAN Settings]

A19R-08R

Specify the settings for connecting the machine to a wireless LAN and to save energy while the machine is connected to a wireless LAN.

* Values in bold red text are the default settings for each item.

▶ [Select Network](P. 438)

▶ [Other Connections](P. 438)

▶ [Connection Settings](P. 439)

[Select Network]

[Menu] ▶ [Preferences] ▶ [Network] ▶ [Wireless LAN Settings]

Select a wireless LAN router (access point) from the displayed list and enter the network key to connect. ▶ **Connecting to a Wireless LAN by Searching for a Router (Access Point Setup Method)(P. 69)**

[Other Connections]

[Menu] ▶ [Preferences] ▶ [Network] ▶ [Wireless LAN Settings]

Connect to the wireless LAN by a method other than selecting the wireless LAN router from a list.

[Manually Enter Network Name]

[Menu] ▶ [Preferences] ▶ [Network] ▶ [Wireless LAN Settings] ▶ [Other Connections]

Connect to a wireless LAN router by manually entering all the router information, such as the SSID, network key and security settings. ▶ **Connecting to a Wireless LAN by Setting the Details (Manual Setup Method)(P. 72)**

[Security Settings]
[None]
[WEP]
[Open System]
Encryption keys 1 to 4
[Shared Key]
Encryption keys 1 to 4
[WPA/WPA2-PSK]
[Auto]
[AES-CCMP]
[WPA/WPA2-EAP]
[WPA2-PSK/WPA3-SAE]
[Auto]
[AES-CCMP]
[WPA3-SAE]
[Auto]
[AES-CCMP]

[WPS Push Button Mode]

[Menu] ▶ [Preferences] ▶ [Network] ▶ [Wireless LAN Settings] ▶ [Other Connections]

Connect to a wireless LAN by pressing a button on a LAN router that supports WPS push button mode. ▶ **Connecting to a Wireless LAN by Using the Router Button (Push Button Mode)(P. 64)**

[WPS PIN Code Mode]

[Menu] ▶ [Preferences] ▶ [Network] ▶ [Wireless LAN Settings] ▶ [Other Connections]

Connect to a wireless LAN router that supports WPS PIN code mode by registering a PIN code generated by the machine. Use a computer or similar device to register the PIN code. ▶ **Connecting to a Wireless LAN by Entering a PIN Code (WPS PIN Code Mode)(P. 66)**

[Connection Settings]

[Menu] ▶ [Preferences] ▶ [Network] ▶ [Wireless LAN Settings]

Configure the setting to save power when connecting by wireless LAN, and check the wireless LAN connection information.

[Power Save Mode]

[Menu] ▶ [Preferences] ▶ [Network] ▶ [Wireless LAN Settings] ▶ [Connection Settings]

Specify whether to periodically set the machine to Power Save Mode according to signals sent from the wireless LAN router.

[Off]
[On]

[Connection Information]

[Menu] ▶ [Preferences] ▶ [Network] ▶ [Wireless LAN Settings] ▶ [Connection Settings]

Check data such as the security settings, as well as the wireless LAN MAC address and other connection information. ▶ **Viewing the MAC Address and Connection Information of the Wireless LAN(P. 100)**

[MAC Address]
[Wireless LAN Status]
[Latest Error Information]
[Channel]
[Network Name]
[Security Settings]
[Power Save Mode]

[TCP/IP Settings]

A19R-08S

Specify the settings to use the machine on a TCP/IP network.

* Values in bold red text are the default settings for each item.

- ▶ [IPv4 Settings](P. 440)
- ▶ [IPv6 Settings](P. 442)
- ▶ [WINS Settings](P. 443)
- ▶ [LPD Settings](P. 444)
- ▶ [RAW Settings](P. 444)
- ▶ [WSD Settings](P. 444)
- ▶ [IPP Print Settings](P. 445)
- ▶ [Use HTTP](P. 445)
- ▶ [Network Link Scan Settings](P. 445)
- ▶ [Port Number Settings](P. 445)
- ▶ [MTU Size](P. 446)

[IPv4 Settings]

[Menu] ▶ [Preferences] ▶ [Network] ▶ [TCP/IP Settings]

Specify the settings to use the machine in an IPv4 environment.

[IP Address Settings]

[Menu] ▶ [Preferences] ▶ [Network] ▶ [TCP/IP Settings] ▶ [IPv4 Settings]

Set the IPv4 address either automatically or manually. ▶ **Setting IPv4 Addresses(P. 77)**

[Auto Acquire] [Select Protocol] [Off] [DHCP] [Auto IP] [Off] [On] [Manually Acquire]*1 [IP Address]: 0.0.0.0 [Subnet Mask]: 0.0.0.0 [Gateway Address]: 0.0.0.0 [Check Settings]

*1 May not be displayed depending on the model, and other settings.

[PING Command]

[Menu] ▶ [Preferences] ▶ [Network] ▶ [TCP/IP Settings] ▶ [IPv4 Settings]

Execute a PING command to check whether the machine can connect to devices on the network. ▶ **Checking Whether the Machine Can Connect to Network Devices(P. 97)**

[DNS Settings]

[Menu] ▶ [Preferences] ▶ [Network] ▶ [TCP/IP Settings] ▶ [IPv4 Settings]

Specify the DNS settings when using the machine in an environment with a Domain Name System (DNS) implemented. ▶ **Configuring DNS(P. 85)**

[DNS Server Settings]
 [Primary DNS Server]: 0.0.0.0
 [Secondary DNS Server]: 0.0.0.0

[DNS Host Name/Domain Name Settings]
 [Host Name]
 [Domain Name]

[DNS Dynamic Update Settings]
[Off]
 [On]
 [DNS Dyn. Updt. Intrvl.]
 0 to **24** to 48 (hr.)

[mDNS Settings]

[Menu] ► [Preferences] ► [Network] ► [TCP/IP Settings] ► [IPv4 Settings]

Specify the mDNS settings to use DNS functions in an environment such as Bonjour with no DNS installed.

[Off]
[On]
 [mDNS Name]

[DHCP Option Settings]

[Menu] ► [Preferences] ► [Network] ► [TCP/IP Settings] ► [IPv4 Settings]

Specify the settings for using a DHCP server in an IPv4 environment with a Domain Name System (DNS) implemented. ► **Configuring DNS(P. 85)**

[Acquire Host Name]
 [Off]
[On]

[DNS Dynamic Update]
[Off]
 [On]

[Acquire DNS Server Address]
 [Off]
[On]

[Acquire Domain Name]
 [Off]
[On]

[Acquire WINS Server Address]
 [Off]
[On]

[Acquire SMTP Server Address]*1
[Off]

[On]
[Acquire POP Server Address]*1
[Off]
[On]

*1 May not be displayed depending on the model, and other settings.

[IPv6 Settings]

[Menu] ▶ [Preferences] ▶ [Network] ▶ [TCP/IP Settings]

Specify the settings for using the machine in an IPv6 environment.

You can set multiple IPv6 addresses and use them at the same time. [▶Setting IPv6 Addresses\(P. 81\)](#)

[Use IPv6]

[Menu] ▶ [Preferences] ▶ [Network] ▶ [TCP/IP Settings] ▶ [IPv6 Settings]

Configure whether to use IPv6.

[Off]
[On]
[Check Settings]

[Stateless Address Settings]

[Menu] ▶ [Preferences] ▶ [Network] ▶ [TCP/IP Settings] ▶ [IPv6 Settings]

Configure whether to use a stateless address.

[Off]
[On]
[Check Settings]

[Use DHCPv6]

[Menu] ▶ [Preferences] ▶ [Network] ▶ [TCP/IP Settings] ▶ [IPv6 Settings]

Configure whether to use a stateful address obtained from a DHCP server using DHCPv6.

[Off]
[On]
[Check Settings]

[DNS Settings]

[Menu] ▶ [Preferences] ▶ [Network] ▶ [TCP/IP Settings] ▶ [IPv6 Settings]

Specify the DNS settings when using the machine in an environment with a Domain Name System (DNS) implemented. [▶Configuring DNS\(P. 85\)](#)

[DNS Host Name/Domain Name Settings]
[Off]
[Host Name]
[Domain Name]
[On]

[DNS Dynamic Update Settings]
 [Off]
 [On]
 [Register Manual Address]
 [Off]
 [On]
 [Register Stateful Address]
 [Off]
 [On]
 [Register Stateless Address]
 [Off]
 [On]
 [DNS Dynamic Update Interval]
 0 to **24** to 48 (hr.)

[mDNS Settings]

[Menu] ▶ [Preferences] ▶ [Network] ▶ [TCP/IP Settings] ▶ [IPv6 Settings]

Specify the mDNS settings to use DNS functions in an environment such as Bonjour with no DNS installed.

[Off]
 [On]
 [Use IPv4 Name for mDNS]
 [Off]
 [mDNS Name]
 [On]

[DHCP Option Settings]

[Menu] ▶ [Preferences] ▶ [Network] ▶ [TCP/IP Settings] ▶ [IPv6 Settings]

Specify the settings for using a DHCP server in an IPv4 environment with a Domain Name System (DNS) implemented. **▶ Configuring DNS(P. 85)**

[Acquire DNS Server Address]
 [Off]
 [On]

 [Acquire Domain Name]
 [Off]
 [On]

[WINS Settings]

[Menu] ▶ [Preferences] ▶ [Network] ▶ [TCP/IP Settings]

Configure WINS (Windows Internet Name Service) when using the machine in a network environment that uses both NetBIOS and TCP/IP. **▶ Configuring WINS(P. 90)**

[WINS Resolution]
 [Off]
 [On]

[WINS Server Address]: 0.0.0.0

[LPD Settings]

[Menu] ▶ [Preferences] ▶ [Network] ▶ [TCP/IP Settings]

Specify whether to use the LPD protocol. **▶Configuring LPD, RAW, or WSD(P. 388)**

If the LPD protocol is used, you can also set the time from the start of reception standby, after print data reception is canceled, to the timeout.

[LPD Print Settings]
[Off]
[On]

[RX Timeout]
1 to **5** to 60 (min.)

[RAW Settings]

[Menu] ▶ [Preferences] ▶ [Network] ▶ [TCP/IP Settings]

Specify whether to use the RAW protocol. **▶Configuring LPD, RAW, or WSD(P. 388)**

If the RAW protocol is used, you can also set the time from the start of reception standby, after print data reception is canceled, to the timeout.

[RAW Print Settings]
[Off]
[On]

[RX Timeout]
1 to **5** to 60 (min.)

[WSD Settings]

[Menu] ▶ [Preferences] ▶ [Network] ▶ [TCP/IP Settings]

Specify whether to use the WSD protocol. You can specify this setting for each of the functions that use the WSD protocol. **▶Configuring LPD, RAW, or WSD(P. 388)**

[WSD Print Settings]
[Use WSD Print]
[Off]
[On]

[Use WSD Browsing]
[Off]
[On]

[Use Multicast Discovery]
[Off]
[On]

[WSD Scan Settings]
[Use WSD Scan]

[Off]
[On]
[Use Computer Scan]
[Off]
[On]

[IPP Print Settings]

[Menu] ▶ [Preferences] ▶ [Network] ▶ [TCP/IP Settings]

Specify whether to use IPP (Internet Printing Protocol). You can use IPP when printing and sending fax with AirPrint. ▶ **Setting the Functions and Security to Be Used with AirPrint(P. 328)**
When using IPP, you can also specify whether TLS encryption is used for communication.

[Use IPP Printing]
[Off]
[On]
[Allow IPP Printing Only When Using TLS]
[Off]
[On]

[Use HTTP]

[Menu] ▶ [Preferences] ▶ [Network] ▶ [TCP/IP Settings]

Specify whether to use HTTP. ▶ **Disabling HTTP Communication(P. 390)**

[Off]
[On]

[Network Link Scan Settings]

[Menu] ▶ [Preferences] ▶ [Network] ▶ [TCP/IP Settings]

Specify whether to use Network Link Scan. You can use Network Link Scan when scanning documents with AirPrint. ▶ **Setting the Functions and Security to Be Used with AirPrint(P. 328)**
When using Network Link Scan, you can also specify whether TLS encryption is used for communication.

* Setting [Use Network Link Scan] to [On] enables HTTP communication. ▶ **[Use HTTP](P. 445)**

[Use Network Link Scan]
[Off]
[On]
[Use TLS]
[Off]
[On]

[Port Number Settings]

[Menu] ▶ [Preferences] ▶ [Network] ▶ [TCP/IP Settings]

Specify the port number for the protocol used in accordance with the port numbers for the computer, server or other device. ▶ **Changing the Port Number(P. 353)**

[LPD] 1 to 515 to 65535
[RAW] 1 to 9100 to 65535
[WSD Multicast Discovery] 1 to 3702 to 65535
[HTTP] 1 to 80 to 65535
[POP3]*1 1 to 110 to 65535
[SMTP TX]*1 1 to 25 to 65535
[SNMP] 1 to 161 to 65535

*1 May not be displayed depending on the model, and other settings.

[MTU Size]

[Menu] ▶ [Preferences] ▶ [Network] ▶ [TCP/IP Settings]

If communication slows down due to the size of the packets sent, use this to change the maximum size for outgoing packets.

[1300]
[1400]
[1500]

[External Interface]

A19R-08U

Specify the settings for USB connections.

* Values in bold red text are the default settings for each item.

▶ [USB Settings](P. 447)

[USB Settings]

[Menu] ▶ [Preferences] ▶ [External Interface]

Specify the settings for using the USB ports.

Specify whether to use the USB port for connecting to the computer in [Use as USB Device]. ▶ **Preventing Connection to Computer via USB Port(P. 387)**

[Use as USB Device] [Off] [On]

[Accessibility]

A19R-08W

Configure control panel screen features such as screen color inversion and message display time to make the screen easier to see.

* Values in bold red text are the default settings for each item.

- ▶ [Invert Screen Colors](P. 448)
- ▶ [Contrast](P. 448)
- ▶ [Message Display Time](P. 448)
- ▶ [Scrolling Speed](P. 448)
- ▶ [Cursor Movement Type](P. 449)

[Invert Screen Colors]

[Menu] ▶ [Preferences] ▶ [Accessibility]

Specify whether light and dark on the control panel screen are reversed.

[Off]
[On]

[Contrast]

[Menu] ▶ [Preferences] ▶ [Accessibility]

Adjust the contrast to make the control panel screen easier to view.

7 levels

[Message Display Time]

[Menu] ▶ [Preferences] ▶ [Accessibility]

Set the number of seconds for which each message is displayed when 2 messages are displayed alternately on the control panel screen.

1 to **2** to 5 (sec.)

[Scrolling Speed]

[Menu] ▶ [Preferences] ▶ [Accessibility]



Set the scrolling speed when operating the screen.

[Slow]
[Standard]
[Fast]

[Cursor Movement Type]

[Menu] ▶ [Preferences] ▶ [Accessibility]

Set the cursor operation when entering text.

Set to [Auto] to move the cursor automatically to the next input field after entering text. When set to [Manual], you must press  or  to move the cursor.

[Auto]
[Manual]

[Volume Settings]

A19R-08X

Set whether the machine emits sounds notifying you of operations and statuses. ▶ **Adjusting the Volume (For Models with a Fax Function)(P. 188)**

* Values in bold red text indicate the default setting for each item.

* [Volume Settings] may not be displayed depending on the model, and other settings.

- ▶ [Fax Tone](P. 450)
- ▶ [Ring Tone](P. 450)
- ▶ [TX Done Tone](P. 450)
- ▶ [RX Done Tone](P. 450)
- ▶ [Scanning Done Tone](P. 451)
- ▶ [Entry Tone](P. 451)
- ▶ [Invalid Entry Tone](P. 451)
- ▶ [Restock Supplies Tone](P. 451)
- ▶ [Warning Tone](P. 452)
- ▶ [Job Done Tone](P. 452)
- ▶ [Energy Saver Alert](P. 452)
- ▶ [Original in Feeder Detection Tone](P. 452)

[Fax Tone]

[Menu] ▶ [Preferences] ▶ [Volume Settings]

Adjust the volume of the dial tone while sending a fax.

4 levels

[Ring Tone]

[Menu] ▶ [Preferences] ▶ [Volume Settings]

Adjust the volume of the dial tone while sending a fax.

4 levels

[TX Done Tone]

[Menu] ▶ [Preferences] ▶ [Volume Settings]

Adjust the volume of the beep to notify when sending a fax is complete. You can set the machine to beep only when a sending error is occurred.

4 levels

[When Error]

[Off]

[On]

[RX Done Tone]

[Menu] ▶ [Preferences] ▶ [Volume Settings]

Adjust the volume of the beep to notify when receiving a fax is complete. You can set the machine to beep only when a receiving error is occurred.

4 levels
 [When Error]
 [Off]
 [On]

[Scanning Done Tone]

[Menu] ▶ [Preferences] ▶ [Volume Settings]

Adjust the volume of the beep to notify when receiving a fax is complete. You can set the machine to beep only when a receiving error is occurred.

4 levels
 [When Error]
 [Off]
 [On]

[Entry Tone]

[Menu] ▶ [Preferences] ▶ [Volume Settings]

Set whether to emit a sound when you press the keys and buttons on the control panel.

[Off]
 [On]

[Invalid Entry Tone]

[Menu] ▶ [Preferences] ▶ [Volume Settings]

Set whether to emit a sound when an invalid key is pressed, such as when you enter a value outside the setting range.

[Off]
 [On]

[Restock Supplies Tone]

[Menu] ▶ [Preferences] ▶ [Volume Settings]

Set whether to emit a sound when the toner cartridges are nearing the end of their lifetime.

[Off]
 [On]

[Warning Tone]

[Menu] ▶ [Preferences] ▶ [Volume Settings]

Set whether to emit a sound when the machine has a paper jam or other malfunction.

[Off]
[On]

[Job Done Tone]

[Menu] ▶ [Preferences] ▶ [Volume Settings]

Set whether to emit a sound when an operation on the machine is completed, such as copying or scanning.

[Off]
[On]

[Energy Saver Alert]

[Menu] ▶ [Preferences] ▶ [Volume Settings]

Set whether to emit a sound when the machine enters and exits sleep mode.

[Off]
[On]

[Original in Feeder Detection Tone]

[Menu] ▶ [Preferences] ▶ [Volume Settings]

Set whether the machine beeps when it is detected that an original is loaded in the feeder.

[Off]
[On]

[Adjustment/Maintenance]

A19R-08Y

Use this setting to adjust the print quality and when cleaning the machine.

▶[Adjust Image Quality](P. 453)

▶[Maintenance](P. 453)

[Adjust Image Quality]

[Menu] ▶ [Adjustment/Maintenance]

Use this setting to adjust the image quality and for special processing according to the paper used.

▶[Adjust Image Quality](P. 454)

[Maintenance]

[Menu] ▶ [Adjustment/Maintenance]

Carry out maintenance to clean the machine and to control condensation.

▶[Maintenance](P. 459)

[Adjust Image Quality]

A19R-090

Use this setting to adjust the image quality and for special processing according to the paper used.

* Values in bold red text are the default settings for each item.

▶ **[Printer Density](P. 454)**

▶ **[Toner Save](P. 454)**

▶ **[Special Processing](P. 454)**

[Printer Density]

[Menu] ▶ [Adjustment/Maintenance] ▶ [Adjust Image Quality]

If printed text or fine lines appear faded, adjust the density. ▶ **Adjusting the Print Density(P. 538)**

[9 levels]

[Toner Save]

[Menu] ▶ [Adjustment/Maintenance] ▶ [Adjust Image Quality]

You can specify whether to save toner when printing a report or list of copies or received faxes.

* If you select [On], the print result may be faded or blurred.

[Off]
[On]

[Special Processing]

[Menu] ▶ [Adjustment/Maintenance] ▶ [Adjust Image Quality]

Use a range of processes to resolve problems that arise due to factors such as the paper type, the material used, or its condition.

▶ **[Special Processing](P. 455)**

[Special Processing]

A19R-091

Use a range of processes to resolve problems that arise due to factors such as the paper type, the material used, or its condition.

* Values in bold red text are the default settings for each item.

- | | |
|--------------------------------------|--|
| ▶ [Special Paper Processing](P. 455) | ▶ [Talc Paper Mode](P. 457) |
| ▶ [High Humidity Mode](P. 456) | ▶ [Quiet Mode](P. 457) |
| ▶ [Low Humidity Mode](P. 456) | ▶ [Correct Blurry Image for Copy](P. 458) |
| ▶ [Reduce Ghosting 1](P. 456) | ▶ [Correct Blurry Image](P. 458) |
| ▶ [Prevent Fogging](P. 456) | ▶ [Transfer Adjustment Mode](P. 458) |
| ▶ [Reduce Toner Flaking](P. 457) | ▶ [Reduce Faint Print After Replacing Cart.](P. 458) |
| ▶ [Correct Paper Conveyance](P. 457) | |

[Special Paper Processing]

[Menu] ▶ [Adjustment/Maintenance] ▶ [Adjust Image Quality] ▶ [Special Processing]

Specify special processing for the paper in the following situations:

- If you are using special paper
 - To print on the back of printed paper
 - For paper with a rough surface
- If the envelope flap is stuck down
- If the paper curls during printing

[Manual Back Side Print (2-Sided Only)]

[Menu] ▶ [Adjustment/Maintenance] ▶ [Adjust Image Quality] ▶ [Special Processing] ▶ [Special Paper Processing]

If you are using paper that has already been printed on, printing on the back side may appear faint. If this occurs, setting the paper source to [On] may improve the print results.

* When this is set to [On], if some time has passed since the front side of the paper was printed, or depending on the operating environment humidity, changes in image quality may occur.

[Drawer 1] [Off] [On]

[Rough Surface Paper Mode]

[Menu] ▶ [Adjustment/Maintenance] ▶ [Adjust Image Quality] ▶ [Special Processing] ▶ [Special Paper Processing]

If you are using paper with a rough surface, printed images may appear faint. If this occurs, setting the paper source to [On] may improve the print results.

* Specifying [On] in this setting may lead to slower print speeds or changes in the image quality.

[Drawer 1] [Off] [On]

[Envelope Flap Closing Prevention]

[Menu] ▶ [Adjustment/Maintenance] ▶ [Adjust Image Quality] ▶ [Special Processing] ▶ [Special Paper Processing]

Depending on the type of envelope and the operating environment, the envelope flap may stick down during printing. If so, specifying [On] in this setting may reduce the likelihood of envelope flaps sticking down.

* If this is set to [On], the print may be faded because the toner is not fully fixed on the paper.

[Off]
[On]

[High Humidity Mode]

[Menu] ▶ [Adjustment/Maintenance] ▶ [Adjust Image Quality] ▶ [Special Processing]

Printing in a high-humidity environment may cause uneven print density. If so, specifying [On] may improve the print results.

* Specifying [On] in this setting may lead to blurred images and/or text in low-humidity environments.

[Off]
[On]

[Low Humidity Mode]

[Menu] ▶ [Adjustment/Maintenance] ▶ [Adjust Image Quality] ▶ [Special Processing]

Printing in a low-humidity environment may lead to blurred images and/or text. In this case, selecting [Mode 1] may improve the print results. If that does not work, try selecting [Mode 2] and then [Mode 3].

* Enabling this setting may reduce the density or create fading in a humid environment.

[Off]
[Mode 1]
[Mode 2]
[Mode 3]

[Reduce Ghosting 1]

[Menu] ▶ [Adjustment/Maintenance] ▶ [Adjust Image Quality] ▶ [Special Processing]

If you print on small-sized paper and then continue printing on a larger sized paper, ghost images may appear in the unprinted sections of the paper. If this occurs, specifying [On] may improve the print results.

* When you select [On], the printing speed may decrease.

[Off]
[On]

[Prevent Fogging]

[Menu] ▶ [Adjustment/Maintenance] ▶ [Adjust Image Quality] ▶ [Special Processing]

White (blank) areas in the printed image may be darkened. If so, specifying [On] may correct the problem.

* When you select [On], the print density may decrease.

[Off]
[On]

[Reduce Toner Flaking]

[Menu] ▶ [Adjustment/Maintenance] ▶ [Adjust Image Quality] ▶ [Special Processing]

Depending on the paper type and operating environment, the toner in printed images may peel off. If so, specifying [Mode 1] in this setting may improve the print results. If this does not solve the problem, specify [Mode 2].

* Enabling this setting may result in ghosting in blank areas.

[Off]
[Mode 1]
[Mode 2]

[Correct Paper Conveyance]

[Menu] ▶ [Adjustment/Maintenance] ▶ [Adjust Image Quality] ▶ [Special Processing]

Continuous printing may result in repeated paper jams. In this case, selecting [On] may reduce the frequency of paper jams.

* When you select [On], the printing speed may decrease.

[Off]
[On]

[Talc Paper Mode]

[Menu] ▶ [Adjustment/Maintenance] ▶ [Adjust Image Quality] ▶ [Special Processing]

Printing in a high-temperature or high-humidity environment may cause white spots on a printed image. If so, specifying [On] in this setting may improve the print results.

* When you select [On], the print quality may be affected.

[Off]
[On]

[Quiet Mode]

[Menu] ▶ [Adjustment/Maintenance] ▶ [Adjust Image Quality] ▶ [Special Processing]

If the operation sound during printing is loud, selecting [On] may reduce the operation sound.

* When you select [On], the printing speed and scanning speed decrease.

[Off]
[On]

[Correct Blurry Image for Copy]

[Menu] ▶ [Adjustment/Maintenance] ▶ [Adjust Image Quality] ▶ [Special Processing]

Depending on the paper type or the usage environment of the machine, there may be blurry stains on the copied paper. If so, specifying this setting may improve the situation. First, specifying [Mode 1] may correct the problem. If this does not correct the problem, select [Mode 2] and [Mode 3] in that order.

* When this setting is enabled, the print density may decrease.

[Off]
[Mode 1]
 [Mode 2]
 [Mode 3]

[Correct Blurry Image]

[Menu] ▶ [Adjustment/Maintenance] ▶ [Adjust Image Quality] ▶ [Special Processing]

Depending on the paper type or the usage environment of the machine, there may be blurry stains on the printed paper. If so, specifying this setting may improve the situation. First, specifying [Mode 1] may correct the problem. If this does not correct the problem, specify [Mode 2].

* When this setting is enabled, the print density may decrease or the print speed may be slower.

[Off]
[Mode 1]
 [Mode 2]

[Transfer Adjustment Mode]

[Menu] ▶ [Adjustment/Maintenance] ▶ [Adjust Image Quality] ▶ [Special Processing]

Depending on the paper used, printing may appear uneven with printing in a humid environment. In this case, selecting [Mode 1] may improve the print results. If that does not work, try selecting [Mode 2].

* When this setting is enabled, the print density may vary in an environment with low humidity.

[Off]
 [Mode 1]
 [Mode 2]

[Reduce Faint Print After Replacing Cart.]

[Menu] ▶ [Adjustment/Maintenance] ▶ [Adjust Image Quality] ▶ [Special Processing]

Print may be faded immediately after installing a new replacement toner cartridge. If so, specifying [On] in this setting may improve the print results. This setting takes effect the next time a toner cartridge is replaced.

* Specifying [On] will result in a longer delay than usual between replacing toner cartridge and being able to print.

[Off]
 [On]

[Maintenance]

A19R-092

Carry out maintenance to clean the machine and control condensation.

* Values in bold red text are the default settings for each item.

▶ [Clean Fixing Assembly](P. 459)

▶ [Clean Drum](P. 459)

▶ [Control Condensation](P. 459)

[Clean Fixing Assembly]

[Menu] ▶ [Adjustment/Maintenance] ▶ [Maintenance]

Perform this operation to clean the fixing assembly if black streaks appear on printed paper following procedures such as toner cartridge replacement. ▶ **Cleaning the Fixing Assembly(P. 526)**

[Clean Drum]

[Menu] ▶ [Adjustment/Maintenance] ▶ [Maintenance]

If the printout is smudged, the drum may be dirty. Perform this operation to clean the drum. ▶ **Cleaning the Drum(P. 527)**

[Control Condensation]

[Menu] ▶ [Adjustment/Maintenance] ▶ [Maintenance]

In environments subject to sudden temperature changes, condensation may form and cause images and/or text to be faint or blurred. If so, specifying [On] may improve the print results.

While removing condensation, a blank sheet of paper may be output because printing is not performed properly. Setting this to [On] saves every received fax to the memory. Or, you can set whether to restrict printing.

* If you set this to [On], you must keep the machine ON to continuously remove the condensation. The Auto Shutdown Time setting is disabled.

Touch Panel Model

[Off]

[On]

[Use Fax Memory Lock]

[Use Fax Mem. Lock+Do Not Allow Job Print]

5 Lines LCD Model

[Off]

[On]

[Allow Job Printing During Process]

[Do Not Allow Job Printing During Process]

[Function Settings]

A19R-093

Specify the settings for printing, scanning, faxing, and copying.

- ▶[Common](P. 460)
- ▶[Copy](P. 460)
- ▶[Printer](P. 460)
- ▶[Send](P. 460)
- ▶[Receive/Forward](P. 460)

[Common]

[Menu] ▶ [Function Settings]

Specify the settings for function operation, such as the paper source, printing, and scanning.

- ▶[Common](P. 461)

[Copy]

[Menu] ▶ [Function Settings]

Specify the settings for copying.

- ▶[Copy](P. 466)

[Printer]

[Menu] ▶ [Function Settings]

Specify the printer settings.

- ▶[Printer](P. 468)

[Send]

[Menu] ▶ [Function Settings]

Specify the settings for sending faxes and scanned data.

- ▶[Send](P. 480)

[Receive/Forward]

[Menu] ▶ [Function Settings]

Specify the settings for receiving and forwarding e-mails and faxes.

- ▶[Receive/Forward](P. 494)

* [Receive/Forward] may not be displayed depending on the model, and other settings.

[Common]

A19R-094

Specify the settings for function operations, such as the paper source, printing and scanning.

▶ [Paper Feed Settings](P. 461)

▶ [Print Settings](P. 461)

▶ [Scan Settings](P. 461)

▶ [Generate File](P. 461)

▶ [Fax Setup Guide](P. 461)

[Paper Feed Settings]

[Menu] ▶ [Function Settings] ▶ [Common]

Specify the settings for the paper source.

▶ [Paper Feed Settings](P. 462)

[Print Settings]

[Menu] ▶ [Function Settings] ▶ [Common]

Specify the settings for printing.

▶ [Print Settings](P. 463)

[Scan Settings]

[Menu] ▶ [Function Settings] ▶ [Common]

Specify the settings for scanning.

▶ [Scan Settings](P. 464)

[Generate File]

[Menu] ▶ [Function Settings] ▶ [Common]

Specify the settings for scan file generation.

▶ [Generate File](P. 465)

[Fax Setup Guide]

[Menu] ▶ [Function Settings] ▶ [Common]

Configure the settings for faxing by following the instructions on the screen. ▶ **Configuring the Fax Settings (Fax Setup Guide)(P. 103)**

* [Fax Setup Guide] may not be displayed depending on the model, and other settings.

[Paper Feed Settings]

A19R-095

Specify the settings for the paper source.

* Values in bold red text are the default settings for each item.

☉ [Switch Paper Feed Method](P. 462)

[Switch Paper Feed Method]

[Menu] ▶ [Function Settings] ▶ [Common] ▶ [Paper Feed Settings]

Specify the settings used when printing on paper with a pre-printed logo.

Normally, when such paper is used, you need to change the direction in which the paper is loaded and which side faces up according to whether printing is 1-sided or 2-sided.

If you set [Print Side Priority] as the paper source for the loaded paper, there is no need to change the direction of the paper loaded or which side faces up. If you specify [Print Side Priority], always load the paper using the method for 2-sided printing. ☉ **Orientation for Loading Paper with a Logo(P. 152)**

* If you specify [Print Side Priority] in this setting, 1-sided printing will be slower. If you are using paper without a pre-printed logo, or if you are not using 2-sided printing for paper with a pre-printed logo, specify [Speed Priority].

[Drawer 1] [Speed Priority] [Print Side Priority]
--

NOTE

- If you specify [Print Side Priority] for a paper source containing a paper that cannot be used for 2-sided printing, that setting is disabled and the machine operates using the [Speed Priority] setting.

[Print Settings]

A19R-096

Specify the settings for printing.

* Values in bold red text are the default settings for each item.

▶ [Auto Delete Suspended Jobs] (P. 463)

[Auto Delete Suspended Jobs]

[Menu] ▶ [Function Settings] ▶ [Common] ▶ [Print Settings]

Specify whether to automatically delete the print or copy job when an error occurs and printing stops. If you specify automatic deletion, you can also specify the time before the job is deleted.

[Off]

[On]

[Time Until Auto Delete]

0 to **5** to 240 (min.)

[Scan Settings]

A19R-097

Specify the settings for scanning.

* Values in bold red text are the default settings for each item.

◉ [Speed/Img. Qlty. Priority for Color Scan](P. 464)

◉ [Auto Online](P. 464)

◉ [Auto Offline](P. 464)

[Speed/Img. Qlty. Priority for Color Scan]

[Menu] ▶ [Function Settings] ▶ [Common] ▶ [Scan Settings]

Select whether to give priority to speed or print quality when scanning originals.

<p>[Speed Priority] [Image Quality Priority]</p>

[Auto Online]

[Menu] ▶ [Function Settings] ▶ [Common] ▶ [Scan Settings]

Specify whether the machine automatically goes online (scan standby mode) when you are scanning from a computer. If you specify [Off] in this setting, you must press [Scan] ▶ [Remote Scanner] in the control panel [Home] screen to bring the machine online before performing the scan.

<p>[Off] [On]</p>

[Auto Offline]

[Menu] ▶ [Function Settings] ▶ [Common] ▶ [Scan Settings]

Specify the amount of time where the machine remains online (Scan Standby Mode), but no scanning is performed. After the specified time, the machine is brought offline.

<p>[Auto Offline Time] 0 (Off) 1 to 5 to 60 (min.)</p>

[Generate File]

A19R-098

Specify the settings for scan file generation.

* Values in bold red text are the default settings for each item.

▶ [Output File Image Settings](P. 465)

[Output File Image Settings]

[Menu] ▶ [Function Settings] ▶ [Common] ▶ [Generate File]

Specify the gamma value used when a scan file is converted to YCbCr for transmission.

Setting a gamma value that matches that of the display used by the recipient ensures that image display is faithful to the original.

[YCbCr TX Gamma Value]
[Gamma 1.0]
[Gamma 1.4]
[Gamma 1.8]
[Gamma 2.2]

NOTE

- For information on the display's gamma value, see the manual for the display.

[Copy]

Specify the settings for copying.

* Values in bold red text are the default settings for each item.


▶ **[Change Default Settings](P. 466)**

▶ **[Initialize Default Settings](P. 467)**

[Change Default Settings]

[Menu] ▶ [Function Settings] ▶ [Copy]

Change the default settings for copying. ▶ **Changing the Default Settings(P. 185)**

The values specified here are also restored when you press  on the control panel while the copy screen is displayed.

[Number of Copies]	1 to 999
[Density]	9 levels
[Background]	[Auto]
	[Adjust (Manual)]
	9 levels
[Original Type]	[Text]
	[Text/Photo (High Speed)]
	[Text/Photo (Quality)]
	[Photo]
[2-Sided]	[Off]
	[1->2-Sided]
	[2->2-Sided] ^{*1}
	[2->1-Sided] ^{*1}
	[Original/Finishing Type]
[Copy Ratio]	[Custom Ratio]
	[100% (Direct)]
	[400% (Max)]
	[200%]
	[129% STMT->LTR]
	[78% LGL->LTR]
	[64% LTR->STMT]
	[50%]
	[25% (Min)]

[N on 1]
[Off]
[2 on 1]
[4 on 1]
[ID Card Copy]
[Select Layout]

[Collate]
[Off]
[On]

[Erase Frame]
[Off]
[On]

[Sharpness]
7 levels

*1 May not be displayed depending on the model, and other settings.

[Initialize Default Settings]

[Menu] ▶ [Function Settings] ▶ [Copy]

Use this to restore the copy settings to the factory settings.

[Printer]

A19R-09A

Specify the printer settings.

▶ **[Printer Settings](P. 468)**

▶ **[PDL Selection (Plug and Play)](P. 468)**

[Printer Settings]

[Menu] ▶ [Function Settings] ▶ [Printer]

Specify the settings for printer operation and for processing print data.

▶ **[Printer Settings](P. 469)**

[PDL Selection (Plug and Play)]

[Menu] ▶ [Function Settings] ▶ [Printer]

Specify which Page Description Language (PDL) to use when connecting the machine to a computer using Plug and Play.

▶ **[PDL Selection (Plug and Play)](P. 479)**

[Printer Settings]

A19R-09C

Specify the settings for printer operation and for processing print data.

* Values in bold text are the default settings for each item.

- ▶ [Prioritize Driver Settings When Printing](P. 469)
- ▶ [Copies](P. 469)
- ▶ [2-Sided Printing](P. 470)
- ▶ [Default Paper](P. 470)
- ▶ [Paper Size Override](P. 470)
- ▶ [Print Quality](P. 470)
- ▶ [Layout](P. 471)
- ▶ [Auto Error Skip](P. 473)
- ▶ [Timeout](P. 473)
- ▶ [UFR II](P. 473)
- ▶ [PCL](P. 474)
- ▶ [Imaging Settings](P. 478)

NOTE

If the control Panel and Printer Driver Have the Same Settings

- Priority is given to the printer driver settings. The control panel settings are valid for operating systems such as UNIX and PCL printing where printer drivers cannot be used and when printing from mobile devices.

[Prioritize Driver Settings When Printing]

[Menu] ▶ [Function Settings] ▶ [Printer] ▶ [Printer Settings]

Specify for each paper source whether the printer driver settings are given priority over the paper size and type specified in [Paper Set.] in the [Home] screen.

If you specify [On] in this setting, the machine will print from the paper source specified by the printer driver, regardless of the paper setting on the machine.

Also, if [On] is specified here and the size of the paper loaded differs markedly from that specified in the printer driver settings, you can specify whether printing proceeds anyway or printing is stopped and an error message is displayed.

* Note that specifying [On] in this setting when the paper loaded in the machine does not match the paper specified by the printer driver could lead to paper jams or printing errors.

* Several sheets of paper may be printed even if the machine is configured to cancel printing when an error message is displayed.

[Drawer 1]
[Off]
[On]
[Paper Size and Type]
[Force Output]
[Display Error]
[Paper Type Only]

[Copies]

[Menu] ▶ [Function Settings] ▶ [Printer] ▶ [Printer Settings]

Specify the number of copies to be printed.

1 to 999

[2-Sided Printing]

[Menu] ▶ [Function Settings] ▶ [Printer] ▶ [Printer Settings]

Specify whether to print on both sides of the paper.

[Off]
[On]

[Default Paper]

[Menu] ▶ [Function Settings] ▶ [Printer] ▶ [Printer Settings]

Specify the paper size and type to be used when printing from a mobile device or an OS that does not support the printer driver.

See below for the papers that can be specified.

🔍 **Usable Paper(P. 19)**

[Paper Size Override]

[Menu] ▶ [Function Settings] ▶ [Printer] ▶ [Printer Settings]

Specify whether the machine substitutes A4 size paper for Letter size paper and vice-versa when printing. Specifying [On] in this setting means that if, for example, printing on A4 size paper is specified on the computer and there is only Letter size paper loaded, the job is printed on Letter size paper instead.

* Print settings are specified in an application or printer driver, but this setting can only be specified on the control panel.

[Off]
[On]

[Print Quality]

[Menu] ▶ [Function Settings] ▶ [Printer] ▶ [Printer Settings]

Adjust print quality settings such as the density and resolution according to the document being printed and the purpose.

[Density]

[Menu] ▶ [Function Settings] ▶ [Printer] ▶ [Printer Settings] ▶ [Print Quality]

Adjust the toner density used when printing.

For more precise adjustment, you can adjust the levels of the three density areas in [Density (Fine Adjust)].

* Note that you cannot adjust the toner density if [Toner Save] is set to [On]. 🔍 **[Toner Save](P. 471)**

* [Density] may not be displayed depending on the model, and other settings.

[Density]
17 levels

[Density (Fine Adjust)]

[High]/[Medium]/[Low] 17 levels

[Toner Save]

[Menu] ▶ [Function Settings] ▶ [Printer] ▶ [Printer Settings] ▶ [Print Quality]

Specify whether to save toner when printing.

Specify [On] in this setting when you only want to check the layout or other finishing prior to the final print, such as before printing a very large job.

[Off]
[On]

[Image Refinement]

[Menu] ▶ [Function Settings] ▶ [Printer] ▶ [Printer Settings] ▶ [Print Quality]

Specify whether to use the smoothing process which allows printing outlines of characters or diagrams smoothly.

[Off]
[On]

[Resolution]

[Menu] ▶ [Function Settings] ▶ [Printer] ▶ [Printer Settings] ▶ [Print Quality]

Specify the resolution used to process print data.

To print with a higher resolution, specify [1200 dpi] in this setting.

[1200 dpi]
[600 dpi]

[Layout]

[Menu] ▶ [Function Settings] ▶ [Printer] ▶ [Printer Settings]

Specify the gutter direction or margin and the print position.

[Binding Location]

[Menu] ▶ [Function Settings] ▶ [Printer] ▶ [Printer Settings] ▶ [Layout]

Specify whether the gutter will be on the long edge or the short edge when the printed document will be bound using a method such as staples.

Use this setting in conjunction with the [Gutter] setting to adjust the binding position and margins. ▶ **[Gutter]** (P. 472)

- To bind the paper on the long edge, specify [Long Edge] in this setting.



- To bind the paper on the short edge, specify [Short Edge] in this setting.



[Long Edge]
[Short Edge]

[Gutter]

[Menu] ▶ [Function Settings] ▶ [Printer] ▶ [Printer Settings] ▶ [Layout]

Offset the print position to adjust the width of the margin that will form the gutter. Specify the offset width in 0.01" (0.5 mm) increments in the plus (+) or minus (-) offset direction, in accordance with the edge specified in [Binding Location]. **▶[Binding Location](P. 471)**

If [Binding Location] is set to [Long Edge]

Specify the offset width by selecting a positive (+) value to bind on the left edge of the paper or a negative (-) value to bind on the right edge.



Specified as a positive (+) value



Specified as a negative (-) value

If [Binding Location] is set to [Short Edge]

Specify the offset width by selecting a positive (+) value to bind on the top edge of the paper or a negative (-) value to bind on the bottom edge.



Specified as a positive (+) value



Specified as a negative (-) value

-1.90 to **0.00** to +1.90 (inches) or -50.0 to **00.0** to +50.0 (mm)


[Offset Short Edge] or [Offset Long Edge]

[Menu] ▶ [Function Settings] ▶ [Printer] ▶ [Printer Settings] ▶ [Layout]

Offset the print position of text and images. Use this setting when the printed text and images are shifted towards one edge of the paper or when they extend beyond the print range. Specify the offset width as a positive (+) or negative (-) value in 0.01" (0.5 mm) increments for each paper edge direction and print side.

To Offset Along the Short Edge (Horizontally)

Specify the adjustment width by selecting a positive (+) value to adjust to the right on the paper or a negative (-) value to adjust to the left on the paper.

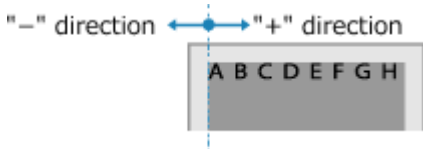

To Offset Along the Long Edge (Vertically)

Specify the adjustment width by selecting a positive (+) value to adjust down on the paper or a negative (-) value to adjust up on the paper.



-2.00 to **0.00** to +2.00 (inches) or -50.0 to **00.0** to +50.0 (mm)

[Auto Error Skip]

[Menu] ▶ [Function Settings] ▶ [Printer] ▶ [Printer Settings]

Specify whether to continue printing if an error occurs during printing.
It is recommended that the [Off] setting normally be used so that printing stops when an error occurs.

[Off]
[On]

[Timeout]

[Menu] ▶ [Function Settings] ▶ [Printer] ▶ [Printer Settings]

Specify the time from the start of waiting to receive print data until reception times out when print data reception is interrupted.

5 to **15** to 300 (sec.)

[UFR II]

[Menu] ▶ [Function Settings] ▶ [Printer] ▶ [Printer Settings]

Specify the print data processing method used when the UFR II Printer Driver is used.

[Halftones]

[Menu] ▶ [Function Settings] ▶ [Printer] ▶ [Printer Settings] ▶ [UFR II]

Specify the print method used to reproduce halftones (intermediate areas between light and dark areas) according to the print data content.

The reproduction method of halftones can be set separately for text, graphics (lines or figures), and image (photos).

- Specify [Resolution] for high-resolution printing where text outlines are clear. Suitable for printing data with text and fine lines.
- Specify [Color Tone] for printing with contrasting light and shade and with a sharp gradation. Suitable for printing image data such as photographic images.
- Specify [Gradation] for smooth printing of tones and outlines. Suitable for printing data such as figures that use gradations.
- Specify [High Resolution] for printing outlines of characters more clearly and finely than specifying [Resolution]. Suitable for printing data with text and fine lines or CAD data.

[Resolution/Gradation]
[Text]
 [Resolution]
 [Color Tone]
 [Gradation]
 [High Resolution]
[Graphics]
 [Resolution]
 [Color Tone]

[Gradation]
[High Resolution]
[Image]
[Resolution]
[Color Tone]
[Gradation]
[High Resolution]

[Paper Save]

[Menu] ▶ [Function Settings] ▶ [Printer] ▶ [Printer Settings] ▶ [UFR II]

Specify whether to disable output for blank pages included in the print data.

[Off]
[On]

[PCL]

[Menu] ▶ [Function Settings] ▶ [Printer] ▶ [Printer Settings]

Specify the PCL printing settings, such as page layout and print quality.

* [PCL] may not be displayed depending on the model, and other settings.

[Paper Save]

[Menu] ▶ [Function Settings] ▶ [Printer] ▶ [Printer Settings] ▶ [PCL]

Specify whether to disable output for blank pages included in print data.

[Off]
[On]

[Orientation]

[Menu] ▶ [Function Settings] ▶ [Printer] ▶ [Printer Settings] ▶ [PCL]

Select [Portrait] (vertical orientation) or [Landscape] (horizontal orientation) as the page orientation.

[Portrait]
[Landscape]

[Font Number]

[Menu] ▶ [Function Settings] ▶ [Printer] ▶ [Printer Settings] ▶ [PCL]

Specify the font to use by selecting a corresponding font ID number.

* You can print the PCL font list with font samples from the control panel. ▶ **Printing and Viewing Reports and Lists(P. 404)**

0 to 54

[Point Size]

[Menu] ▶ [Function Settings] ▶ [Printer] ▶ [Printer Settings] ▶ [PCL]

Set the font size in points, adjustable in 0.25 increments.

- You can specify this setting only when a proportionally-spaced scalable font is selected in [Font Number].
- * [Point Size] may not be displayed depending on the model, and other settings.

4.00 to 12.00 to 999.75 (point)
--

[Pitch]

[Menu] ► [Function Settings] ► [Printer] ► [Printer Settings] ► [PCL]

Set the font pitch, or cpi (characters per inch), adjustable in 0.01 increments.

- You can specify this setting only when a fixed-pitch scalable font or a bitmap font is selected in [Font Number].
- * [Pitch] may not be displayed depending on the model, and other settings.

0.44 to 10.00 to 99.99 (cpi)

[Form Lines]

[Menu] ► [Function Settings] ► [Printer] ► [Printer Settings] ► [PCL]

Set the number of lines printed on one page from 5 to 128.

- This setting is automatically changed according to the settings specified in [Default Paper Size] and [Orientation].

* Depending on your country or region, the [Form Lines] setting may not be available, or its content or default setting may be different.

5 to 60 to 128 (lines)

[Character Code]

[Menu] ► [Function Settings] ► [Printer] ► [Printer Settings] ► [PCL]

Select the character code that is best suited to the computer you are sending print data from.

- The specified setting is ignored when the character code is controlled by the font specified in [Font Number].

[DESKTOP]	[PC8]
[ISO11]	[PC850]
[ISO15]	[PC852]
[ISO17]	[PC858]
[ISO21]	[PC8DN]
[ISO4]	[PC8TK]
[ISO6]	[PIFONT]
[ISO60]	[PSMATH]
[ISO69]	[PSTEXT]
[ISOL1]	[ROMAN8]
[ISOL2]	[ROMAN9]
[ISOL5]	[VNINTL]
[ISOL6]	[VNMATH]
[ISOL9]	[VNUS]
[LEGAL]	[WIN30]
[MATH8]	[WINBALT]
[MCTEXT]	[WINL1]
[MSPUBL]	[WINL2]
[PC1004]	[WINL5]

[PC775]

[Custom Paper]

[Menu] ▶ [Function Settings] ▶ [Printer] ▶ [Printer Settings] ▶ [PCL]

Specify whether to set a custom paper size.

Specify [On] to set the dimensions of the paper in [X dimension] and [Y dimension].

[Off]

[On]

[Unit of Measure]

[Menu] ▶ [Function Settings] ▶ [Printer] ▶ [Printer Settings] ▶ [PCL]

Select the unit of measurement used to set custom paper sizes.

* Depending on your country or region, the [Unit of Measure] setting may not be displayed, or its content or default setting may be different.

[Millimeters]

[Inches]

[X dimension]

[Menu] ▶ [Function Settings] ▶ [Printer] ▶ [Printer Settings] ▶ [PCL]

Specify the horizontal dimension (short edge) of the custom paper.

* [X dimension] may not be displayed depending on the model, and other settings.

3 to **8 1/2** (inches) or 76 to **216** (mm)**[Y dimension]**

[Menu] ▶ [Function Settings] ▶ [Printer] ▶ [Printer Settings] ▶ [PCL]

Specify the vertical dimension (long edge) of the custom paper.


* [Y dimension] may not be displayed depending on the model, and other settings.

5 to **14** (inches) or 127 to **356** (mm)**[Append CR to LF]**

[Menu] ▶ [Function Settings] ▶ [Printer] ▶ [Printer Settings] ▶ [PCL]

Select whether to append a carriage return (CR) when the machine receives a line feed code (LF).

- If [Yes] is selected, the print position moves to the beginning of the next line when the machine receives an LF code.
- If [No] is selected, the print position moves to the next line, just under the received LF code.

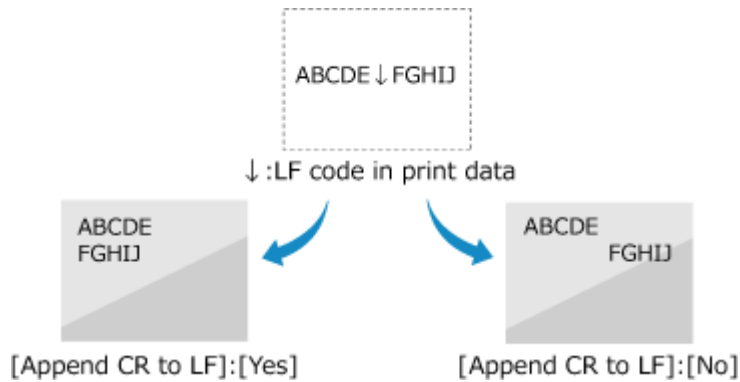

[Yes]
[No]

[Enlarge A4 Print Width]

[Menu] ▶ [Function Settings] ▶ [Printer] ▶ [Printer Settings] ▶ [PCL]

Select whether to expand the width of the printable area of A4 size paper in portrait orientation to that of Letter size.

[Off]
[On]

[Halftones]

[Menu] ▶ [Function Settings] ▶ [Printer] ▶ [Printer Settings] ▶ [PCL]

Specify the print method used to reproduce halftones (intermediate areas between light and dark areas) according to the print data content.

The reproduction method of halftones can be set separately for text, graphics (lines or figures), and image (photos).

- Specify [Resolution] for high-resolution printing where text outlines are clear. Suitable for printing data with text and fine lines.
- Specify [Color Tone] for printing with contrasting light and shade and with a sharp gradation. Suitable for printing image data such as photographic images.
- Specify [Gradation] for smooth printing of tones and outlines. Suitable for printing data such as figures that use gradations.
- Specify [High Resolution] for printing outlines of characters more clearly and finely than specifying [Resolution]. Suitable for printing data with text and fine lines or CAD data.

[Resolution/Gradation]
[Text]
[Resolution]
[Color Tone]
[Gradation]
[High Resolution]
[Graphics]
[Resolution]
[Color Tone]
[Gradation]
[High Resolution]
[Image]

[Resolution]
[Color Tone]
[Gradation]
[High Resolution]

[Imaging Settings]

[Menu] ▶ [Function Settings] ▶ [Printer] ▶ [Printer Settings]

Specify the print data processing method used for printing JPEG or TIFF format image files.

[Halftones]

[Menu] ▶ [Function Settings] ▶ [Printer] ▶ [Printer Settings] ▶ [Imaging Settings]

Specify the print method used to reproduce halftones (intermediate areas between light and dark areas) according to the image content.

To Print Images Such as Digital Camera Photos

Specify [Gradation] to produce a print with contrasting light and shade and with a sharp gradation.

To Print Figures or Graphs Containing Gradation Areas

Specify [Resolution] to produce a print with smooth gradation and smooth edges.

To Print Documents Containing Many Characters

Specify [High Resolution] to produce a fine print with clear edges of text.

[Gradation]
[Resolution]
[High Resolution]

[PDL Selection (Plug and Play)]

A19R-09E

Specify which Page Description Language (PDL) to use when the machine is connected to a computer using Plug and Play.

* Values in bold red text are the default settings for each item.

▶ **[Network]**(P. 479)

▶ **[USB]**(P. 479)

[Network]

[Menu] ▶ [Function Settings] ▶ [Printer] ▶ [PDL Selection (Plug and Play)]

Specify the Page Description Language (PDL) to use when the machine is connected to a networked computer using Plug and Play.

- To connect the machine as a fax machine, specify [FAX] in this setting.
- When connecting the machine as a printer, select from the following:
 - When connecting as a UFR II printer: [UFR II]
 - When connecting as a PCL6 printer: [PCL6]

[FAX]*1
[UFR II]
[PCL6]*1

*1 May not be displayed depending on the model, and other settings.

[USB]

[Menu] ▶ [Function Settings] ▶ [Printer] ▶ [PDL Selection (Plug and Play)]

Specify the Page Description Language (PDL) to use when the machine is connected to a computer via USB using Plug and Play.

- When connecting the machine as a printer, select from the following:
 - When connecting as a UFR II printer: [UFR II]
 - When connecting as a PCL6 printer: [PCL6]

* [USB] may not be displayed depending on the model, and other settings.

[UFR II]
[PCL6]

[Send]

A19R-09F

Specify the settings for sending scanned data and faxes.

- ▶ [Common Settings](P. 480)
- ▶ [Scan and Send Settings](P. 480)
- ▶ [Fax Settings](P. 480)

[Common Settings]

[Menu] ▶ [Function Settings] ▶ [Send]

Specify the settings for restricting the transmission of scanned data and faxes, and for displaying a destination confirmation screen.

- ▶ [Common Settings](P. 481)

* [Common Settings] may not be displayed depending on the model, and other settings.

[Scan and Send Settings]

[Menu] ▶ [Function Settings] ▶ [Send]

Specify the settings for sending scanned data.

- ▶ [Scan and Send Settings](P. 483)

[Fax Settings]

[Menu] ▶ [Function Settings] ▶ [Send]

Specify the settings for sending faxes.

- ▶ [Fax Settings](P. 489)

* [Fax Settings] may not be displayed depending on the model, and other settings.

[Common Settings]

A19R-09H

Specify the settings for restricting the transmission of scanned data and faxes, and for displaying the confirmation screen when sending data.

* Values in bold red text are the default settings for each item.

* [Common Settings] may not be displayed depending on the model, and other settings.

- ▶ [Restrict New Destinations](P. 481)
- ▶ [Restrict Resending from Log](P. 481)
- ▶ [One-Touch/Coded Dial TX Confirmation](P. 481)
- ▶ [Confirm Destination Before Sending](P. 481)
- ▶ [Display Notif. When Job Is Accepted](P. 482)

[Restrict New Destinations]

[Menu] ▶ [Function Settings] ▶ [Send] ▶ [Common Settings]

Specify whether to restrict the destinations that can be specified when sending scanned data and faxes to destinations that are registered in the Address Book. ▶ **Limiting Available Destinations(P. 370)**

[Off]
[On]

[Restrict Resending from Log]

[Menu] ▶ [Function Settings] ▶ [Send] ▶ [Common Settings]

Specify whether to prohibit the specification of destinations from the TX Job Log for scan or fax jobs. ▶ **Limiting Available Destinations(P. 370)**

[Off]
[On]

[One-Touch/Coded Dial TX Confirmation]

[Menu] ▶ [Function Settings] ▶ [Send] ▶ [Common Settings]

Specify whether the registered destination confirmation screen is shown when the destination is specified using a Coded Dial number or One-Touch Dial. ▶ **Confirming the Destination before Sending(P. 372)**

[Off]
[On]

[Confirm Destination Before Sending]

[Menu] ▶ [Function Settings] ▶ [Send] ▶ [Common Settings]

Specify whether a destination confirmation screen is shown when you send an e-mail or fax. ▶ **Confirming the Destination before Sending(P. 372)**

[Off]
[On]

[Only for Sequential Broadcast]

[Display Notif. When Job Is Accepted]

[Menu] ▶ [Function Settings] ▶ [Send] ▶ [Common Settings]

Processes handled by the machine, including sending scanned data and faxes are managed as jobs. Select whether to display the screen for confirming reception as a job after scan or fax operations are performed. When you select [On], you can display a screen to view the sending status and log.

[Off]

[On]

[Scan and Send Settings]

Specify the settings for sending scanned data.

* Values in bold red text are the default settings for each item.

▶ [Register Unit Name (E-Mail)](P. 483)

▶ [E-Mail Settings](P. 483)

▶ [File Settings](P. 485)

▶ [Shortcut Key Settings](P. 487)

[Register Unit Name (E-Mail)]

[Menu] ▶ [Function Settings] ▶ [Send] ▶ [Scan and Send Settings]

Register an e-mail sender.

Registered sender names are posted to the destination along with the e-mail address of the machine.

If the sender name is not registered, only the machine's e-mail address is posted.

* [Register Unit Name (E-Mail)] may not be displayed depending on the model, and other settings.

[E-Mail Settings]

[Menu] ▶ [Function Settings] ▶ [Send] ▶ [Scan and Send Settings]


Specify the settings for sending e-mail.

* [E-Mail Settings] may not be displayed depending on the model, and other settings.

[Change Default Settings]

[Menu] ▶ [Function Settings] ▶ [Send] ▶ [Scan and Send Settings] ▶ [E-Mail Settings]

Change the default settings for sending scanned data via e-mail. ▶ **Changing the Default Settings(P. 185)**

When you press  on the control panel while the e-mail sending screen is displayed, the settings revert to the values specified here.

[Scan Size]
[Auto (LTR/LGL)]
[LTR]
[LGL]
[STMT]
[EXEC]
[FOOLSCAP/FOLIO]
[OFICIO]
[Government-LTR]
[Government-LGL]
[India-LGL]
[AUS-FOOLSCAP]
[Brazil-OFICIO]
[Mexico-OFICIO]
[A4]
[A5R]

[A6]* ¹
[B5]
[Color Mode]
[Color]
[Black & White]
[File Format]
[PDF]
[PDF (Compact)]
[JPEG]
[TIFF]
[Set PDF/TIFF Details]
[PDF]/[PDF (Compact)]/[TIFF]
[Divide into Pages]
[Off]
[On]
[Density]
9 levels
[Original Orientation]
[Portrait]
[Landscape]
[Original Type]
[Text]
[Text/Photo]
[Photo]
[2-Sided Original]* ¹
[Off]
[Book Type]
[Calendar Type]
[Sharpness]
7 levels
[Data Size]
[Small: Memory Priority]
[Standard]
[Large: Image Quality Priority]
[Subject/Message]
[Subject]
[Message]
[Reply To]
[None]
[Specify from Address Book]
[Priority]

[Low]
[Standard]
 [High]

*1 May not be displayed or available depending on the model, and other settings.

[Initialize Default Settings]

[Menu] ▶ [Function Settings] ▶ [Send] ▶ [Scan and Send Settings] ▶ [E-Mail Settings]

Use this to restore the settings to send scanned data via e-mail to the factory settings.

[Link Mobile Device Address Book]

[Menu] ▶ [Function Settings] ▶ [Send] ▶ [Scan and Send Settings] ▶ [E-Mail Settings]

Specify whether destinations registered in the Address Book on a mobile device can be specified if you are sending scanned data via e-mail. ▶ **Specifying Destinations (Address Book on a Mobile Device)(P. 183)**
 Set [Use Remote UI Password] to [On] to require that a password be entered when sending destinations from a mobile device to the machine as the destination. For this, use the same password as Remote UI password. ▶ **Setting the Password to Use for Remote UI(P. 384)**

[Link Mobile Device Address Book]
[Off]
 [On]
 [Use Remote UI Password]
 [Off]
[On]

[File Settings]

[Menu] ▶ [Function Settings] ▶ [Send] ▶ [Scan and Send Settings]


Specify the operation settings used for saving scanned data to a shared folder.

* [File Settings] may not be displayed depending on the model, and other settings.

[Change Default Settings]

[Menu] ▶ [Function Settings] ▶ [Send] ▶ [Scan and Send Settings] ▶ [File Settings]

Change the default settings for saving scanned data to a shared folder. ▶ **Changing the Default Settings(P. 185)**

When you press  on the control panel while the file sending screen is displayed, the settings revert to the values specified here.

[Scan Size]
 [Auto (LTR/LGL)]
[LTR]
 [LGL]
 [STMT]
 [EXEC]
 [FOOLSCAP/FOLIO]
 [OFICIO]
 [Government-LTR]
 [Government-LGL]

[India-LGL]
[AUS-FOOLSCAP]
[Brazil-OFICIO]
[Mexico-OFICIO]
[A4]
[A5R]
[A6]* ¹
[B5]
[Color Mode]
[Color]
[Black & White]
[File Format]
[PDF]
[PDF (Compact)]
[JPEG]
[TIFF]
[Set PDF/TIFF Details]
[PDF]/[PDF (Compact)]/[TIFF]
[Divide into Pages]
[Off]
[On]
[Density]
9 levels
[Original Orientation]
[Portrait]
[Landscape]
[Original Type]
[Text]
[Text/Photo]
[Photo]
[2-Sided Original]* ¹
[Off]
[Book Type]
[Calendar Type]
[Sharpness]
7 levels
[Data Size]
[Small: Memory Priority]
[Standard]
[Large: Image Quality Priority]

*¹ May not be displayed or available depending on the model, and other settings.

[Initialize Default Settings]

[Menu] ▶ [Function Settings] ▶ [Send] ▶ [Scan and Send Settings] ▶ [File Settings]

Restore the settings to save scanned data to a shared folder to the factory settings.

[Shortcut Key Settings]

[Menu] ▶ [Function Settings] ▶ [Send] ▶ [Scan and Send Settings]

You can register the destination computer to store the scanned data or the scanning settings to the button (Shortcut key) on the [Home] screen. **▶ Preparing for a Shortcut Key to Store Scanned Data to a Computer(P. 220)**

You can confirm the settings registered to a shortcut key by selecting a shortcut key in [Confirm Destination].

* After registering a shortcut key, if you select the shortcut key in [Register] and specify [Off], the registered settings will be canceled.

Touch Panel Model

```
[Register]
[Scan -> PC1] / [Scan -> PC2]
  [Off]
  [USB Connection]
    [Color Scan]
    [Black & White Scan]
    [Custom 1]
    [Custom 2]
  [Network Connection]
    [Color Scan]
    [Black & White Scan]
    [Custom 1]
    [Custom 2]

[Confirm Destination]
[Scan -> PC1]
[Scan -> PC2]
```

5 Lines LCD Model

```
[Register]
[Scan -> PC]
  [Off]
  [USB Connection]
    [Color Scan]
    [Black & White Scan]
    [Custom 1]
    [Custom 2]
  [Network Connection]
    [Color Scan]
    [Black & White Scan]
    [Custom 1]
    [Custom 2]
```


[Confirm Destination]

[Scan -> PC]

[Fax Settings]

Specify the settings for sending faxes.

* Values in bold text are the default settings for each item.


* [Fax Settings] may not be displayed depending on the model, and other settings.

- ▶ [Change Default Settings](P. 489)
- ▶ [Off-Hook Alarm](P. 489)
- ▶ [ECM TX](P. 490)
- ▶ [Set Pause Time](P. 490)
- ▶ [Auto Redial](P. 490)
- ▶ [Check Dial Tone Before Sending](P. 491)
- ▶ [Set Line](P. 491)
- ▶ [TX Start Speed](P. 491)
- ▶ [Archive TX Document](P. 492)
- ▶ [Confirm Entered Fax Number](P. 492)
- ▶ [Allow Fax Driver TX](P. 492)
- ▶ [Use Address Book When On-Hook](P. 492)
- ▶ [Restrict Sequential Broadcast](P. 492)
- ▶ [Register Log Dest to Addr Book](P. 493)
- ▶ [TX Terminal ID](P. 493)
- ▶ [Auto Adjust VoIP Comm. Speed](P. 493)

[Change Default Settings]

[Menu] ▶ [Function Settings] ▶ [Send] ▶ [Fax Settings]

Change the default settings for sending Faxes. ▶ **Changing the Default Settings(P. 185)**

When you press  on the control panel while the fax sending screen is displayed, the settings revert to the values specified here.

[Resolution]
[200 x 100 dpi (Normal)]
[200 x 200 dpi (Fine)]
[200 x 200 dpi (Photo)]
[200 x 400 dpi (Superfine)]
[Density]
9 levels
[2-Sided Original]* ¹
[Off]
[Book Type]
[Calendar Type]
[Sharpness]
7 levels
[Initialize]

*¹ May not be displayed or available depending on the model, and other settings.

[Off-Hook Alarm]

[Menu] ▶ [Function Settings] ▶ [Send] ▶ [Fax Settings]

Adjust the volume of the alarm tone sounded when a telephone is connected and the receiver or handset is left off the hook.

- Dragging the slider to the right increases the volume.

- Dragging the slider to the far left mutes the sound.

4 levels

[ECM TX]

[Menu] ▶ [Function Settings] ▶ [Send] ▶ [Fax Settings]

ECM (Error Correction Mode) is a function that conducts checking and correction to ensure that corrupted images are not sent when an error occurs during image transmission. Here, specify whether the ECM function is used for transmissions.

- If you use ECM transmission, error checking is carried out by both the sender and recipient during communication, so the ECM function must also be enabled at the receiving end.
- ECM transmission may slow down communication because error checking and corrections are carried out during transmission. Note also that even when ECM transmission is enabled, errors may still occur depending on the state of the phone lines.
- Enable ECM reception on the machine to reduce the number of errors that occur when the machine receives data. ▶[ECM RX](P. 497)

[Off]

[On]

[Set Pause Time]

[Menu] ▶ [Function Settings] ▶ [Send] ▶ [Fax Settings]

Specify the number of seconds (wait time) in the pause inserted between numbers.

- To send a fax to an overseas destination, enter the international access number, country code, and fax number in that order. If the call will not connect, insert a pause between the different numbers.
- If you still cannot connect after inserting a pause, change the pause time.

1 to **2** to 15 (sec.)

[Auto Redial]

[Menu] ▶ [Function Settings] ▶ [Send] ▶ [Fax Settings]

Specify whether the machine automatically redials if it fails to make a connection for reasons such as the line being busy.

If you specify Auto Redial, you can also specify the number of redials, the interval between redials, and whether to redial if a transmission error occurs.

[Off]

[On]

[No. of Times to Redial]

1 to **2** to 10 (times)

[Redial Interval]

2 to 99 (min.)

[Redial When Err Occurs]

[Off]

[On]

[Check Dial Tone Before Sending]

[Menu] ▶ [Function Settings] ▶ [Send] ▶ [Fax Settings]

Specify whether to check for a dial tone before dialing when sending a fax.

[Off]

[On]

[Set Line]

[Menu] ▶ [Function Settings] ▶ [Send] ▶ [Fax Settings]

Specify the machine's fax number, unit name, and the number of lines.

* The fax number and unit name are sent to the recipient as sender information. ▶[TX Terminal ID](P. 493)

[Register Unit Telephone Number]

[Menu] ▶ [Function Settings] ▶ [Send] ▶ [Fax Settings] ▶ [Set Line]

Register the fax number of the machine. ▶**Changing the Fax Number and Unit Name(P. 261)**

[Register Unit Name]

[Menu] ▶ [Function Settings] ▶ [Send] ▶ [Fax Settings] ▶ [Set Line]

Register the name (unit name) sent to the other party. ▶**Changing the Fax Number and Unit Name(P. 261)**

[Select Line Type]

[Menu] ▶ [Function Settings] ▶ [Send] ▶ [Fax Settings] ▶ [Set Line]

Specify the type of the line connected to the machine.

[Pulse]

[Tone]

[TX Start Speed]

[Menu] ▶ [Function Settings] ▶ [Send] ▶ [Fax Settings]

It may take some time for transmission to begin due to factors such as a poor phone line connection. If this occurs, adjust the initial communication speed to a lower level.

[33600 bps]

[14400 bps]

[9600 bps]

[7200 bps]

[4800 bps]

[2400 bps]

[Archive TX Document]

[Menu] ▶ [Function Settings] ▶ [Send] ▶ [Fax Settings]

Specify whether the content of sent faxes is automatically forwarded or saved to a preset destination. ▶ **Backing Up Sent Faxes(P. 263)**

If you specify [On] in this setting, also specify the forwarding or save destination and, if needed, the file name.

[Use TX Document Archiving] <input checked="" type="radio"/> [Off] <input type="radio"/> [On] Archive Address [File Name]

[Confirm Entered Fax Number]

[Menu] ▶ [Function Settings] ▶ [Send] ▶ [Fax Settings]

Specify whether a screen for re-entering the number appears when you enter a fax number using the numeric keys. ▶ **Confirming the Destination before Sending(P. 372)**

<input checked="" type="radio"/> [Off] <input type="radio"/> [On]
--

[Allow Fax Driver TX]

[Menu] ▶ [Function Settings] ▶ [Send] ▶ [Fax Settings]

Specify whether to allow faxes to be sent from a computer (PC faxing). ▶ **Prohibit Fax Sending from a Computer(P. 374)**

<input type="radio"/> [Off] <input checked="" type="radio"/> [On]
--

[Use Address Book When On-Hook]

[Menu] ▶ [Function Settings] ▶ [Send] ▶ [Fax Settings]

When sending faxes manually, specify [Always Allow] to enter a specific number with the numeric keys, and then specify a destination registered in the Address Book.

<input checked="" type="radio"/> [Do Not Allow After Numeric Key Use] <input type="radio"/> [Always Allow]

[Restrict Sequential Broadcast]

[Menu] ▶ [Function Settings] ▶ [Send] ▶ [Fax Settings]

Specify whether to prohibit fax transmission to multiple destinations (Sequential Broadcast). ▶ **Prohibiting Fax Sending to Multiple Destinations(P. 374)**

<input checked="" type="radio"/> [Off]
--

[On]

[Register Log Dest to Addr Book]

[Menu] ▶ [Function Settings] ▶ [Send] ▶ [Fax Settings]

Specify whether to restrict destinations remaining in the TX Job Log so they cannot be registered in the Address Book.

🔴 **Prohibiting Registering Fax Sending Log Destinations to Address Book(P. 383)**

[Allow]

[Do Not Allow]

[TX Terminal ID]

[Menu] ▶ [Function Settings] ▶ [Send] ▶ [Fax Settings]

Specify whether to include sender information such as the transmission date and time and the machine's fax number in fax headers.

If you specify [On] in this setting, you can also specify the print position for the sender information and mark the fax number.

- Set [Print Position] to [Inside Image Area] to align the print position with the top of the text or images on transmitted pages. To print the sender information beyond the top of the text or images on transmitted pages, specify [Outside Image Area].
- To post the machine's fax number as a telephone number, set [Mark Number as] to [TEL].

[Off]

[On]

[Print Position]

[Inside Image Area]

[Outside Image Area]

[Mark Number as]

[FAX]

[TEL]

[Auto Adjust VoIP Comm. Speed]

[Menu] ▶ [Function Settings] ▶ [Send] ▶ [Fax Settings]

For more secure fax transmission and reception in VoIP communication systems that are prone to communication errors, specify [On] in this setting.

* Specifying [On] will lower the communication speed.

[Off]

[On]

[Receive/Forward]

A19R-09L

Specify the settings for receiving and forwarding faxes.

* [Receive/Forward] may not be displayed depending on the model, and other settings.

▶ [Common Settings](P. 494)

▶ [Fax Settings](P. 494)

[Common Settings]

[Menu] ▶ [Function Settings] ▶ [Receive/Forward]

Specify the settings for Memory Lock operation with faxes.

▶ [Common Settings](P. 495)

[Fax Settings]

[Menu] ▶ [Function Settings] ▶ [Receive/Forward]

Specify the settings for receiving and forwarding faxes.

▶ [Fax Settings](P. 497)

[Common Settings]

A19R-09R

Specify the settings for Memory Lock operation with faxes.

* Values in bold red text are the default settings for each item.

▶ [Set Fax Inbox](P. 495)

▶ [Continue Print. When Amount in Cart. Low](P. 495)

▶ [Print RX Page Footer](P. 496)

[Set Fax Inbox]

[Menu] ▶ [Function Settings] ▶ [Receive/Forward] ▶ [Common Settings]

Specify the settings for fax Memory Lock.

[Fax Memory Lock Settings]

[Menu] ▶ [Function Settings] ▶ [Receive/Forward] ▶ [Common Settings] ▶ [Set Fax/I-Fax Inbox]

Instead of immediately printing received faxes, you can temporarily save them in the machine's memory. ▶
Saving Received Documents in the Machine (Memory Lock)(P. 378)

[Off]

[On]

[Use Fax Preview]

[Off]

[On]

[Report Print]

[Off]

[On]

[Memory Lock Time]

[Off]

[On]

[Memory Lock Start Time]

[Memory Lock End Time]

[Continue Print. When Amount in Cart. Low]

[Menu] ▶ [Function Settings] ▶ [Receive/Forward] ▶ [Common Settings]

Specify whether to print received faxes when a toner cartridge is low on toner.

- Printing when a toner cartridge is low on toner may lead to print results that are faint or faded. For this reason, this should normally be set to [Off]. When this setting is used and toner is low, received faxes are stored in the machine's memory.
- If [On] is specified in this setting, received faxes are not stored in the machine's memory. If this leads to print results that are too faint to read, you will need to ask the sender to re-send the fax.

[Off]

[On]

[Print RX Page Footer]

[Menu] ▶ [Function Settings] ▶ [Receive/Forward] ▶ [Common Settings]

Select whether to print the received date and time, page number, and other reception information at the bottom of faxes.

▶ **Changing the Print Settings for Received Faxes(P. 279)**

[Off]
[On]

[Fax Settings]

A19R-09S

Specify the settings for receiving and forwarding faxes.

* Values in bold red text are the default settings for each item.

- ◉ [Print on Both Sides](P. 497)
- ◉ [ECM RX](P. 497)
- ◉ [Incoming Ring](P. 497)
- ◉ [Remote RX](P. 498)
- ◉ [Switch to Auto RX](P. 498)
- ◉ [RX Start Speed](P. 498)
- ◉ [Reduce RX Size](P. 499)
- ◉ [Forwarding Settings](P. 499)

[Print on Both Sides]

[Menu] ▶ [Function Settings] ▶ [Receive/Forward] ▶ [Fax Settings]

Specify whether to use 2-sided printing for received Faxes.

[Off]
[On]

[ECM RX]

[Menu] ▶ [Function Settings] ▶ [Receive/Forward] ▶ [Fax Settings]

ECM (Error Correction Mode) is a function that conducts checking and correction to ensure that corrupted images are not sent when an error occurs during image reception. Here, specify whether the ECM function is used for reception.

- If you use ECM reception, error checking is carried out by both the sender and recipient during communication, so the ECM function must also be enabled at the sender's end.
- ECM reception may slow down communication because error checking and correction are conducted during communication. Note also that even when ECM reception is enabled, errors may still occur depending on the state of the phone lines.
- Enable ECM transmission on the machine to reduce the number of errors that occur when the machine sends data. ◉ [ECM TX](P. 490)

[Off]
[On]

[Incoming Ring]

[Menu] ▶ [Function Settings] ▶ [Receive/Forward] ▶ [Fax Settings]

Specify whether the machine sounds an incoming ring tone if a fax is received when the fax RX mode is set to [Auto] or [Fax/Tel (Auto Switch)].

If you specify [On] in this setting, you can also specify the number of times the incoming ring tone sounds.

* Specifying [Off] will prevent the use of sleep mode.

[Off]

[On]

[No. of Rings]

1 to **2** to 99 (times)

[Remote RX]

[Menu] ▶ [Function Settings] ▶ [Receive/Forward] ▶ [Fax Settings]

Specify whether a telephone connected to the machine can be used to receive faxes (Remote RX). **▶ Receiving Faxes via Telephone (Remote RX)(P. 278)**

If you specify [On] in this setting, you can also specify the number used for the external telephone (Remote RX ID).

[Off]

[On]

[Remote RX ID]

00 to **25** to 99

[Switch to Auto RX]

[Menu] ▶ [Function Settings] ▶ [Receive/Forward] ▶ [Fax Settings]

Specify whether the machine switches to automatic receive mode (Auto RX) after a set period of time if you do not pick up the receiver for an incoming fax when the fax receive mode is set to [Manual].

If you specify [On] in this setting, you can also specify how long (in seconds) the incoming ring tone sounds before the machine switches to Auto RX.

[Off]

[On]

[Ring Time Till Auto RX]

1 to **15** to 99 (sec.)

[RX Start Speed]

[Menu] ▶ [Function Settings] ▶ [Receive/Forward] ▶ [Fax Settings]

It may take some time for reception to begin due to factors such as a poor phone line connection. If this occurs, adjust the initial communication speed to a lower level.

[**33600 bps**]

[14400 bps]

[9600 bps]

[7200 bps]

[4800 bps]

[2400 bps]

[Reduce RX Size]

[Menu] ▶ [Function Settings] ▶ [Receive/Forward] ▶ [Fax Settings]

Specify whether to reduce images when printing or saving received faxes.

- Set the reduction ratio to [Auto] in this setting to reduce images to fit the paper size.
- When specifying the reduction ratio, set a value between [97%] and [75%].
- To maintain the aspect ratio in reduced images, set the reduction direction to [Vertical/Horizontal]. To reduce images in the vertical direction only, specify [Vertical Only].

[Off]
[On]
[Ratio]
[Auto]
[97%]
[95%]
[90%]
[75%]
[Direction]
[Vertical/Horizontal]
[Vertical Only]

[Forwarding Settings]

[Menu] ▶ [Function Settings] ▶ [Receive/Forward] ▶ [Fax Settings]

Specify the settings for forwarding faxes. **▶Auto Forwarding and Backing Up Received Faxes(P. 265)**

[Enable Forwarding Settings]

[Menu] ▶ [Function Settings] ▶ [Receive/Forward] ▶ [Fax Settings] ▶ [Forwarding Settings]

Specify whether the content of received faxes is automatically forwarded or saved to a preset destination. If you specify [On] in this setting, also specify the forwarding or save destination and, if needed, the file name.

[Off]
[On]
[Forwarding Destination]
[File Name]

[Print Images]

[Menu] ▶ [Function Settings] ▶ [Receive/Forward] ▶ [Fax Settings] ▶ [Forwarding Settings]

Specify whether to print forwarded faxes. You can also opt to print only faxes that cannot be forwarded.

[Off]
[On]
[Only When Error Occurs]

[Store Images in Memory]

[Menu] ▶ [Function Settings] ▶ [Receive/Forward] ▶ [Fax Settings] ▶ [Forwarding Settings]

Specify whether faxes that could not be forwarded due to an error are stored in the machine's memory.

[Off]

[Only When Error Occurs]

[Set Destination]

A19R-09U

Specify the settings for the Address Book PIN.

* [Set Destination] may not be displayed depending on the model, and other settings.

▶ [Address Book PIN](P. 501)

[Address Book PIN]

[Menu] ▶ [Set Destination]

Specify that a PIN must be entered to add new entries to the Address Book or edit existing entries. ▶ **Restricting Address Book Registration and Editing by Setting a PIN(P. 382)**

[Management Settings]

A19R-09W

Specify the settings for managing the machine users, the system, and other data.

- ▶[User Management](P. 502)
- ▶[Device Management](P. 502)
- ▶[Remote UI Settings/Update Firmware](P. 502)
- ▶[Data Management](P. 502)
- ▶[Security Settings](P. 502)
- ▶[Initialize All Data/Settings](P. 502)

[User Management]

[Menu] ▶ [Management Settings]

Register and manage information on the machine's administrator and users.

- ▶[User Management](P. 504)

[Device Management]

[Menu] ▶ [Management Settings]

Specify and manage the settings for information and operations relating to the machine's hardware.

- ▶[Device Management](P. 505)

[Remote UI Settings/Update Firmware]

[Menu] ▶ [Management Settings]

Specify and manage the settings for information and operations relating to the machine's software.

- ▶[Remote UI Settings/Update Firmware](P. 508)

[Data Management]

[Menu] ▶ [Management Settings]

Manage or initialize stored data and the machine's settings.

- ▶[Data Management](P. 510)

[Security Settings]


[Menu] ▶ [Management Settings]

Specify and manage the security settings, such as the machine's authentication functions and system verification.

- ▶[Security Settings](P. 511)

[Initialize All Data/Settings]

[Menu] ▶ [Management Settings]

Initialize the settings and registered data to reset the machine to the factory settings.  **Initializing the Settings and Data(P. 418)**

[User Management]

A19R-09X

Register and manage information on the machine's administrator and users.

▶[System Manager Information Settings](P. 504)

[System Manager Information Settings]

[Menu] ▶ [Management Settings] ▶ [User Management]

Specify a System Manager ID and System Manager PIN to create a dedicated administrator account.

If needed, you can also specify the administrator's name.

Use Remote UI from a computer to specify other administrator information, such as the e-mail address. ▶**Setting the Department ID and PIN for the Administrator(P. 346)**

[System Manager ID and PIN]

[System Manager ID]

[System Manager PIN]

[System Manager Name]

[Device Management]

A19R-09Y

Specify and manage settings for information and operations relating to the machine's hardware.

* Values in bold red text are the default settings for each item.

- ▶ [Device Information Settings](P. 505)
- ▶ [Select Country/Region](P. 505)
- ▶ [Display Job Log](P. 505)
- ▶ [Displ. Consmbls. Info (RUI/Toner Status)](P. 506)
- ▶ [Scan with Canon PRINT](P. 506)
- ▶ [Notify to Check Paper Settings](P. 506)
- ▶ [Canon Genuine Mode](P. 506)

[Device Information Settings]

[Menu] ▶ [Management Settings] ▶ [Device Management]

Specify a name to identify the machine and the installation location.

The information specified here appears in the Remote UI Portal page. ▶ **Portal Page of Remote UI(P. 397)**

[Device Name]
[Location]

[Select Country/Region]

[Menu] ▶ [Management Settings] ▶ [Device Management]

Specify the country or region where the machine is used. The default setting may vary depending on the setting selected at initial power-ON.

* Depending on your country or region, the [Select Country/Region] setting may not be available, or its content or default setting may be different.

[United States (US)]
[Canada (CA)]
[Brazil (BR)]
[Mexico (MX)]
[Panama (PA)]
[Other]

[Display Job Log]

[Menu] ▶ [Management Settings] ▶ [Device Management]

Specify whether the logs for printing, scanning, faxing, and copying are shown on the Status Monitor screen and in the communication management reports.

- ▶ [Status Monitor] Screen(P. 125)
- ▶ Checking Usage and Logs with Remote UI(P. 399)
- ▶ Printing and Viewing Reports and Lists(P. 404)

[Off]
[On]

[Displ. Consmbls. Info (RUI/Toner Status)]

[Menu] ► [Management Settings] ► [Device Management]

Specify whether a button that accesses sites for purchasing toner cartridges is displayed in Toner Status and Remote UI. You can also specify whether Toner Status is used.

- Specify whether to show the button in Remote UI in [Displ. Consumables Purchase Button (RUI)].
- Specify whether to use Toner Status in [Toner Status Settings].
- If you opt to use Toner Status, use [Displ Cnsmbl Purch Btn] in the [Toner Status Settings] to specify whether to show the button.

Toner Status sends notification of the remaining amount of toner in the machine to the computer on which the tool is installed. Download Toner Status from the Canon website for your country/region, and install it on your computer.

<https://global.canon/en/support/>

[Displ. Consumables Purchase Button (RUI)] <input type="checkbox"/> [Off] <input checked="" type="checkbox"/> [On]
[Toner Status Settings] <input type="checkbox"/> [Off] <input checked="" type="checkbox"/> [On]
[Displ Cnsmbl Purch Btn] <input type="checkbox"/> [Off] <input checked="" type="checkbox"/> [On]

[Scan with Canon PRINT]


[Menu] ► [Management Settings] ► [Device Management]

Specify whether the machine's scanning functions can be used from a mobile device with Canon PRINT installed.

<input type="checkbox"/> [Off] <input checked="" type="checkbox"/> [On]
--

[Notify to Check Paper Settings]

[Menu] ► [Management Settings] ► [Device Management]

Specify whether the Notify to Check Paper Settings screen appears when the drawer is loaded into the machine.  **Loading Paper in the Drawer(P. 145)**

<input type="checkbox"/> [Off] <input checked="" type="checkbox"/> [On]
--

[Canon Genuine Mode]

[Menu] ► [Management Settings] ► [Device Management]

Specify whether to switch to Canon Genuine Mode.

Settings Menu Items

- Normally, there is no need to change this setting.
- Your Canon service representative may change this setting. If this setting is not displayed, contact the machine's administrator.



[Remote UI Settings/Update Firmware]

A19R-0A0

Specify and manage the settings for information and operations relating to the machine's software.

* Values in bold red text are the default settings for each item.

▶ [Remote UI Settings](P. 508)

▶ [Update Firmware](P. 508)

[Remote UI Settings]

[Menu] ▶ [Management Settings] ▶ [Remote UI Settings/Update Firmware]

Specify the settings for using Remote UI and for Restrict Access for Remote UI.

▶ [Remote UI Settings](P. 509)

[Update Firmware]

[Menu] ▶ [Management Settings] ▶ [Remote UI Settings/Update Firmware]

Check the machine's firmware version and update the firmware via the Internet or a computer.

▶ **Updating the Firmware (Touch Panel Model)(P. 412)**

▶ **Updating the Firmware (5 Lines LCD Model)(P. 415)**

[Via PC]

[Via Internet]

[Version Information]

[Notification Settings]

[Off]

[**On**]

[Remote UI Settings]

A19R-0A1

Specify the settings for using Remote UI and for Restrict Access for Remote UI.

* Values in bold text are the default settings for each item.

▶ **[Use Remote UI]**(P. 509)

▶ **[Use Password]**(P. 509)

[Use Remote UI]

[Menu] ▶ [Management Settings] ▶ [Remote UI Settings/Update Firmware] ▶ [Remote UI Settings]

Specify whether to use Remote UI. ▶ **[Disabling Remote UI]**(P. 385)

If you opt to use Remote UI, you can also specify whether to use TLS encryption for communication when using Remote UI. ▶ **[Using TLS]**(P. 356)

[Off]
[On]
[Use TLS]
[Off]
[On]

[Use Password]

[Menu] ▶ [Management Settings] ▶ [Remote UI Settings/Update Firmware] ▶ [Remote UI Settings]

When using Remote UI, set this setting to [On], and set the Remote UI password. ▶ **[Setting the Password to Use for Remote UI]**(P. 384)

[Off]
[On]
[Password (4-32 Char.)]

[Data Management]

A19R-0A2

Manage or initialize the data and settings on the machine.

* Values in bold red text are the default settings for each item.

▶ [Enable Product Extended Survey Program](P. 510)

▶ [Initialize Key and Certificate](P. 510)

▶ [Initialize Address Book](P. 510)

▶ [Initialize Menu](P. 510)

[Enable Product Extended Survey Program]

[Menu] ▶ [Management Settings] ▶ [Data Management]

Specify whether to use the Product Extended Survey Program (a program for surveying machine usage).

The Product Extended Survey Program is installed at the same time as the drivers. It automatically sends monthly updates of information on device usage to Canon over a 10-year period. The program does not send personal information or any information other than that shown above.

[Off]
[On]

[Initialize Key and Certificate]

[Menu] ▶ [Management Settings] ▶ [Data Management]

Initialize the key and certificate settings and CA certificate settings, and delete all keys and certificates other than pre-installed ones. ▶ **Initializing Specific Settings and Data(P. 418)**

[Initialize Address Book]

[Menu] ▶ [Management Settings] ▶ [Data Management]

Delete the destinations registered in the Address Book. ▶ **Initializing Specific Settings and Data(P. 418)**

* [Initialize Address Book] may not be displayed depending on the model, and other settings.

[Initialize Menu]

[Menu] ▶ [Management Settings] ▶ [Data Management]

Initialize the [Menu] settings in the [Home] screen. Select the settings to be initialized. ▶ **Initializing Specific Settings and Data(P. 418)**

[Preferences]
[Adjustment/Maintenance]
[Function Settings]
[Set Destination]*¹
[Management Settings]
[Initialize All]

*¹ May not be displayed depending on the model, and other settings.

[Security Settings]

Specify and manage security settings such as the machine's authentication functions and system verification.

* Values in bold red text are the default settings for each item.

- ▶ [Authentication/Password Settings](P. 511)
- ▶ [Encryption Settings](P. 511)
- ▶ [Verify System at Startup](P. 511)
- ▶ [Recommended Security Set. for Usage Env.](P. 512)

[Authentication/Password Settings]

[Menu] ▶ [Management Settings] ▶ [Security Settings]

Configure the authentication functions for the machine.

- ▶ [Authentication/Password Settings](P. 513)

[Encryption Settings]

[Menu] ▶ [Management Settings] ▶ [Security Settings]

Specify whether to restrict the use of weak encryption or keys and certificates that use weak encryption.

[Prohibit Use of Weak Encryption]
[Off]
[On]
[Prohibit Key/Cert. with Weak Encryption]* ¹
[Off]
[On]

*¹ May not be displayed or available depending on the model, and other settings.

[Verify System at Startup]

[Menu] ▶ [Management Settings] ▶ [Security Settings]

Verify that the system when starting up the machine.

If Tampering is Detected

- The machine switches to update standby mode. You need to update the firmware.
 - ▶ [Updating the Firmware (Touch Panel Model)](P. 412)
 - ▶ [Updating the Firmware (5 Lines LCD Model)](P. 415)
- If the screen remains blank after some time, system recovery may not be possible. Contact your dealer or service representative. ▶ [If the Problem Persists](P. 652)

[Off]
[On]

[Recommended Security Set. for Usage Env.]

[Menu] ► [Management Settings] ► [Security Settings]

You can now specify all the recommended security settings for your usage environment simply by selecting the machine's environment type. See "Security Settings Navigator" for the available environment types. **Security Settings Navigator**

NOTE

- If you change the machine to the recommended security settings for each type, functions you want to use may become unavailable or other problems may occur. In this case, you can undo the changes and restore the previous security settings.

If you manually changed settings that were changed with [Recommended Security Set. for Usage Env.], the changes are not retained. The machine returns to the state before executing [Recommended Security Set. for Usage Env.].

[Authentication/Password Settings]

A19R-0A4

Specify the settings for the machine's authentication functions.

* Values in bold red text are the default settings for each item.

🔍 [Authentication Function Settings](P. 513)

[Authentication Function Settings]

[Menu] ▶ [Management Settings] ▶ [Security Settings] ▶ [Authentication/Password Settings]

Specify the settings for enhanced security using the authentication functions.

[Lockout Settings]

[Menu] ▶ [Management Settings] ▶ [Security Settings] ▶ [Authentication/Password Settings] ▶ [Authentication Function Settings]

Specify whether to switch to a state that does not permit login (lockout) for a set period if authentication fails. If you use lockout, you can also specify how many consecutive times authentication fails before lockout is invoked in [Lockout Threshold] and specify the length of the lockout period in [Lockout Period].

[Enable Lockout]
[Off]
[On]
[Lockout Threshold]* ¹
1 to 10 (times)
[Lockout Period]* ¹
1 to 60 (min.)

*¹ May not be displayed or available depending on the model, and other settings.

[Toner Deliv. Set.] or [Toner Delivery Set.]

A19R-0A5

You can configure settings for toner replenishment service. Use of the toner replenishment service requires prior registration with select retailers. This service is only available in certain countries.

[Connect to Server/Verify Connection]

[Home] ▶ [Toner Deliv. Set.] / [Toner Delivery Set.]

Attempts to connect to the server for the toner replenishment service and verifies the connection.

* [Connect to Server/Verify Connection] may not be displayed depending on the model, and other settings.

[Toner Delivery Settings]

[Home] ▶ [Toner Deliv. Set.] / [Toner Delivery Set.]

Activate or deactivate connection to the server for the toner replenishment service.

[Deactivate]
[Activate]

[Server Connection Status]

[Home] ▶ [Toner Deliv. Set.] / [Toner Delivery Set.]

Displays the connection status to the server for the toner replenishment service.

[Register for Toner Replenishment Service]

[Home] ▶ [Toner Deliv. Set.] / [Toner Delivery Set.]

Prints "Toner Replenishment Program Registration Process". Fill in the printed form to register to the toner replenishment service.

Maintenance

Maintenance	516
Cleaning the Machine	518
Cleaning the Surface of the Machine	519
Cleaning inside the Machine	520
Cleaning the Platen Glass	522
Cleaning the Feeder	523
Cleaning the Fixing Assembly	526
Cleaning the Drum	527
Replacing Consumables	528
Replacing the Toner Cartridge	529
Checking the Remaining Amount of Consumables	535
List of Consumables	536
Adjusting the Print Density	538
Moving the Machine	540

Maintenance

A19R-0A6

To ensure safe and convenient use of the machine, daily maintenance that includes cleaning and replacement of consumables is required.

If you notice a deterioration in the print quality or frequent paper jams, perform cleaning and adjustment to improve it.

Performing Maintenance Operations

In addition to performing regular maintenance, operations are required according to the machine status and print quality.

Cleaning

Regularly clean the various parts of the machine. If the original or paper becomes dirty, or the print quality has deteriorated, clean the parts causing the problem according to the symptoms.

🔍 **Cleaning the Machine(P. 518)**

Replacing Consumables

If a message about consumables appears on the screen of the control panel or Remote UI, or the print quality deteriorates, replace the consumables.

🔍 **Replacing Consumables(P. 528)**

Adjusting the Print Density

If printed text or fine lines appear faded, adjust the print density.

🔍 **Adjusting the Print Density(P. 538)**

Changing the Installation Location

When moving the machine, perform the prescribed procedure to prevent accident or damage.

🔍 **Moving the Machine(P. 540)**

! IMPORTANT

Maintenance and Inspections

- The minimum holding period for performance parts for repairs, and toner cartridges is seven (7) years after production of the machine model is discontinued.
- If a problem occurs during operation, see the following:
 - 🔍 **Troubleshooting(P. 544)**

If the problem still cannot be resolved or you think the machine needs to be checked, contact your dealer or service representative. 🔍 **If the Problem Persists(P. 652)**

Installation

- If you find the machine's operation to be noisy in some operating modes or due to your surroundings, we recommend setting up the machine in a separate location from your office.
- Water droplets (condensation) may form inside the machine if the room where the machine is installed is heated rapidly, or if the machine is moved from a cool, dry location to a warm, humid location. Using the machine under these conditions may result in problems such as paper jams, poor print quality, or faults. Let the machine adjust to the ambient temperature and humidity for at least two hours before use.
- The machine may not operate properly when used at high altitudes (3,280 yards (3,000 meters) above sea level or higher).

■ See Also

Checking the Required Troubleshooting Solutions from the Symptoms

You can check the required maintenance operations and settings according to the status of the machine and the error description.

- ▶ **Paper Jams(P. 546)**
- ▶ **Problems with Printing Results(P. 556)**
- ▶ **Paper and Paper Feeding Problems(P. 579)**

Viewing the Number of Printed Pages and Machine Usage

As a guide to when to perform maintenance, you can view the number of printed pages using the counter and view the usage of the machine from reports and lists.

- ▶ **Monitoring the Usage(P. 401)**

Cleaning the Machine

To ensure efficient use of the machine, regularly clean the various parts and keep them clean. If the original or paper becomes dirty, or the print quality has deteriorated, clean the parts causing the problem according to the symptoms.


Parts to Clean on a Regular Basis

Clean the surface (a), the platen glass and the rear of the feeder (b), and the inside of the machine (c) frequently.

▶ **Cleaning the Surface of the Machine(P. 519)**

▶ **Cleaning inside the Machine(P. 520)**

▶ **Cleaning the Platen Glass(P. 522)**

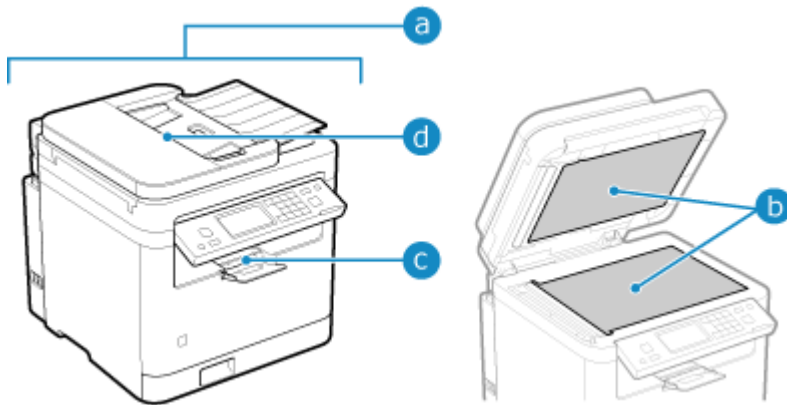

Parts to Clean When Symptoms Occur

If the following symptoms occur, clean the feeder (d) or fixing assembly and drum inside the machine.

- Original becomes dirty, paper is jammed, or smudges appear on printouts.
 - ▶ **Cleaning the Feeder(P. 523)**
- Paper becomes dirty or print quality has deteriorated.
 - ▶ **Cleaning the Fixing Assembly(P. 526)**
 - ▶ **Cleaning the Drum(P. 527)**

Cleaning the Surface of the Machine

A19R-0A8

Regularly clean the surface of the machine to keep it clean. In addition, remove dust from the ventilation holes to ensure efficient ventilation and cooling of the inside of the machine.

NOTE

- Black dots in the surface of the machine are due to the use of recycled materials and are not a quality problem.

1 Turn OFF the power and remove the power cord from the outlet. ▶Turning OFF the Machine(P. 113)

Turning OFF the machine deletes any data waiting to be printed.

2 Wipe the surface of the machine and the ventilation slots.



- Wipe with a soft cloth soaked in water or diluted neutral detergent and wrung out.
- For the location of the ventilation slots, see the part names on the front of the machine. ▶Front Side(P. 9)

3 Allow the parts to fully dry.

4 Plug the power cord into the outlet, and turn ON the machine. ▶Turning ON the Machine(P. 112)

Cleaning inside the Machine


A19R-0A9

Clean inside the machine periodically in order to prevent toner powder or paper dust from collecting.

1 Turn OFF the power and remove the power cord from the outlet. Turning OFF the Machine(P. 113)


Turning OFF the machine deletes any data waiting to be printed.

2 Lift the control panel.

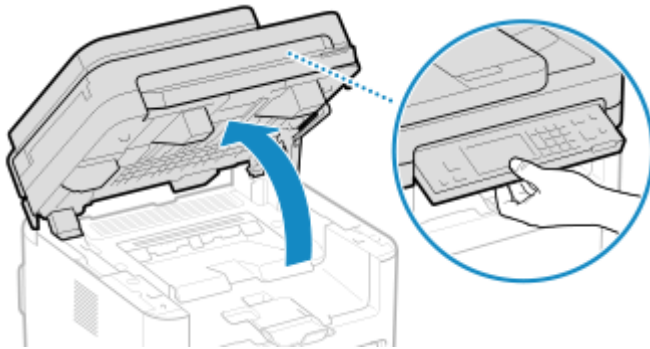


If the feeder is not closed completely, you cannot raise the control panel. If you try to raise it by force, the machine may be damaged.

3 Open the toner cover.

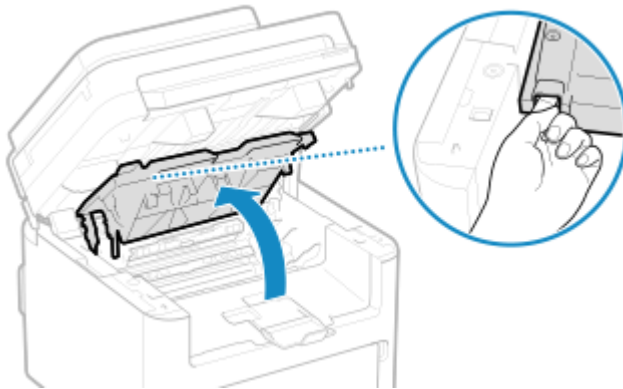


4 Gently remove the toner cartridge.

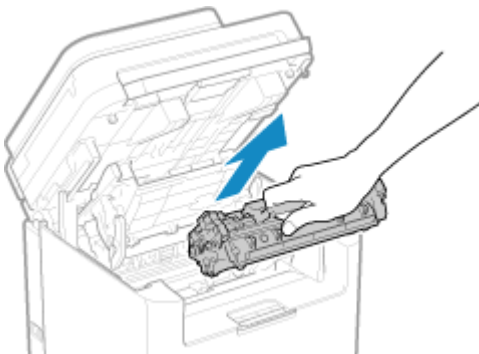

5 Wipe away toner powder or paper dust from the inside.

Use a lint-free clean, soft, dry cloth.

6 Insert the toner cartridge.

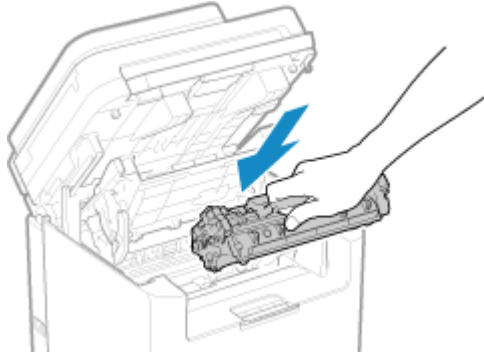

7 Close the toner cover and lower the control panel.

8 Plug the power cord into the outlet, and turn ON the machine. ▶Turning ON the Machine(P. 112)

Cleaning the Platen Glass

A19R-0AA


Regularly clean the platen glass and rear of the feeder to prevent originals from becoming dirty and printouts from appearing to be smudged.

If the platen glass or rear of the feeder is dirty, originals can become dirty and printouts can become smudged after scanning, copying, or sending faxes.

1 Turn OFF the power and remove the power cord from the outlet. ▶Turning OFF the Machine(P. 113)

Turning OFF the machine deletes any data waiting to be printed.

2 Open the feeder.

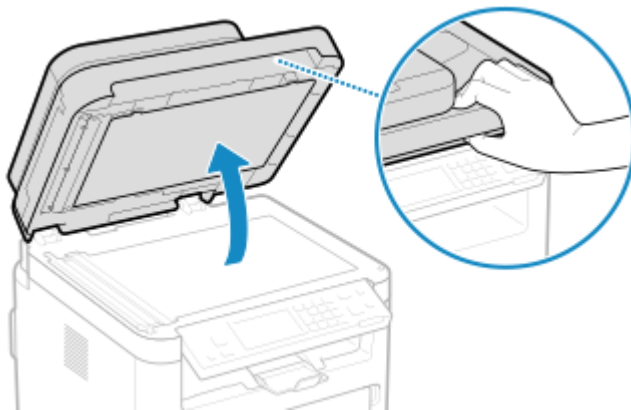

3 Wipe the platen glass and rear of the feeder.



Wipe with a cloth soaked in water and wrung out. Next, wipe with a soft, dry cloth.

4 Allow the parts to fully dry.

5 Gently close the feeder.

6 Plug the power cord into the outlet, and turn ON the machine. ▶Turning ON the Machine(P. 112)

Cleaning the Feeder

A19R-0AC


If the following symptoms are observed when using the feeder, remove any adhering graphite powder or dust by wiping the rollers inside the feeder and the original scanning area of the feeder.

- Originals become dirty
- Originals frequently jam
- Printouts appear smudged after scanning, copying, or sending faxes

1 Turn OFF the power and remove the power cord from the outlet. Turning OFF the Machine(P. 113)


Turning OFF the machine deletes any data waiting to be printed.

2 Open the original supply tray.

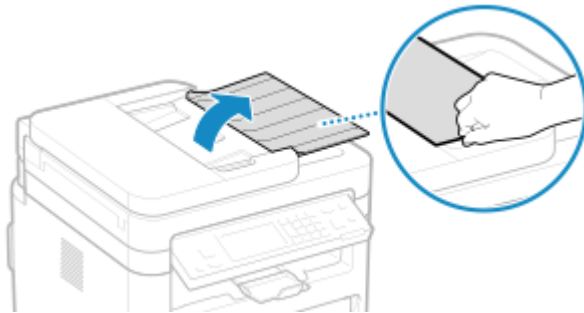


3 Open the feeder cover.

MF289dw

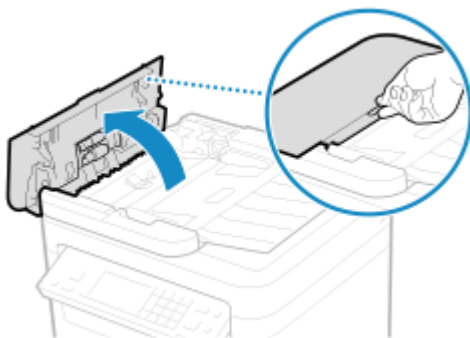


MF287dw / MF284dw

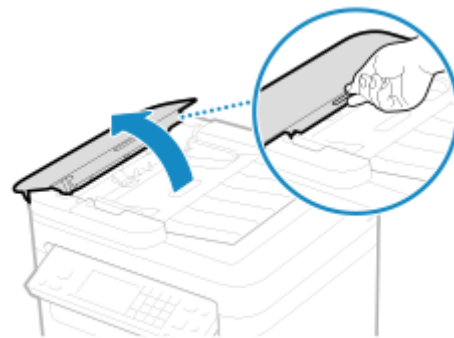

4 Wipe the rollers () inside the feeder and surrounding areas.

MF289dw


MF287dw / MF284dw

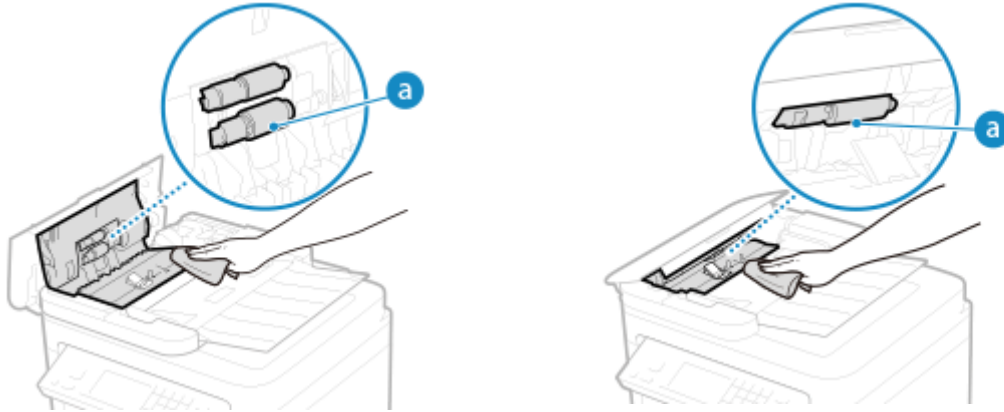


Wipe with a cloth soaked in water and wrung out. Next, wipe with a soft, dry cloth.

5 Close the feeder cover and original supply tray.

6 Open the feeder.

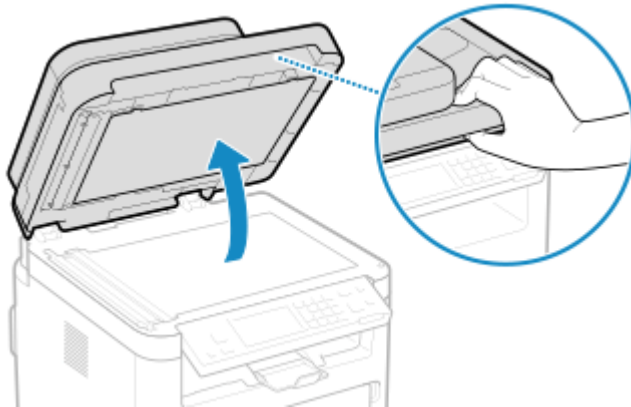

7 Wipe the feeder original scanning area.

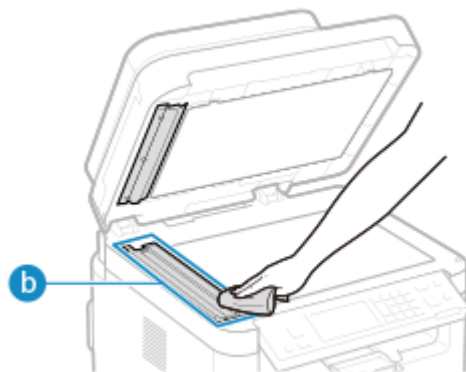

- Wipe with a cloth soaked in water and wrung out. Next, wipe with a soft, dry cloth.
- When wiping the transparent plastic part (**b**), take care not to bend the plastic.

8 Allow the parts to fully dry.

9 Gently close the feeder.

10 Plug the power cord into the outlet, and turn ON the machine. ▶Turning ON the Machine(P. 112)

Cleaning the Fixing Assembly

If the printout is smudged, the fixing assembly may be dirty. In this case, you can clean the fixing assembly using paper.

The fixing assembly cannot be cleaned when data is waiting to be printed or when a toner cartridge has reached the end of its lifetime.

Required Preparations

- Check that there is enough amount of toner remaining in the toner cartridge. [▶Checking the Remaining Amount of Consumables\(P. 535\)](#)

[▶Touch Panel Model\(P. 526\)](#)

[▶5 Lines LCD Model\(P. 526\)](#)

Touch Panel Model

1 On the control panel, press [Menu] in the [Home] screen. [▶\[Home\] Screen\(P. 121\)](#)

2 Press [Adjustment/Maintenance] ▶ [Maintenance] ▶ [Clean Fixing Assembly].

⇒ The available paper sizes and types are displayed on the confirmation screen.

3 Check that available paper is loaded, and then press [Start].

⇒ The paper is fed to the machine, and cleaning starts.

When cleaning is completed, a blank sheet of paper is output.

5 Lines LCD Model

1 On the control panel, select [Menu] in the [Home] screen, and press . [▶\[Home\] Screen\(P. 121\)](#)

2 Press [Adjustment/Maintenance] ▶  ▶ [Maintenance] ▶  ▶ [Clean Fixing Assembly] ▶ .

⇒ The available paper sizes and types are displayed on the confirmation screen.

3 Check that available paper is loaded, and then press ▶ .

⇒ The paper is fed to the machine, and cleaning starts.

When cleaning is completed, a blank sheet of paper is output.

Cleaning the Drum

If the printout is smudged, the drum may be dirty. Clean the drum using the procedure below. The drum cannot be cleaned when data is waiting to be printed.

▶ **Touch Panel Model(P. 527)**

▶ **5 Lines LCD Model(P. 527)**

Touch Panel Model

1 On the control panel, press [Menu] in the [Home] screen. ▶ [Home] Screen(P. 121)

2 Press [Adjustment/Maintenance] ▶ [Maintenance] ▶ [Clean Drum].

⇒ The [Clean Drum] screen is displayed.

3 Press [Start].

⇒ Cleaning is performed.


When cleaning is completed, the message [Finished.] appears, and then the [Maintenance] screen is displayed.

5 Lines LCD Model

1 On the control panel, select [Menu] in the [Home] screen, and press . ▶ [Home] Screen(P. 121)

2 Press [Adjustment/Maintenance] ▶  ▶ [Maintenance] ▶  ▶ [Clean Drum] ▶ .

⇒ The [Clean Drum] screen is displayed.

3 Select [Start], and press .

⇒ Cleaning is performed.

When cleaning is completed, the message [Finished.] appears, and then the [Maintenance] screen is displayed.

Replacing Consumables

A19R-0AF

If a message about consumables appears on the screen of the control panel or Remote UI, or the print quality deteriorates, replace the consumables.

You can view the current remaining amount of consumables on the control panel and Remote UI. For the consumable item names and number of sheets that can be printed, see the list of consumables.

- ▶ **Replacing the Toner Cartridge(P. 529)**
- ▶ **Checking the Remaining Amount of Consumables(P. 535)**
- ▶ **List of Consumables(P. 536)**

Replacing the Toner Cartridge

A19R-0AH

Replace the toner cartridge at the appropriate time according to messages that appear and a change in print quality.

Before replacing the toner cartridge, check the precautions in Important Safety Instructions. **▶Manuals of the Machine(P. 656)**


▶When to Replace the Toner Cartridge(P. 530)

▶Before Replacing Toner Cartridge(P. 530)

▶Replacing Toner Cartridge(P. 532)


CAUTION

- Do not touch the contacts (a) inside the machine. Doing so may result in a fault.

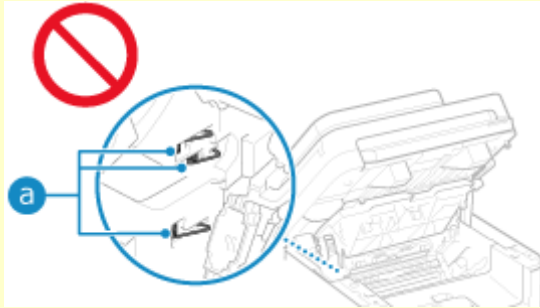


IMPORTANT

- Be sure to hold the toner cartridge using the handle.

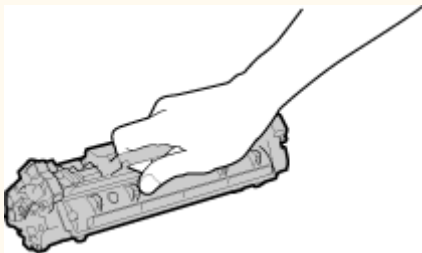

- Do not touch the drum surface (a), the electrical contacts (b) or the toner cartridge memory (c).

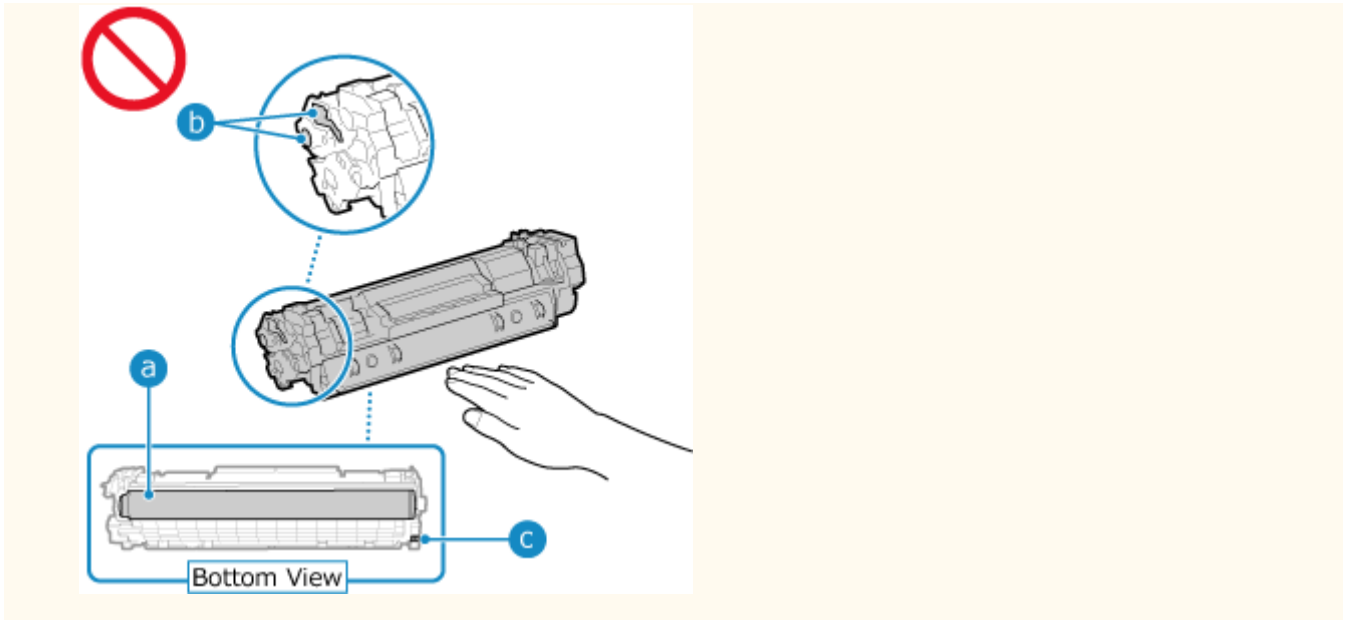

When to Replace the Toner Cartridge

When a Message Appears on the Screen of the Control Panel or Remote UI

Follow the message on the screen to prepare a new toner cartridge and replace the old one. Print quality may suffer if you continue using the toner cartridge without replacing them.

For details about the message and how to resolve it, see the following:

🔴 A Message Appears (P. 623)

When Print Quality Deteriorates

If printouts show any of the symptoms below, the toner cartridge is near the end of their lifetime. It is recommended to replace the toner cartridge even if a message does not appear.

Streaks appear



Printing is uneven



Toner smudges and splatters appear



White spots appear




Partially faded



Before Replacing Toner Cartridge


Perform the following procedure before replacing the toner cartridge. The message on the screen may disappear, and the print quality may improve.

1 Lift the control panel.

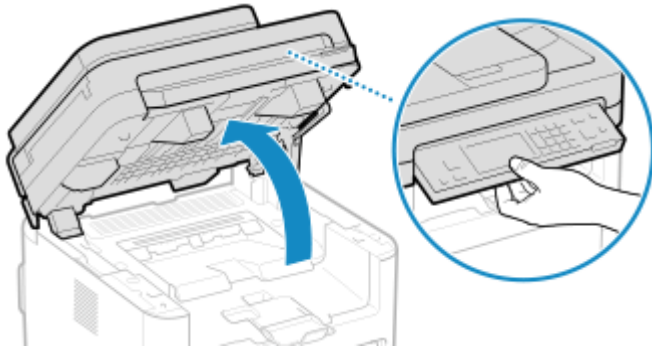


If the feeder is not closed completely, you cannot raise the control panel. If you try to raise it by force, the machine may be damaged.


2 Open the toner cover.

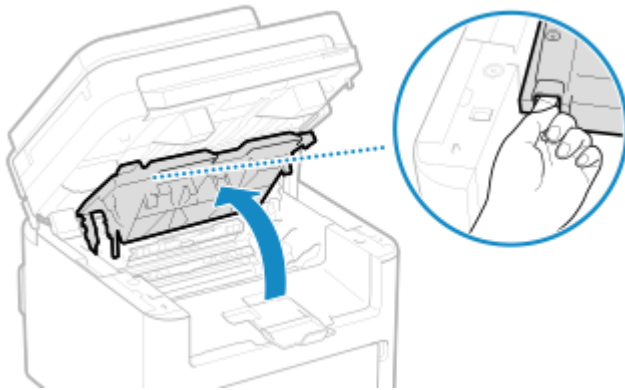

3 Gently remove the toner cartridge.

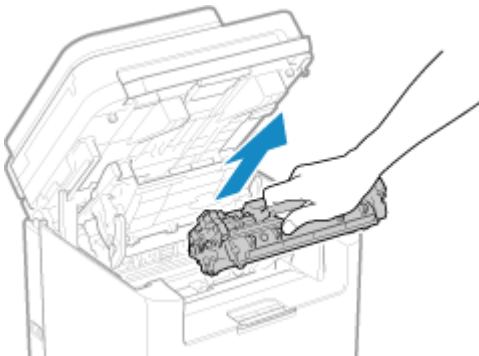


4 Shake the toner cartridge five or six times to evenly distribute the toner inside the cartridge.

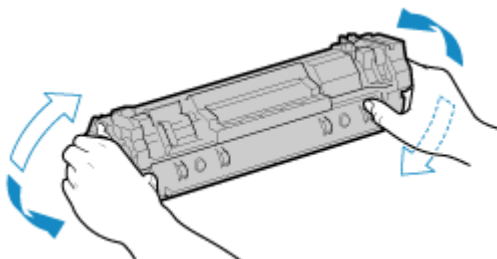

Be careful not to touch the drum surface on the bottom of the toner cartridge.

5 Install the toner cartridge.

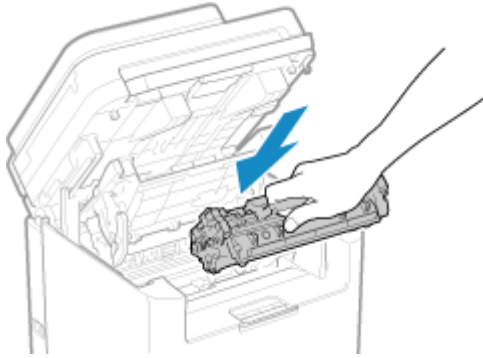


The bottom of the toner cartridge is unprotected. Be careful not to bump the bottom of the toner cartridge against the slot frame or other parts when installing.

6 Close the toner cover.

7 Lower the control panel.


Replacing Toner Cartridge

1 Lift the control panel.

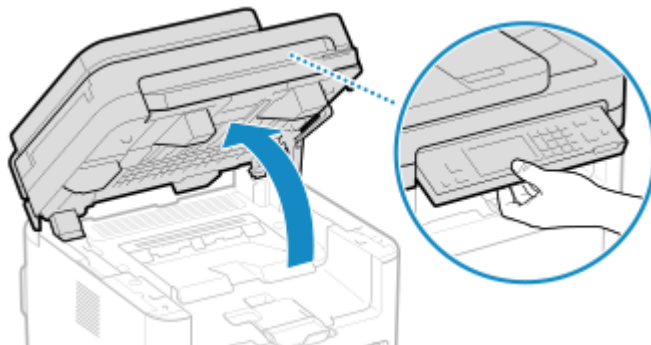


If the feeder is not closed completely, you cannot raise the control panel. If you try to raise it by force, the machine may be damaged.


2 Open the toner cover.

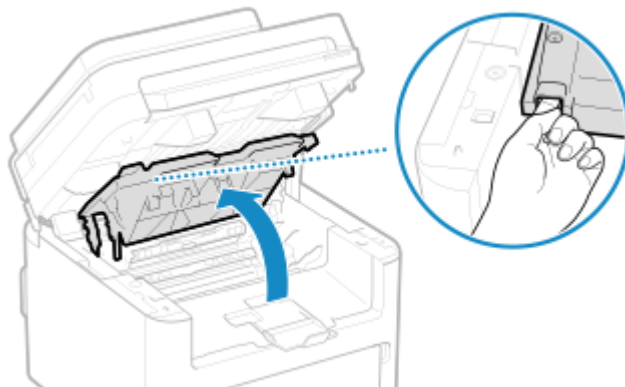


3 Gently remove the toner cartridge.

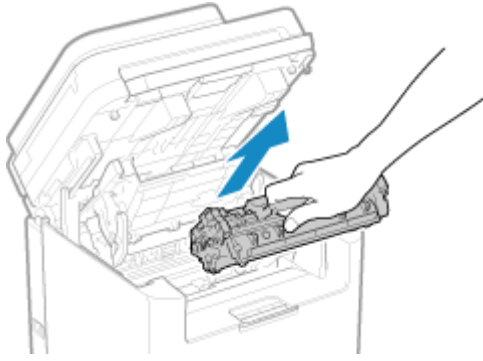


4 Remove the toner cartridge from the packing material.

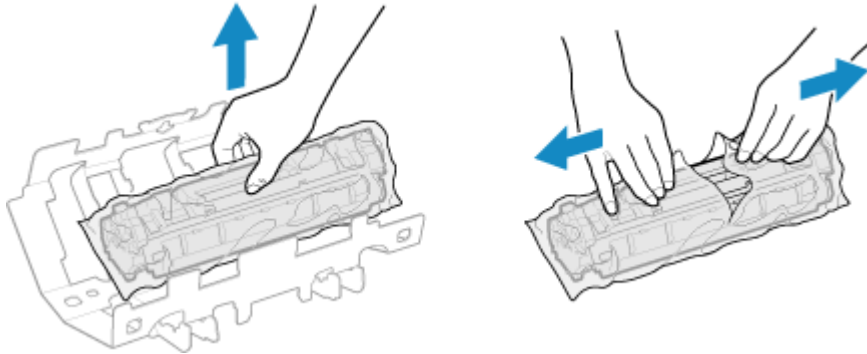

5 Shake the toner cartridge five or six times to evenly distribute the toner inside the cartridge.

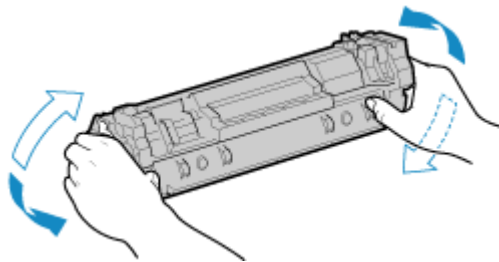


6 Remove the protective cover of the toner cartridge.

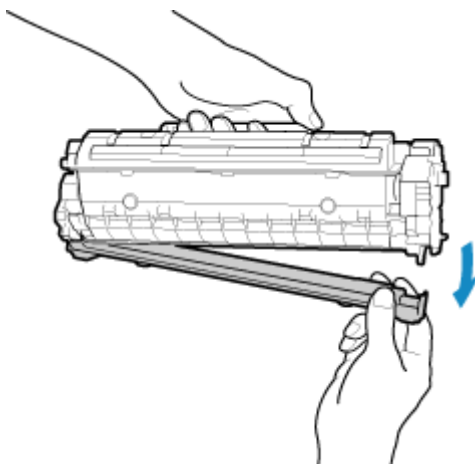

Be careful not to touch the drum surface on the bottom of the toner cartridge.

7 Replace the toner cartridge.

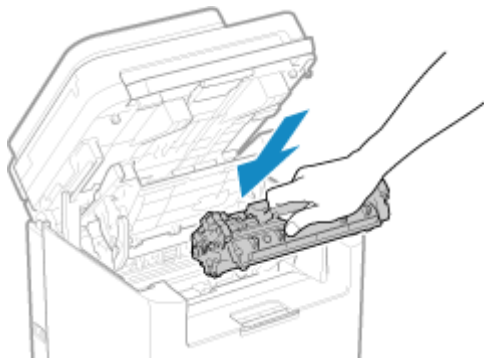

The bottom of the toner cartridge is unprotected. Be careful not to bump the bottom of the toner cartridge against the slot frame or other parts when installing.

8 Close the toner cover and lower the control panel.

Checking the Remaining Amount of Consumables

A19R-0AK

The remaining toner in the toner cartridge is displayed in a unit of 10 %. Before printing a large amount of pages, check the remaining amount of the toner cartridge and prepare for a new toner cartridge, if necessary.

* The indicated remaining amounts of the toner cartridge can be used only as guide and may differ from the actual amounts.

This section describes how to view this information using the control panel.

You can also check this information using Remote UI from a computer. [▶Managing the Machine from a Computer \(Remote UI\)\(P. 394\)](#)

[▶Touch Panel Model\(P. 535\)](#)

[▶5 Lines LCD Model\(P. 535\)](#)

Touch Panel Model

1 Press  on the control panel. [▶\[Home\] Screen\(P. 121\)](#)

 
 
2 Press [Device Status] ▶ [Cartridge Level].

▢▢▢▢ The remaining amount of toner in the toner cartridges is displayed.

3 Check the remaining amount of toner in the toner cartridge.

5 Lines LCD Model

1 Press  on the control panel. [▶Control Panel\(P. 13\)](#)

2 Press [Device Status] ▶  ▶ [Cartridge Level] ▶ .

▢▢▢▢ The remaining amount of toner in the toner cartridges is displayed.


3 Check the remaining amount of toner in the toner cartridge.

NOTE

- You can configure the settings to notify you to prepare a new toner cartridge when the current toner cartridge reaches a specified amount. [▶\[Displ. Timing for Cartridge Prep. Notif.\]\(P. 428\)](#)

List of Consumables


A19R-0AL

The item names of the machine consumables and number of sheets that can be printed are shown below. In addition, precautions must be taken when handling and storing consumables. See also "Important Safety Instructions."  **Manuals of the Machine(P. 656)**

For optimum print quality, using Canon genuine Toner, Cartridge and Parts is recommended.



■ Toner Cartridges

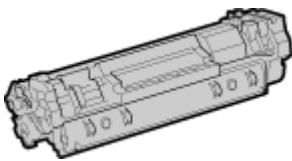

Supplied Toner Cartridge

The average number of sheets that can be printed*¹ with the supplied toner cartridge is 1000 sheets.

*¹ The average yield is based on "ISO/IEC 19752" (the global standard related to "Method for the determination of toner cartridge yield for monochromatic electrophotographic printers and multi-function devices that contain printer components" issued by ISO [International Organization for Standardization]) when printing A4 size paper with the default print density setting.

Replacement Toner Cartridges

The Canon genuine toner cartridges for replacement and average number of sheets that can be printed*¹ are shown below.

For optimum print quality, using Canon genuine toner cartridges is recommended.

*¹ The average yield is based on "ISO/IEC 19752" (the global standard related to "Method for the determination of toner cartridge yield for monochromatic electrophotographic printers and multi-function devices that contain printer components" issued by ISO [International Organization for Standardization]) when printing A4 size paper with the default print density setting.

Canon Cartridge 072

1400 sheets


Canon Cartridge 072 H

4100 sheets

CAUTION

Store a toner cartridge as described below. Storing a toner cartridge in an improper location or environment may cause problems such as data loss.

- Store unopened until immediately prior to use.
- Store a toner cartridge in the following conditions:
 - Storage temperature range: 32 to 95°F (0 to 35°C)
 - Storage humidity range: 35% to 85% RH (relative humidity, condensation-free)*¹

 **CAUTION**

*1 Even within the approved storage humidity range, water droplets (condensation) may develop inside the toner cartridge if the temperatures inside and outside the toner cartridge differ. Condensation will adversely affect the print quality.

- Do not store a toner cartridge in the following locations:
 - Locations exposed to open flames
 - Locations exposed to direct sunlight or bright light for five minutes or more
 - Locations exposed to excessively salty air
 - Locations heavily exposed to corrosive gases (e.g. aerosol sprays or ammonia)
 - Very hot and/or humid locations
 - Locations subject to dramatic changes in temperature and humidity likely to cause condensation
 - Very dusty locations
 - Locations within the reach of children
 - Locations close to products affected by magnetism (e.g. floppy disks or disk drives)
- Do not store a toner cartridge upright or upside down.
- Store the packaging material safely for future use. It will be needed for situations such as storing the machine with the toner cartridge removed.
- Canon reserves the right to reposition, reshape, add, or remove packaging material without notice.

 **IMPORTANT****Be careful of counterfeit toner cartridges**

- Please be aware that there are counterfeit Canon toner cartridges in the marketplace. Use of counterfeit toner cartridge may result in poor print quality or machine performance. Canon is not responsible for any malfunction, accident or damage caused by the use of counterfeit toner cartridge. For more information, see <https://global.canon/ctc/> .


NOTE

- The toner cartridge may need to be replaced before reaching the average number of sheets that can be printed depending on the installation environment, paper size to be printed, and original type.

Adjusting the Print Density

A19R-0FW

If print results are too dark or too faint, adjust the print density.

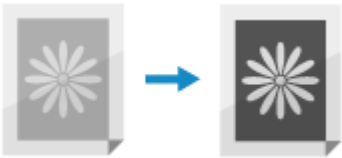


Use the control panel to perform adjustment. You cannot perform adjustment using Remote UI from a computer.

- ▶ **Touch Panel Model(P. 538)**
- ▶ **5 Lines LCD Model(P. 538)**

Touch Panel Model

- 1** On the control panel, press [Menu] in the [Home] screen. ▶ [Home] Screen(P. 121)
- 2** Press [Adjustment/Maintenance] ▶ [Adjust Image Quality] ▶ [Printer Density].
- 3** Adjust the density.

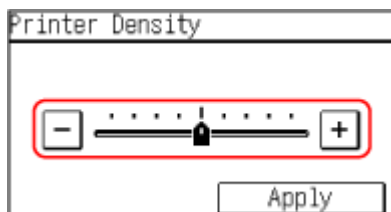


Specify [+] to increase the density and [-] to reduce it.

- 4** Press [Apply].

5 Lines LCD Model

- 1** On the control panel, select [Menu] in the [Home] screen, and press **OK**. ▶ [Home] Screen(P. 121)
- 2** Press [Adjustment/Maintenance] ▶ **OK** ▶ [Adjust Image Quality] ▶ **OK** ▶ [Printer Density] ▶ **OK**.
- 3** Adjust the density.

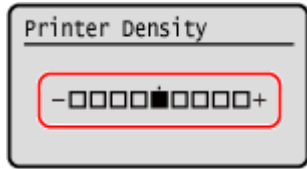

Specify [+] to increase the density and [-] to reduce it.

4 Press **OK**.

Moving the Machine

A19R-0AR

The machine is a heavy object. When moving the machine for cleaning or to change locations, be sure to perform the procedure below to prevent injury, accident, or damage to the machine.


! IMPORTANT

- If the machine is to be transported for relocation, removals, etc., take the following steps to prevent damage and faults during transportation:
 - Remove the toner cartridge.
 - Securely pack the machine in the original packaging (box) and packing materials.


1 Turn OFF the machine. ▶Turning OFF the Machine(P. 113)

Turning OFF the machine deletes any data waiting to be printed.

2 Unplug the power cord in the order shown.

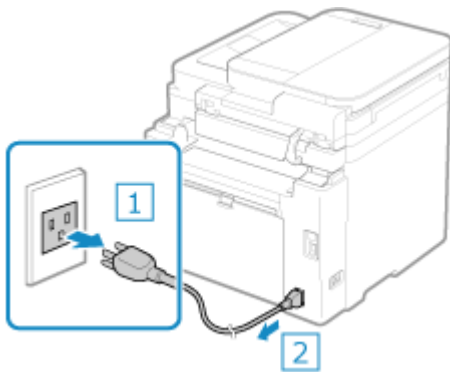


3 Unplug all cables and cords connected to the machine.

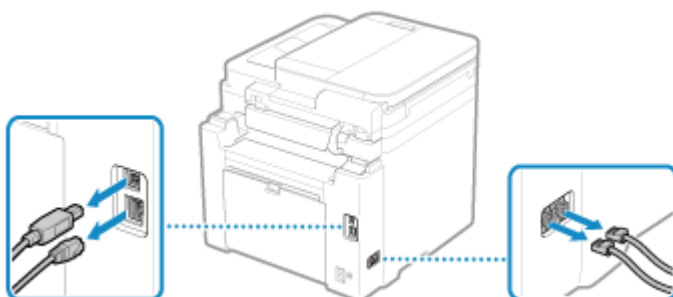

* The number of connected cables and cords varies depending on the usage environment.


4 When moving the machine a long distance, remove the toner cartridge to prevent spilling of toner. ▶Replacing Toner Cartridge(P. 532)

5 Pull out the drawer, and remove it while lifting the front side.

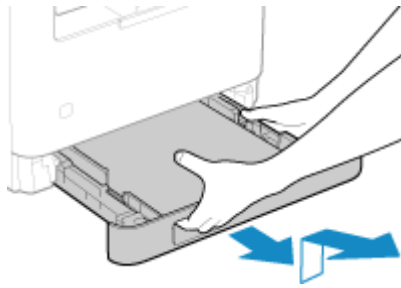

6 Close the control panel, paper stopper, and all other open components.

7 Grab the lift handles, and lift up the machine to move it.

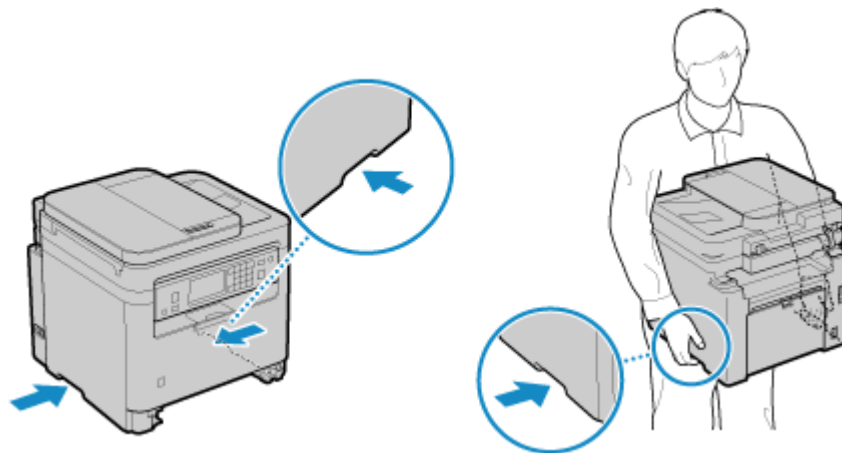

The machine is a heavy object. For the dimensions and weight of the machine, see the basic specifications. ▶ **Basic Specifications(P. 24)**

8 Gently lower the machine.

For the installation procedure after moving, see "Setup Guide." ▶ **Manuals of the Machine(P. 656)**

Troubleshooting

Troubleshooting	544
Paper Jams	546
Paper Jams in the Drawer, Output Tray, Inside the Machine, and in the Rear Side	548
Paper Jams in the Feeder	551
Paper Jams That Occur Repeatedly	555
Problems with Printing Results	556
Toner Smudges and Splatters Appear	558
Streaks Appear	560
Printing Is Uneven	562
Printed Paper Is Blank	564
Smudge Marks Appear on the Edge of Printouts	565
Text or Images Are Blurry	566
Printouts Have Ghost Images	568
Printouts Are Faded	570
The Edge of the Page Is Not Printed	572
The Background Is Generally Dark	573
White Spots Appear	574
Smudge Marks Appear on the Back Side of Printouts	576
Printouts Are Skewed	577
The Printed Barcode Cannot be Scanned	578
Paper and Paper Feeding Problems	579
Paper Creases	580
Paper Curls	581
Paper Is Not Fed or Two or More Sheets Are Fed Together	582
Paper Drawer Does Not Fit in the Machine	583
Setting Up	584
The Machine Connected via WSD Port Is Not Displayed During Driver Installation	585
Cannot Connect to Wireless LAN	586
Network	587
Cannot Switch to Wireless LAN	588
Cannot Find the Print Server to Connect to	590
Cannot Connect to a Shared Printer	591
Cannot Find the IP Address of the Machine	592
AirPrint Does Not Work	593


Printing and Copying	594
Cannot Print or Copy	595
Cannot Print (Wireless LAN)	596
Cannot Print (Wired LAN)	598
Cannot Print (USB Connection)	600
Cannot Print (via Print Server)	601
Printing Is Slow	602
Scanning	603
Cannot Save Scanned Data to a Computer	604
Cannot Save Scanned Data to a Shared Folder	606
Faxing and Using the Telephone	608
Cannot Send a Fax	609
Cannot Receive a Fax	611
Machine Does Not Automatically Switch Between Telephone and Fax	613
Cannot Send or Receive a Fax via Optical Line	614
Cannot Send a Fax to an International Destination	615
Other Party's Telephone or Fax Number Is Not Displayed	616
Management Functions and Environment Settings	617
Cannot Access Remote UI or Send Function Setting Tool	618
Changing the Volume of the Confirmation Sound and Warning Tone	619
Changing the Time Until Sleep Mode	620
Lost Department ID or PIN for the Administrator	621
Checking the Items That Can Be Configured on the Machine and Their Settings	622
A Message Appears	623
An Error Code Is Displayed	643
If the Problem Persists	652

Troubleshooting

A19R-0AS

This chapter describes how to troubleshoot problems and answers frequently asked questions.

Select an item to check from the contents or the list below.

You can click [] at the top of the screen to search for the message or error code (three-digit number starting with #) that appears on the control panel, and check how to troubleshoot problems.

■ Checks Before Contacting Us

▶ **If the Problem Persists(P. 652)**

■ Frequently Asked Questions

▶ **Lost Department ID or PIN for the Administrator(P. 621)**

▶ **Cannot Print or Copy(P. 595)**

▶ **Cannot Send or Receive a Fax via Optical Line(P. 614)**

▶ **[Memory is full.] Is Displayed on the Control Panel, and the Operation Cannot Be Performed.(P. 637)**

▶ **Error Code "#801" Is Displayed(P. 647)**

▶ **Error Code "#806" Is Displayed(P. 648)**

▶ **I want to set a password for using Remote UI(P. 384)**

■ Frequently Asked Questions about Operations

I Want to Scan an Original.

Make preparations according to the scanned data save destination and sending method, and then scan the original.

▶ **Scanning(P. 215)**

I Want to Set the File Format and Original Orientation Before Scanning.

On the scanning screen, set the original size and adjust the image quality.

▶ **Scan Settings (Touch Panel Model)(P. 247)**

I Want to Send Scanned Data by E-mail.

You can scan an original and send the scanned data by e-mail as an attachment.

▶ **Scanning (Sending by E-mail)(P. 236)**

I Want to Delete or Forward a Fax Saved in the Memory (Memory Lock).

Check the log and delete or forward a fax.

▶ **Checking Sent and Received Faxes(P. 282)**

▶ **Viewing and Printing Faxes Saved in the Memory(P. 379)**

I Want to Forward a Received Fax.

Configure the settings to automatically forward received faxes to a computer or other fax machine.

▶ **Auto Forwarding and Backing Up Received Faxes(P. 265)**

I Want to View a Received Fax Without Printing It.

Use Remote UI to view the fax.

▶ **Viewing and Printing Faxes Saved in the Memory(P. 379)**

I Want to Print a Received Fax Later.

Configure the setting to temporarily save received faxes in the memory of the machine without printing them immediately.

▶ **Saving Received Documents in the Machine (Memory Lock)(P. 378)**

I Want to Send a Fax from a Computer.

You can send a document as a fax from a computer using a fax driver.

▶ **Sending Faxes from a Computer (PC Faxing)(P. 271)**

I Want to Print on an Envelope.

Place the envelope in the drawer while paying attention to the orientation and side of the envelope. Then, set the paper size and type according to the placed envelope.

Next, use the print driver of the computer to set the paper size of the document and the paper size to print, and then perform printing.

▶ **Preparations and Orientation for Loading Envelopes(P. 150)**

▶ **Specifying the Paper Size and Type(P. 154)**

▶ **Printing from a Computer(P. 204)**

Printing from a Computer Results in an Error.

Use the printer driver to add a new port or change an existing port.

▶ **Configuring a Printer Port (Windows)(P. 198)**

The Message "Size/Settings Mismatch" Is Displayed

Check the paper size setting.

▶ **Size/Settings Mismatch(P. 639)**

I Want to Register a Shared Folder on a Computer to the Address Book.

Use Remote UI to register the shared folder to the Address Book.

▶ **Registering Destinations to the Address Book (Remote UI)(P. 171)**

I Want to Restrict Access for a Shared Folder.

When registering the shared folder to the Address Book, enter the user name and password to be used to access the shared folder.

▶ **Registering Destinations to the Address Book (Remote UI)(P. 171)**

I Want to Edit the Address Book on a Computer.

Use Remote UI to edit the Address Book.

▶ **Registering Destinations to the Address Book (Remote UI)(P. 171)**

NOTE


- If the problem persists even after trying the troubleshooting methods, contact your dealer or service representative. ▶ **If the Problem Persists(P. 652)**

Paper Jams


A19R-0AU

If paper jams occur in the machine, [Paper jammed.] appears on control panel. Follow the displayed instructions on how to clear the paper jam.


Touch Panel Model

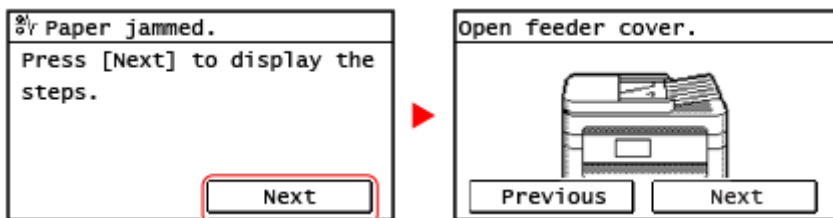

5 Lines LCD Model

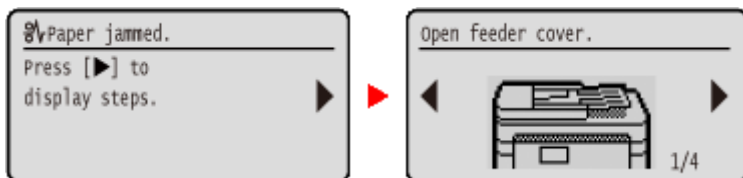

For details about clearing paper jams from various parts of the machine, see below.

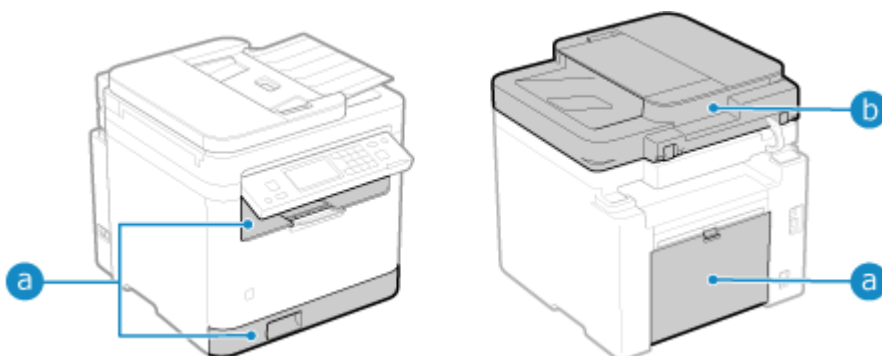

a Drawer, output tray, inside the machine, and rear side

▶ **Paper Jams in the Drawer, Output Tray, Inside the Machine, and in the Rear Side(P. 548)**

b Feeder

▶ **Paper Jams in the Feeder(P. 551)**

CAUTION

Do not forcibly remove the jammed paper from the machine.

- Forcibly removing the paper may result in personal injury or damage parts of the machine. If you cannot remove the paper, contact your dealer or service representative. **▶ If the Problem Persists(P. 652)**

When All Paper Jams Have Been Cleared

- Immediately remove your hands from the machine so that your clothing and hands do not get caught in the rollers.

 **IMPORTANT**

When clearing paper jams, do not turn the power OFF.

- Data being printed is erased when you turn the power OFF.

When the Paper Gets Torn


- Be sure to remove it so that no pieces remain.

Paper Jams in the Drawer, Output Tray, Inside the Machine, and in the Rear Side

A19R-0AW


Use the procedure below to check the drawer, output tray, inside the machine, and rear side, and to remove any jammed paper. If the paper tears, ensure that no pieces are left behind.

1 Lift the control panel.

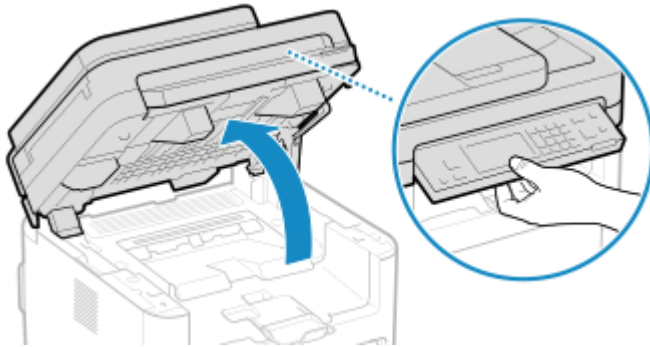


If the feeder is not closed completely, you cannot raise the control panel. If you try to raise it by force, the machine may be damaged.


2 Open the toner cover.

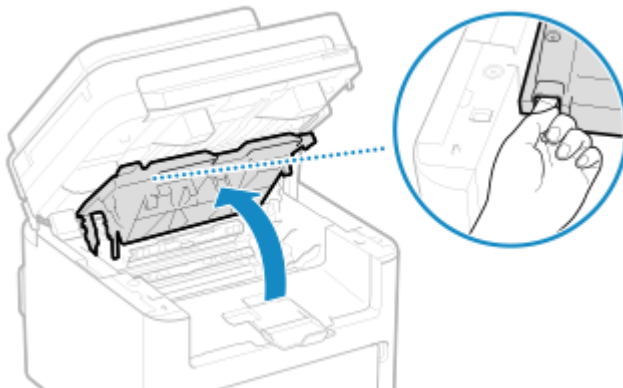


3 Gently remove the toner cartridge.

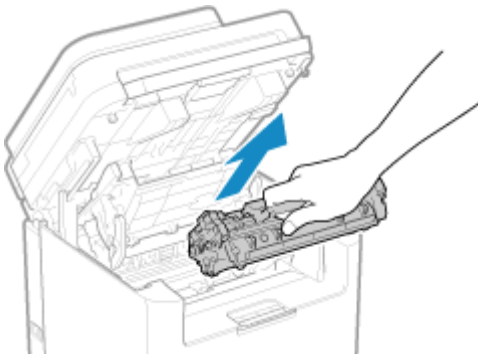

4 Pull out the drawer, and remove it while lifting the front side.

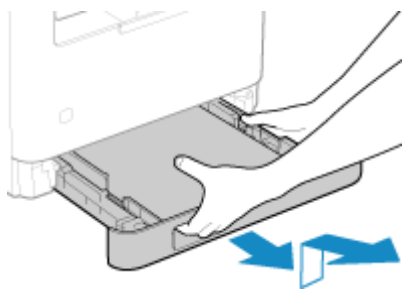


5 Gently pull out the paper.

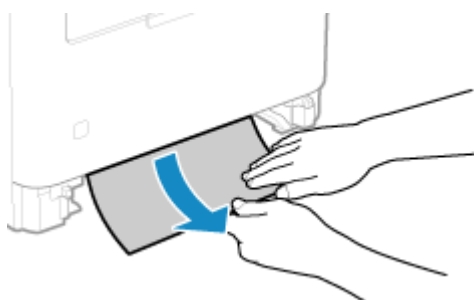

6 Load the drawer into the machine.

7 Check whether paper is jammed inside the paper exit guide.

1 Pull out the paper exit guide.

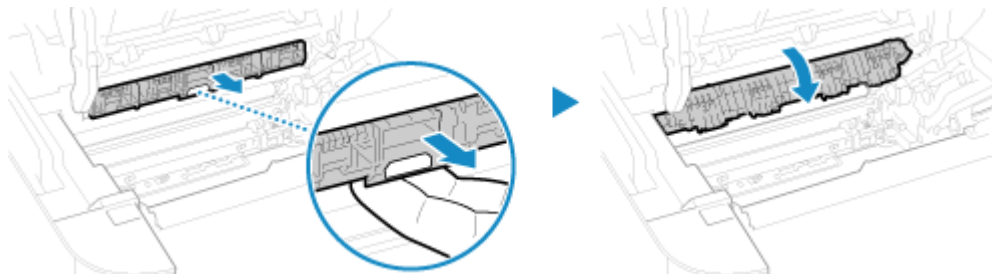

2 Gently pull out the paper.




3 Close the paper exit guide.

8 Gently pull out the jammed paper inside the machine.




Hold both edges of the paper, pull the leading edge of the paper down, and then pull it out.

9 Open the rear cover.

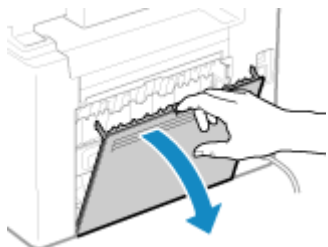

10 Gently pull out the paper.

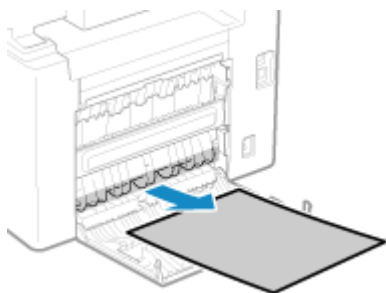

11 Close the rear cover.

12 Insert the toner cartridge.

13 Close the toner cover, and lower the control panel.

⇒ The message [Paper jammed.] disappears, and printing resumes automatically.
If printing does not resume automatically, try printing again.

NOTE

If Paper Jams Occur Repeatedly

- Check the status of the machine and paper. [▶ Paper Jams That Occur Repeatedly\(P. 555\)](#)

Paper Jams in the Feeder

A19R-0AX

Remove the original jammed inside or at the rear side of the feeder. If the original tears, be sure to remove the parts so that no pieces remain.


② 2-Sided Double Pass Feeder(P. 551)

① 1-Sided Feeder(P. 553)


2-Sided Double Pass Feeder

1 If another original is placed in the feeder, remove that original.


2 Open the feeder cover.

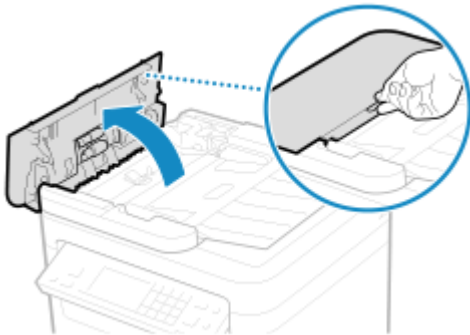


3 Move the lever to unlock.

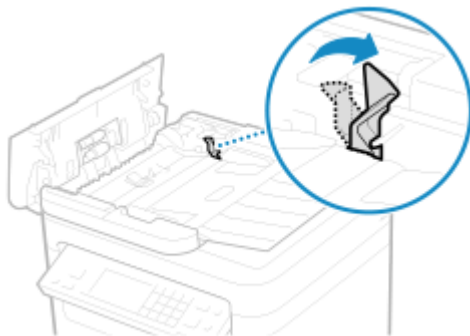


4 Gently pull out the original.

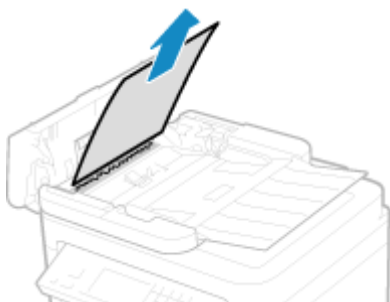


- 5** Hold the green knob, and open the inner cover.

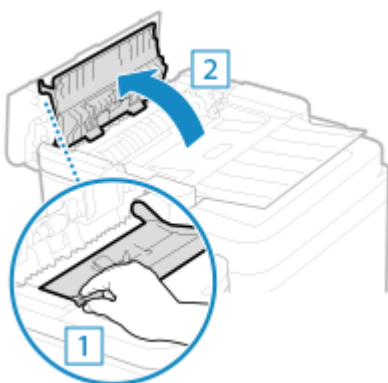

- 6** Gently pull out the original.

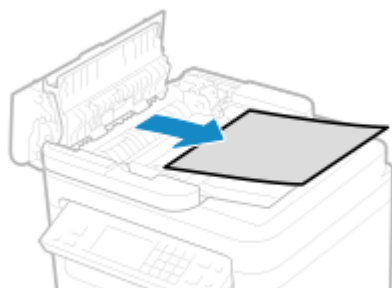

- 7** Lift the original supply tray and gently pull out the original.

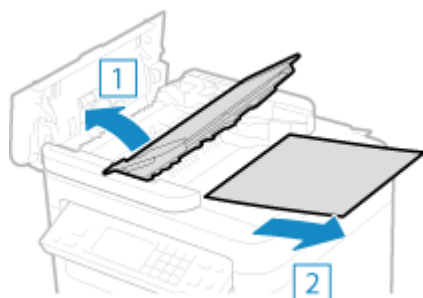

- 8** Close the inner cover.

- 9** Return the lever back in place, and close the feeder cover.

- 10** Place the original in the feeder again.

➡ The message [Paper jammed.] disappears, and you can scan the original. Jobs in which an original jammed are canceled automatically. The job does not resume even if you place the original again, so execute the job again.

NOTE


If Paper Jams Occur Repeatedly

- Check the status of the machine and original. ▶ [Paper Jams That Occur Repeatedly\(P. 555\)](#)

1-Sided Feeder

1 If another original is placed in the feeder, remove that original.


2 Open the feeder cover.

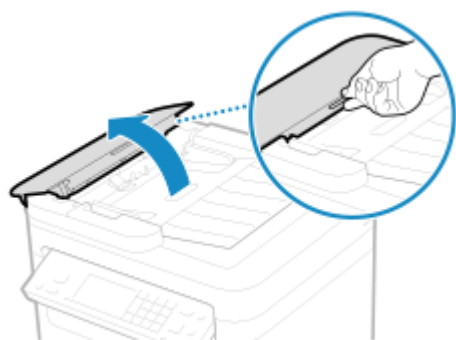

3 Gently pull out the original.



4 Lift the original supply tray and gently pull out the original.

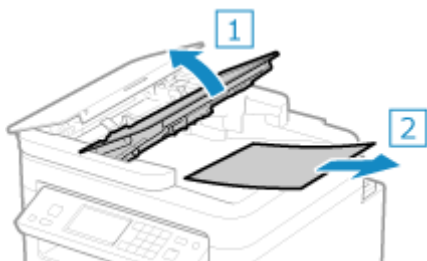

5 Close the feeder cover.

6 Place the original in the feeder again.

- ➡ The message [Paper jammed.] disappears, and you can scan the original.
Jobs in which an original jammed are canceled automatically. The job does not resume even if you place the original again, so execute the job again.

NOTE

If Paper Jams Occur Repeatedly

- Check the status of the machine and original. ▶ **Paper Jams That Occur Repeatedly(P. 555)**

Paper Jams That Occur Repeatedly

A19R-0AY

Troubleshoot by checking the items below.

Are There Paper Scraps or Foreign Objects Inside the Machine?

Remove any paper scraps or foreign objects. **▶ Paper Jams (P. 546)**

Are You Using Appropriate Paper?


Check whether the paper in the machine is usable, and replace it with appropriate paper, as needed.

▶ Usable Paper (P. 19)


▶ Loading Paper (P. 144)

Is Paper Loaded Correctly?

- Fan the paper thoroughly in small batches so that it is not stuck together.
- Align the edges by tapping the paper on a flat surface a few times before loading the paper. **▶ Loading Paper (P. 144)**
- Make sure the loaded paper does not exceed the load limit guides (**a**).

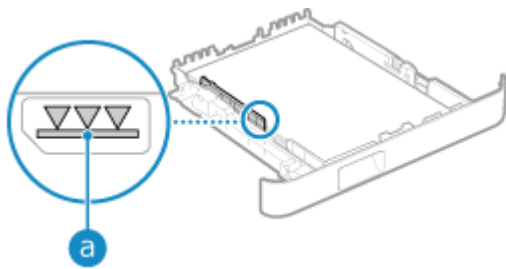

- Check that the positions of the paper guides are not too loose or too tight.

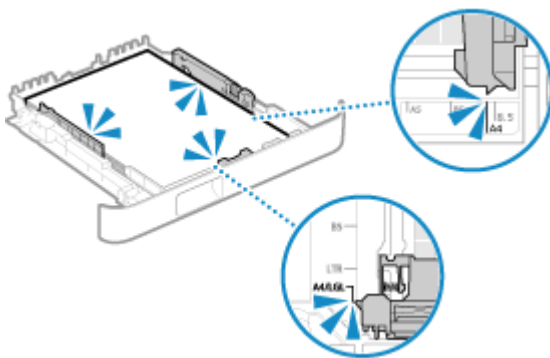

Do Paper Jams Occur When Printing on the Back Side of Printed Paper?

Flatten the edges of the paper to thoroughly remove any curls.

* When printing on the back side of printed paper, you can only use paper printed with this machine. Do not use paper printed with another printer or multifunction machine, as this can cause paper jams or damage the machine.


Problems with Printing Results

A19R-0C0

If printouts show any of the symptoms below, check how to troubleshoot the problem based on the symptom.




▶ **Toner Smudges and Splatters Appear(P. 558)**

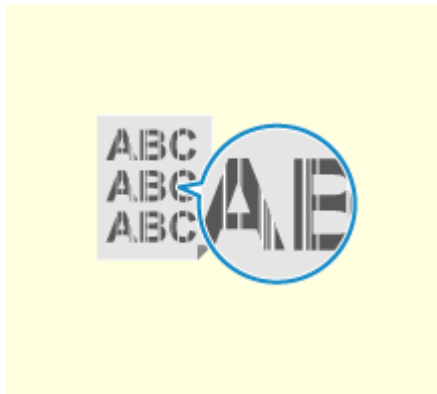


▶ **Streaks Appear(P. 560)**



▶ **Printing Is Uneven(P. 562)**

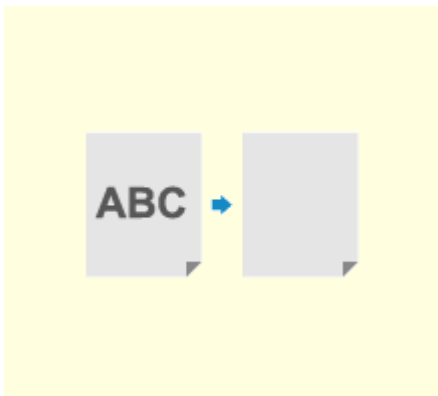


▶ **Printed Paper Is Blank(P. 564)**

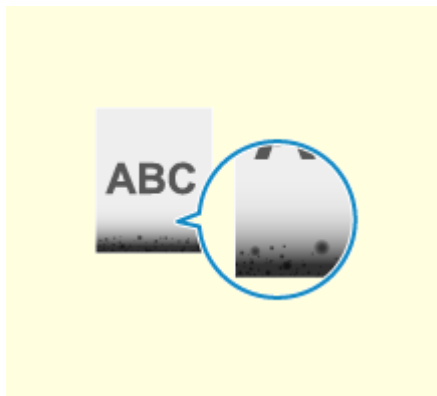

▶ **Smudge Marks Appear on the Edge of Printouts(P. 565)**




▶ **Text or Images Are Blurry(P. 566)**

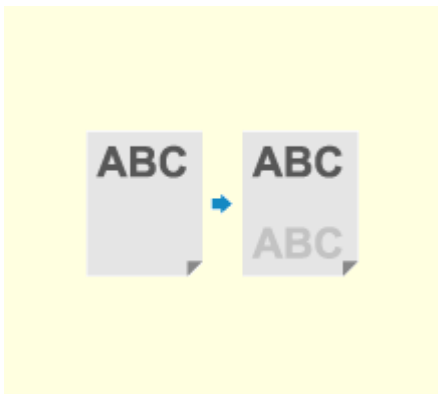

▶ **Printouts Have Ghost Images(P. 568)**



▶ **Printouts Are Faded(P. 570)**

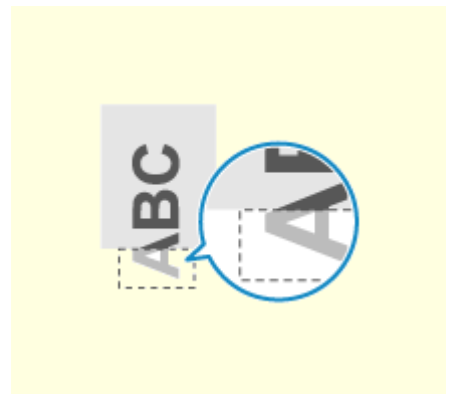


▶ **The Edge of the Page Is Not Printed(P. 572)**




▶ **The Background Is Generally Dark(P. 573)**



▶ **White Spots Appear(P. 574)**

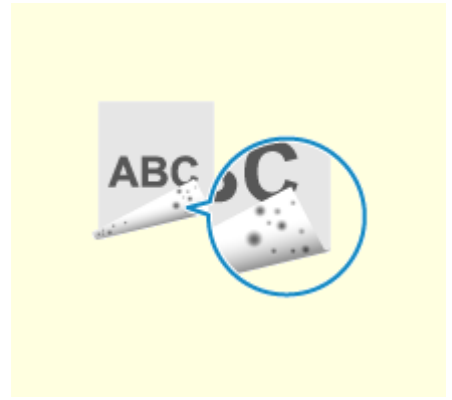

▶ **Smudge Marks Appear on the Back Side of Printouts(P. 576)**

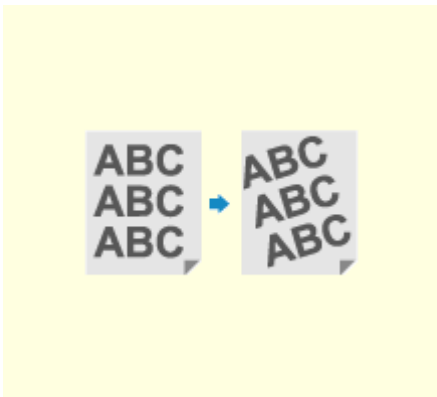

▶ **Printouts Are Skewed(P. 577)**



▶ **The Printed Barcode Cannot be Scanned(P. 578)**

Toner Smudges and Splatters Appear

A19R-0C1

Troubleshoot by checking in the following order:

- ▶ **Step 1: Checking the Paper(P. 558)**
- ▶ **Step 2: Checking the Toner Cartridges(P. 558)**
- ▶ **Step 3: Checking the Usage Environment of the Machine(P. 558)**
- ▶ **Step 4: Checking the Maintenance Status(P. 559)**

Step 1: Checking the Paper

Are You Using Appropriate Paper?

Check whether the paper in the machine is usable, and replace it with appropriate paper, as needed.

- ▶ **Usable Paper(P. 19)**
- ▶ **Loading Paper(P. 144)**

Step 2: Checking the Toner Cartridges

Check the Remaining Amount of Toner in the Toner Cartridge.

Check the remaining amount of toner in the toner cartridge. Replace the toner cartridge if the remaining amount of toner is low.

- ▶ **Checking the Remaining Amount of Consumables(P. 535)**
- ▶ **Replacing the Toner Cartridge(P. 529)**

* Depending on the usage condition of the machine, the actual remaining amount of toner may be lower than indicated or the parts may be deteriorated. If the problem persists, replace the toner cartridges.

Step 3: Checking the Usage Environment of the Machine

Are You Using the Machine in an Environment with Low Humidity?

Setting [Low Humidity Mode] to [Mode 1] may solve the problem. If that does not work, try selecting [Mode 2] and then [Mode 3] in sequence.

Touch Panel Model

[Home] screen on the control panel ▶ [Menu] ▶ [Adjustment/Maintenance] ▶ [Adjust Image Quality] ▶ [Special Processing] ▶ [Low Humidity Mode] ▶ select the mode.

5 Lines LCD Model

[Home] screen on the control panel ▶ [Menu] ▶ ▶ [Adjustment/Maintenance] ▶ ▶ [Adjust Image Quality] ▶ ▶ [Special Processing] ▶ ▶ [Low Humidity Mode] ▶ ▶ select the mode.

* Enabling this setting may reduce the density or create fading in a humid environment.

Step 4: Checking the Maintenance Status

Have You Cleaned the Fixing Assembly?

These symptoms may occur when the fixing assembly is dirty. In this case, clean the fixing assembly. ▶
Cleaning the Fixing Assembly(P. 526)

Streaks Appear

A19R-0C2

Troubleshoot by checking in the following order:

- ▶ **Step 1: Checking the Paper(P. 560)**
- ▶ **Step 2: Checking the Platen Glass(P. 560)**
- ▶ **Step 3: Checking the Toner Cartridge(P. 560)**
- ▶ **Step 4: Checking the Usage Environment of the Machine(P. 560)**
- ▶ **Step 5: Checking the Maintenance Status(P. 561)**

Step 1: Checking the Paper

Are You Using Appropriate Paper?

Check whether the paper in the machine is usable, and replace it with appropriate paper, as needed.

- ▶ **Usable Paper(P. 19)**
- ▶ **Loading Paper(P. 144)**

Step 2: Checking the Platen Glass

Is the Platen Glass Dirty?

Clean the platen glass or rear side of the feeder if dirty.

- ▶ **Cleaning the Platen Glass(P. 522)**
- ▶ **Cleaning the Feeder(P. 523)**

Step 3: Checking the Toner Cartridge

Check the Remaining Amount of Toner in the Toner Cartridge.

Check the remaining amount of toner in the toner cartridge. Replace the toner cartridge if the remaining amount of toner is low.

- ▶ **Checking the Remaining Amount of Consumables(P. 535)**
- ▶ **Replacing the Toner Cartridge(P. 529)**

* Depending on the usage condition of the machine, the actual remaining amount of toner may be lower than indicated or the parts may be deteriorated. If the problem persists, replace the toner cartridges.

Step 4: Checking the Usage Environment of the Machine

Is the Machine Installed in a Location Subject to Strong Wind Such as from an Air Conditioner?


If so, adjust the air direction and volume of the air conditioner.

If that does not work, setting [Switch Paper Feed Method] to [Print Side Priority] may improve the problem.

Touch Panel Model

[Home] on the control panel ▶ [Menu] ▶ [Function Settings] ▶ [Common] ▶ [Paper Feed Settings] ▶ [Switch Paper Feed Method] ▶ select the paper source ▶ [Print Side Priority]

5 Lines LCD Model

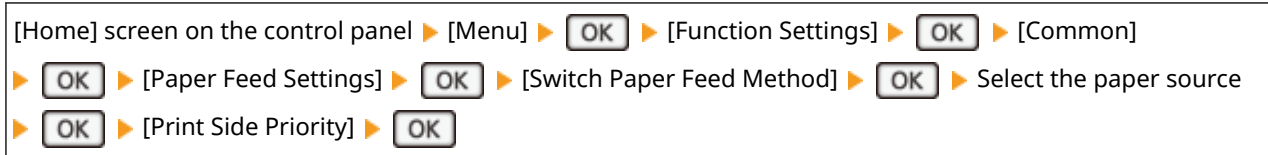

* When you select [Print Side Priority], the printing speed for 1-Sided printing will decrease.

Are You Using the Machine in an Environment with Sudden Temperature Changes?

Sudden temperature changes can create condensation, which can result in faded or blurry images and text. Continuing to use the machine under these conditions may result in paper jams, printing defects, faults, or other problems. Allow the machine to adjust to the ambient temperature and humidity for at least 2 hours before use.

Step 5: Checking the Maintenance Status

Have You Cleaned the Fixing Assembly?

These symptoms may occur when the fixing assembly is dirty. In this case, clean the fixing assembly. ▶ **Cleaning the Fixing Assembly(P. 526)**

Printing Is Uneven

A19R-0C3

Troubleshoot by checking in the following order:

- ▶ **Step 1: Checking the Paper(P. 562)**
- ▶ **Step 2: Checking the Toner Cartridge(P. 562)**
- ▶ **Step 3: Checking the Usage Environment of the Machine(P. 562)**

Step 1: Checking the Paper

Are You Using Appropriate Paper?

Check whether the paper in the machine is usable, and replace it with appropriate paper, as needed.

- ▶ **Usable Paper(P. 19)**
- ▶ **Loading Paper(P. 144)**

Step 2: Checking the Toner Cartridge

Check the Remaining Amount of Toner in the Toner Cartridge.

Check the remaining amount of toner in the toner cartridge. Replace the toner cartridge if the remaining amount of toner is low.

- ▶ **Checking the Remaining Amount of Consumables(P. 535)**
- ▶ **Replacing the Toner Cartridge(P. 529)**

* Depending on the usage condition of the machine, the actual remaining amount of toner may be lower than indicated or the parts may be deteriorated. If the problem persists, replace the toner cartridges.

Step 3: Checking the Usage Environment of the Machine

Are You Using the Machine in a Humid Environment?

Setting [High Humidity Mode] to [On] may solve the problem.

Touch Panel Model

[Home] screen on the control panel ▶ [Menu] ▶ [Adjustment/Maintenance] ▶ [Adjust Image Quality] ▶ [Special Processing] ▶ [High Humidity Mode] ▶ [On]

5 Lines LCD Model

[Home] screen on the control panel ▶ [Menu] ▶ ▶ [Adjustment/Maintenance] ▶ ▶ [Adjust Image Quality] ▶ ▶ [Special Processing] ▶ ▶ [High Humidity Mode] ▶ ▶ [On] ▶

* Setting this to [On] may blur images and text in an environment with low humidity.

Are You Using the Machine in an Environment with Sudden Temperature Changes?

Sudden temperature changes can create condensation, which can result in faded or blurry images and text. Continuing to use the machine under these conditions may result in paper jams, printing defects, faults, or other problems. Allow the machine to adjust to the ambient temperature and humidity for at least 2 hours before use.

Is the Machine Installed in a Location Subject to Strong Wind Such as from an Air Conditioner?

If so, adjust the air direction and volume of the air conditioner.

If that does not work, setting [Switch Paper Feed Method] to [Print Side Priority] may improve the problem.

Touch Panel Model

[Home] on the control panel ▶ [Menu] ▶ [Function Settings] ▶ [Common] ▶ [Paper Feed Settings] ▶ [Switch Paper Feed Method] ▶ select the paper source ▶ [Print Side Priority]

5 Lines LCD Model

[Home] screen on the control panel ▶ [Menu] ▶ ▶ [Function Settings] ▶ ▶ [Common]
 ▶ ▶ [Paper Feed Settings] ▶ ▶ [Switch Paper Feed Method] ▶ ▶ Select the paper source
 ▶ ▶ [Print Side Priority] ▶

* When you select [Print Side Priority], the printing speed for 1-Sided printing will decrease.

Printed Paper Is Blank

A19R-0C4

Troubleshoot by checking the following steps:

- ▶ **Step 1: Checking the Original (Copying Only)(P. 564)**
- ▶ **Step 2: Checking the Status of the Machine(P. 564)**


Step 1: Checking the Original (Copying Only)

Is Original Placed Correctly?

Place the original correctly while paying attention to the orientation of the side to be scanned.

When Placing It on the Platen Glass

Place the original with the side to be scanned face down. ▶ **Placing Originals on the Platen Glass(P. 140)**

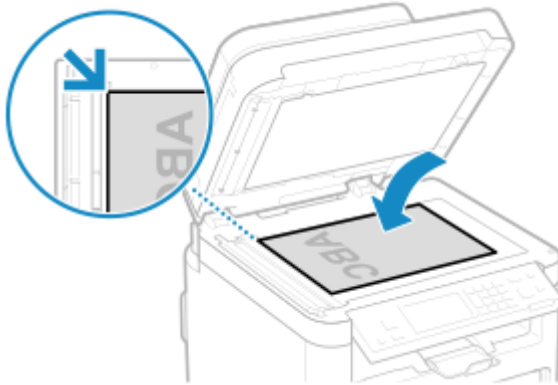

When Placing Originals in the Feeder

Place the original with the side to be scanned face up. ▶ **Placing Originals in the Feeder(P. 141)**



Step 2: Checking the Status of the Machine

Is Condensation Removal Being Performed?

Check the control panel, and wait for condensation removal to finish.

Smudge Marks Appear on the Edge of Printouts

A19R-0C5

Troubleshoot by checking in the following order:

Are You Using Appropriate Paper?

- Check whether the paper in the machine is usable, and replace it with appropriate paper, as needed.
 - ▶ **Usable Paper(P. 19)**
 - ▶ **Loading Paper(P. 144)**

Are You Printing to the Edge of the Paper Without Margins?

This symptom may occur when the margin is set to none in the printer driver. To print with this machine, a margin of 1/4" (5 mm) (3/8" (10 mm) at the top and bottom of an envelope) is required.

On the [Printing preferences] screen of the printer driver, configure the following setting to provide a margin.

[Finishing] tab ▶ [Advanced Settings] ▶ [Expand Print Region and Print] ▶ [Off]

Have You Cleaned the Fixing Assembly?

These symptoms may occur when the fixing assembly is dirty. In this case, clean the fixing assembly. ▶ **Cleaning the Fixing Assembly(P. 526)**

Text or Images Are Blurry

A19R-0C6

Troubleshoot by checking the following steps:

- 🔴 **Step 1: Checking the Paper(P. 566)**
- 🔴 **Step 2: Checking the Usage Environment of the Machine(P. 566)**
- 🔴 **Step 3: Checking the Special Processing Settings(P. 567)**

Step 1: Checking the Paper

Are You Using Appropriate Paper?

Check whether the paper in the machine is usable, and replace it with appropriate paper, as needed.

- 🔴 **Usable Paper(P. 19)**
- 🔴 **Loading Paper(P. 144)**

Step 2: Checking the Usage Environment of the Machine

Are You Using the Machine in an Environment with Low Humidity?

Setting [Low Humidity Mode] to [Mode 1] may solve the problem. If that does not work, try selecting [Mode 2] and then [Mode 3] in sequence.

Touch Panel Model

[Home] screen on the control panel ▶ [Menu] ▶ [Adjustment/Maintenance] ▶ [Adjust Image Quality] ▶ [Special Processing] ▶ [Low Humidity Mode] ▶ select the mode.

5 Lines LCD Model

[Home] screen on the control panel ▶ [Menu] ▶ ▶ [Adjustment/Maintenance] ▶ ▶ [Adjust Image Quality] ▶ ▶ [Special Processing] ▶ ▶ [Low Humidity Mode] ▶ ▶ select the mode.

* Enabling this setting may reduce the density or create fading in a humid environment.

Are You Using the Machine in a Humid Environment?

Setting [High Humidity Mode] to [On] may solve the problem.

Touch Panel Model

[Home] screen on the control panel ▶ [Menu] ▶ [Adjustment/Maintenance] ▶ [Adjust Image Quality] ▶ [Special Processing] ▶ [High Humidity Mode] ▶ [On]

5 Lines LCD Model

[Home] screen on the control panel ▶ [Menu] ▶ ▶ [Adjustment/Maintenance] ▶ ▶ [Adjust Image Quality] ▶ ▶ [Special Processing] ▶ ▶ [High Humidity Mode] ▶ ▶ [On] ▶

* Setting this to [On] may blur images and text in an environment with low humidity.

Are You Using the Machine in an Environment with Sudden Temperature Changes?

Sudden temperature changes can create condensation, which can result in faded or blurry images and text. Continuing to use the machine under these conditions may result in paper jams, printing defects, faults, or other problems. Allow the machine to adjust to the ambient temperature and humidity for at least 2 hours before use.

Step 3: Checking the Special Processing Settings

Is [Correct Blurry Image] enabled?

Setting [Correct Blurry Image] to [Mode 1] may improve the print results. If that does not work, select [Mode 2].

Touch Panel Model

[Home] screen on the control panel ▶ [Menu] ▶ [Adjustment/Maintenance] ▶ [Adjust Image Quality] ▶ [Special Processing] ▶ [Correct Blurry Image] ▶ select the mode.

5 Lines LCD Model

[Home] screen on the control panel ▶ [Menu] ▶ ▶ [Adjustment/Maintenance] ▶ ▶ [Adjust Image Quality] ▶ ▶ [Special Processing] ▶ ▶ [Correct Blurry Image] ▶ ▶ select the mode.

* When this setting is enabled, the print density may decrease or the print speed may be slower.

Printouts Have Ghost Images

A19R-0C7

Troubleshoot by checking the following steps:

- ▶ **Step 1: Checking the Paper and Toner Cartridge(P. 568)**
- ▶ **Step 2: Checking the Occurrence of Ghost Images(P. 568)**
- ▶ **Step 3: Checking the Maintenance Status of the Machine(P. 569)**
- ▶ **Step 4: Checking the Special Processing Setting(P. 569)**

Step 1: Checking the Paper and Toner Cartridge

Are You Using Appropriate Paper?

Check whether the paper in the machine is usable, and replace it with appropriate paper, as needed.

- ▶ **Usable Paper(P. 19)**
- ▶ **Loading Paper(P. 144)**

Have the Toner Cartridge Reached the End of Their Lifetime?

Parts inside the toner cartridge may have deteriorated. If this symptom occurs, it is recommended to replace the toner cartridge regardless of the remaining amount of toner or messages displayed. ▶ **Replacing the Toner Cartridge(P. 529)**

Step 2: Checking the Occurrence of Ghost Images

Do Ghost Images Appear in Unprinted Sections?

If you print on small-sized paper and then continue printing on a larger sized paper, ghost images may appear in the unprinted sections of the paper. In this event, setting [Reduce Ghosting 1] to [On] may improve the print results.

Touch Panel Model

[Home] screen on the control panel ▶ [Menu] ▶ [Adjustment/Maintenance] ▶ [Adjust Image Quality] ▶ [Special Processing] ▶ [Reduce Ghosting 1] ▶ [On]

5 Lines LCD Model

[Home] screen on the control panel ▶ [Menu] ▶  ▶ [Adjustment/Maintenance] ▶  ▶ [Adjust Image Quality] ▶  ▶ [Special Processing] ▶  ▶ [Reduce Ghosting 1] ▶  ▶ [On] ▶ 

* When you select [On], the printing speed may decrease.







Do Ghost Images Appear Within the Same Page?

Setting [Transfer Adjust. Mode] to [Mode 1] may solve the problem. If that does not work, select [Mode 2].

Touch Panel Model

[Home] screen on the control panel ▶ [Menu] ▶ [Adjustment/Maintenance] ▶ [Adjust Image Quality] ▶ [Special Processing] ▶ [Transfer Adjust. Mode] ▶ [Mode 1] or [Mode 2]

5 Lines LCD Model

[Home] screen on the control panel ▶ [Menu] ▶  ▶ [Adjustment/Maintenance] ▶  ▶ [Adjust Image Quality] ▶  ▶ [Special Processing] ▶  ▶ [Transfer Adjust. Mode] ▶  ▶ [Mode 1] or [Mode 2] ▶ 

* When this setting is enabled, the print density may vary in an environment with low- humidity.

Step 3: Checking the Maintenance Status of the Machine

Have You Cleaned the Fixing Assembly?

These symptoms may occur when the fixing assembly is dirty. In this case, clean the fixing assembly. ▶
Cleaning the Fixing Assembly(P. 526)

Step 4: Checking the Special Processing Setting



 

 
Is [Reduce Toner Flaking] Enabled?

If so, setting [Reduce Toner Flaking] to [Off] may improve the problem.

Touch Panel Model

[Home] screen on the control panel ▶ [Menu] ▶ [Adjustment/Maintenance] ▶ [Adjust Image Quality] ▶ [Special Processing] ▶ [Reduce Toner Flaking] ▶ [Off]

5 Lines LCD Model

[Home] screen on the control panel ▶ [Menu] ▶  ▶ [Adjustment/Maintenance] ▶  ▶ [Adjust Image Quality] ▶  ▶ [Special Processing] ▶  ▶ [Reduce Toner Flaking] ▶  ▶ [Off] ▶ 

Printouts Are Faded

A19R-0C8

Troubleshoot by checking the following steps:

- ▶ **Step 1: Checking the Paper and Toner Cartridge(P. 570)**
- ▶ **Step 2: Checking the Usage Environment of the Machine(P. 570)**
- ▶ **Step 3: Checking the Special Processing Setting(P. 571)**

Step 1: Checking the Paper and Toner Cartridge

Are You Using Appropriate Paper?

- Check whether the paper in the machine is usable, and replace it with appropriate paper, as needed.
 - ▶ **Usable Paper(P. 19)**
 - ▶ **Loading Paper(P. 144)**
- Set the paper size and type correctly according to the loaded paper. ▶ **Specifying the Paper Size and Type(P. 154)**

Does the Printed Toner Flake Off Depending on Paper Type or Usage Environment?

If so, setting [Reduce Toner Flaking] to [Mode 1] may improve the problem. If that does not work, select [Mode 2].

Touch Panel Model

[Home] screen on the control panel ▶ [Menu] ▶ [Adjustment/Maintenance] ▶ [Adjust Image Quality] ▶ [Special Processing] ▶ [Reduce Toner Flaking] ▶ [Mode 1] or [Mode 2]

5 Lines LCD Model

[Home] screen on the control panel ▶ [Menu] ▶ ▶ [Adjustment/Maintenance] ▶ ▶ [Adjust Image Quality] ▶ ▶ [Special Processing] ▶ ▶ [Reduce Toner Flaking] ▶ ▶ [Mode 1] or [Mode 2] ▶

* When this setting is enabled, ghost images may appear in unprinted areas.

Have the Toner Cartridge Reached the End of Their Lifetime?

Parts inside the toner cartridge may have deteriorated. If this symptom occurs, it is recommended to replace the toner cartridge regardless of the remaining amount of toner or messages displayed. ▶ **Replacing the Toner Cartridge(P. 529)**

* Depending on the usage condition of the machine, the actual remaining amount of toner may be lower than indicated or the parts may be deteriorated.

Step 2: Checking the Usage Environment of the Machine





 


Is the Machine Installed in a Location Subject to Strong Wind Such as from an Air Conditioner?

If so, adjust the air direction and volume of the air conditioner. If that does not work, setting [Switch Paper Feed Method] to [Print Side Priority] may improve the problem.

Touch Panel Model

[Home] on the control panel ▶ [Menu] ▶ [Function Settings] ▶ [Common] ▶ [Paper Feed Settings] ▶ [Switch Paper Feed Method] ▶ select the paper source ▶ [Print Side Priority]

5 Lines LCD Model

[Home] screen on the control panel ▶ [Menu] ▶  ▶ [Function Settings] ▶  ▶ [Common] ▶  ▶ [Paper Feed Settings] ▶  ▶ [Switch Paper Feed Method] ▶  ▶ select the paper source ▶  ▶ [Print Side Priority] ▶ 

* When you select [Print Side Priority], the printing speed for 1-Sided printing will decrease.

Are You Using the Machine in an Environment with Sudden Temperature Changes?

Sudden temperature changes can create condensation, which can result in faded or blurry images and text. Continuing to use the machine under these conditions may result in paper jams, printing defects, faults, or other problems. Allow the machine to adjust to the ambient temperature and humidity for at least 2 hours before use.

Step 3: Checking the Special Processing Setting

Is [Special Processing] Enabled?

If so, setting [Special Processing] below to [Off] may improve the problem.

- [Envelope Flap Closing Prevention]

Touch Panel Model

[Home] screen on the control panel ▶ [Menu] ▶ [Adjustment/Maintenance] ▶ [Adjust Image Quality] ▶ [Special Processing]

5 Lines LCD Model

[Home] screen on the control panel ▶ [Menu] ▶  ▶ [Adjustment/Maintenance] ▶  ▶ [Adjust Image Quality] ▶  ▶ [Special Processing] ▶ 

The Edge of the Page Is Not Printed

A19R-0C9

Troubleshoot by checking in the following order:

Are You Using Appropriate Paper?

Check whether the paper in the machine is usable, and replace it with appropriate paper, as needed.

▶ **Usable Paper(P. 19)**

▶ **Loading Paper(P. 144)**

Are the Paper Guides Correctly Aligned with the Paper?

Paper guides that are aligned but too loose or too tight can cause part of the page to not be printed. Check the paper guides, and align them with the width of the paper. ▶ **Loading Paper(P. 144)**

Are You Printing to the Edge of the Paper Without Margins?

This symptom may occur when the margin is set to none in the printer driver. To print with this machine, a margin of 1/4" (5 mm) (3/8" (10 mm) at the top and bottom of an envelope) is required.

On the [Printing preferences] screen of the printer driver, configure the following setting to provide a margin.

[Finishing] tab ▶ [Advanced Settings] ▶ [Expand Print Region and Print] ▶ [Off]

The Background Is Generally Dark

A19R-0CA

Troubleshoot by checking in the following order:

Are White Areas Generally Dark?

Setting [Prevent Fogging] to [On] may solve the problem.

Touch Panel Model

[Home] screen on the control panel ▶ [Menu] ▶ [Adjustment/Maintenance] ▶ [Adjust Image Quality] ▶ [Special Processing] ▶ [Prevent Fogging] ▶ [On]

5 Lines LCD Model

[Home] screen on the control panel ▶ [Menu] ▶ ▶ [Adjustment/Maintenance] ▶ ▶ [Adjust Image Quality] ▶ ▶ [Special Processing] ▶ ▶ [Prevent Fogging] ▶ [On] ▶

* When you select [On], the print density may decrease.

Check the Remaining Amount of Toner in the Toner Cartridge.

Check the remaining amount of toner in the toner cartridge. Replace the toner cartridge if the remaining amount of toner is low.

▶ **Checking the Remaining Amount of Consumables(P. 535)**

▶ **Replacing the Toner Cartridge(P. 529)**

* Depending on the usage condition of the machine, the actual remaining amount of toner may be lower than indicated or the parts may be deteriorated. If the problem persists, replace the toner cartridges.

White Spots Appear

A19R-0CC

Troubleshoot by checking the following steps:

- ▶ **Step 1: Checking the Paper(P. 574)**
- ▶ **Step 2: Checking the Toner Cartridge(P. 574)**
- ▶ **Step 3: Checking the Occurrence of White Spots(P. 574)**
- ▶ **Step 4: Checking the Usage Environment of the Machine(P. 575)**
- ▶ **Step 5: Checking the Maintenance Status(P. 575)**

Step 1: Checking the Paper

Are You Using Appropriate Paper?

Check whether the paper in the machine is usable, and replace it with appropriate paper, as needed.

- ▶ **Usable Paper(P. 19)**
- ▶ **Loading Paper(P. 144)**

Are You Using Paper That Has Absorbed Moisture?

Check the precautions, and replace the paper with dry paper.

- ▶ **Precautions When Handling Paper(P. 22)**
- ▶ **Loading Paper(P. 144)**

Step 2: Checking the Toner Cartridge

Check the Remaining Amount of Toner in the Toner Cartridge.

Check the remaining amount of toner in the toner cartridge. Replace the toner cartridge if the remaining amount of toner is low.

- ▶ **Checking the Remaining Amount of Consumables(P. 535)**
- ▶ **Replacing the Toner Cartridge(P. 529)**

* Depending on the usage condition of the machine, the actual remaining amount of toner may be lower than indicated or the parts may be deteriorated. If the problem persists, replace the toner cartridges.

Step 3: Checking the Occurrence of White Spots

Are Dark Characters and Lines Printed Hollowed Out?

Setting [Transfer Adjust. Mode] to [Mode 1] may solve the problem. If that does not work, select [Mode 2].

Touch Panel Model

[Home] screen on the control panel ▶ [Menu] ▶ [Adjustment/Maintenance] ▶ [Adjust Image Quality] ▶ [Special Processing] ▶ [Transfer Adjustment Mode] ▶ [Mode 1] or [Mode 2]

5 Lines LCD Model

[Home] screen on the control panel ▶ [Menu] ▶ **OK** ▶ [Adjustment/Maintenance] ▶ **OK** ▶ [Adjust Image Quality] ▶ **OK** ▶ [Special Processing] ▶ **OK** ▶ [Transfer Adjustment Mode] ▶ **OK** ▶ [Mode 1] or [Mode 2] ▶ **OK**

* When this setting is enabled, the print density may vary in an environment with low- humidity.

Step 4: Checking the Usage Environment of the Machine

Does the Printed Toner Flake Off Depending on Paper Type or Usage Environment?

If so, setting [Reduce Toner Flaking] to [Mode 1] may improve the problem. If that does not work, select [Mode 2].

Touch Panel Model

[Home] screen on the control panel ▶ [Menu] ▶ [Adjustment/Maintenance] ▶ [Adjust Image Quality] ▶ [Special Processing] ▶ [Reduce Toner Flaking] ▶ [Mode 1] or [Mode 2]

5 Lines LCD Model

[Home] screen on the control panel ▶ [Menu] ▶ ▶ [Adjustment/Maintenance] ▶ ▶ [Adjust Image Quality] ▶ ▶ [Special Processing] ▶ ▶ [Reduce Toner Flaking] ▶ ▶ [Mode 1] or [Mode 2] ▶

* When this setting is enabled, ghost images may appear in unprinted areas.

Are You Using Very Dusty Paper?

Setting [Talc Paper Mode] to [On] may solve the problem.

Touch Panel Model

[Home] screen on the control panel ▶ [Menu] ▶ [Adjustment/Maintenance] ▶ [Adjust Image Quality] ▶ [Special Processing] ▶ [Talc Paper Mode] ▶ [On]

5 Lines LCD Model

[Home] screen on the control panel ▶ [Menu] ▶ ▶ [Adjustment/Maintenance] ▶ ▶ [Adjust Image Quality] ▶ ▶ [Special Processing] ▶ ▶ [Talc Paper Mode] ▶ ▶ [On] ▶

* Specifying [On] in this setting may lead to changes in the image quality.

Are You Using the Machine in an Environment with Sudden Temperature Changes?

Sudden temperature changes can create condensation, which can result in faded or blurry images and text. Continuing to use the machine under these conditions may result in paper jams, printing defects, faults, or other problems. Allow the machine to adjust to the ambient temperature and humidity for at least 2 hours before use.

Step 5: Checking the Maintenance Status

Have You Cleaned the Drum?

These symptoms may occur when the drum is dirty. In this case, clean the drum. [▶Cleaning the Drum\(P. 527\)](#)

Smudge Marks Appear on the Back Side of Printouts

A19R-0CE

Troubleshoot by checking in the following order:

Are You Using Paper That Is Smaller Than the Size of the Print Data?

Replace with paper that is the same size as the print data. ▶ **Loading Paper(P. 144)**


Have You Cleaned the Fixing Assembly?

These symptoms may occur when the fixing assembly is dirty. In this case, clean the fixing assembly. ▶ **Cleaning the Fixing Assembly(P. 526)**

Printouts Are Skewed

A19R-0CF

This symptom may occur when the paper guides are aligned but too loose or too tight. Check the paper guides, and align them with the width of the paper. [▶ Loading Paper \(P. 144\)](#)

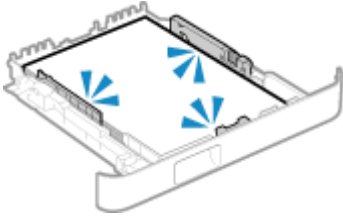

The Printed Barcode Cannot be Scanned

A19R-0CH

Troubleshoot by checking in the following order:

Are You Using a Very Small Barcode or One With Thick Lines?

- Enlarge the barcode.
- If the barcode lines are perpendicular to the output feed direction, rotate the image 90° so that the lines are parallel.

Try using Barcode Adjustment Mode

Setting the mode in [Barcode Adjustment Mode] in the printer driver may solve the problem. The improvement effect is weakest with [Mode 1] and strongest with [Mode 5]. Try selecting [Mode 1] first, and then change to the next higher mode, as needed.

- Specify the settings below in the [Printing preferences] screen of the printer driver.

[Finishing] tab ▶ [Advanced Settings] ▶ [Barcode Adjustment Mode] ▶ select the mode

* When this setting is enabled, the print density may decrease.

- If setting [Barcode Adjustment Mode] to [Mode 5] does not work, changing the [Printer Density] may solve the problem. ▶ **Adjusting the Print Density(P. 538)**

Paper and Paper Feeding Problems

A19R-0CJ

Check how to troubleshoot the problem based on the symptom.

- ▶ **Paper Creases(P. 580)**
- ▶ **Paper Curls(P. 581)**
- ▶ **Paper Is Not Fed or Two or More Sheets Are Fed Together(P. 582)**
- ▶ **Paper Drawer Does Not Fit in the Machine(P. 583)**


Paper Creases

A19R-0CK


Troubleshoot by checking the items below.

Is Paper Loaded Correctly?

- Make sure the loaded paper does not exceed the load limit guides (**a**).

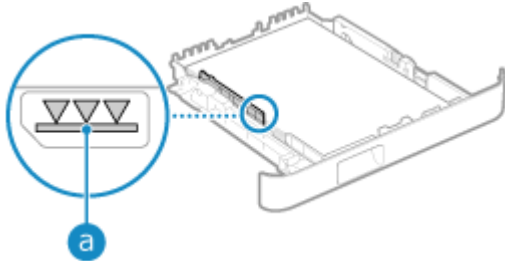

- Check that the paper guides are aligned with the markings and are not too loose or too tight.

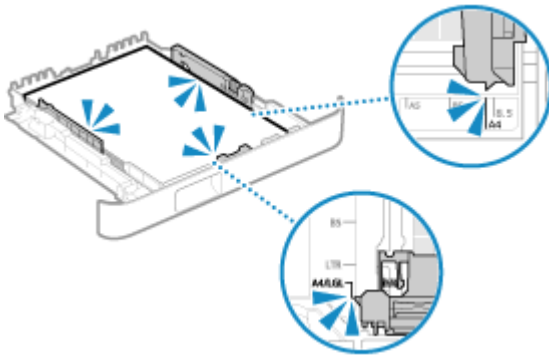

Are You Using Paper That Has Absorbed Moisture?

Check the precautions, and replace the paper with dry paper.

- ▶ **Precautions When Handling Paper**(P. 22)
- ▶ **Loading Paper**(P. 144)

Are You Using Appropriate Paper?

Check whether the paper in the machine is usable, and replace it with appropriate paper, as needed.

- ▶ **Usable Paper**(P. 19)
- ▶ **Loading Paper**(P. 144)

Paper Curls

A19R-0CL

Troubleshoot by checking the items below.

Are You Using Appropriate Paper?

- Check whether the paper in the machine is usable, and replace it with appropriate paper, as needed.
 - ▶ **Usable Paper(P. 19)**
 - ▶ **Loading Paper(P. 144)**
- Set the paper size and type correctly according to the loaded paper. ▶ **Specifying the Paper Size and Type(P. 154)**
- Setting [Switch Paper Feed Method] to [Print Side Priority] may improve the problem.

Touch Panel Model

[Home] screen on the control panel ▶ [Menu] ▶ [Function Settings] ▶ [Common] ▶ [Paper Feed Settings] ▶ [Switch Paper Feed Method] ▶ [Print Side Priority]

5 Lines LCD Model

[Home] screen on the control panel ▶ [Menu] ▶ **OK** ▶ [Function Settings] ▶ **OK** ▶ [Common] ▶ **OK** ▶ [Paper Feed Settings] ▶ **OK** ▶ [Switch Paper Feed Method] ▶ **OK** ▶ [Print Side Priority] ▶ **OK**

* When you select [Print Side Priority], the printing speed for 1-Sided printing will decrease.

- Load the paper with the side to be printed (paper front and back) reversed.
 - * In rare cases, the symptom may worsen depending on the paper used. In this case, print on the original side of the paper.

Are You Using Paper That Has Absorbed Moisture?

Try the following in the order below:

- Check the precautions, and replace the paper with dry paper.
 - ▶ **Precautions When Handling Paper(P. 22)**
 - ▶ **Loading Paper(P. 144)**
- Change the paper type setting to a thinner paper. ▶ **Specifying the Paper Size and Type(P. 154)**

Paper Is Not Fed or Two or More Sheets Are Fed Together

A19R-OCR

Troubleshoot by checking the items below.

Are You Using Appropriate Paper?

Check whether the paper in the machine is usable, and replace it with appropriate paper, as needed.

- ▶ **Usable Paper(P. 19)**
- ▶ **Loading Paper(P. 144)**

Is Paper Loaded Correctly?


- Fan the paper thoroughly in small batches so that it is not stuck together.
- Align the edges by tapping the paper on a flat surface a few times before loading the paper. ▶ **Loading Paper(P. 144)**
- Do not load paper of different sizes or types together.

Paper Drawer Does Not Fit in the Machine

A19R-0FY

The paper drawer may be extended.

When you are using paper of A4 size or smaller, decrease the size of the paper drawer while pressing the lock release lever.

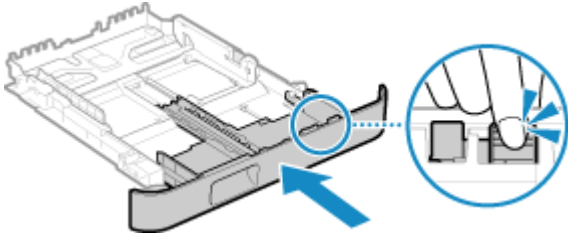

* When you are using paper that is longer than A4 size, the paper drawer is extended from the machine and is not fully housed.

Setting Up

A19R-0CS

This is a list of problems that can occur during setup of the machine. Check how to troubleshoot the problem based on the symptom.

■ Problems During Driver Installation

▶ **The Machine Connected via WSD Port Is Not Displayed During Driver Installation(P. 585)**

■ Problems with Wireless LAN and Wired LAN Connection

Cannot Connect to Wireless LAN

Check whether the machine can connect to the network.

▶ **Cannot Connect to Wireless LAN(P. 586)**

Cannot Connect to Wired LAN

The IP address setting may have failed. Set the IP address again.

▶ **Setting IPv4 Addresses(P. 77)**

▶ **Setting IPv6 Addresses(P. 81)**

Cannot Connect to Wireless LAN and Wired LAN at the Same Time

You cannot connect the machine to a wireless LAN and wired LAN at the same time. You can connect to USB and wireless LAN or USB and wired LAN at the same time.

Cannot connect with TLS encrypted communication.

If you set a TLS version that is not supported by your operating system or software such as the browser, the machine cannot connect to the network using TLS encrypted communication.

Upgrade your operating system and software, or lower the TLS version until connections are possible.

However, if you lower the TLS version, connections may not be sufficiently secure.

▶ **Using TLS(P. 356)**

■ Problems with USB Connection

The Computer Cannot Communicate with the Machine

Try the following:

- Replace the USB cable. If the USB cable is long, replace it with a short cable.
- If you are using a USB hub, connect the machine directly to the computer using a USB cable.

The Machine Connected via WSD Port Is Not Displayed During Driver Installation

A19R-0CU


Troubleshoot by checking the items below.

Check the Settings of the Machine.

Configure the settings below if they have not been configured. The machine must be restarted to apply the settings.

WSD Printing and Multicast Discovery Settings


Log in to Remote UI in System Manager Mode ▶ [Settings/Registration] ▶ [Network Settings] ▶ [WSD Settings] ▶ [Edit] ▶ select the [Use WSD Printing] and [Use Multicast Discovery] checkboxes ▶ [OK] ▶ restart the machine.

On the control panel, select [Menu] in the [Home] screen, and then select [Preferences] to configure the settings.  **[WSD Settings](P. 444)**

Selecting the Page Description Language

Select the page description language (PDL) of the installed driver.

Log in to Remote UI in System Manager Mode ▶ [Settings/Registration] ▶ [Printer Settings] ▶ [PDL Selection (Plug and Play)] ▶ [Edit] ▶ select the PDL in [Network] ▶ [OK] ▶ restart the machine.

On the control panel, select [Menu] in the [Home] screen, and then select [Function Settings] to configure the settings.  **[Network](P. 479)**

Check the OS Network Settings.

Configure the settings below if they have not been configured.

In Windows, click [] (Start) ▶ [] (Settings) ▶ [Network & Internet] ▶ [Status] ▶ [Change connection properties] ▶ [Network profile] ▶ [Private]

Check Whether the Driver Is Installed.

Use the following procedure to check whether the driver of the machine is displayed.

In Windows, click [] (Start) ▶ [] (Settings) ▶ [Devices] ▶ [Printers & scanners] ▶ check whether the driver is displayed.

If the driver is displayed, it is installed. In this case, uninstall the driver, and then reinstall it. For details about uninstalling and installing drivers, see the driver manual at the online manual site. <https://oip.manual.canon/>

Cannot Connect to Wireless LAN

A19R-0CW

Troubleshoot by checking the status of the computer, wireless LAN router (access point), and machine with the steps below.

- ▶ **Step 1: Checking the Status of the Computer and Wireless LAN Router(P. 586)**
- ▶ **Step 2: Checking the Status of the Machine and Wireless LAN Router(P. 586)**
- ▶ **Step 3: Reconnecting to a Wireless LAN(P. 586)**

Step 1: Checking the Status of the Computer and Wireless LAN Router

Have You Configured the Settings of the Computer and Wireless LAN Router?

Configure the required settings if they have not been configured.

Are the Power Cables and Ethernet Cable Connected Correctly?

If any cables are connected incorrectly or disconnected, connect them correctly.

Is the Power of Wireless LAN Router On?

If you cannot establish a connection even if the power is on, turn off the power of the computer and router and turn it on again.


Step 2: Checking the Status of the Machine and Wireless LAN Router

Is the Power of the Machine ON?

If the power is ON, turn OFF the power and turn it ON again.

Is the Location Appropriate?

- The machine and wireless LAN router should be installed in a location without walls or other obstructions between the devices and within range of 164' (50 m).
- Do not install near a microwave oven, cordless telephone, or other device that generates radio waves.

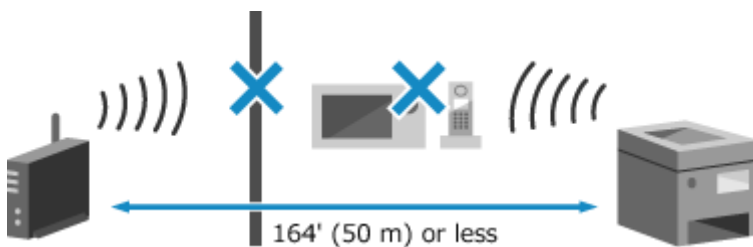

Step 3: Reconnecting to a Wireless LAN

Connect to the wireless LAN using the connection type according to your wireless LAN router. ▶ **Connecting to a Wireless LAN(P. 61)**

Network

A19R-0CX

This is a list of problems that can occur with the network. Check how to troubleshoot the problem based on the symptom.

- ▶ **Cannot Switch to Wireless LAN(P. 588)**
- ▶ **Cannot Find the Print Server to Connect to(P. 590)**
- ▶ **Cannot Connect to a Shared Printer(P. 591)**
- ▶ **Cannot Find the IP Address of the Machine(P. 592)**
- ▶ **AirPrint Does Not Work(P. 593)**

Cannot Switch to Wireless LAN

A19R-0CY

Use the network settings to switch from wired LAN connection to wireless LAN connection.

▶ **Touch Panel Model(P. 588)**

▶ **5 Lines LCD Model(P. 588)**

■ Touch Panel Model

1 On the control panel, press [Menu] in the [Home] screen. ▶ [Home] Screen(P. 121)

2 Press [Preferences] ▶ [Network] ▶ [Select Wired/Wireless LAN].

If the login screen appears, enter the System Manager ID and PIN, and then press [Log In]. ▶ **Logging In to the Machine(P. 138)**

3 Press [Wireless LAN].

⇒ The message [Settings applied.] appears.

4 Connect the machine to the wireless LAN. ▶ **Connecting to a Wireless LAN(P. 61)**

5 Install the driver to the computer that will use the machine.

When switching the machine from wired LAN connection to wireless LAN connection, any installed drivers must be uninstalled and then reinstalled.


For details about uninstalling and installing drivers, see the driver manual at the online manual site.
<https://oip.manual.canon/>

■ 5 Lines LCD Model

1 On the control panel, select [Menu] in the [Home] screen, and press . ▶ [Home] Screen(P. 121)

2 Press [Preferences] ▶  ▶ [Network] ▶  [Select Wired/Wireless LAN] ▶ .

⇒ The [Select Wired/Wireless LAN] screen is displayed.

If the login screen appears, enter the System Manager ID and PIN, and then press [<Log In>] ▶ . ▶ **Logging In to the Machine(P. 138)**

3 Press [Wireless LAN].

⇒ The message [Settings applied.] appears.

4 Connect the machine to the wireless LAN. ▶Connecting to a Wireless LAN(P. 61)

5 Install the driver to the computer that will use the machine.

When switching the machine from wired LAN connection to wireless LAN connection, any installed drivers must be uninstalled and then reinstalled.

For details about uninstalling and installing drivers, see the driver manual at the online manual site.
<https://oip.manual.canon/>

Cannot Find the Print Server to Connect to

A19R-0E0

Troubleshoot by checking the items below.

Are the Print Server and Computer Connected Correctly?

- Check the network settings of the print server and computer, and make sure they are connected correctly.
- If they are connected using an Ethernet cable, make sure the cable is connected correctly.

Is the Print Server Started?

Start the print server if it has not been started.

Are there Any Restrictions with Connecting to the Print Server?

Check with the administrator of the print server, and ask for permission, if needed.

Is Network Discovery Enabled? (Windows)

Enable network discovery if not enabled.  **Enabling Network Discovery(P. 661)**

Cannot Connect to a Shared Printer

A19R-0E1

Check if a shared printer is displayed on the network computer. ▶ **Displaying a Shared Printer in the Print Server(P. 661)**

If it is not displayed, contact the network or print server administrator.


Cannot Find the IP Address of the Machine

A19R-0E2


View the IP address using the following procedure:

■ Touch Panel Model

Viewing the IPv4 Address


 on the control panel ▶ [Network Information] ▶ [IPv4] ▶ view the setting.

Viewing the IPv6 Address


 on the control panel ▶ [Network Information] ▶ [IPv6] ▶ view the setting.

■ 5 Lines LCD Model

Viewing the IPv4 Address

 on the control panel ▶ [Network Information] ▶ **OK** ▶ [IPv4] ▶ **OK** ▶ view the setting.

Viewing the IPv6 Address

 on the control panel ▶ [Network Information] ▶ **OK** ▶ [IPv6] ▶ **OK** ▶ view the setting.

NOTE

If the IP Address Is Displayed as "0.0.0.0"

- A suitable IP address is not set. Set the IP address again.
 - ▶ **Setting IPv4 Addresses(P. 77)**
 - ▶ **Setting IPv6 Addresses(P. 81)**

AirPrint Does Not Work

A19R-0E3

Troubleshoot by checking the items below.

Is the Power of the Machine ON?

If the machine is ON, restart the machine, and try AirPrint again. [▶Restarting the Machine\(P. 114\)](#)

Does an Error Message Appear on the Control Panel?

Follow the instructions of the error message on the screen to fix the problem. [▶A Message Appears\(P. 623\)](#)

When Using a Mac, Is it Correctly Connected to the Machine?

Connect the Mac to the network on the same LAN as the machine. [▶Setting Up the Network\(P. 56\)](#)

When connecting via USB, directly connect the Mac to the USB port for computer connection on the back of the machine with a USB cable. [▶Rear Side\(P. 11\)](#)

Have the Functions Usable with AirPrint Been Restricted?

If the protocol (IPP or Network Link Scan) for use with AirPrint has been disabled to restrict functions, cancel this restriction to enable the use of AirPrint. [▶Setting the Functions and Security to Be Used with AirPrint\(P. 328\)](#)

Is Bonjour Enabled on Your Apple Device?

Enable Bonjour if it is not enabled. For details, see the manual of your Apple device.

Printing and Copying

A19R-0E4

This is a list of problems that can occur when printing and copying. Check how to troubleshoot the problem based on the symptom.

▶ **Cannot Print or Copy(P. 595)**

▶ **Printing Is Slow(P. 602)**

■ Problems with Printing Results

If the printing or copying results are not as expected, see the following:

▶ **Problems with Printing Results(P. 556)**

■ Frequently Asked Questions about Operations

I Want to Print on an Envelope.

Place the envelope in the drawer while paying attention to the orientation and side of the envelope. Then, set the paper size and type according to the placed envelope.

Next, use the printer driver of the computer to set the paper size of the document and the paper size to print, and then perform printing.

▶ **Preparations and Orientation for Loading Envelopes(P. 150)**

▶ **Specifying the Paper Size and Type(P. 154)**

▶ **Printing from a Computer(P. 204)**

Cannot Print or Copy

A19R-0E5

Troubleshoot by checking the items below.

Has an Error Occurred?

Check the print or copy processing status and log, and if a three-digit number starting with "#" (error code) is displayed, check how to troubleshoot the problem based on the error code.

- ▶ **Viewing the Print Job Status and Log(P. 212)**
- ▶ **Checking the Copy Status(P. 314)**
- ▶ **An Error Code Is Displayed(P. 643)**

Can You Print a Test Page?

If you can print a test page, check if the print settings of the application are correct.

- ▶ **Printing a Test Page(P. 667)**

Check the Network Status and Settings.

Check the required items according to the usage environment.

- ▶ **Cannot Print (Wireless LAN)(P. 596)**
- ▶ **Cannot Print (Wired LAN)(P. 598)**
- ▶ **Cannot Print (USB Connection)(P. 600)**
- ▶ **Cannot Print (via Print Server)(P. 601)**

Cannot Print (Wireless LAN)

A19R-0E6

Troubleshoot by checking the items below.

Check the Wireless LAN Connection Status.

Check the connection status of the machine, and take action according to the status. [▶Viewing the MAC Address and Connection Information of the Wireless LAN\(P. 100\)](#)

If the Machine Is Not Connected to the Wireless LAN

Check the status of the computer and wireless LAN router (access point) and the status of the machine, and reconnect to the wireless LAN. [▶Cannot Connect to Wireless LAN\(P. 586\)](#)

If the Connection Is Poor

Change the following settings on the wireless LAN router, and try printing:

- Change the channel of the wireless LAN router. If there are multiple wireless LAN routers, separate the channels by five or more channels.
- Increase the wireless output of the wireless LAN router if possible.

Are the Machine and Computer Connected to the Same Wireless LAN Router?

- When you are using a computer connected to a wireless LAN, check that the SSID (identifier of the wireless LAN router) of the machine matches that of the computer.
 - ▶[Viewing the MAC Address and Connection Information of the Wireless LAN\(P. 100\)](#)
 - ▶[Viewing the Network Connection Information of the Computer\(P. 664\)](#)
- If the SSID of the machine and the computer do not match, configure the wireless LAN connection settings on the machine again, and connect the machine to the SSID to which the computer is connected. [▶Connecting to a Wireless LAN\(P. 61\)](#)

Is the Printer Port of the Computer Configured Correctly? (Windows)

Change the settings if they have not been configured correctly. If there is no available port, add a new port.

- ▶[Viewing the Printer Port\(P. 666\)](#)
- ▶[Configuring a Printer Port \(Windows\)\(P. 198\)](#)

Can You Access Remote UI?

If you cannot access Remote UI, the firewall settings of the machine may be incorrect, preventing communication with the computer.

Use the following procedure to disable the firewall settings with the control panel, and then use Remote UI to configure the firewall again.

Administrator privileges are required. The machine must be restarted to apply the settings.

■Touch Panel Model

- 1 Disable the firewall settings.

To Disable IPv4 Address Filter

[Home] screen on the control panel ▶ [Menu] ▶ [Preferences] ▶ [Network] ▶ [Firewall Settings] ▶ [IPv4 Address Filter] ▶ [Outbound Filter] or [Inbound Filter] ▶ [Off] ▶ Restart the machine.

To Disable IPv6 Address Filter

[Home] screen on the control panel ▶ [Menu] ▶ [Preferences] ▶ [Network] ▶ [Firewall Settings] ▶ [IPv6 Address Filter] ▶ [Outbound Filter] or [Inbound Filter] ▶ [Off] ▶ Restart the machine.

To Disable MAC Address Filter

[Home] screen on the control panel ▶ [Menu] ▶ [Preferences] ▶ [Network] ▶ [Firewall Settings] ▶ [MAC Address Filter] ▶ [Outbound Filter] or [Inbound Filter] ▶ [Off] ▶ Restart the machine.

- 2 Configure the firewall correctly. ▶ **Setting the Firewall(P. 350)**

■5 Lines LCD Model

- 1 Disable the firewall settings.

To Disable IPv4 Address Filter

[Home] screen on the control panel ▶ [Menu] ▶ ▶ [Preferences] ▶ ▶ [Network] ▶ ▶ [Firewall Settings] ▶ ▶ [IPv4 Address Filter] ▶ ▶ [Outbound Filter] or [Inbound Filter] ▶ ▶ [Off] ▶ ▶ Restart the machine.

To Disable IPv6 Address Filter

[Home] screen on the control panel ▶ [Menu] ▶ ▶ [Preferences] ▶ ▶ [Network] ▶ ▶ [Firewall Settings] ▶ ▶ [IPv6 Address Filter] ▶ ▶ [Outbound Filter] or [Inbound Filter] ▶ ▶ [Off] ▶ ▶ Restart the machine.

To Disable MAC Address Filter

[Home] screen on the control panel ▶ [Menu] ▶ ▶ [Preferences] ▶ ▶ [Network] ▶ ▶ [Firewall Settings] ▶ ▶ [MAC Address Filter] ▶ ▶ [Outbound Filter] or [Inbound Filter] ▶ ▶ [Off] ▶ ▶ Restart the machine.

- 2 Configure the firewall correctly. ▶ **Setting the Firewall(P. 350)**

Reinstall the Printer Driver.

Uninstall the installed driver, and then reinstall it.

For details about uninstalling and installing drivers, see the driver manual at the online manual site.

<https://oip.manual.canon/>

Are You Using Resident Software?

If you are using resident software, such as security software, disable it and then try printing.

Can You Print from Another Computer in the Network?

If you cannot print from another computer, contact your dealer or service representative. ▶ **If the Problem Persists(P. 652)**

Cannot Print (Wired LAN)

A19R-0E7

Troubleshoot by checking the items below.

Is the Printer Port of the Computer Configured Correctly? (Windows)

Change the settings if they have not been configured correctly. If there is no available port, add a new port.

- ▶ **Viewing the Printer Port(P. 666)**
- ▶ **Configuring a Printer Port (Windows)(P. 198)**

Can You Access Remote UI?

If you cannot access Remote UI, the firewall settings of the machine may be incorrect, preventing communication with the computer.

Use the following procedure to disable the firewall settings with the control panel, and then use Remote UI to configure the firewall again.

Administrator privileges are required. The machine must be restarted to apply the settings.

■ Touch Panel Model

- 1 Disable the firewall settings.

To Disable IPv4 Address Filter

[Home] screen on the control panel ▶ [Menu] ▶ [Preferences] ▶ [Network] ▶ [Firewall Settings] ▶ [IPv4 Address Filter] ▶ [Outbound Filter] or [Inbound Filter] ▶ [Off] ▶ Restart the machine.

To Disable IPv6 Address Filter

[Home] screen on the control panel ▶ [Menu] ▶ [Preferences] ▶ [Network] ▶ [Firewall Settings] ▶ [IPv6 Address Filter] ▶ [Outbound Filter] or [Inbound Filter] ▶ [Off] ▶ Restart the machine.

To Disable MAC Address Filter

[Home] screen on the control panel ▶ [Menu] ▶ [Preferences] ▶ [Network] ▶ [Firewall Settings] ▶ [MAC Address Filter] ▶ [Outbound Filter] or [Inbound Filter] ▶ [Off] ▶ Restart the machine.

- 2 Configure the firewall correctly. ▶ **Setting the Firewall(P. 350)**

■ 5 Lines LCD Model

- 1 Disable the firewall settings.

To Disable IPv4 Address Filter

[Home] screen on the control panel ▶ [Menu] ▶ ▶ [Preferences] ▶ ▶ [Network] ▶ ▶ [Firewall Settings] ▶ ▶ [IPv4 Address Filter] ▶ ▶ [Outbound Filter] or [Inbound Filter] ▶ ▶ [Off] ▶ ▶ Restart the machine.

To Disable IPv6 Address Filter

[Home] screen on the control panel ▶ [Menu] ▶ ▶ [Preferences] ▶ ▶
 [Network] ▶ ▶ [Firewall Settings] ▶ ▶ [IPv6 Address Filter] ▶ ▶ [Outbound Filter]
 or [Inbound Filter] ▶ ▶ [Off] ▶ ▶ Restart the machine.

To Disable MAC Address Filter

[Home] screen on the control panel ▶ [Menu] ▶ ▶ [Preferences] ▶ ▶
 [Network] ▶ ▶ [Firewall Settings] ▶ ▶ [MAC Address Filter] ▶ ▶ [Outbound Filter]
 or [Inbound Filter] ▶ ▶ [Off] ▶ ▶ Restart the machine.

- 2 Configure the firewall correctly. ▶ **Setting the Firewall(P. 350)**

Reinstalling the Printer Driver

Uninstall the installed driver, and then reinstall it.

For details about uninstalling and installing drivers, see the driver manual at the online manual site.

<https://oip.manual.canon/>

Are You Using Resident Software?

If you are using resident software, such as security software, disable it and then try printing.

Can You Print from Another Computer in the Network?

If you cannot print from another computer, contact your dealer or service representative. ▶ **If the Problem Persists(P. 652)**

Cannot Print (USB Connection)

A19R-0E8

Troubleshoot by checking the items below.

Check the USB Cable.

- If you are using a long USB cable, replace it with a short USB cable.
- If you still cannot print with a short USB cable, the cable may be damaged. Replace with a new USB cable, and try printing.

Are You Using a USB Hub?

Connect the machine directly to the computer using a USB cable.

Try Using Another USB Port.

Connect the USB cable to another USB port on your computer.

Is the Printer Port of the Computer Configured Correctly? (Windows)

If the printer port is not configured correctly or there is no available port, reinstall the printer driver. When you reinstall the driver, the correct port is configured automatically. ▶ **Viewing the Printer Port(P. 666)**
For details about installing the driver, see the manual of the driver at the online manual site.
<https://oip.manual.canon/>

Is Two-way Communication Between the Machine and Computer Enabled? (Windows)

Enable two-way communication if it is not enabled, and restart the computer and machine. ▶ **Viewing Two-way Communication(P. 667)**

Is a Setting Preventing the Machine from Establishing a USB Connection to the Computer?

If usage of the USB port for computer connection on the back of the machine is restricted, cancel this setting. ▶ **Preventing Connection to Computer via USB Port(P. 387)**

Are You Using Resident Software?

If you are using resident software, such as security software, disable it and then try printing.

Can You Print via USB Connection from Another Computer?

If you cannot print from another computer, contact your dealer or service representative. ▶ **If the Problem Persists(P. 652)**

Cannot Print (via Print Server)

A19R-0E9

Troubleshoot by checking the items below.

Can You Print from the Print Server?

If you can print, check the connection between the computer and the print server. ▶ **Cannot Find the Print Server to Connect to(P. 590)**

Reinstall the Printer Driver.

Uninstall the installed driver, and then reinstall it.

For details about uninstalling and installing drivers, see the driver manual at the online manual site.

<https://oip.manual.canon/>

Installing in Windows

Use a print server to install the printer driver.

Double-click the shared printer on the print server, and follow the instructions on the screen to install the printer driver. ▶ **Displaying a Shared Printer in the Print Server(P. 661)**

Are You Using Resident Software?

If you are using resident software, such as security software, disable it and then try printing.

Can You Print via a Print Server from Another Computer?

If you cannot print from another computer, contact your dealer or service representative. ▶ **If the Problem Persists(P. 652)**

Printing Is Slow

A19R-0EA

It takes time until the first page is printed. The printing speed may be slower after continuous printing or printing on narrow paper to allow for adjustments of the temperature or image quality of the machine.

In all other cases, an error may have occurred. Troubleshoot by checking the items below.

Check the Paper Orientation.

This symptom may occur depending on the paper orientation. Change the paper orientation if possible. ▶
Loading Paper(P. 144)

Does the Machine Have Sufficient Free Memory?

Check the faxes received in the memory of the machine, and print or forward them as needed, and delete any unnecessary faxes. ▶**Viewing and Printing Faxes Saved in the Memory(P. 379)**

Scanning

A19R-0EC

If you have problems when scanning, restart the machine and computer.

If the problem persists even after restarting, check the following troubleshooting methods.

- ▶ **Cannot Save Scanned Data to a Computer(P. 604)**
- ▶ **Cannot Save Scanned Data to a Shared Folder(P. 606)**

■ Frequently Asked Questions about Operations

I Want to Scan an Original.

Make preparations according to the scanned data save destination and sending method, and then scan the original.

- ▶ **Scanning(P. 215)**

I Want to Send Scanned Data by E-mail.

You can scan an original and send the scanned data by e-mail as an attachment.

- ▶ **Scanning (Sending by E-mail)(P. 236)**

Cannot Save Scanned Data to a Computer

A19R-0EE

Use the following steps to check the status of the computer used as the store location and the machine:

- ▶ **Step 1: Checking the Occurrence of the Problem(P. 604)**
- ▶ **Step 2: Checking the Status of the Computer(P. 604)**
- ▶ **Step 3: Checking the Status of the Machine(P. 604)**
- ▶ **Step 4: Checking the Store Location of the Scanned Data(P. 605)**

Step 1: Checking the Occurrence of the Problem

Check using the following in the order below:

Does the Problem Occur on All Computers?

If so, check the network status and settings of the machine. If the machine is not connected to a network, reconfigure the network settings.

- ▶ **Checking the Network Status and Settings(P. 97)**
- ▶ **Setting Up the Network(P. 56)**

Are You Saving Scanned Data to the Computer for the First Time?

If so, make preparations such as installing the scanner driver (ScanGear MF) and application (MF Scan Utility) to the computer used as the store location. ▶ **Preparing to Save Scanned Data to a Computer(P. 218)**

On the Screen for Selecting the Computer to Be Used as the Store Location, Is the Computer Displayed? (Only When Scanning from the Machine)

If the computer to be used as the store location is not displayed, scanned data communication may be blocked due to the security software settings.

For details about the security software settings, contact the software manufacturer.

Step 2: Checking the Status of the Computer

Did You Install and Update the Security Software?

If so, the security may have been strengthened, preventing communication between the machine and computer.

For a workaround, contact the software manufacturer.

Reinstall the Scanner Driver.

Uninstall the installed driver, and then reinstall it.

For details about uninstalling and installing drivers, see the driver manual at the online manual site.

<https://oip.manual.canon/>

Step 3: Checking the Status of the Machine

Was the IP Address of the Machine or Other Device Changed?

If so, check whether the machine and other device have the same IP address. If they have the same IP address, change it to a different IP address.

- ▶ **Setting IPv4 Addresses(P. 77)**
- ▶ **Setting IPv6 Addresses(P. 81)**

Step 4: Checking the Store Location of the Scanned Data

Check the Attributes of the Store Location (Windows).

On the computer, check that the attributes of the store location are not read only.

- 1** Right-click the store location, and click [Properties].
 - ▣▶ The properties screen of the store location is displayed.
- 2** On the [General] tab, check that the [Read-only] checkbox in [Attributes] is not selected.
- 3** If the checkbox is selected, clear the [Read-only] checkbox.

Cannot Save Scanned Data to a Shared Folder

A19R-0EF

Use the following steps to check the status of the shared folder of the store location and the machine:

- ▶ **Step 1: Checking the Occurrence of the Problem(P. 606)**
- ▶ **Step 2: Checking the Status of the Computer with the Shared Folder(P. 606)**
- ▶ **Step 3: Checking the Status of the Machine(P. 606)**
- ▶ **Step 4: Checking the Shared Folder(P. 607)**

Step 1: Checking the Occurrence of the Problem

Check using the following in the order below:

Does the Problem Occur with All Shared Folders?

If so, check the network status and settings of the machine. If the machine is not connected to a network, reconfigure the network settings.

- ▶ **Checking the Network Status and Settings(P. 97)**
- ▶ **Setting Up the Network(P. 56)**

Are You Saving Scanned Data to the Shared Folder for the First Time?

If so, register the information for accessing the shared folder to the Address Book of the machine. ▶ **Preparing to Save Scanned Data to a Shared Folder(P. 230)**

Step 2: Checking the Status of the Computer with the Shared Folder

Did You Change the Password of the Computer with the Shared Folder?

If so, change the password used to access the shared folder using the information of the shared folder registered to the Address Book. ▶ **Registering Destinations to the Address Book (Remote UI)(P. 171)**

Did You Update Windows?

If so, the security may have been strengthened, preventing communication between the machine and computer.

If the shared folder on the computer does not have a password, set a password, and register the information for accessing the shared folder to the Address Book of the machine. ▶ **Preparing to Save Scanned Data to a Shared Folder(P. 230)**

Did You Install or Update the Security Software?

If so, the security may have been strengthened, preventing communication between the machine and computer.

For a workaround, contact the software manufacturer.

Step 3: Checking the Status of the Machine

Was the IP Address of the Machine or Other Device Changed?

If so, check whether the machine and other device have the same IP address. If they have the same IP address, change it to a different IP address.

- ▶ **Setting IPv4 Addresses(P. 77)**
- ▶ **Setting IPv6 Addresses(P. 81)**

Step 4: Checking the Shared Folder


Do You Have Permission to Access the Shared Folder?

If you do not have permission to access the shared folder, on the computer, change the permission to enable saving of scanned data.

■ When Using Windows

- 1 Right-click the shared folder of the store location, and click [Properties].
 - ▢ The properties screen of the shared folder is displayed.
- 2 On the [Security] tab, check that [Change] in [Everyone] is set to [Allow].
- 3 If not, set [Change] in [Everyone] to [Allow].

■ When Using macOS

- 1 Click [] ► [System Preferences] ► [Sharing].
 - ▢ The [Sharing] screen is displayed.
- 2 Select [File Sharing], and in [Shared Folders], select the shared folder of the store location.
- 3 Check that [Everyone] in [Users] has the access permission of [Read & Write].
- 4 If not, select [Read & Write] from the [Everyone] pop-up menu.

Check the Attributes of the Shared Folder (Windows).

On the computer, check that the attributes of the shared folder are not read only.

- 1 Right-click the shared folder of the store location, and click [Properties].
 - ▢ The properties screen of the shared folder is displayed.
- 2 On the [General] tab, check that the [Read-only] checkbox in [Attributes] is not selected.
- 3 If the checkbox is selected, clear the [Read-only] checkbox.

Faxing and Using the Telephone

A19R-0EH

This is a list of problems that can occur when faxing and using the telephone. Check how to troubleshoot the problem based on the symptom.

- ▶ **Cannot Send a Fax(P. 609)**
- ▶ **Cannot Receive a Fax(P. 611)**
- ▶ **Machine Does Not Automatically Switch Between Telephone and Fax(P. 613)**
- ▶ **Cannot Send or Receive a Fax via Optical Line(P. 614)**
- ▶ **Cannot Send a Fax to an International Destination(P. 615)**
- ▶ **Other Party's Telephone or Fax Number Is Not Displayed(P. 616)**

■ Frequently Asked Questions about Operations

I Want to Forward or Save a Received Fax.

Configure the settings to automatically forward or save received faxes to a computer, other fax machine, or other destination.

- ▶ **Auto Forwarding and Backing Up Received Faxes(P. 265)**

I Want to Send a Fax from a Computer.

You can send a document as a fax from a computer using a fax driver.

- ▶ **Sending Faxes from a Computer (PC Faxing)(P. 271)**

Cannot Send a Fax

A19R-0EJ

Troubleshoot by checking the following steps:

- ▶ **Step 1: Checking the Original(P. 609)**
- ▶ **Step 2: Checking the Status of the Machine(P. 609)**
- ▶ **Step 3: Checking the Send Status(P. 610)**


Step 1: Checking the Original

Is Original Placed Correctly?

Place the original correctly while paying attention to the orientation of the side to be scanned.

When Placing It on the Platen Glass

Place the original with the side to be scanned face down. ▶ **Placing Originals on the Platen Glass(P. 140)**

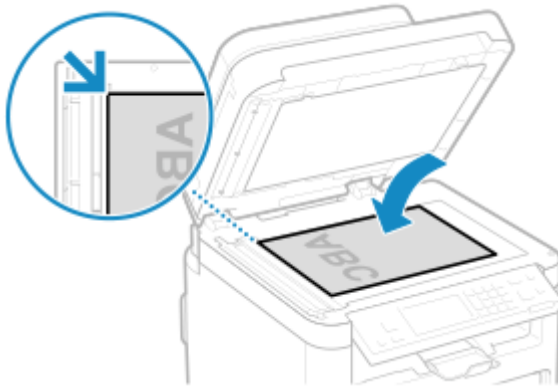

When Placing Originals in the Feeder

Place the original with the side to be scanned face up. ▶ **Placing Originals in the Feeder(P. 141)**



Step 2: Checking the Status of the Machine

Is the Data Indicator on the Control Panel Lit or Blinking?

If so, data is being processed. Data is sent after the Data indicator turns off. ▶ **Control Panel(P. 13)**

Is the Telephone Cord Connected Correctly?

Check that the supplied telephone cord is connected correctly to the telephone line jack (LINE) on the machine and the telephone line connector on the wall, and fix the connection, as needed.

For details about the connection method, see the procedure for connecting to the telephone line. ▶ **Step 4: Connecting to Telephone Line(P. 105)**

Are You Talking on a Telephone Connected to the Machine?

Send the fax after the call is completed.

Has an Error Occurred?

Check the fax sending status and log, and if a three-digit number (error code) starting with "#" is displayed, check how to troubleshoot the problem based on the error code.

- ▶ **Checking the Status and Log for Sent and Received Faxes(P. 282)**
- ▶ **An Error Code Is Displayed(P. 643)**

Is [Memory is full.] Displayed on the Control Panel?

If so, scanning of the original cannot be performed due to insufficient available memory. Try the following:

- If there is data waiting to be printed or sent, wait until the processing is completed.
- When sending an original with many pages, divide the original and send it.
- Check the faxes received in the memory of the machine, and print or forward them as needed, and delete any unnecessary faxes. ▶ **Viewing and Printing Faxes Saved in the Memory(P. 379)**
- Change the set resolution to a lower resolution when scanning the original.

[Home] screen on the control panel ▶ [Fax] ▶ [Resolution] ▶ select the resolution.

Step 3: Checking the Send Status

Did You Specify a Correct Destination?

A telephone number may have been specified, or the fax number may be incorrect. Check that the specified destination is correct, and send again.

Are You Sending a Fax via Optical Line?

The machine conforms to analog line standards, and sending of faxes via optical line cannot be guaranteed. You may be able to perform operations via optical line, so see the following.

- ▶ **Cannot Send or Receive a Fax via Optical Line(P. 614)**

Is the Type of Telephone Line Configured Correctly?

The type of telephone line may not be configured correctly. Configure the type of telephone line manually.

Log in to Remote UI ▶ [Settings/Registration] ▶ [TX Settings] ▶ [Fax TX Settings] ▶ [Edit] ▶ in [Select Line Type], select the type of telephone line ▶ [OK]

On the control panel, select [Menu] in the [Home] screen, and then select [Function Settings] to configure the settings. ▶ **Select Line Type(P. 491)**

* If you do not know the type of telephone line, contact your telephone company.

Did You Specify an Overseas Destination?

If so, you may not have been able to connect correctly to the destination. After entering the international access number or country code, enter the wait time (pause) and lower the communication start speed before sending the fax. ▶ **Cannot Send a Fax to an International Destination(P. 615)**

Is the Send Destination Ready to Receive a Fax?

The power of the receiving device may not be turned on, or the RX Mode may not be configured correctly. Have the other party check these.

Cannot Receive a Fax

A19R-0EK

Troubleshoot by checking the following steps when [Cannot print RX data.] is displayed on the screen:

- ▶ **Step 1: Checking the Remaining Amount of Toner in the Toner Cartridges(P. 611)**
- ▶ **Step 2: Checking the RX Mode Setting(P. 611)**
- ▶ **Step 3: Checking the Fax Reception Environment(P. 612)**
- ▶ **Step 4: Free Up Memory on the Machine(P. 612)**

Step 1: Checking the Remaining Amount of Toner in the Toner Cartridges

If the remaining amount of toner in the toner cartridge is low, the received data may be saved to the memory of the machine without being printed to prevent printing text that is difficult to read or images that are difficult to see.

- Check the remaining amount of toner in the toner cartridge. Replace the toner cartridge if the remaining amount is low.
 - ▶ **Checking the Remaining Amount of Consumables(P. 535)**
 - ▶ **Replacing the Toner Cartridge(P. 529)**
- To print the received data even when the amount of toner in the toner cartridges is low, enable [Continue Printing When Amount in Cartridge Is Low].

Log in to Remote UI ▶ [Settings/Registration] ▶ [RX/Forwarding Settings] or [RX Settings] ▶ [Common Settings] ▶ [Edit] in [Common Settings] ▶ select the [Continue Printing When Amount in Cartridge Is Low] checkbox ▶ [OK]

On the control panel, select [Menu] in the [Home] screen, and then select [Function Settings] to configure the settings. ▶ **[Continue Print. When Amount in Cart. Low](P. 495)**

* When this setting is enabled, the print result may be light or faded. The received data is not saved to the memory, so if the printed content is illegible, you may have to request the sender to send the data again.

Step 2: Checking the RX Mode Setting

Is the RX Mode Set Appropriately?

Check that the RX Mode is set according to your fax purpose, and change the setting, as needed. ▶ **Changing Fax RX Mode and Setting the Action when Receiving a Fax(P. 259)**

Is the RX Mode Set to [Answering Machine]?

If so, check the following, and connect the telephone correctly:

- An answering machine is connected to the machine.
- The power is turned on with a message recorded properly.

Is the RX Mode Set to [Manual]?

If so, press [Start Receiving] before hanging up the receiver when receiving a fax. Hanging up the receiver beforehand may end the call.

If a telephone is connected to the machine, you can receive the fax by operating the telephone without operating the machine. ▶ **Receiving Faxes via Telephone (Remote RX)(P. 278)**

Step 3: Checking the Fax Reception Environment

Are You Receiving a Fax via an Optical Line?

The machine conforms to analog line standards, and receiving of faxes via optical line cannot be guaranteed. You may be able to perform operations via optical line, so see the following:

❏ **Cannot Send or Receive a Fax via Optical Line(P. 614)**

Are You Receiving a Fax from a Fax Information Service?

If so, perform the following operations according to the type of telephone line connected to the machine.


When Using a Tone Dialing Line

Configure the type of telephone line manually, and then call your service provider.

Log in to Remote UI ▶ [Settings/Registration] ▶ [TX Settings] ▶ [Fax TX Settings] ▶ [Edit] ▶ in [Select Line Type], select [Tone] ▶ [OK]

On the control panel, select [Menu] in the [Home] screen, and then select [Function Settings] to configure the settings. ❏ **[Select Line Type](P. 491)**

When Using a Pulse Dialing Line

After calling your service provider, press  (Tone) on the numeric keys, and then enter the number to receive service.

* If you do not know the type of telephone line, contact your telephone company.

Step 4: Free Up Memory on the Machine

Check the faxes received in the memory of the machine, and print or forward them as needed, and delete any unnecessary faxes. ❏ **Viewing and Printing Faxes Saved in the Memory(P. 379)**

Machine Does Not Automatically Switch Between Telephone and Fax

A19R-0EL

Troubleshoot by checking the items below.

Is the RX Mode Set Appropriately?

- Check that the RX Mode is set according to your fax purpose, and change the setting, as needed. **▶ Changing Fax RX Mode and Setting the Action when Receiving a Fax(P. 259)**
- When a regular telephone is connected, set the RX Mode to [Fax/Tel (Auto Switch)].

Is the Ring Start Time Too Short When the RX Mode Is Set to [Fax/Tel (Auto Switch)]?

If the time until ringing starts after receiving a fax is too short, the machine may not be able to determine that it is a fax and you may hear an incoming ring when the fax is received. Check the [Ring Start Time] setting, and increase the time, as needed.

[Home] screen on the control panel ▶ [Fax] ▶ [RX Mode] ▶ [Fax/Tel (Auto Switch)] ▶ [Ring Start Time] ▶ enter a time ▶ [Apply]

Is the Line Status of the Sender Good?

If the line status of the sender is poor, the machine may not switch to fax at a fast communication start speed. Check the [RX Start Speed] setting, and decrease the speed, as needed.

Log in to Remote UI in System Manager Mode ▶ [Settings/Registration] ▶ [RX/Forwarding Settings] ▶ [Fax RX Settings] ▶ [Edit] in [Basic Settings] ▶ in [RX Start Speed], select the speed ▶ [OK]

On the control panel, select [Menu] in the [Home] screen, and then select [Function Settings] to configure the settings. **▶ [RX Start Speed](P. 498)**

Does the Machine Have Sufficient Free Memory?

Check the faxes received in the memory of the machine, and print or forward them as needed, and delete any unnecessary faxes. **▶ Viewing and Printing Faxes Saved in the Memory(P. 379)**

Does the Sender's Fax Machine Support a Fax Identification Signal (CNG Signal)*1?

If it does not support this signal, the machine will not switch automatically to fax receiving mode. Change the RX Mode to [Manual] to receive faxes manually. **▶ Changing Fax RX Mode and Setting the Action when Receiving a Fax(P. 259)**

*1 The fax identification signal (CNG signal) is a beeping sound transmitted by the sending fax machine.

Cannot Send or Receive a Fax via Optical Line

A19R-0ER

The machine conforms to analog line standards, and sending and receiving of faxes via optical line cannot be guaranteed. You may be able to perform operations via optical line, so use the following steps:

Check the Optical Line Provider.

Check with the optical line provider that the following two items are guaranteed:

- Call quality equivalent to analog line level
- Guaranteed operation of Super G3 (fax communication standard)

Lower the Communication Start Speed and Check the Sending and Receiving Status.

Use the following procedure to lower the communication start speed in phases and check whether you can send and receive faxes:

Cannot Send a Fax

Log in to Remote UI in System Manager Mode ▶ [Settings/Registration] ▶ [TX Settings] ▶ [Fax TX Settings] ▶ [Edit] ▶ in [TX Start Speed], select the speed ▶ [OK]

On the control panel, select [Menu] in the [Home] screen, and then select [Function Settings] to configure the settings. ▶ **[TX Start Speed](P. 491)**

Cannot Receive a Fax

Log in to Remote UI in System Manager Mode ▶ [Settings/Registration] ▶ [RX/Forwarding Settings] ▶ [Fax RX Settings] ▶ [Edit] in [Basic Settings] ▶ in [RX Start Speed], select the speed ▶ [OK]

On the control panel, select [Menu] in the [Home] screen, and then select [Function Settings] to configure the settings. ▶ **[RX Start Speed](P. 498)**


Cannot Send a Fax to an International Destination

A19R-0ES

Troubleshoot by checking the items below.

Enter the Wait Time (Pause).

- When sending a fax to an international destination, enter the international access number, country code, and fax number of the destination in that order. Press [Pause] in between the numbers to add a pause.

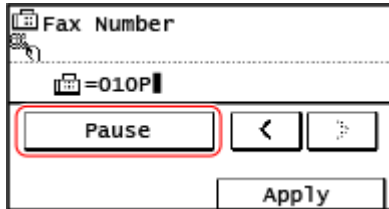

- If you still cannot send a fax after entering a pause, change the pause time.

Log in to Remote UI ▶ [Settings/Registration] ▶ [TX Settings] ▶ [Fax TX Settings] ▶ [Edit] ▶ in [Set Pause Time], enter the pause time ▶ [OK]

On the control panel, select [Menu] in the [Home] screen, and then select [Function Settings] to change the setting. ▶ **[Set Pause Time](P. 490)**

Lower the Communication Start Speed.

Try sending a fax after lowering the communication start speed in phases.

Log in to Remote UI in System Manager Mode ▶ [Settings/Registration] ▶ [TX Settings] ▶ [Fax TX Settings] ▶ [Edit] ▶ in [TX Start Speed], select the speed ▶ [OK]

On the control panel, select [Menu] in the [Home] screen, and then select [Function Settings] to configure the settings. ▶ **[TX Start Speed](P. 491)**

Other Party's Telephone or Fax Number Is Not Displayed

A19R-0EU

Troubleshoot by checking the items below.

Is the Machine Connected to a Telephone That Supports Number Display?

The machine does not support number display. When a telephone that supports number display is connected to the machine, the other party's number can be displayed on the display of the telephone.

* The other party's number may not be displayed even if a telephone that supports number display is connected to the machine. For details, see the manual of the telephone.

Is the RX Mode Set to [Auto] or [Fax/Tel (Auto Switch)]?

If so, when the settings are configured so that the machine rings when receiving a fax, the other party's number can be displayed on a connected telephone that supports number display while the machine is ringing.

Log in to Remote UI ▶ [Settings/Registration] ▶ [RX/Forwarding Settings] ▶ [Fax RX Settings] ▶ [Edit] ▶ select the [Use Incoming Ring] checkbox ▶ enter the number of rings ▶ [OK]

On the control panel, select [Menu] in the [Home] screen, and then select [Function Settings] to configure the settings. ▶ **[Incoming Ring](P. 497)**

Management Functions and Environment Settings

A19R-OEW

This is a list of frequently asked questions about management functions. Check the applicable item.

- ▶ **Cannot Access Remote UI or Send Function Setting Tool(P. 618)**
- ▶ **Changing the Volume of the Confirmation Sound and Warning Tone(P. 619)**
- ▶ **Changing the Time Until Sleep Mode(P. 620)**
- ▶ **Lost Department ID or PIN for the Administrator(P. 621)**
- ▶ **Checking the Items That Can Be Configured on the Machine and Their Settings(P. 622)**

Cannot Access Remote UI or Send Function Setting Tool

A19R-0EX

If the message [Cannot access Remote UI.] or [Cannot continue the settings because the function to perform settings for the device is restricted.] appears and you cannot access Remote UI or Send Function Setting Tool, troubleshoot by checking the items below.

Set the Remote UI Password.

To access the Remote UI and Send Function Setting Tool, you must set the Remote UI password.

Administrator privileges are required to configure the setting.

Touch Panel Model

[Home] screen on the control panel ▶ [Menu] ▶ [Management Settings] ▶ [Remote UI Settings/Update Firmware] ▶ [Remote UI Settings] ▶ [Use Password] ▶ [On] ▶ enter the password ▶ [Apply] ▶ enter the password again ▶ [Apply]

5 Lines LCD Model

[Home] screen on the control panel ▶ [Menu] ▶ ▶ [Management Settings] ▶ ▶ [Remote UI Settings/Update Firmware] ▶ ▶ [Remote UI Settings] ▶ ▶ [Use Password] ▶ ▶ [On] ▶ ▶ enter the password ▶ ▶ enter the password again ▶

* You cannot set a password consisting of all zeros, such as "0000000."

Change the System Manager PIN.

When logging in with System Manager Mode, you must change the System Manager PIN from the default settings.

Administrator privileges are required to change the settings.

Touch Panel Model

[Home] screen on the control panel ▶ [Menu] ▶ [Management Settings] ▶ [User Management] ▶ [System Manager Information Settings] ▶ [System Manager ID and PIN] ▶ enter the System Manager ID ▶ [Apply] ▶ enter the PIN ▶ [Apply] ▶ enter the PIN again ▶ [Apply]

5 Lines LCD Model

[Home] screen on the control panel ▶ [Menu] ▶ ▶ [Management Settings] ▶ ▶ [User Management] ▶ ▶ [System Manager Information Settings] ▶ ▶ [System Manager ID and PIN] ▶ ▶ enter the System Manager ID ▶ ▶ enter the PIN ▶ ▶ enter the PIN again ▶

* You cannot set a System Manager ID or PIN consisting of all zeros, such as "00" or "0000000."

* Only allow certain administrators to have access to the System Manager ID and PIN after the settings are changed.

Changing the Volume of the Confirmation Sound and Warning Tone

A19R-0EY

You can adjust the volume of the sounds emitted by the machine and set whether the machine emits sounds notifying you of operations and statuses.

▶ **Adjusting the Volume (For Models with a Fax Function)(P. 188)**

Changing the Time Until Sleep Mode

A19R-0F0

You can change the time until the machine enters sleep mode.

▶ **Reducing Power Consumption (Sleep Mode)(P. 115)**

Lost Department ID or PIN for the Administrator

A19R-0F1

Contact the administrator to check whether the System Manager ID and System Manager PIN were changed from the default settings.

* The System Manager ID and System Manager PIN are not set by default. If they have not been changed from the default settings, change them for enhanced security, and allow only certain administrators to know this information.

▶ **Setting the Department ID and PIN for the Administrator(P. 346)**

NOTE

- If you still cannot recover your System Manager ID and PIN even after confirming the above information, contact your dealer or service representative. ▶ **If the Problem Persists(P. 652)**

Checking the Items That Can Be Configured on the Machine and Their Settings

A19R-0F2

You can print the User Data List and System Manager Data List to check the items that can be configured on the machine and their settings.

▶ **Printing and Viewing Reports and Lists(P. 404)**

User Data List

Displays the settings that do not require administrator privileges.

System Manager Data List

Displays the settings that require administrator privileges.

A Message Appears

A19R-0F3

If a message appears on the control panel, select the message from the list below, and check how to troubleshoot the problem.

- ▶ **A counterfeit or non-Canon cartridge may be in use. Close: Press OK(P. 624)**
- ▶ **A non-Canon or counterfeit cartridge may be inserted.(P. 624)**
- ▶ **An incompatible toner cartridge is inserted. Cannot use the Print function with this toner cartridge. (P. 625)**
- ▶ **Cannot analyze the authentication server certificate.(P. 625)**
- ▶ **Cannot change the destination type of any destination that is registered to a group.(P. 625)**
- ▶ **Cannot find the access point.(P. 625)**
- ▶ **Cannot perform Open System authentication. Check the encryption key settings.(P. 626)**
- ▶ **Cannot print. A non-Canon or counterfeit cartridge may be in use. Close: Press OK(P. 626)**
- ▶ **Cannot print RX data.(P. 626)**
- ▶ **Cannot receive the fax. Make sure the fax was sent correctly by the sender.(P. 627)**
- ▶ **Cannot send because more than one destination is specified.(P. 627)**
- ▶ **Cannot specify a group.(P. 627)**
- ▶ **Cart. Comm. Error A counterfeit or non-Canon cartridge may be in use. Close: Press OK(P. 627)**
- ▶ **Cart. Comm. Error Cannot print. A non-Canon or counterfeit cartridge may be in use. Close: Press OK(P. 627)**
- ▶ **Cart. end of lifetime. Rplcmt. recommended.(P. 628)**
- ▶ **Cartridge Comm. Error A non-Canon or counterfeit cartridge may be inserted.(P. 628)**
- ▶ **Cartridge Comm. Error Cannot print. A non-Canon or counterfeit cartridge may be in use.(P. 628)**
- ▶ **Change the authentication password.(P. 628)**
- ▶ **Check the authentication settings.(P. 628)**
- ▶ **Cooling down... Wait a moment.(P. 629)**
- ▶ **Could not connect using the wireless LAN.(P. 629)**
- ▶ **Could not connect using WPS.(P. 629)**
- ▶ **Could not connect.(P. 630)**
- ▶ **Could not connect. Check the encryption key settings.(P. 630)**
- ▶ **Could not connect. Device will restart.(P. 630)**
- ▶ **Could not connect. Max connections to access point reached(P. 631)**
- ▶ **Could not detect any connections from wireless devices.(P. 631)**
- ▶ **Could not perform cleaning.(P. 631)**
- ▶ **Could not perform IEEE 802.1X authentication. An unknown error occurred.(P. 631)**
- ▶ **Could not perform IEEE 802.1X authentication. Cannot analyze the authentication server certificate. (P. 631)**
- ▶ **Could not perform IEEE 802.1X authentication. Change the authentication password.(P. 632)**
- ▶ **Could not perform IEEE 802.1X authentication. Check the authentication settings.(P. 632)**
- ▶ **Could not perform IEEE 802.1X authentication. Configure the correct authentication information.(P. 632)**
- ▶ **Could not perform IEEE 802.1X authentication. Configure the information required for authentication. (P. 632)**
- ▶ **Could not perform IEEE 802.1X authentication. No reply from the destination.(P. 632)**
- ▶ **Could not perform IEEE 802.1X authentication. The authentication server certificate has expired.(P. 632)**
- ▶ **Could not perform IEEE 802.1X authentication. The authentication server certificate is incorrect.(P. 633)**
- ▶ **Could not perform Open System auth. Chk encryp. key set.(P. 633)**
- ▶ **Could not perform Shared Key auth. Chk encryp. key set.(P. 633)**
- ▶ **Could not set the current date and time.(P. 633)**
- ▶ **Direct Connection terminated.(P. 634)**
- ▶ **Easy Conn. via PC ended due to timeout Device will restart.(P. 634)**
- ▶ **Encryption key is not set correctly. Check the encryption key settings.(P. 634)**
- ▶ **Encryption key not set correctly. Check encryption key set.(P. 634)**

- ▶ End of Cart. Lifetime(P. 635)
- ▶ IEEE 802.1X error. An unknown error occurred.(P. 635)
- ▶ IEEE 802.1X error. Cannot analyze auth. server certificate.(P. 635)
- ▶ IEEE 802.1X error. Change the auth. password.(P. 635)
- ▶ IEEE 802.1X error. Check the auth. settings.(P. 635)
- ▶ IEEE 802.1X error. Configure correct authentication info.(P. 636)
- ▶ IEEE 802.1X error. Configure the info. required for auth.(P. 636)
- ▶ IEEE 802.1X error. No reply from the destination.(P. 636)
- ▶ IEEE 802.1X error. The auth. server cert. has expired.(P. 636)
- ▶ IEEE 802.1X error. The auth. server cert. is incorrect.(P. 636)
- ▶ Incorrect number of characters/invalid characters entered.(P. 636)
- ▶ Insert the toner cartridge.(P. 637)
- ▶ Low Cartridge Level(P. 637)
- ▶ Mem. full. Check error w/Status Monitor key.(P. 637)
- ▶ Memory is full.(P. 637)
- ▶ No Paper: Drawer 1(P. 638)
- ▶ No reply from the destination.(P. 638)
- ▶ No response from host.(P. 638)
- ▶ Paper jammed.(P. 638)
- ▶ Prepare a cartridge.(P. 638)
- ▶ Problems resulting from the use of non-Canon cartridges are not covered by the warranty.(P. 639)
- ▶ Set the correct authentication information.(P. 639)
- ▶ Set the information necessary for authentication.(P. 639)
- ▶ Size/Settings Mismatch(P. 639)
- ▶ Specifying and registering new destinations is restricted.(P. 640)
- ▶ The authentication server certificate has expired.(P. 640)
- ▶ The authentication server certificate is incorrect.(P. 640)
- ▶ The memory is full. Scanning will be canceled. Do you want to print?(P. 640)
- ▶ Turn the main power OFF and ON. If the device does not recover, contact your dealer or service representative.(P. 641)
- ▶ Universal Print Cannot communicate w/server.(P. 641)
- ▶ Universal Print Internal error.(P. 641)
- ▶ Universal Print Server authentication error.(P. 641)
- ▶ Universal Print The certificate has expired.(P. 641)
- ▶ Universal Print The printer is not registered.(P. 641)
- ▶ Use Remote UI to set info. necessary for authentication.(P. 641)

NOTE

- If the problem persists even after trying the troubleshooting methods, contact your dealer or service representative. ▶ **If the Problem Persists(P. 652)**

A counterfeit or non-Canon cartridge may be in use. Close: Press OK

A toner cartridge whose print quality cannot be guaranteed may be in use. For optimum print quality, using Canon genuine toner cartridges is recommended.

A non-Canon or counterfeit cartridge may be inserted.

A toner cartridge whose print quality cannot be guaranteed may be in use.

Reinstall the Toner Cartridge or Replace with New Toner Cartridge.

- ▶ **Replacing the Toner Cartridge(P. 529)**

- For optimum print quality, using Canon genuine toner cartridges is recommended. **▶List of Consumables(P. 536)**
- If the message still appears after repeatedly reinstalling the toner cartridge, contact your dealer or service representative. **▶If the Problem Persists(P. 652)**

An incompatible toner cartridge is inserted. Cannot use the Print function with this toner cartridge.

A toner cartridge whose print quality cannot be guaranteed may be in use. For optimum print quality, using Canon genuine toner cartridges is recommended.

Cannot analyze the authentication server certificate.

The certificate of the authentication server may not be correct, or it may be a format unsupported by the machine.

Check the Certificate of the Authentication Server, and Change the Setting, as Needed.

▶ Setting IEEE 802.1X(P. 358)

Cannot change the destination type of any destination that is registered to a group.

The selected destination is registered to a group, so you cannot change the destination type.

Delete the Destination from the Group, Change the Destination Type, and Then Register It to the Group Again.

- 1 Delete the destination from the group.

Deleting Using Remote UI

Log in to Remote UI in System Manager Mode ▶ [Address Book] ▶ [One-Touch] or [Coded Dial] ▶ select the group to which the destination is registered ▶ [Edit] ▶ select the destination ▶ [Delete] ▶ [OK]

Deleting Using the Control Panel

[Home] screen on the control panel ▶ [Addr. Book] ▶ [Details/Edit] ▶ select the group to which the destination is registered ▶ [Edit] ▶ [Number of Destinations] ▶ select the destination ▶ [Remove] ▶ [Yes] ▶ [Apply] ▶ [Apply]

- 2 Change the destination type.
 - ▶ **Registering Destinations to the Address Book (Remote UI)(P. 171)**
 - ▶ **Editing and Deleting Destinations in the Address Book (Control Panel)(P. 170)**
- 3 Register the destination to the group again.
 - ▶ **Registering Groups to the Address Book (Remote UI)(P. 175)**
 - ▶ **Registering Groups to the Address Book (Control Panel)(P. 168)**

Cannot find the access point.

An error occurred, preventing the machine from detecting the wireless LAN router (access point).

Did You Connect Within the Fixed Time?


When connecting by pressing a button on the wireless LAN router, set the connection type on the control panel of the machine, and then press the button on the wireless LAN router within two minutes. ▶ **Connecting to a Wireless LAN by Using the Router Button (Push Button Mode)(P. 64)**

Are the SSID and Network Key Configured Correctly?

When entering the wireless LAN router information manually, check the SSID and network key of the wireless LAN router, and configure the settings correctly on the machine. ▶ **Connecting to a Wireless LAN by Setting the Details (Manual Setup Method)(P. 72)**

Are the Machine and Wireless LAN Router Located Appropriately?

- The machine and wireless LAN router should be installed in a location without walls or other obstructions between the devices and within range of 164' (50 m).
- Do not install near a microwave oven, digital cordless telephone, or other device that generates radio waves.

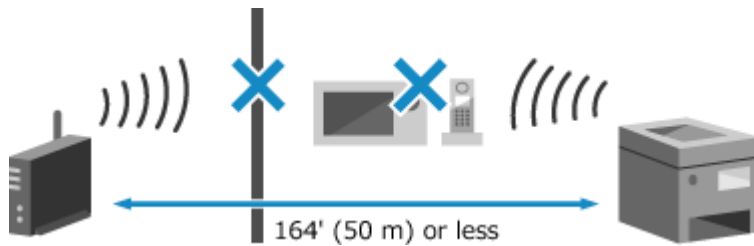

Check the Security Settings of the Wireless LAN Router.

For details, see the manual of the wireless LAN router or contact the manufacturer.

Cannot perform Open System authentication. Check the encryption key settings.

The WEP authentication methods of the machine and wireless LAN router (access point) do not match, or MAC address filtering of the wireless LAN router is set to prevent a connection to the machine, thereby preventing Open System Authentication.

Use the Manual Setup Method to Change the WEP Authentication Method to [Shared Key], and Connect Again.

▶ **Connecting to a Wireless LAN by Setting the Details (Manual Setup Method)(P. 72)**

In the MAC address filtering setting of the wireless LAN router, allow the connection to the machine.

Check the MAC address of the machine, and configure the wireless LAN router to allow a connection from that MAC address. ▶ **Viewing the MAC Address and Connection Information of the Wireless LAN(P. 100)**
For the setup method, see the manual of the wireless LAN router or contact the manufacturer.

Cannot print. A non-Canon or counterfeit cartridge may be in use. Close: Press OK

Printing cannot be performed due to the use of a toner cartridge whose print quality cannot be guaranteed.

Replace with a New Toner Cartridge.

▶ **Replacing the Toner Cartridge(P. 529)**

For optimum print quality, using Canon genuine toner cartridges is recommended. ▶ **List of Consumables(P. 536)**

Cannot print RX data.

Received data cannot be printed for some reason.

Do the Cause and Solution Appear on the Control Panel?

If so, follow the instructions on the screen.

Is the Control Panel, Rear Cover, or Toner Cover Open on the Machine?

Close the covers if they are open.

Is Paper Loaded?

Load paper if not loaded. ▶ **Loading Paper(P. 144)**

Is Paper Jammed?

If so, remove any jammed paper. ▶ **Paper Jams(P. 546)**

Has the Toner Cartridge Reached the End of Their Lifetime?

Check the remaining amount in the toner cartridge, and replace any of the toner cartridge, as needed.

▶ **Checking the Remaining Amount of Consumables(P. 535)**

▶ **Replacing the Toner Cartridge(P. 529)**

Cannot receive the fax. Make sure the fax was sent correctly by the sender.

Operations were not performed within the fixed time when receiving a fax manually, and the machine timed out.

When You Hear a Beep During Fax Reception, Press [Start Receiving] Within 35 Seconds.

[Home] screen on the control panel ▶ [Fax] ▶ [Start Receiving]

Cannot send because more than one destination is specified.

Sending of faxes to multiple destinations is restricted.

To Cancel Restriction, Change the [Restrict Sequential Broadcast] Setting.

Log in to Remote UI in System Manager Mode ▶ [Settings/Registration] ▶ [TX Settings] ▶ [Fax TX Settings] ▶ [Edit] ▶ in [Restrict Sequential Broadcast], select [Off] ▶ [OK]

On the control panel, select [Menu] in the [Home] screen, and then select [Function Settings] to change the setting. ▶ **[Restrict Sequential Broadcast](P. 492)**

Cannot specify a group.

If you press [Hook] when sending a fax, you cannot specify a group destination. Specify the destination without pressing [Hook].

Cart. Comm. Error A counterfeit or non-Canon cartridge may be in use. Close: Press OK

Printing cannot be performed due to incorrect installation of the toner cartridge, a damaged toner cartridge, or the use of a toner cartridge whose print quality cannot be guaranteed.

Reinstall the Toner Cartridge or Replace with New Toner Cartridge.

▶ **Replacing the Toner Cartridge(P. 529)**

- For optimum print quality, using Canon genuine toner cartridges is recommended. ▶ **List of Consumables(P. 536)**
- If the message still appears after repeatedly reinstalling the toner cartridge, contact your dealer or service representative. ▶ **If the Problem Persists(P. 652)**

Cart. Comm. Error Cannot print. A non-Canon or counterfeit cartridge may be in use. Close: Press OK

Printing cannot be performed due to incorrect installation of the toner cartridge, a damaged toner cartridge, or the use of a toner cartridge whose print quality cannot be guaranteed.

Reinstall the Toner Cartridge or Replace with New Toner Cartridge.

▶ **Replacing the Toner Cartridge(P. 529)**

- For optimum print quality, using Canon genuine toner cartridges is recommended. ▶ **List of Consumables(P. 536)**
- If the message still appears after repeatedly reinstalling the toner cartridge, contact your dealer or service representative. ▶ **If the Problem Persists(P. 652)**

Cart. end of lifetime. Rplcmt. recommended.

The toner cartridge has reached the end of their lifetime.

It Is Recommended to Replace with New Toner Cartridge.
 Replace the toner cartridge. ▶ **Replacing the Toner Cartridge(P. 529)**

Cartridge Comm. Error A non-Canon or counterfeit cartridge may be inserted.

Printing cannot be performed due to incorrect installation of the toner cartridge, a damaged toner cartridge, or the use of a toner cartridge whose print quality cannot be guaranteed.

Reinstall the Toner Cartridge or Replace with New Toner Cartridge.
 ▶ **Replacing the Toner Cartridge(P. 529)**

- For optimum print quality, using Canon genuine toner cartridges is recommended. ▶ **List of Consumables(P. 536)**
- If the message still appears after repeatedly reinstalling the toner cartridge, contact your dealer or service representative. ▶ **If the Problem Persists(P. 652)**

Cartridge Comm. Error Cannot print. A non-Canon or counterfeit cartridge may be in use.

Printing cannot be performed due to incorrect installation of the toner cartridge, a damaged toner cartridge, or the use of a toner cartridge whose print quality cannot be guaranteed.

Reinstall the Toner Cartridge or Replace with New Toner Cartridge.
 ▶ **Replacing the Toner Cartridge(P. 529)**

- For optimum print quality, using Canon genuine toner cartridges is recommended. ▶ **List of Consumables(P. 536)**
- If the message still appears after repeatedly reinstalling the toner cartridge, contact your dealer or service representative. ▶ **If the Problem Persists(P. 652)**

Change the authentication password.

The password has expired.
 Set a new password.

Check the authentication settings.

The authentication method set on the machine does not match that set on the RADIUS server.

Check the Authentication Method Set on the RADIUS Server, and Set This Correctly.
 ▶ **Setting IEEE 802.1X(P. 358)**

Cooling down... Wait a moment.

The machine is cooling down because the temperature inside the machine has risen. Wait a moment.

Could not connect using the wireless LAN.


An error occurred, preventing the machine from connecting to the wireless LAN.

Restart the Machine, and Configure the Wireless LAN Connection Again.

▶ **Connecting to a Wireless LAN(P. 61)**

Are the Machine and Wireless LAN Router (Access Point) Located Appropriately?

- The machine and wireless LAN router should be installed in a location without walls or other obstructions between the devices and within range of 164' (50 m).
- Do not install near a microwave oven, digital cordless telephone, or other device that generates radio waves.

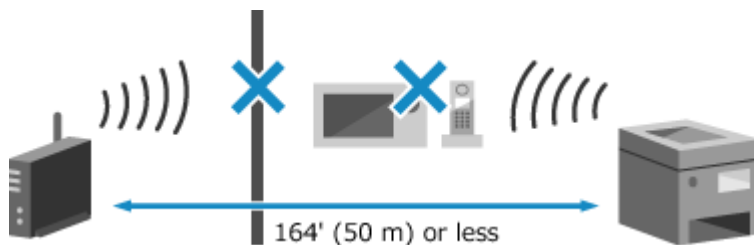

Check the Security Settings of the Wireless LAN Router.

For details, see the manual of the wireless LAN router or contact the manufacturer.

Could not connect using WPS.

An error occurred, preventing the machine from establishing a WPS connection.


Wait a Moment, and Configure the Settings Again.

If you still cannot establish a WPS connection, check whether the wireless LAN router (access point) supports WPS.

If It Supports WPS

Check that the machine and wireless LAN router are located appropriately.

- The machine and wireless LAN router should be installed in a location without walls or other obstructions between the devices and within range of 164' (50 m).
- Do not install near a microwave oven, digital cordless telephone, or other device that generates radio waves.

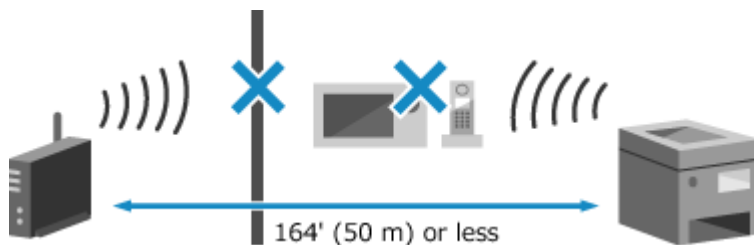

If It Does Not Support WPS

Connect using a different connection type. ▶ **Connecting to a Wireless LAN(P. 61)**

Could not connect.

An error occurred, preventing the machine from establishing a direct connection.

Wait a Moment, and Try Connecting Again.

If you still cannot establish a connection, restart the machine.

Set the IP Address for Connection to Something Other Than "192.168.22.xx".

The machine must be restarted to apply the settings.

Log in to Remote UI in System Manager Mode ▶ [Settings/Registration] ▶ [Network Settings] ▶ [Direct Connection Settings] ▶ [Edit] ▶ in [IP Address for Direct Connection], enter the IP address ▶ [OK] ▶ restart the machine

On the control panel, select [Menu] in the [Home] screen, and then select [Preferences] to configure the settings. ▶ **[Direct Connection Settings](P. 433)**

Is the Subnet Mask Configured Correctly?

Check the IPv4 subnet mask settings. Change the settings if they have not been configured correctly. For details, contact the network administrator.

▶ **Viewing the IP address set to the machine(P. 98)**

▶ **Setting IPv4 Addresses(P. 77)**

Could not connect. Check the encryption key settings.

The network key (encryption key) of the wireless LAN router (access point) is not configured correctly, or the WEP authentication methods of the machine and wireless LAN router do not match, preventing Shared Key Authentication.

Reset the Network Key.

Check the network key of the wireless LAN router, and configure the settings correctly on the machine. ▶ **Connecting to a Wireless LAN(P. 61)**

Match the WEP Authentication Method on the Machine and Wireless LAN Router.

The machine may be set to Shared Key Authentication, and the wireless LAN router may be set to Open System Authentication. Change the WEP setting according to the authentication method you are using.

When Using Open System Authentication

Connect to the wireless LAN using either of the following methods:

- Connect with the access point setup method. ▶ **Connecting to a Wireless LAN by Searching for a Router (Access Point Setup Method)(P. 69)**
- Using the Manual Setup Method, connect with the WEP authentication method set to [Open System]. ▶ **Connecting to a Wireless LAN by Setting the Details (Manual Setup Method)(P. 72)**

When Using Shared Key Authentication

On the wireless LAN router, change the WEP authentication method to "Shared Key", and connect again. For the setup method, see the manual of the wireless LAN router or contact the manufacturer.

Could not connect. Device will restart.

An error occurred, preventing the machine from connecting in Access Point Mode. Alternatively, an error occurred when starting cableless setup mode.


 

 

Restart the Machine, and Start Cableless Setup Mode Again.

Administrator privileges are required.

Touch Panel Model

[Home] on the control panel ▶ [Menu] ▶ [Preferences] ▶ [Network] ▶ [Easy Connection via PC] ▶ [Yes] ▶ start the settings on the computer

5 Lines LCD Model

[Home] on the control panel ▶ [Menu] ▶  ▶ [Preferences] ▶  ▶ [Network] ▶  ▶ [Easy Connection via PC] ▶  ▶ [Yes] ▶  ▶ start the settings on the computer

Could not connect. Max connections to access point reached

The maximum number of devices that can be connected to the wireless LAN router (access point) has been reached, preventing connection.

Reduce the Number of Devices (Clients) Connected to the Wireless LAN Router.
 For the maximum number of connections, see the manual of the wireless LAN router or contact the manufacturer.

Could not detect any connections from wireless devices.

An error occurred, preventing the machine from detecting mobile devices.

Did You Connect Within the Fixed Time?
 Connect the mobile device to the machine within five minutes of the SSID and network key being displayed.

Could not perform cleaning.

Cleaning could not be performed due to jammed paper, loading of incorrect paper, or another problem.

Load Correct Paper in the Drawer.
 Follow the instructions on the control panel during cleaning, and load usable paper. ▶ **Loading Paper in the Drawer(P. 145)**

Is Paper Jammed?
 If so, remove any jammed paper. ▶ **Paper Jams(P. 546)**

Could not perform IEEE 802.1X authentication. An unknown error occurred.

An error occurred, preventing the machine from establishing the IEEE 802.1X authentication connection.

Check the Ethernet Cable and Switch Status.
Set the Authentication Method and Authentication Information (Keys and Certificates, Password, CA Certificate) Correctly.
 ▶ **Setting IEEE 802.1X(P. 358)**
 ▶ **Managing and Verifying a Key and Certificate(P. 360)**

Check the Authentication Method Set on the RADIUS Server, and Set This Correctly.
 ▶ **Setting IEEE 802.1X(P. 358)**

Check the Expiry Date of the RADIUS Server.
 ▶ **Setting IEEE 802.1X(P. 358)**

Could not perform IEEE 802.1X authentication. Cannot analyze the authentication server certificate.

Check the certificate of the authentication server, and change the setting, as needed.

Check the Certificate of the RADIUS Server, and Change the Setting, as Needed.
 ▶ **Setting IEEE 802.1X(P. 358)**

Could not perform IEEE 802.1X authentication. Change the authentication password.

The password has expired.

Set a New Password.

- ▶ **Setting IEEE 802.1X(P. 358)**

Could not perform IEEE 802.1X authentication. Check the authentication settings.

The authentication method set on the machine does not match that set on the RADIUS server.

Check the Authentication Method Set on the RADIUS Server, and Set This Correctly.

- ▶ **Setting IEEE 802.1X(P. 358)**

Could not perform IEEE 802.1X authentication. Configure the correct authentication information.

The authentication method or authentication information of IEEE 802.1X is not set correctly.

Set the Authentication Method and Authentication Information (Keys and Certificates, Password, CA Certificate) Correctly.

- ▶ **Setting IEEE 802.1X(P. 358)**
- ▶ **Managing and Verifying a Key and Certificate(P. 360)**

Could not perform IEEE 802.1X authentication. Configure the information required for authentication.

The authentication method or authentication information of IEEE 802.1X is not set correctly.

Set the Authentication Method and Authentication Information (Keys and Certificates, Password, CA Certificate) Correctly.

- ▶ **Setting IEEE 802.1X(P. 358)**
- ▶ **Managing and Verifying a Key and Certificate(P. 360)**

Could not perform IEEE 802.1X authentication. No reply from the destination.

The network connection may have a problem.

Check the Network Status and Settings.

- Check the Ethernet cable and switch status.
- Check the network key of the wireless LAN router, and configure the settings correctly on the machine.

Could not perform IEEE 802.1X authentication. The authentication server certificate has expired.

The server certificate sent from the RADIUS server has expired.

Check the Expiry Date of the RADIUS Server.

- ▶ **Setting IEEE 802.1X(P. 358)**

Could not perform IEEE 802.1X authentication. The authentication server certificate is incorrect.

A CA certificate that supports the certificate of the authentication server is not registered to the machine.

Check the Certificate Information of the Authentication Server, and Register a Supported CA Certificate.

- ▶ **Setting IEEE 802.1X(P. 358)**
- ▶ **Registering a Key and Certificate or CA Certificate Obtained from an Issuing Authority(P. 366)**

Could not perform Open System auth. Chk encryp. key set.

The WEP authentication methods of the machine and wireless LAN router (access point) do not match, or MAC address filtering of the wireless LAN router is set to prevent a connection to the machine, thereby preventing Open System Authentication.

Use the Manual Setup Method to Change the WEP Authentication Method to [Shared Key], and Connect Again.

- ▶ **Connecting to a Wireless LAN by Setting the Details (Manual Setup Method)(P. 72)**

In the MAC address filtering setting of the wireless LAN router, allow the connection to the machine.

Check the MAC address of the machine, and configure the wireless LAN router to allow a connection from that MAC address. ▶ **Viewing the MAC Address and Connection Information of the Wireless LAN(P. 100)**
For the setup method, see the manual of the wireless LAN router or contact the manufacturer.

Could not perform Shared Key auth. Chk encryp. key set.

The network key (encryption key) of the wireless LAN router (access point) is not configured correctly, or the WEP authentication methods of the machine and wireless LAN router do not match, preventing Shared Key Authentication.

Reset the Network Key.

Check the network key of the wireless LAN router, and configure the settings correctly on the machine. ▶ **Connecting to a Wireless LAN(P. 61)**

Match the WEP Authentication Method on the Machine and Wireless LAN Router.

The machine may be set to Shared Key Authentication, and the wireless LAN router may be set to Open System Authentication. Change the WEP setting according to the authentication method you are using.

When Using Open System Authentication

Connect to the wireless LAN using either of the following methods:

- Connect with the access point setup method. ▶ **Connecting to a Wireless LAN by Searching for a Router (Access Point Setup Method)(P. 69)**
- Using the Manual Setup Method, connect with the WEP authentication method set to [Open System]. ▶ **Connecting to a Wireless LAN by Setting the Details (Manual Setup Method)(P. 72)**

When Using Shared Key Authentication

On the wireless LAN router, change the WEP authentication method to "Shared Key", and connect again. For the setup method, see the manual of the wireless LAN router or contact the manufacturer.

Could not set the current date and time.

The operation failed due to a network error that caused the communication to time out.

Check the Environment of the Network to Which the Machine Is Connected.

Manually set the time in [Current Date/Time Settings], or clear the [Use SNTP] checkbox in [SNTP Settings].

- ▶ **Setting the Date and Time(P. 393)**

▶ **Configuring SNTP(P. 94)**

Direct Connection terminated.

The connection with a mobile device was terminated.

Directly Connect Again.

▶ **Connecting a Mobile Device Directly to the Machine (Direct Connection)(P. 332)**

Easy Conn. via PC ended due to timeout Device will restart.

30 minutes have elapsed since the start of the cableless setup mode without connecting to the computer.

Restart the Machine, and Start Cableless Setup Mode Again.

Administrator privileges are required.

Touch Panel Model

[Home] on the control panel ▶ [Menu] ▶ [Preferences] ▶ [Network] ▶ [Easy Connection via PC] ▶ [Yes] ▶ start the settings on the computer

5 Lines LCD Model

[Home] on the control panel ▶ [Menu] ▶ **OK** ▶ [Preferences] ▶ **OK** ▶ [Network] ▶ **OK** ▶ [Easy Connection via PC] ▶ **OK** ▶ [Yes] ▶ **OK** ▶ start the settings on the computer

Encryption key is not set correctly. Check the encryption key settings.

The network key (encryption key) of the wireless LAN router (access point) is not configured correctly on the machine. Alternatively, the WEP authentication method of the machine does not match that of the wireless LAN router.

Reset the Network Key.

Check the network key of the wireless LAN router, and configure the settings correctly on the machine. ▶

Connecting to a Wireless LAN(P. 61)

Match the WEP Authentication Method on the Machine and Wireless LAN Router.

The machine may be set to Shared Key Authentication, and the wireless LAN router may be set to Open System Authentication. Change the WEP setting according to the authentication method you are using.

When Using Open System Authentication

Connect to the wireless LAN using either of the following methods:

- Connect with the access point setup method. ▶ **Connecting to a Wireless LAN by Searching for a Router (Access Point Setup Method)(P. 69)**
- Using the Manual Setup Method, connect with the WEP authentication method set to [Open System]. ▶ **Connecting to a Wireless LAN by Setting the Details (Manual Setup Method)(P. 72)**

When Using Shared Key Authentication

On the wireless LAN router, change the WEP authentication method to "Shared Key", and connect again. For the setup method, see the manual of the wireless LAN router or contact the manufacturer.

Encryption key not set correctly. Check encryption key set.

The network key (encryption key) of the wireless LAN router (access point) is not configured correctly on the machine. Alternatively, the WEP authentication method of the machine does not match that of the wireless LAN router.

Reset the Network Key.

Check the network key of the wireless LAN router, and configure the settings correctly on the machine. ▶
Connecting to a Wireless LAN(P. 61)

Match the WEP Authentication Method on the Machine and Wireless LAN Router.

The machine may be set to Shared Key Authentication, and the wireless LAN router may be set to Open System Authentication. Change the WEP setting according to the authentication method you are using.

When Using Open System Authentication

Connect to the wireless LAN using either of the following methods:

- Connect with the access point setup method. ▶**Connecting to a Wireless LAN by Searching for a Router (Access Point Setup Method)(P. 69)**
- Using the Manual Setup Method, connect with the WEP authentication method set to [Open System]. ▶
Connecting to a Wireless LAN by Setting the Details (Manual Setup Method)(P. 72)

When Using Shared Key Authentication

On the wireless LAN router, change the WEP authentication method to "Shared Key", and connect again. For the setup method, see the manual of the wireless LAN router or contact the manufacturer.

End of Cart. Lifetime

The toner cartridge has reached the end of their lifetime.

It Is Recommended to Replace with New Toner Cartridge.
 Replace the toner cartridge. ▶**Replacing the Toner Cartridge(P. 529)**

IEEE 802.1X error. An unknown error occurred.

An error occurred, preventing the machine from establishing the IEEE 802.1X authentication connection.

- Check the Ethernet Cable and Switch Status.**
- Set the Authentication Method and Authentication Information (Keys and Certificates, Password, CA Certificate) Correctly.**
 - ▶ **Setting IEEE 802.1X(P. 358)**
 - ▶ **Managing and Verifying a Key and Certificate(P. 360)**
- Check the Authentication Method Set on the RADIUS Server, and Set This Correctly.**
 - ▶ **Setting IEEE 802.1X(P. 358)**
- Check the Expiry Date of the RADIUS Server.**
 - ▶ **Setting IEEE 802.1X(P. 358)**

IEEE 802.1X error. Cannot analyze auth. server certificate.

The certificate of the authentication server may not be correct, or it may be a format unsupported by the machine.

Check the Certificate of the RADIUS Server, and Change the Setting, as Needed.
 ▶ **Setting IEEE 802.1X(P. 358)**

IEEE 802.1X error. Change the auth. password.

The password has expired.

Set a New Password.
 ▶ **Setting IEEE 802.1X(P. 358)**

IEEE 802.1X error. Check the auth. settings.

The authentication method set on the machine does not match that set on the RADIUS server.

Check the Authentication Method Set on the RADIUS Server, and Set This Correctly.

- ▶ **Setting IEEE 802.1X(P. 358)**

IEEE 802.1X error. Configure correct authentication info.

The authentication method or authentication information of IEEE 802.1X is not set correctly.

Set the Authentication Method and Authentication Information (Keys and Certificates, Password, CA Certificate) Correctly.

- ▶ **Setting IEEE 802.1X(P. 358)**
- ▶ **Managing and Verifying a Key and Certificate(P. 360)**

IEEE 802.1X error. Configure the info. required for auth.

The authentication method or authentication information of IEEE 802.1X is not set correctly.

Set the Authentication Method and Authentication Information (Keys and Certificates, Password, CA Certificate) Correctly.

- ▶ **Setting IEEE 802.1X(P. 358)**
- ▶ **Managing and Verifying a Key and Certificate(P. 360)**

IEEE 802.1X error. No reply from the destination.

The network connection may have a problem.

Check the Network Status and Settings.

- Check the Ethernet cable and switch status.
- Check the network key of the wireless LAN router, and configure the settings correctly on the machine.

IEEE 802.1X error. The auth. server cert. has expired.

The server certificate sent from the RADIUS server has expired.

Check the Expiry Date of the RADIUS Server.

- ▶ **Setting IEEE 802.1X(P. 358)**

IEEE 802.1X error. The auth. server cert. is incorrect.

A CA certificate that supports the certificate of the authentication server is not registered to the machine.

Check the Certificate Information of the Authentication Server, and Register a Supported CA Certificate.

- ▶ **Setting IEEE 802.1X(P. 358)**
- ▶ **Registering a Key and Certificate or CA Certificate Obtained from an Issuing Authority(P. 366)**

Incorrect number of characters/invalid characters entered.

The network key of the wireless LAN router (access point) is not configured correctly on the machine.

Reset the Network Key.

- Check the network key of the wireless LAN router, and configure the settings correctly on the machine. ▶ **Connecting to a Wireless LAN(P. 61)**

Insert the toner cartridge.

The toner cartridge is not installed correctly.

Reinstall the Toner Cartridge.

▶ Replacing the Toner Cartridge(P. 529)

If the message still appears after repeatedly reinstalling the toner cartridge, contact your dealer or service representative. ▶ **If the Problem Persists(P. 652)**

Low Cartridge Level

It is nearing the time to replace the toner cartridge.

Prepare New Toner Cartridge, and Replace the Old Ones, as Needed.

When printing large printing jobs, it is recommended to replace the toner cartridge. ▶ **Replacing the Toner Cartridge(P. 529)**

To Continue Printing, Press [Continue Printing].

When Faxing, or Printing an Auto Report

In the following cases, the data may be saved to the memory of the machine without being printed to prevent printing text that is difficult to read or images that are difficult to see:

- When receiving a Fax
- When communication results reports are set to be printed automatically

To continue printing, enable [Continue Printing When Amount in Cartridge Is Low].

Log in to Remote UI ▶ [Settings/Registration] ▶ [RX/Forwarding Settings] or [RX Settings] ▶ [Common Settings] ▶ [Edit] in [Common Settings] ▶ select the [Continue Printing When Amount in Cartridge Is Low] checkbox ▶ [OK]

On the control panel, select [Menu] in the [Home] screen, and then select [Function Settings] to configure the settings. ▶ **[Displ. Timing for Cartridge Prep. Notif.](P. 428)**

* When this setting is enabled, the printing results may be light or faded.

NOTE

- You can manually specify when this message appears (when toner is low). ▶ **[Displ. Timing for Cartridge Prep. Notif.](P. 428)**

Mem. full. Check error w/Status Monitor key.

The memory is full with data that has not been printed due to an error.

Cancel Printing of the Data with an Error, or Press [Skip Error] on the [Status Monitor] Screen.

▶ Canceling Printing with the Control panel(P. 210)

▶ Viewing the Print Job Status and Log(P. 212)

Memory is full.

Scanning or faxing cannot be performed due to insufficient available memory. If there is data waiting to be printed or sent, wait until the processing is completed.

Check the Received Faxes Saved in the Memory.

Print or forward them as needed, and delete any unnecessary faxes. **▶Viewing and Printing Faxes Saved in the Memory(P. 379)**

When Scanning, Change the Data Size to a Small File Format.

[Home] screen on the control panel ▶ [Scan] ▶ select the scan type ▶ Enter the destination ▶ [File Format] ▶ select the file format.

For details about the file formats, see the following:

▶Setting File / Division(P. 249)

When Sending Faxes, Divide the Original or Lower the Resolution.

- When sending an original with many pages, divide the original and send it.
- Change the set resolution to a lower resolution when scanning the original.

[Home] screen on the control panel ▶ [Fax] ▶ [Resolution] ▶ select the resolution.

No Paper: Drawer 1

There is no paper loaded.

Load Paper.

▶Loading Paper(P. 144)

No reply from the destination.

The Ethernet cable may not be connected or there may be a problem with the switch. Check the Ethernet cable and switch status.

No response from host.

The machine is not connected correctly to the network.

Check the Settings of the Machine and Network, and Connect Again.

When Connected via Wireless LAN

Configure the settings correctly according to your usage environment. **▶Connecting to a Wireless LAN(P. 61)**

When Connected via Wired LAN

Check that the Ethernet cable is properly connected. **▶Connecting to a Wired LAN(P. 60)**

Paper jammed.

Paper jammed in the machine during printing.

Remove the Jammed Paper, and If Printing Does Not Resume Automatically, Try Printing Again.

▶Paper Jams(P. 546)

Prepare a cartridge.

It is nearing the time to replace the toner cartridge.

Prepare New Toner Cartridge, and Replace the Old Ones, as Needed.

When printing large jobs, it is recommended to replace the toner cartridge. **▶ Replacing the Toner Cartridge(P. 529)**

To Continue Printing, Use the Procedure Below.

When Faxing, or Printing an Auto Report

In the following cases, the data may be saved to the memory of the machine without being printed to prevent printing text that is difficult to read or images that are difficult to see:

- When receiving a Fax
- When communication results reports are set to be printed automatically

To continue printing, enable [Continue Printing When Amount in Cartridge Is Low].

Log in to Remote UI ▶ [Settings/Registration] ▶ [RX/Forwarding Settings] or [RX Settings] ▶ [Common Settings] ▶ [Edit] in [Common Settings] ▶ select the [Continue Printing When Amount in Cartridge Is Low] checkbox ▶ [OK]

On the control panel, select [Menu] in the [Home] screen, and then select [Function Settings] to configure the settings. **▶ [Displ. Timing for Cartridge Prep. Notif.](P. 428)**

* When this setting is enabled, the printing results may be light or faded.

NOTE

- You can manually specify when this message appears (when toner is low). **▶ [Displ. Timing for Cartridge Prep. Notif.](P. 428)**

Problems resulting from the use of non-Canon cartridges are not covered by the warranty.

A toner cartridge whose print quality cannot be guaranteed may be in use. For optimum print quality, using Canon genuine toner cartridges is recommended.

Set the correct authentication information.

The authentication method or authentication information of IEEE 802.1X is not set correctly.

Set the Authentication Method and Authentication Information (Keys and Certificates, Password, CA Certificate) Correctly.

- ▶ **Setting IEEE 802.1X(P. 358)**
- ▶ **Managing and Verifying a Key and Certificate(P. 360)**

Set the information necessary for authentication.

The authentication method or authentication information of IEEE 802.1X is not set correctly.

Set the Authentication Method and Authentication Information (Keys and Certificates, Password, CA Certificate) Correctly.

- ▶ **Setting IEEE 802.1X(P. 358)**
- ▶ **Managing and Verifying a Key and Certificate(P. 360)**

Size/Settings Mismatch

The size of the paper loaded in the machine does not match that set on the control panel or printer driver.

Match the Size of the Loaded Paper with the Paper Size Setting.


When Using the Loaded Paper

- Change the paper size setting on the control panel to match the size of the loaded paper.
 - ▶ **Setting the Paper Size and Type for the Drawer(P. 155)**
- When printing from a computer, change the paper size setting on the printer driver to match the size of the loaded paper.
 - ▶ **Printing from a Computer(P. 204)**

When Reloading Paper

Load paper of the size set on the control panel or printer driver. ▶ **Loading Paper(P. 144)**

Check that the positions of the paper guides are not too loose or too tight.

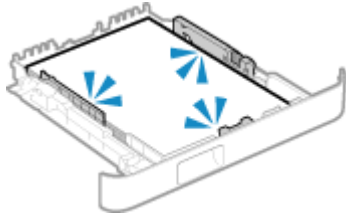

Specifying and registering new destinations is restricted.

Destinations that can be specified for sending are restricted to those destinations registered in the Address Book.

To Cancel Restriction, Change the [Restrict New Destinations] Setting.

Log in to Remote UI in System Manager Mode ▶ [Settings/Registration] ▶ [TX Settings] ▶ [Restrict New Destinations] ▶ [Edit] ▶ clear the [Restrict New Destinations] checkbox ▶ [OK]

On the control panel, select [Menu] in the [Home] screen, and then select [Function Settings] to change the setting. ▶ **[Restrict New Destinations](P. 481)**

The authentication server certificate has expired.

The server certificate sent from the RADIUS server has expired.

Check the Expiry Date of the RADIUS Server.
 ▶ **Setting IEEE 802.1X(P. 358)**

The authentication server certificate is incorrect.

A CA certificate that supports the certificate of the authentication server is not registered to the machine.

Check the certificate information of the authentication server, and register a supported CA certificate.
 ▶ **Setting IEEE 802.1X(P. 358)**
 ▶ **Registering a Key and Certificate or CA Certificate Obtained from an Issuing Authority(P. 366)**

The memory is full. Scanning will be canceled. Do you want to print?

Reading of the original cannot be performed due to insufficient available memory. Alternatively, all the pages could not be read when sorting and copying.

Divide the Original Before Copying.
 Print up to the pages that were read or cancel the job, and then divide the original before copying.
Try Configuring the Setting as Follows.

[Home] screen on the control panel ▶ [Copy] ▶ [Original Type] ▶ [Text/Photo (High Speed)].

Turn the main power OFF and ON. If the device does not recover, contact your dealer or service representative.

An error occurred in the machine.

Restart the Machine.

Turn OFF the power switch, wait at least 10 seconds, and then turn ON the power switch again.

Universal Print Cannot communicate w/server.

An error occurred, preventing communication with the Universal Print server.

The Machine Is Not Connected to the Network Correctly.

Check the machine and network settings, and try connecting again.

Could Not Communicate Because a Server Error Occurred.

Check whether the server is operating normally.

Communication with the Server Is Blocked Due to Firewall Settings.

Configure the firewall settings to allow communication.

Universal Print Internal error.

The printer stopped operating normally due to an unknown problem.

Restart the machine. If the message still appears after restarting the machine, make a note of the message and contact your dealer or service representative.

Universal Print Server authentication error.

An error has occurred during server authentication.

Restart the machine. If the message still appears after restarting the machine, make a note of the message and contact your dealer or service representative.

Universal Print The certificate has expired.

The expiration date of the certificate has expired.

Delete this machine from Microsoft Entra ID and the computer, re-register the machine, and then update the certificate.

Universal Print The printer is not registered.

This machine was deleted from Microsoft Entra ID and could not be communicated with.

Re-register this machine in Microsoft Entra ID.

Use Remote UI to set info. necessary for authentication.

The authentication method or authentication information of IEEE 802.1X is not set correctly.

Check the IEEE 802.1X Setting, and Set This Correctly.

Check the following, and change the setting, as needed. **Setting IEEE 802.1X(P. 358)**


- The login name is specified correctly.
- At least one of the following checkboxes is selected: [Use TLS], [Use TTLS], and [Use PEAP].
- When using TLS, a key and certificate are registered.

- When using TTLS or PEAP, the user name and password are set correctly.

An Error Code Is Displayed

A19R-0F4

If printing cannot be performed, or scanned data or a fax cannot be sent or received, or another error occurs, an error code (three-digit number starting with "#") is displayed in the report or job log.

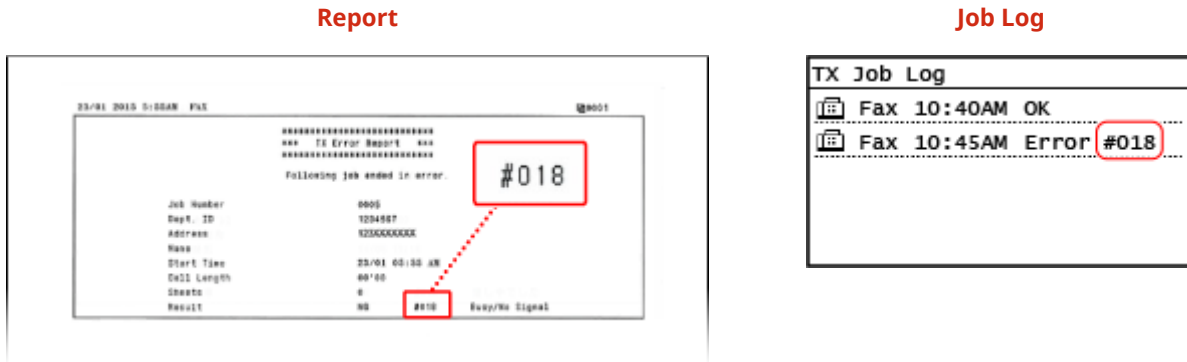

Select the error code from the list below, and check how to troubleshoot the problem.

#001 to #099

- ▶ #001(P. 643) ▶ #003(P. 643) ▶ #005(P. 644) ▶ #012(P. 644) ▶ #018(P. 644) ▶ #022(P. 644) ▶ #037(P. 645) ▶ #054(P. 645) ▶ #099(P. 645)

#701 to #799

- ▶ #703(P. 645) ▶ #752(P. 646) ▶ #753(P. 646) ▶ #755(P. 646) ▶ #766(P. 647)

#801 to #899

- ▶ #801(P. 647) ▶ #802(P. 647) ▶ #804(P. 647) ▶ #806(P. 648) ▶ #809(P. 648) ▶ #810(P. 648) ▶ #813(P. 648) ▶ #818(P. 648) ▶ #819(P. 648) ▶ #820(P. 648) ▶ #821(P. 649) ▶ #827(P. 649) ▶ #829(P. 649) ▶ #839(P. 649) ▶ #841(P. 649) ▶ #844(P. 649) ▶ #846(P. 650) ▶ #852(P. 650) ▶ #853(P. 650) ▶ #861(P. 650) ▶ #863(P. 650)

#901 to #999

- ▶ #934(P. 650) ▶ #995(P. 651)

NOTE

- If the problem persists even after trying the troubleshooting methods, contact your dealer or service representative. ▶ **If the Problem Persists(P. 652)**

#001

The original is jammed in the feeder.

Remove the Jammed Original.

- ▶ **Paper Jams in the Feeder(P. 551)**

#003

The data volume is too large to send or receive a fax.

Divide the Original or Lower the Resolution.

Cannot Send a Fax

- When sending an original with many pages, divide the original and send it.
- Change the set resolution to a lower resolution when scanning the original.

[Home] screen on the control panel ▶ [Fax] ▶ [Resolution] ▶ select the resolution.

Cannot Receive a Fax

Ask the sender to divide the original or lower the resolution and send the fax again.

#005

There was no response from the other party's device within the time limit.

Did You Specify an Overseas Destination?

You may not have been able to connect correctly to the destination. After entering the international access number or country code, enter the wait time (pause) or lower the communication start speed before sending the fax. **▶ Cannot Send a Fax to an International Destination(P. 615)**

Is the Other Party's Device Ready to Receive a Fax?

The power of the other party's device may not be turned on, or the RX Mode may not be configured correctly. Have the other party check these.

#012

The receiving device is out of paper (recording paper).
Have the other party add more paper.

#018

There was no response from the other party's device due to it being busy or another reason.

Did You Specify an Overseas Destination?

You may not have been able to connect correctly to the destination. After entering the international access number or country code, enter the wait time (pause) or lower the communication start speed before sending the fax. **▶ Cannot Send a Fax to an International Destination(P. 615)**

Is the Other Party's Device Ready to Receive a Fax?

The power of the other party's device may not be turned on, or the RX Mode may not be configured correctly. Have the other party check these.

#022

Sending of faxes from a computer is restricted. Alternatively, the destination specified as the forwarding destination may have been deleted from the Address Book.

To Cancel Restriction of Sending Faxes from a Computer, Change the [Fax TX Settings] Setting.

Log in to Remote UI in System Manager Mode ▶ [Settings/Registration] ▶ [TX Settings] ▶ [Fax TX Settings] ▶ [Edit] ▶ select the [Allow Fax Driver TX] checkbox ▶ [OK]

On the control panel, select [Menu] in the [Home] screen, and then select [Function Settings] to change the setting. **▶ [Allow Fax Driver TX](P. 492)**

Register the Forwarding Destination to the Address Book.

▶ Registering Destinations to the Address Book (Remote UI)(P. 171)

Check Whether the Fax That Could Not Be Forwarded Is Saved in the Memory.

If the fax is saved in the memory, you can try forwarding it again. **▶ Checking Faxes that Failed to Be Forwarded(P. 283)**

#037

Sending of a fax failed due to insufficient available memory or the maximum number of destinations to which a fax can be sent was exceeded. Alternatively, printing could not be performed due to the file size. If there is data waiting to be printed or sent by fax, wait until the processing is completed.

Check Received Data Saved to the Memory.

Print or forward them as needed, and delete any unnecessary data.

▶ **Viewing and Printing Faxes Saved in the Memory(P. 379)**

▶ **Checking Faxes that Failed to Be Forwarded(P. 283)**

When Sending Faxes, Divide the Original or Lower the Resolution.



- When sending an original with many pages, divide the original and send it.
- Change the set resolution to a lower resolution when scanning the original.

[Home] screen on the control panel ▶ [Fax] ▶ [Resolution] ▶ select the resolution.

When Sending a Fax Using Windows, Are You Trying to Send the Fax to Multiple Destinations?

Sending of the fax may have failed due to the maximum number of destinations that can be specified at a time was exceeded.

Use the following procedure to change the fax driver setting and increase the number of destinations that can be specified at a time.

- 1 Log on to the computer using an administrator account.
- 2 [] (Start) ▶ [] (Settings) ▶ [Devices] ▶ click [Printers & scanners]
 ▶▶ The [Printers & scanners] screen is displayed.
- 3 Select the fax driver of the machine ▶ [Manage] ▶ click [Printer properties]
 ▶▶ The fax driver properties screen is displayed.
- 4 On the [Device Settings] tab, select the [Set the number of destinations that can be specified at once to 2000] checkbox.
- 5 Click [OK].

When Printing, Reduce the File Size or Divide the File.

Optimize the file to make it smaller, or divide the file and then print it.

#054

The communication could not be established because the specified telephone number or the fax number exceeded 40 digits.

Specify a telephone number or a fax number within 40 digits.

#099

The job was canceled.

This does not indicate a malfunction. Perform the operation again, as needed.

#703

The machine does not have sufficient free memory.

Is Any Other Data Being Sent?

Wait for sending to be completed before sending again.

Are You Sending an Original with Many Pages?

Divide the original and send it.

Check the Received Faxes Saved in the Memory.

Print or forward them as needed, and delete any unnecessary faxes. ▶ **Viewing and Printing Faxes Saved in the Memory(P. 379)**

Restart the Machine, and Then Send or Save the Data Again.

▶ **Restarting the Machine(P. 114)**

#752

The SMTP/POP3 server name is not configured correctly, or the machine is not connected correctly to the network.

Configure the SMTP or POP3 Server Name Correctly.

▶ **Configuring Detailed Information of the E-mail Server (Remote UI)(P. 228)**

Check the Network Status and Settings.

If the machine is not connected to a network, reconfigure the network settings.


▶ **Checking the Network Status and Settings(P. 97)**

▶ **Setting Up the Network(P. 56)**

#753

The machine was unable to connect to the network due to a disconnected Ethernet cable.

Check That the Ethernet Cable Is Properly Connected.

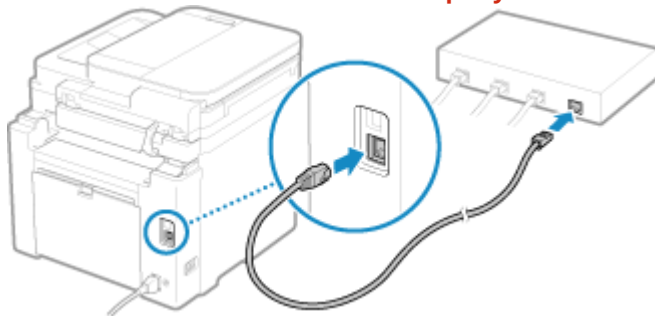

#755

The TCP/IP is not configured correctly, or the machine was unable to connect to the network due to the set wait time before connection.

Check the Network Status and Settings.

If the machine is not connected to a network, reconfigure the network settings.

▶ **Checking the Network Status and Settings(P. 97)**

▶ **Setting Up the Network(P. 56)**

Is There a Set Wait Time Before Connection?

Check whether a wait time is set.

Log in to Remote UI in System Manager Mode ▶ [Settings/Registration] ▶ [Network Settings] ▶ [Waiting Time for Connection at Startup]

On the control panel, select [Menu] in the [Home] screen, and then select [Preferences] to view this information. ▶ **[Waiting Time for Connection at Startup](P. 435)**

- If a wait time is set, a connection cannot be established immediately after turning ON the power of the machine. Sending starts after the wait time has elapsed.
- To change the wait time, click [Edit] on the above [Waiting Time for Connection at Startup] screen, enter the wait time, and then click [OK].

#766

The certificate has expired.

Renew the certificate, or use a certificate that is not expired.

▶ **Managing and Verifying a Key and Certificate(P. 360)**

Are the current date and time on the machine correct?

Check the date and time settings. If the settings are not correct, set the time zone, and then set the current date and time. ▶ **Setting the Date and Time(P. 393)**

#801

The machine cannot connect to the SMTP server, or the information of the SMTP server or shared folder is not set correctly.

Check the Network Status and Settings.

If the machine is not connected to a network, reconfigure the network settings.

▶ **Checking the Network Status and Settings(P. 97)**

▶ **Setting Up the Network(P. 56)**

Set the information of the SMTP server or shared folder correctly.

When Sending an E-mail

Set the information of the SMTP server correctly. ▶ **Configuring Detailed Information of the E-mail Server (Remote UI)(P. 228)**

When Saving to a Shared Folder

Use Remote UI to display the Address Book, click the applicable destination, and set the information of the shared folder correctly. ▶ **Registering Destinations to the Address Book (Remote UI)(P. 171)**

When Sending an E-mail, Check the Status of the SMTP Server.

- If you receive an error message from the SMTP server, check the details and take action.
- Check that the SMTP server is operating properly on the network. For details about the SMTP server status, contact your provider.

When Saving to a Shared Folder, Check the Status of the Shared Folder and Computer.

Check that both the shared folder and the computer with the shared folder are operating properly.

#802

The SMTP or POP3 server name is not set correctly.

When Sending an E-mail, Correctly Set the SMTP or POP3 Server Name.

▶ **Configuring Detailed Information of the E-mail Server (Remote UI)(P. 228)**

#804

You do not have permission to access the shared folder, or the destination is not set correctly.

Does the Sending User (User Name Registered as a Destination) Have Write Permission for the Store Location?

If the user does not have permission, grant write permission to the sending user for the store location. For details, contact the network administrator.

Set the Correct Path to the Shared Folder.

Use Remote UI to display the Address Book, click the applicable destination, and set the server name correctly. ▶ **Registering Destinations to the Address Book (Remote UI)(P. 171)**

#806

The user name or password to be used to access the shared folder is not set correctly. Alternatively, the destination of the e-mail is not set correctly.

When Saving to a Shared Folder, Correctly Set the User Name and Password to Be Used to Access the Server.

Use Remote UI to display the Address Book, click the applicable destination, and set the user name and password correctly. [▶ Registering Destinations to the Address Book \(Remote UI\)\(P. 171\)](#)

When Sending an E-mail, Specify a Correct E-Mail Address Before Sending.

When you are using a destination in the Address Book, check that the e-mail address registered in the Address Book is correct. [▶ Registering Destinations \(Address Book\)\(P. 163\)](#)

#809

The file could not be saved because a file with the same name already exists on the SMB server. Delete the file, and scan again.

#810

The machine cannot connect to the POP3 server, or the information of the POP3 server is not set correctly.

Check the Network Status and Settings.

If the machine is not connected to a network, reconfigure the network settings.

[▶ Checking the Network Status and Settings\(P. 97\)](#)

[▶ Setting Up the Network\(P. 56\)](#)

Set the information of the POP3 server correctly.

[▶ Configuring Detailed Information of the E-mail Server \(Remote UI\)\(P. 228\)](#)

Check the Status of the POP3 Server.

Check that the POP3 server is operating properly on the network. For details about the POP3 server status, contact your provider.

#813

The user name or password to be used for POP3 server authentication is not set correctly.

Set the User Name and Password Correctly.

[▶ Configuring Detailed Information of the E-mail Server \(Remote UI\)\(P. 228\)](#)

#818

The received data is in a format that cannot be printed. Have the sender change the file format and resend the file.

#819

The received data has invalid MIME information and cannot be processed. Have the sender check the settings and resend the data.

#820

The received data has invalid BASE64 or uuencode data and cannot be processed.

Have the sender check the settings and resend the data.

#821

The received data has a TIFF analysis error and cannot be processed.
Have the sender check the settings and resend the data.

#827

The received data includes unsupported MIME information and cannot be processed.
Have the sender check the settings and resend the data.

#829

The received data exceeds the maximum size that can be received by the machine.

Have the Sender Check and Resend the Data.

The machine prints or saves to memory pages 1 to 999 and deletes page 1,000 and beyond. Have the sender resend page 1,000 and beyond.

#839

The user name or password to be used for SMTP authentication is not set correctly.

Set the User Name and Password Correctly.

▶ **Configuring Detailed Information of the E-mail Server (Remote UI)(P. 228)**

#841

Communication with the SMTP server is set to be encrypted, but there is no encryption algorithm shared with the SMTP server, so encrypted communication failed. Alternatively, a verify certificate error occurred.

Check the Algorithms Supported by the SMTP Server and Those Supported by the Machine.

- For details about the algorithms supported by the SMTP server, contact your provider.
- For details about the algorithms supported by the machine, see the following:
 - ▶ **Keys and Certificates(P. 32)**

Is an Appropriate CA Certificate Registered?

Check that the CA certificate used for authentication of the SMTP server is registered to the machine. ▶
Registering a Key and Certificate or CA Certificate Obtained from an Issuing Authority(P. 366)

Check the SMTP Server Certificate.

Check that the server certificate is correct and is not a self-signed certificate.

Disable Encryption When Communicating with the SMTP Server

▶ **Configuring Detailed Information of the E-mail Server (Remote UI)(P. 228)**

#844

Communication with the POP3 server is set to be encrypted using POP authentication before sending data (POP before SMTP), but encrypted communication failed. Alternatively, a verify certificate error occurred.

Is an Appropriate CA Certificate Registered?

Check that the CA certificate used for authentication of the POP3 server is registered to the machine. ▶
Registering a Key and Certificate or CA Certificate Obtained from an Issuing Authority(P. 366)

Check the POP3 Server Certificate.

Check that the server certificate is correct and is not a self-signed certificate.

Disable Encryption When Communicating with the POP3 Server

▶ **Configuring Detailed Information of the E-mail Server (Remote UI)(P. 228)**

#846

APOP authentication is set to be used to encrypt the password at authentication using POP authentication before sending data (POP before SMTP), but APOP authentication failed.

Disable APOP Authentication.

▶ **Configuring Detailed Information of the E-mail Server (Remote UI)(P. 228)**

#852

The power of the machine turned OFF for some reason.
Make sure the power plug is firmly inserted into an outlet.

#853

Printing failed for some reason.
If the operation was canceled when print data was being sent from a computer to the machine, try printing again.
Otherwise, check the following:

Are You Printing a Large Job?

The data volume may have exceeded the processing capacity of the machine. Reduce the number of pages to print, or print when there is no print data being printed or waiting to be printed.

Is the Data to Be Printed Corrupted?

If the data is corrupted or otherwise damaged, fix the data.

#861

You are using an unsupported printer driver, or the data you are trying to print is corrupted.

Use the printer driver of the machine, and try printing again.

▶ **Printing from a Computer(P. 204)**

Is the Data to Be Printed Corrupted?

If the data is corrupted or otherwise damaged, fix the data.

#863

An error occurred, preventing printing.

Restart the Machine, and Then Print the Data Again.

▶ **Restarting the Machine(P. 114)**

#934

The job was deleted by the Auto Delete Suspended Jobs function.

Resolve the Error That Caused the Job to Be Suspended.

Resolve the error, and try printing or copying again.

* Disable the Auto Delete Suspended Jobs function, or change the time until the data is automatically deleted. ▶ **[Auto Delete Suspended Jobs](P. 463)**

#995

Sending or receiving of a waiting job was canceled.
Try sending or receiving again, as needed.

If the Problem Persists

A19R-0F5

If the problem persists even after trying the troubleshooting methods, contact your dealer or service representative.

IMPORTANT

Do not disassemble or repair the machine yourself.


- Disassembling or repairing the machine yourself may void the warranty.

Checks Before Contacting Us


 
 
- Product name (MF289dw / MF287dw / MF284dw)
- Dealer purchased from
- Details of the problem (such as operation details and their results)
- Serial number


How to Look Up the Serial Number


Touch Panel Model

 on the control panel ► [Device Status] ► [Serial Number]

5 Lines LCD Model

 on the control panel ► [Device Status] ►  ► [Serial Number] ► 

- You can also check this information using Remote UI from a computer.  **Managing the Machine from a Computer (Remote UI)(P. 394)**
- You can also check this information on the label on the back of the machine.

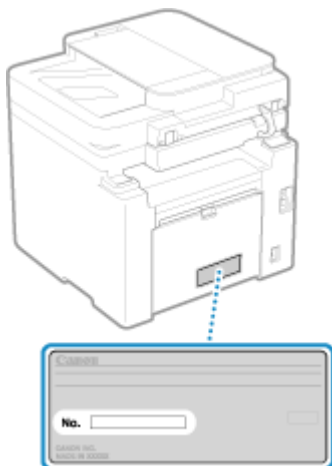

Customer Support (U.S.A.)

If you cannot solve a problem by referring to the information in this chapter, for the fastest resolution, please refer to available support materials (including the Knowledgebase FAQs and How to Video material) for your product at www.usa.canon.com.

Customer Support (Canada)

If you cannot solve a problem by referring to the information in this chapter, for the fastest resolution, please refer to available support materials (including the Knowledgebase FAQs and How to Video material) for your product at www.canon.ca/support.

Appendix

Appendix	655
Manuals of the Machine	656
Using the User's Guide	657
Operation Examples When Using a Computer	659
Environmental Information, Regulations, and Standards	669
Notice	670
Trademarks and Copyrights	671
Third-party Software	673

Appendix

A19R-0F6

In this chapter, you can view the manuals of the machine and the basic operations required when using the machine with a computer.

Manuals of the Machine

Manuals are provided according to your purpose.

▶Manuals of the Machine(P. 656)

The User's Guide (this manual) contains information on all functions of the machine and specifications as well as how to maintain the machine. You can search for specific information and change the text size and layout.

▶Using the User's Guide(P. 657)

Basic Operations When Using with a Computer

You must set up a computer to use the machine from the computer and view information set on the machine from the computer. The operations are introduced using Windows and macOS operation examples.

▶Operation Examples When Using a Computer(P. 659)

Other Information

▶Environmental Information, Regulations, and Standards(P. 669)

▶Notice(P. 670)

▶Trademarks and Copyrights(P. 671)

▶Third-party Software(P. 673)

Manuals of the Machine

A19R-0F7

The manuals below are provided with the machine. Use these according to your purpose. Click on the icon to display the corresponding manual (PDF).

Important Safety Instructions

This contains required information to prevent injury and accidental damage to property.



Setup Guide

This explains the process from unpacking the machine to setting it up so that it is ready to use.



User's Guide (this manual)

This describes all the functions of the machine in detail. It also contains the specifications and describes how to maintain the machine. The User's Guide is displayed in a Web browser.

▶ **Using the User's Guide(P. 657)**

NOTE

- For details about the drivers, software, and manual of the Application Library, see the online manual site.
<https://oip.manual.canon/>

Using the User's Guide

A19R-0F8

The User's Guide (this manual) contains information on all functions of the machine and specifications as well as how to maintain the machine.

You can use the User's Guide to find useful information through the contents and search function.

* Click [☰] or [🔍] at the top of the screen to change between contents and search keyword display.

▶ **Screens and Illustrations(P. 657)**

▶ **Symbols(P. 657)**

▶ **Key and Button Indicators(P. 658)**

▶ **Search Function(P. 658)**

NOTE

- The User's Guide describes the various functions of all model series including the machine. You can view a table indicating which functions are supported for each model. ▶ **Supported Functions(P. 3)**

Screens and Illustrations

In the User's Guide, unless otherwise stated, the following are used in the screens and illustrations.

Model

MF289dw

Computer Operating System

Windows 10

macOS 11

- The screens may vary depending on the model.
- The operations and screens may vary depending on the computer operating system.
- The screens are subject to change due to updates of the drivers and software.

Symbols

The warnings and cautions are also listed in the Important Safety Instructions supplied with the machine. See this for more information. ▶ **Manuals of the Machine(P. 656)**



Indicates a warning concerning operations that may lead to death or serious personal injury if not performed correctly. To ensure that you use the machine safely, always observe these warnings.



Indicates a precaution for preventing the risk of personal injury or property damage other than a product fault due to improper use of the machine. To ensure that you use the machine safely, always observe these cautions.



Indicates an operation that must not be performed. Read these items carefully, and make sure not to perform the described operations.



IMPORTANT

Indicates important requirements and restrictions for security and data protection as well as precautions that should be observed. Be sure to read these items to avoid malfunction, fault, or property damage due to incorrect operation.

NOTE

Indicates a clarification of an operation, or contains additional explanations for a procedure.

Key and Button Indicators

The control panel keys and buttons displayed on the screen are indicated as follows:

Control Panel Keys

Indicated with an icon.

Example: Home key



Buttons Displayed on the Control Panel and Computer Screen

Enclosed in square brackets [].

Example:

[>]

[Cancel] ► [Yes]

[Settings applied.]

Search Function

1 Click [🔍] at the top of the screen.

⇒ The search keyword input field is displayed at the top left of the screen.

2 Enter a keyword, and click [🔍] or press the [Enter] key on the computer.

- Separate multiple keywords with spaces to search for pages that include all keywords.
- Enclose keywords in double quotation marks (") to search for pages that only contain complete matches including spaces.

3 Click the search result to view the page.

- Click [🔍] to show or hide the search results.
- Click [☰] to display the contents.

Operation Examples When Using a Computer

A19R-0FA

When using the machine from a computer, you must configure the settings of the computer according to the function you are using. In addition, you may need the computer information to view the information set on the machine. In this case, use the operation examples below to check the required settings and information on the computer.


- ▶ **Creating a Shared Folder(P. 659)**
- ▶ **Enabling Network Discovery(P. 661)**
- ▶ **Displaying a Shared Printer in the Print Server(P. 661)**
- ▶ **Viewing the System Information of the Computer(P. 662)**
- ▶ **Viewing the Network Connection Information of the Computer(P. 664)**
- ▶ **Viewing the Printer Port(P. 666)**
- ▶ **Viewing Two-way Communication(P. 667)**
- ▶ **Printing a Test Page(P. 667)**

Creating a Shared Folder

- ▶ **When Using Windows(P. 659)**
- ▶ **When Using macOS(P. 660)**

■ When Using Windows

1 Create a folder in any location (such as Desktop).

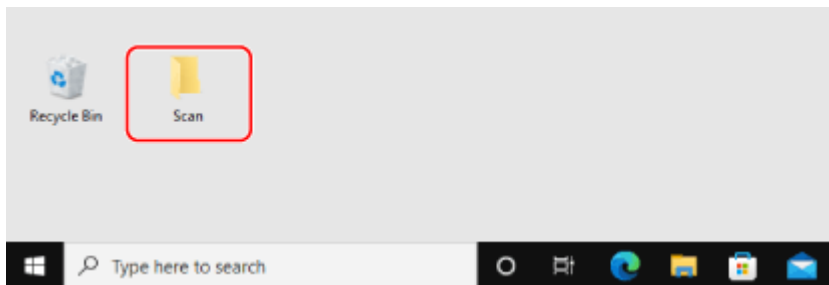


2 Right-click the created folder, and click [Properties].

3 On the [Sharing] tab, click [Advanced Sharing].

⇒ The [Advanced Sharing] screen is displayed.

4 Select the [Share this folder] checkbox, and click [Permissions].

5 Configure the access privilege.

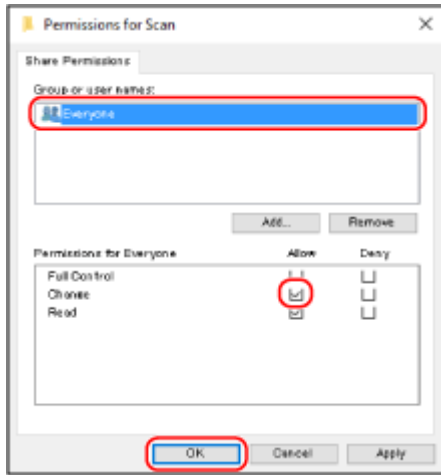

- 1 In [Group or user names], select [Everyone].
- 2 In [Permissions], select the [Allow] checkbox in [Change].
- 3 Click [OK].

6 Click [OK] ► [Close].

►► The created folder can be used as a shared folder.


■ When Using macOS

1 Click [Apple] ► [System Preferences] ► [Sharing].


►► The [Sharing] screen is displayed.

2 Select the [File Sharing] checkbox, and click [+] in [Shared Folders].

3 Create a folder in any location (such as Desktop), and click [Add].

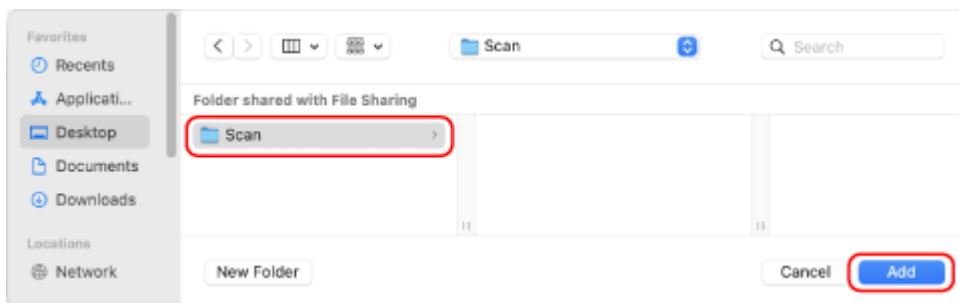

4 Configure the access privilege.

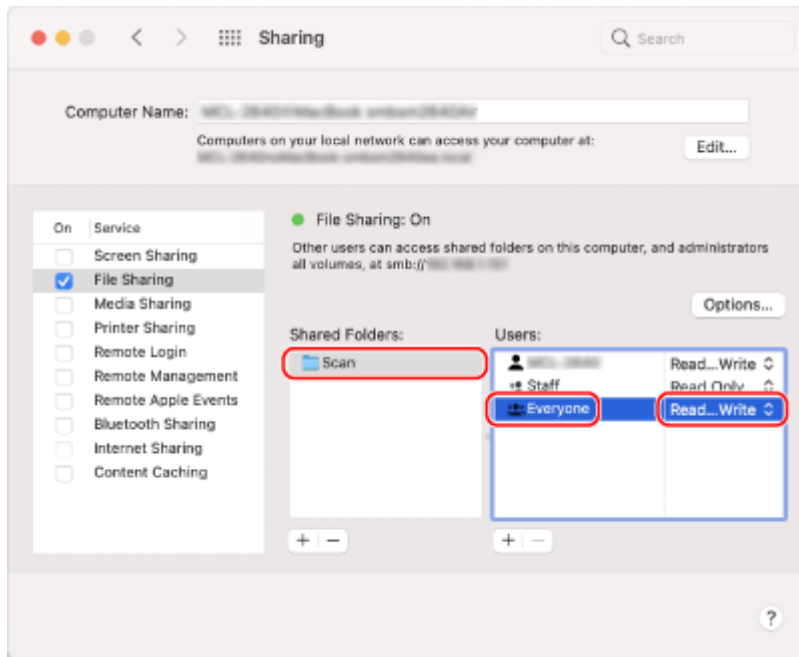

- 1 In [Shared Folders], select the created folder.
- 2 In [Users], select [Everyone] ► [Read & Write].

5 Close the screen.

►► The created folder can be used as a shared folder.

Enabling Network Discovery

1 Right-click [⊞] (Start), and click [Network Connections].

►► The [Status] screen is displayed.

2 Click [Network and Sharing Center] ► [Change advanced sharing settings].

►► The [Advanced sharing settings] screen is displayed.


3 In [Network discovery], select [Turn on network discovery], and click [Save changes].

Displaying a Shared Printer in the Print Server

- When Using Windows(P. 662)
- When Using macOS(P. 662)

■ When Using Windows

- 1 Right-click [⊞] (Start), and click [File Explorer].
- 2 In [Network], select the print server to display the shared printer.

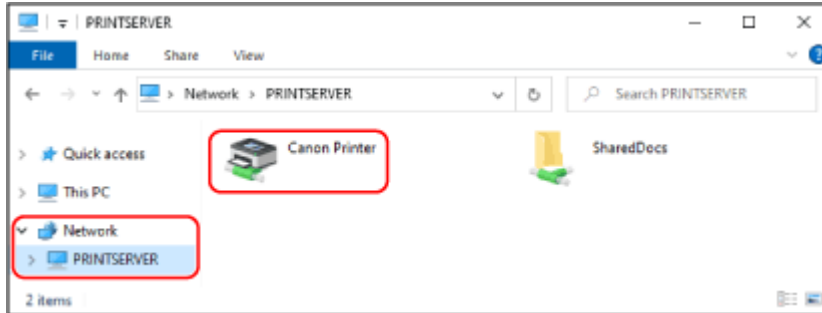

If nothing is displayed in [Network], enable network discovery. ▶ [Enabling Network Discovery\(P. 661\)](#)

■ When Using macOS


- 1 Click [🍏] ▶ [System Preferences] ▶ [Printers & Scanners].

⇒ The [Printers & Scanners] screen is displayed.

- 2 Click [+] at the bottom left.

⇒ The [Add] screen is displayed.

- 3 Click [🖨️], to display the shared printer.

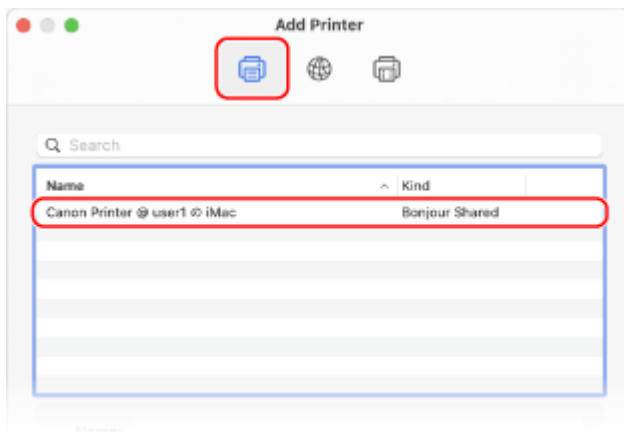

Viewing the System Information of the Computer


- ▶ [When Using Windows\(P. 663\)](#)
- ▶ [When Using macOS\(P. 663\)](#)

■ When Using Windows

1 Right-click [Start] (Windows logo), and click [System].

⇒ The [About] screen is displayed.

2 In [Device specifications], view the computer name and operating system version.

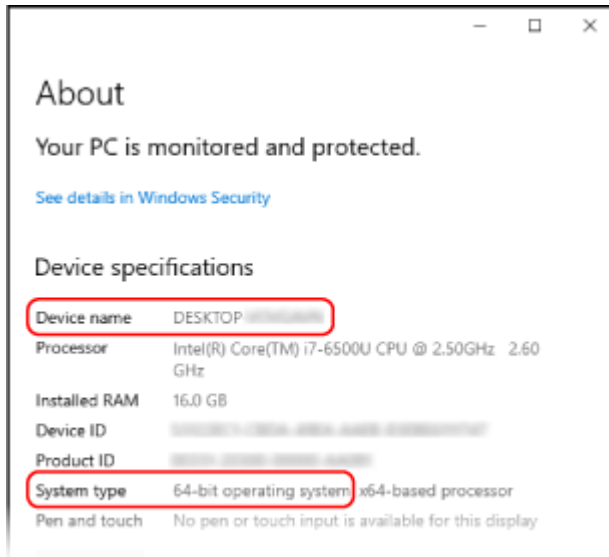

- The computer name is displayed in [Device name].
- The operating system version is displayed in [System type].
If the computer has a 32-bit operating system, "32-bit Operating System" is displayed.
If the computer has a 64-bit operating system, "64-bit Operating System" is displayed.

■ When Using macOS


1 Click [Apple logo] > [System Preferences] > [Sharing].

⇒ The [Sharing] screen is displayed.

The name displayed in [Computer Name] on the [Sharing] screen may not be usable on the network. Use the following procedure to view the computer name used on the network.

2 Click [Edit].

3 In [Local Hostname], view the computer name.

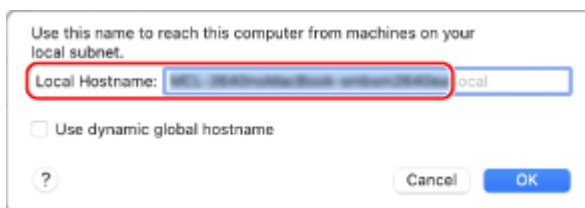

Parts displayed in gray are not included in the computer name.

4 Click [Cancel].

Viewing the Network Connection Information of the Computer

▶ When Using Windows(P. 664)

▶ When Using macOS(P. 665)

■ When Using Windows


1 Right-click [] (Start), and click [Network Connections].

⇒ The [Status] screen is displayed.

2 View the network connection information.


■ Viewing the SSID of the Wired LAN

View the SSID in [Network status].

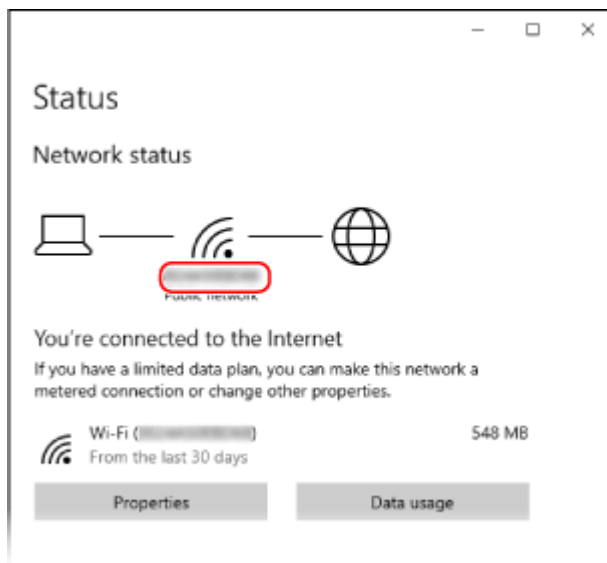

■ Viewing the IP Address and DNS Server

- 1 Click [Properties] for the connected network.
- 2 In [Properties], view the IP address and DNS server.

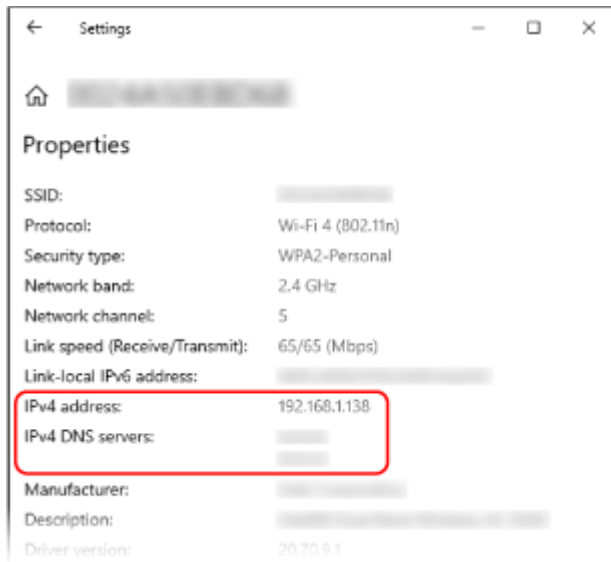


■ When Using macOS

1 Click [🍏] ► [System Preferences] ► [Network].


⇒ The [Network] screen is displayed.

2 View the IP address, DNS server, and other information.

■ For Wired LAN

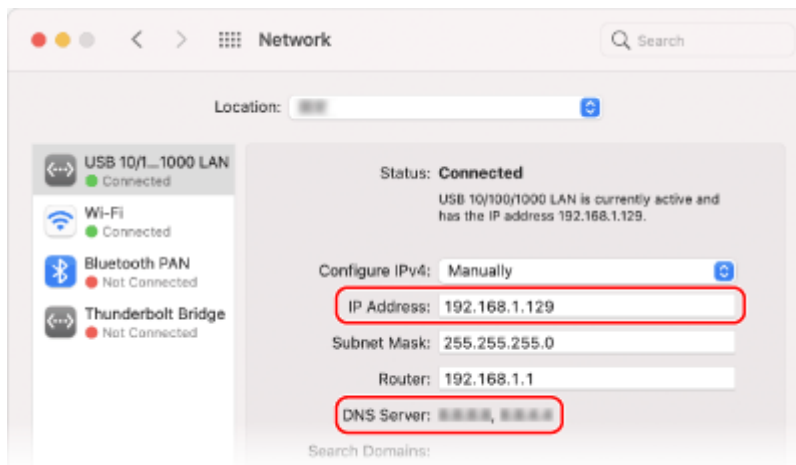

■ For Wireless LAN

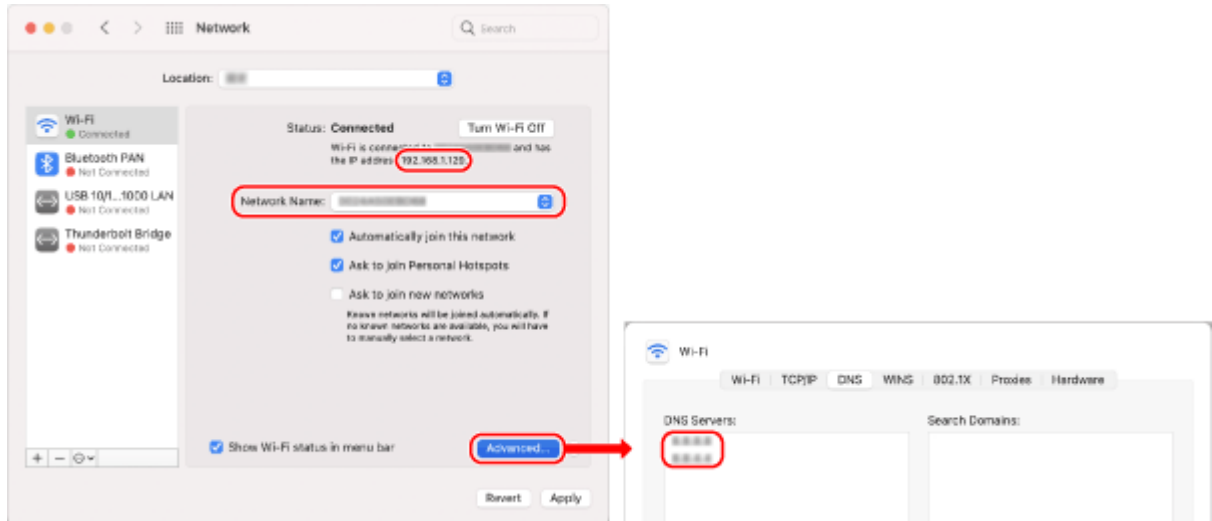

- View the SSID in [Network Name].
- View the IP address in [Status].
- Click [Advanced], and view the DNS server on the [DNS] tab.

Viewing the Printer Port


1 Click [Start] ► [Settings] ► [Devices] ► [Printers & scanners].

► The [Printers & scanners] screen is displayed.

2 Click the printer driver of the machine ► [Manage] ► [Printer properties].

► The printer driver properties screen is displayed.

3 On the [Ports] tab, view the port being used.

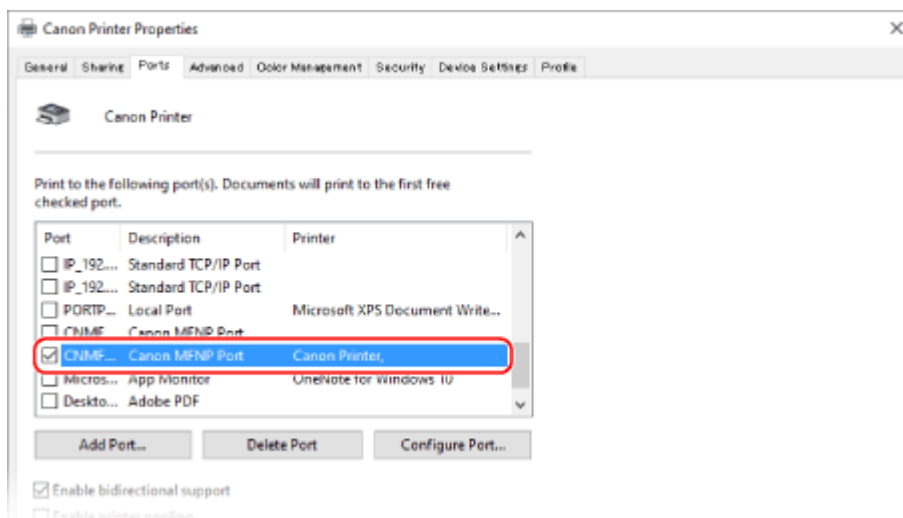

NOTE

If the IP Address of the Machine Is Changed

- The required action depends on the port you are using.
 - If [Canon MFNP Port] is displayed in [Description], the connection is maintained as long as the machine and computer belong to the same subnet, so no action is required on the computer.
 - If [Standard TCP/IP Port] is displayed in [Description], you must add a new port. [▶ Adding a Port\(P. 198\)](#)

Viewing Two-way Communication

1 Click [Start] (Start) ▶ [Settings] (Settings) ▶ [Devices] ▶ [Printers & scanners].

⇒ The [Printers & scanners] screen is displayed.

2 Click the printer driver of the machine ▶ [Manage] ▶ [Printer properties].

⇒ The printer driver properties screen is displayed.

3 On the [Ports] tab, check that the [Enable bidirectional support] checkbox is selected.

Printing a Test Page

Required Preparations

- Load Letter size paper in the drawer. [▶ Loading Paper in the Drawer\(P. 145\)](#)

[▶ When Using Windows\(P. 667\)](#)

[▶ When Using macOS\(P. 668\)](#)

■ When Using Windows

1 Click [Start] (Start) ▶ [Settings] (Settings) ▶ [Devices] ▶ [Printers & scanners].

⇒ The [Printers & scanners] screen is displayed.

2 Click the printer driver of the machine ▶ [Manage] ▶ [Printer properties].

⇒ The printer driver properties screen is displayed.

3 On the [General] tab, click [Print Test Page].

⇒ When the print data is sent correctly, a test page is printed from the machine.

■ When Using macOS

1 Click [] ▶ [System Preferences] ▶ [Printers & Scanners].

▢ The [Printers & Scanners] screen is displayed.

2 Select the machine, and click [Open Print Queue].

3 From the [Printer] menu, click [Print Test Page].

▢ When the print data is sent correctly, a test page is printed from the machine.

Environmental Information, Regulations, and Standards

A19R-0FC

■ International ENERGY STAR® program (for USA and Canada only)



The international ENERGY STAR Program is an international program that promotes energy savings in computers and other office equipment. The program backs the development and dissemination of products with functions that effectively reduce energy consumption. It is an open system in which businesses can participate voluntarily.

■ IPv6 Ready Logo



The protocol stack included in this product has obtained the IPv6 Ready Logo Phase-2 established by the IPv6 Forum.

■ When disposing of used toner cartridges

- To protect the environment and make more effective use of resources, Canon promotes the recovery and recycling of used toner cartridges. Please cooperate in the recovery of toner cartridges (resource reuse). For details on resource reuse, see the Canon website:

global.canon/ctc

When disposing of toner cartridges, pack them in their original packaging to prevent toner dispersal and dispose of the cartridges in accordance with your local government instructions.

Notice

A19R-0FE

- The information in this document is subject to change without notice.
- CANON INC. MAKES NO WARRANTY OF ANY KIND WITH REGARD TO THIS MANUAL, EITHER EXPRESS OR IMPLIED, EXCEPT AS STIPULATED HEREIN, INCLUDING WITHOUT LIMITATION THEREOF WARRANTIES AS TO MARKETABILITY, MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OF USE, OR NON-INFRINGEMENT OF PATENT RIGHTS. CANON INC. SHALL NOT BE LIABLE FOR ANY DIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY NATURE, NOR FOR LOSSES OR EXPENSES RESULTING FROM THE USE OF THIS MANUAL.
- If you are unable to view the manual in PDF format, download Adobe Acrobat Reader from the Adobe Systems website (<https://get.adobe.com/reader/>).

Trademarks and Copyrights

A19R-OFF

■ Trademarks

Adobe, Acrobat and Reader are registered trademarks of Adobe Systems Incorporated in the United States and/or other countries.

Apple, Bonjour, iPad, iPhone, iPod touch, Mac, macOS, OS X, and Safari are trademarks of Apple Inc. AirPrint and the AirPrint logo are trademarks of Apple Inc.

iOS is a trademark or registered trademark of Cisco in the U.S. and other countries and is used under license.

Mopria®, the Mopria® Logo and the Mopria® Alliance logo are registered trademarks and service marks of Mopria Alliance, Inc. in the United States and other countries. Unauthorized use is strictly prohibited.

Google Chrome, Chrome OS, Chromebook, and Android are trademarks of Google LLC.

This product contains the Universal Font Scaling Technology or UFST® under license from Monotype Imaging, Inc.

UFST® is a trademark of Monotype Imaging, Inc. registered in the United States Patent and Trademark Office and may be registered in certain jurisdictions.

UFST: Copyright © 1989 - 1996, 1997, 2003, 2004, 2008, 2014 all rights reserved, by Monotype Imaging Inc.



The PDF logo is a trademark or registered trademark of Adobe Systems Incorporated in the United States and other countries.

Copyright © 2008 Adobe Systems Incorporated. All rights reserved.

Protected by U.S. Patents 6,185,684; 6,205,549; 7,213,269; 7,272,628; 7,278,168; Patents pending in the U.S. and other countries.

All instances of the name PostScript in the text are references to the PostScript language as defined by Adobe Systems Incorporated unless otherwise stated. The name PostScript also is used as a product trademark for Adobe Systems' implementation of the PostScript language interpreter.

Except as otherwise stated, any reference to a "PostScript printing device," "PostScript display device," or similar item refers to a printing device, display device or item (respectively) that contains PostScript technology created or licensed by Adobe Systems Incorporated and not to devices or items that purport to be merely compatible with the PostScript language.

Adobe, the Adobe logo, Adobe LiveCycle® Policy Server, PostScript, the PostScript Logo, and PostScript 3 are either registered trademarks or trademarks of Adobe Systems Incorporated in the United States and/or other countries.

All other trademarks are the property of their respective owners.

All brand names and product names appearing on this document are registered trademarks or trademarks of their respective owners.

Microsoft, Excel, Microsoft 365, Microsoft Edge, Windows, Windows Mobile, and Windows Server are trademarks of the Microsoft group of companies.

■ Copyright

Unauthorized reproduction of the contents of this document in whole or in part is prohibited.

V_240207

Third-party Software

A19R-0FH

For details about third-party software, click the following icon:

Third-Party Services



Third-Party Software Included in This Manual



This Font Software is licensed under the SIL Open Font License, Version 1.1.

This license is copied below, and is also available with a FAQ at: <http://scripts.sil.org/OFL>

SIL OPEN FONT LICENSE Version 1.1 - 26 February 2007

PREAMBLE

The goals of the Open Font License (OFL) are to stimulate worldwide development of collaborative font projects, to support the font creation efforts of academic and linguistic communities, and to provide a free and open framework in which fonts may be shared and improved in partnership with others.

The OFL allows the licensed fonts to be used, studied, modified and redistributed freely as long as they are not sold by themselves. The fonts, including any derivative works, can be bundled, embedded, redistributed and/or sold with any software provided that any reserved names are not used by derivative works. The fonts and derivatives, however, cannot be released under any other type of license. The requirement for fonts to remain under this license does not apply to any document created using the fonts or their derivatives.

DEFINITIONS

"Font Software" refers to the set of files released by the Copyright Holder(s) under this license and clearly marked as such. This may include source files, build scripts and documentation.

"Reserved Font Name" refers to any names specified as such after the copyright statement(s).

"Original Version" refers to the collection of Font Software components as distributed by the Copyright Holder(s).

"Modified Version" refers to any derivative made by adding to, deleting, or substituting -- in part or in whole -- any of the components of the Original Version, by changing formats or by porting the Font Software to a new environment.

"Author" refers to any designer, engineer, programmer, technical writer or other person who contributed to the Font Software.

PERMISSION & CONDITIONS

Permission is hereby granted, free of charge, to any person obtaining a copy of the Font Software, to use, study, copy, merge, embed, modify, redistribute, and sell modified and unmodified copies of the Font Software, subject to the following conditions:

- 1) Neither the Font Software nor any of its individual components, in Original or Modified Versions, may be sold by itself.
- 2) Original or Modified Versions of the Font Software may be bundled, redistributed and/or sold with any software, provided that each copy contains the above copyright notice and this license. These can be included either as stand-alone text files, human-readable headers or in the appropriate machine-readable metadata fields within text or binary files as long as those fields can be easily viewed by the user.
- 3) No Modified Version of the Font Software may use the Reserved Font Name(s) unless explicit written permission is granted by the corresponding Copyright Holder. This restriction only applies to the primary font name as presented to the users.
- 4) The name(s) of the Copyright Holder(s) or the Author(s) of the Font Software shall not be used to promote, endorse or advertise any Modified Version, except to acknowledge the contribution(s) of the Copyright Holder(s) and the Author(s) or with their explicit written permission.
- 5) The Font Software, modified or unmodified, in part or in whole, must be distributed entirely under this license, and must not be distributed under any other license. The requirement for fonts to remain under this license does not apply to any document created using the Font Software.

TERMINATION

This license becomes null and void if any of the above conditions are not met.

DISCLAIMER

THE FONT SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO ANY WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT OF COPYRIGHT, PATENT, TRADEMARK, OR OTHER RIGHT. IN NO EVENT SHALL THE COPYRIGHT HOLDER BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, INCLUDING ANY GENERAL, SPECIAL, INDIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF THE USE OR INABILITY TO USE THE FONT SOFTWARE OR FROM OTHER DEALINGS IN THE FONT SOFTWARE.

The Software Subjected to Other License Conditions

Please refer to Contents of Software and respective License terms below, for more detail and corresponding license conditions.

Contents of Software

Names of Software	page
1.Adobe PDF Scan Library	2
2.Amazon Root CA.....	5
3. expat	11
4.Net-SNMP	12
5.wpa_suppllicant	24
6.XKCP.....	26

1. Adobe PDF Scan Library

Portions use software under the following terms:

This product contains either BSAFE and/or TPEM software by RSA Security Inc.

This product includes software developed by the Apache Software Foundation (<http://www.apache.org/>).

Copyright (c) 1998–2000 The Apache Software Foundation. All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
3. The end–user documentation included with the redistribution, if any, must include the following acknowledgment:

"This product includes software developed by the Apache Software Foundation (<http://www.apache.org/>)."

Alternately, this acknowledgment may appear in the software itself, if and wherever such third–party acknowledgments normally appear.

4. The names "Xerces" and "Apache Software Foundation" must not be used to endorse or promote products derived from this software without prior written permission. For written permission, please contact apache@apache.org.
5. Products derived from this software may not be called "Apache", nor may "Apache" appear in their name, without prior written permission of the Apache Software Foundation.

THIS SOFTWARE IS PROVIDED ``AS IS" AND ANY EXPRESSED OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE APACHE SOFTWARE FOUNDATION OR ITS CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT

(INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

This software consists of voluntary contributions made by many individuals on behalf of the Apache Software Foundation and was originally based on software copyright (c) 1999, International Business Machines, Inc., <http://www.ibm.com>. For more information on the Apache Software Foundation, please see <http://www.apache.org/>.

March 27, 2003

Portions of this product are based on Modifications created from the Original Code known as the "Sablotron XSLT Processor". The Sablotron XSLT Processor is subject to the Mozilla Public License Version 1.1 (the "License"). You may obtain a copy of the License at <http://www.mozilla.org/MPL/>

Software distributed under the License is distributed on an "AS IS" basis, WITHOUT WARRANTY OF ANY KIND, either express or implied. See the License for the specific language governing rights and limitations under the License.

The Original Code is the Sablotron XSLT Processor.

The Initial Developer of the Original Code is Ginger Alliance Ltd. Portions created by Ginger Alliance are Copyright (C) 2000 Ginger Alliance Ltd. All Rights Reserved.

Pursuant to sections 3.2 and 3.6 of the License, the Modifications created by Adobe Systems Incorporated are available as Source Code. The Modifications may be downloaded via the Internet from:

<http://partners.adobe.com/asn/tech/xml/sablotron/index.jsp>

The Original Code may be downloaded via the Internet from:

<https://sourceforge.net/projects/sablotron/>

Portions Copyright (c) 1997–1999 Silicon Graphics Computer Systems, Inc.

Permission to use, copy, modify, distribute and sell this software and its documentation for any purpose is hereby granted without fee, provided that the above copyright notice appear in all copies

and that both that copyright notice and this permission notice appear in supporting documentation. Silicon Graphics makes no representations about the suitability of this software for any purpose. It is provided "as is" without express or implied warranty.

The Loki Library

Portions Copyright (c) 2001 by Andrei Alexandrescu . This code accompanies the book: Alexandrescu, Andrei. "Modern C++ Design: Generic Programming and Design Patterns Applied".

Portions Copyright (c) 2001. Addison-Wesley. Permission to use, copy, modify, distribute and sell this software for any purpose is hereby granted without fee, provided that the above copyright notice appear in all copies and that both that copyright notice and this permission notice appear in supporting documentation. The author or Addison-Wesley Longman make no representations about the suitability of this software for any purpose. It is provided "as is" without express or implied warranty.

Updated Information/Additional Third Party Code Information available at <http://www.adobe.com/go/thirdparty> .

2. Amazon Root CA

Creative Commons Attribution–NoDerivatives 4.0 International Public License

By exercising the Licensed Rights (defined below), You accept and agree to be bound by the terms and conditions of this Creative Commons Attribution–NoDerivatives 4.0 International Public License ("Public License"). To the extent this Public License may be interpreted as a contract, You are granted the Licensed Rights in consideration of Your acceptance of these terms and conditions, and the Licensor grants You such rights in consideration of benefits the Licensor receives from making the Licensed Material available under these terms and conditions.

Section 1 – Definitions.

Adapted Material means material subject to Copyright and Similar Rights that is derived from or based upon the Licensed Material and in which the Licensed Material is translated, altered, arranged, transformed, or otherwise modified in a manner requiring permission under the Copyright and Similar Rights held by the Licensor. For purposes of this Public License, where the Licensed Material is a musical work, performance, or sound recording, Adapted Material is always produced where the Licensed Material is synched in timed relation with a moving image.

Copyright and Similar Rights means copyright and/or similar rights closely related to copyright including, without limitation, performance, broadcast, sound recording, and Sui Generis Database Rights, without regard to how the rights are labeled or categorized. For purposes of this Public License, the rights specified in Section 2(b)(1)–(2) are not Copyright and Similar Rights.

Effective Technological Measures means those measures that, in the absence of proper authority, may not be circumvented under laws fulfilling obligations under Article 11 of the WIPO Copyright Treaty adopted on December 20, 1996, and/or similar international agreements.

Exceptions and Limitations means fair use, fair dealing, and/or any other exception or limitation to Copyright and Similar Rights that applies to Your use of the Licensed Material.

Licensed Material means the artistic or literary work, database, or other material to which the Licensor applied this Public License.

Licensed Rights means the rights granted to You subject to the terms and conditions of this Public License, which are limited to all Copyright and Similar Rights that apply to Your use of the Licensed Material and that the Licensor has authority to license.

Licensor means the individual(s) or entity(ies) granting rights under this Public License.

Share means to provide material to the public by any means or process that requires permission under the Licensed Rights, such as reproduction, public display, public performance, distribution, dissemination, communication, or importation, and to make material available to the public including

in ways that members of the public may access the material from a place and at a time individually chosen by them.

Sui Generis Database Rights means rights other than copyright resulting from Directive 96/9/EC of the European Parliament and of the Council of 11 March 1996 on the legal protection of databases, as amended and/or succeeded, as well as other essentially equivalent rights anywhere in the world.

You means the individual or entity exercising the Licensed Rights under this Public License. Your has a corresponding meaning.

Section 2 – Scope.

License grant.

Subject to the terms and conditions of this Public License, the Licensor hereby grants You a worldwide, royalty-free, non-sublicensable, non-exclusive, irrevocable license to exercise the Licensed Rights in the Licensed Material to:

reproduce and Share the Licensed Material, in whole or in part; and

produce and reproduce, but not Share, Adapted Material.

Exceptions and Limitations. For the avoidance of doubt, where Exceptions and Limitations apply to Your use, this Public License does not apply, and You do not need to comply with its terms and conditions.

Term. The term of this Public License is specified in Section 6(a).

Media and formats; technical modifications allowed. The Licensor authorizes You to exercise the Licensed Rights in all media and formats whether now known or hereafter created, and to make technical modifications necessary to do so. The Licensor waives and/or agrees not to assert any right or authority to forbid You from making technical modifications necessary to exercise the Licensed Rights, including technical modifications necessary to circumvent Effective Technological Measures. For purposes of this Public License, simply making modifications authorized by this Section 2(a)(4) never produces Adapted Material.

Downstream recipients.

Offer from the Licensor – Licensed Material. Every recipient of the Licensed Material automatically receives an offer from the Licensor to exercise the Licensed Rights under the terms and conditions of this Public License.

No downstream restrictions. You may not offer or impose any additional or different terms or conditions on, or apply any Effective Technological Measures to, the Licensed Material if doing so restricts exercise of the Licensed Rights by any recipient of the Licensed Material.

No endorsement. Nothing in this Public License constitutes or may be construed as permission to assert or imply that You are, or that Your use of the Licensed Material is, connected with, or sponsored, endorsed, or granted official status by, the Licensor or others designated to receive attribution as provided in Section 3(a)(1)(A)(i).

Other rights.

Moral rights, such as the right of integrity, are not licensed under this Public License, nor are publicity, privacy, and/or other similar personality rights; however, to the extent possible, the Licensor waives and/or agrees not to assert any such rights held by the Licensor to the limited extent necessary to allow You to exercise the Licensed Rights, but not otherwise.

Patent and trademark rights are not licensed under this Public License.

To the extent possible, the Licensor waives any right to collect royalties from You for the exercise of the Licensed Rights, whether directly or through a collecting society under any voluntary or waivable statutory or compulsory licensing scheme. In all other cases the Licensor expressly reserves any right to collect such royalties.

Section 3 – License Conditions.

Your exercise of the Licensed Rights is expressly made subject to the following conditions.

Attribution.

If You Share the Licensed Material, You must:

retain the following if it is supplied by the Licensor with the Licensed Material:

identification of the creator(s) of the Licensed Material and any others designated to receive attribution, in any reasonable manner requested by the Licensor (including by pseudonym if designated);

a copyright notice;

a notice that refers to this Public License;

a notice that refers to the disclaimer of warranties;

a URI or hyperlink to the Licensed Material to the extent reasonably practicable;

indicate if You modified the Licensed Material and retain an indication of any previous modifications;

and

indicate the Licensed Material is licensed under this Public License, and include the text of, or the URI or hyperlink to, this Public License.

For the avoidance of doubt, You do not have permission under this Public License to Share Adapted Material.

You may satisfy the conditions in Section 3(a)(1) in any reasonable manner based on the medium, means, and context in which You Share the Licensed Material. For example, it may be reasonable to satisfy the conditions by providing a URI or hyperlink to a resource that includes the required information.

If requested by the Licensor, You must remove any of the information required by Section 3(a)(1)(A) to the extent reasonably practicable.

Section 4 – Sui Generis Database Rights.

Where the Licensed Rights include Sui Generis Database Rights that apply to Your use of the Licensed Material:

for the avoidance of doubt, Section 2(a)(1) grants You the right to extract, reuse, reproduce, and Share all or a substantial portion of the contents of the database, provided You do not Share Adapted Material;

if You include all or a substantial portion of the database contents in a database in which You have Sui Generis Database Rights, then the database in which You have Sui Generis Database Rights (but not its individual contents) is Adapted Material; and

You must comply with the conditions in Section 3(a) if You Share all or a substantial portion of the contents of the database.

For the avoidance of doubt, this Section 4 supplements and does not replace Your obligations under this Public License where the Licensed Rights include other Copyright and Similar Rights.

Section 5 – Disclaimer of Warranties and Limitation of Liability.

Unless otherwise separately undertaken by the Licensor, to the extent possible, the Licensor offers the Licensed Material as-is and as-available, and makes no representations or warranties of any kind concerning the Licensed Material, whether express, implied, statutory, or other. This includes, without limitation, warranties of title, merchantability, fitness for a particular purpose, non-infringement, absence of latent or other defects, accuracy, or the presence or absence of errors, whether or not known or discoverable. Where disclaimers of warranties are not allowed in full or in part, this disclaimer may not apply to You.

To the extent possible, in no event will the Licensor be liable to You on any legal theory (including, without limitation, negligence) or otherwise for any direct, special, indirect, incidental, consequential, punitive, exemplary, or other losses, costs, expenses, or damages arising out of this Public License or use of the Licensed Material, even if the Licensor has been advised of the possibility of such losses, costs, expenses, or damages. Where a limitation of liability is not allowed in full or in part, this limitation may not apply to You.

The disclaimer of warranties and limitation of liability provided above shall be interpreted in a manner that, to the extent possible, most closely approximates an absolute disclaimer and waiver of all liability.

Section 6 – Term and Termination.

This Public License applies for the term of the Copyright and Similar Rights licensed here. However, if You fail to comply with this Public License, then Your rights under this Public License terminate automatically.

Where Your right to use the Licensed Material has terminated under Section 6(a), it reinstates:

automatically as of the date the violation is cured, provided it is cured within 30 days of Your discovery of the violation; or

upon express reinstatement by the Licensor.

For the avoidance of doubt, this Section 6(b) does not affect any right the Licensor may have to seek remedies for Your violations of this Public License.

For the avoidance of doubt, the Licensor may also offer the Licensed Material under separate terms or conditions or stop distributing the Licensed Material at any time; however, doing so will not terminate this Public License.

Sections 1, 5, 6, 7, and 8 survive termination of this Public License.

Section 7 – Other Terms and Conditions.

The Licensor shall not be bound by any additional or different terms or conditions communicated by You unless expressly agreed.

Any arrangements, understandings, or agreements regarding the Licensed Material not stated herein are separate from and independent of the terms and conditions of this Public License.

Section 8 – Interpretation.

For the avoidance of doubt, this Public License does not, and shall not be interpreted to, reduce, limit, restrict, or impose conditions on any use of the Licensed Material that could lawfully be made without permission under this Public License.

To the extent possible, if any provision of this Public License is deemed unenforceable, it shall be automatically reformed to the minimum extent necessary to make it enforceable. If the provision cannot be reformed, it shall be severed from this Public License without affecting the enforceability of the remaining terms and conditions.

No term or condition of this Public License will be waived and no failure to comply consented to unless expressly agreed to by the Licensor.

Nothing in this Public License constitutes or may be interpreted as a limitation upon, or waiver of, any privileges and immunities that apply to the Licensor or You, including from the legal processes of any jurisdiction or authority.

Creative Commons is not a party to its public licenses. Notwithstanding, Creative Commons may elect to apply one of its public licenses to material it publishes and in those instances will be considered the “Licensor.” The text of the Creative Commons public licenses is dedicated to the public domain under the CC0 Public Domain Dedication. Except for the limited purpose of indicating that material is shared under a Creative Commons public license or as otherwise permitted by the Creative Commons policies published at creativecommons.org/policies, Creative Commons does not authorize the use of the trademark “Creative Commons” or any other trademark or logo of Creative

Commons without its prior written consent including, without limitation, in connection with any unauthorized modifications to any of its public licenses or any other arrangements, understandings, or agreements concerning use of licensed material. For the avoidance of doubt, this paragraph does not form part of the public licenses.

Creative Commons may be contacted at creativecommons.org.

3. expat

Copyright (c) 1998, 1999, 2000 Thai Open Source Software Center Ltd
and Clark Cooper

Copyright (c) 2001, 2002, 2003, 2004, 2005, 2006 Expat maintainers.

Permission is hereby granted, free of charge, to any person obtaining a copy of this software and associated documentation files (the "Software"), to deal in the Software without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, sublicense, and/or sell copies of the Software, and to permit persons to whom the Software is furnished to do so, subject to the following conditions:

The above copyright notice and this permission notice shall be included in all copies or substantial portions of the Software.

THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT. IN NO EVENT SHALL THE AUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.

4.Net-SNMP

Various copyrights apply to this package, listed in various separate parts below. Please make sure that you read all the parts.

----- Part 1: CMU/UCD copyright notice: (BSD like) -----

Copyright 1989, 1991, 1992 by Carnegie Mellon University

Derivative Work - 1996, 1998-2000

Copyright 1996, 1998-2000 The Regents of the University of California

All Rights Reserved

Permission to use, copy, modify and distribute this software and its documentation for any purpose and without fee is hereby granted, provided that the above copyright notice appears in all copies and that both that copyright notice and this permission notice appear in supporting documentation, and that the name of CMU and The Regents of the University of California not be used in advertising or publicity pertaining to distribution of the software without specific written permission.

CMU AND THE REGENTS OF THE UNIVERSITY OF CALIFORNIA DISCLAIM ALL WARRANTIES WITH REGARD TO THIS SOFTWARE, INCLUDING ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS. IN NO EVENT SHALL CMU OR THE REGENTS OF THE UNIVERSITY OF CALIFORNIA BE LIABLE FOR ANY SPECIAL, INDIRECT OR CONSEQUENTIAL DAMAGES OR ANY DAMAGES WHATSOEVER RESULTING FROM THE LOSS OF USE, DATA OR PROFITS, WHETHER IN AN ACTION OF CONTRACT, NEGLIGENCE OR OTHER TORTIOUS ACTION, ARISING OUT OF OR IN CONNECTION WITH THE USE OR PERFORMANCE OF THIS SOFTWARE.

----- Part 2: Networks Associates Technology, Inc copyright notice (BSD) -----

Copyright (c) 2001-2003, Networks Associates Technology, Inc

All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- * Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- * Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- * Neither the name of the Networks Associates Technology, Inc nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT HOLDERS OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

----- Part 3: Cambridge Broadband Ltd. copyright notice (BSD) -----

Portions of this code are copyright (c) 2001-2003, Cambridge Broadband Ltd.
All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- * Redistributions of source code must retain the above copyright notice,

this list of conditions and the following disclaimer.

- * Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- * The name of Cambridge Broadband Ltd. may not be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDER "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT HOLDER BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

----- Part 4: Sun Microsystems, Inc. copyright notice (BSD) -----

Copyright (c) 2003 Sun Microsystems, Inc., 4150 Network Circle, Santa Clara, California 95054, U.S.A. All rights reserved.

Use is subject to license terms below.

This distribution may include materials developed by third parties.

Sun, Sun Microsystems, the Sun logo and Solaris are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- * Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- * Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- * Neither the name of the Sun Microsystems, Inc. nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT HOLDERS OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

----- Part 5: Sparta, Inc copyright notice (BSD) -----

Copyright (c) 2003–2013, Sparta, Inc
 All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- * Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- * Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.

- * Neither the name of Sparta, Inc nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT HOLDERS OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

----- Part 6: Cisco/BUPTNIC copyright notice (BSD) -----

Copyright (c) 2004, Cisco, Inc and Information Network
Center of Beijing University of Posts and Telecommunications.
All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- * Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- * Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- * Neither the name of Cisco, Inc, Beijing University of Posts and Telecommunications, nor the names of their contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS ``AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT HOLDERS OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

----- Part 7: Fabasoft R&D Software GmbH & Co KG copyright notice (BSD) -----

Copyright (c) Fabasoft R&D Software GmbH & Co KG, 2003

oss@fabasoft.com

Author: Bernhard Penz <bernhard.penz@fabasoft.com>

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- * Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- * Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- * The name of Fabasoft R&D Software GmbH & Co KG or any of its subsidiaries, brand or product names may not be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDER ``AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT HOLDER BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF

SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

----- Part 8: Apple Inc. copyright notice (BSD) -----

Copyright (c) 2007 Apple Inc. All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
3. Neither the name of Apple Inc. ("Apple") nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY APPLE AND ITS CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL APPLE OR ITS CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

----- Part 9: ScienceLogic, LLC copyright notice (BSD) -----

Copyright (c) 2009, ScienceLogic, LLC
All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- * Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- * Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- * Neither the name of ScienceLogic, LLC nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS
`AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT
LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR
A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT
HOLDERS OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT,
INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING,
BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS
OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND
ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR
TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE
USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH
DAMAGE.

----- Part 10: Lennart Poettering copyright notice (BSD-like) -----

Copyright 2010 Lennart Poettering

Permission is hereby granted, free of charge, to any person
obtaining a copy of this software and associated documentation files

(the "Software"), to deal in the Software without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, sublicense, and/or sell copies of the Software, and to permit persons to whom the Software is furnished to do so, subject to the following conditions:

The above copyright notice and this permission notice shall be included in all copies or substantial portions of the Software.

THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT. IN NO EVENT SHALL THE AUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.

----- Part 11: IETF copyright notice (BSD) -----

Copyright (c) 2013 IETF Trust and the persons identified as authors of the code. All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- * Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- * Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- * Neither the name of Internet Society, IETF or IETF Trust, nor the names of specific contributors, may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT OWNER OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

----- Part 12: Arista Networks copyright notice (BSD) -----

Copyright (c) 2013, Arista Networks, Inc.
All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- * Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- * Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- * Neither the name of Arista Networks, Inc. nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT HOLDERS OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT,

INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

----- Part 13: VMware, Inc. copyright notice (BSD) -----

Copyright (c) 2016, VMware, Inc.
All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- * Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- * Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- * Neither the name of VMware, Inc. nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT HOLDERS OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

----- Part 14: USC/Information Sciences Institute copyright notice (BSD) -----

Copyright (c) 2017–2018, Information Sciences Institute
All rights reserved.

Redistribution and use in source and binary forms, with or without
modification, are permitted provided that the following conditions are met:

- * Redistributions of source code must retain the above copyright notice,
this list of conditions and the following disclaimer.
- * Redistributions in binary form must reproduce the above copyright
notice, this list of conditions and the following disclaimer in the
documentation and/or other materials provided with the distribution.
- * Neither the name of Information Sciences Institute nor the names of its
contributors may be used to endorse or promote products derived from
this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT HOLDERS OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

5.wpa_suppllicant

Copyright (c) 2002–2022, Jouni Malinen <j@w1.fi> and contributors
All Rights Reserved.

These programs are licensed under the BSD license (the one with advertisement clause removed).

If you are submitting changes to the project, please see CONTRIBUTIONS file for more instructions.

This package may include either wpa_suppllicant, hostapd, or both. See README file respective subdirectories (wpa_suppllicant/README or hostapd/README) for more details.

Source code files were moved around in v0.6.x releases and compared to earlier releases, the programs are now built by first going to a subdirectory (wpa_suppllicant or hostapd) and creating build configuration (.config) and running 'make' there (for Linux/BSD/cygwin builds).

License

This software may be distributed, used, and modified under the terms of BSD license:

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright

notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.

3. Neither the name(s) of the above-listed copyright holder(s) nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT OWNER OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

6.XKCP

Implementation by the Keccak Team, namely, Guido Bertoni, Joan Daemen,
#Michael Peeters, Gilles Van Assche and Ronny Van Keer,
#hereby denoted as "the implementer".

To the extent possible under law, the implementer has waived all copyright
and related or neighboring rights to the source code in this file.

<http://creativecommons.org/publicdomain/zero/1.0/>