

Troubleshooting information

If you have a problem setting up or using your monitor, you might be able to solve it yourself. Before calling your dealer or Lenovo, try the suggested actions that are appropriate to your problem.

Problem	Possible cause	Suggested action
The power indicator is not lit and there is no image.	• The monitor's power switch is not switched on. • The power cord is loose or disconnected. • There is no power at the outlet.	• Be sure the power cord is connected properly. • Be sure the outlet has power. • Power on the monitor. • Try using another power outlet. • Try using another electrical outlet.
The power indicator is green, but there is no image.	The video signal cable is loose or disconnected from the system or monitor.	Be sure the video signal is connected with the system properly.
	The monitor brightness and contrast levels are at the lowest settings.	Adjust the brightness and contrast settings on the OSD (On Screen Display) menu.
The image quality is unacceptable.	The video signal cable is not firmly plugged into the system or system completely.	Be sure the signal cable is firmly plugged into the system.
	The color settings may be incorrect.	Select another color setting from the OSD menu.
	The automatic image setup function was not performed.	Perform automatic image setup.
There is a screen message that reads "Out of range" or "H2T".	The system is set to a display mode which is not supported by this monitor.	• If you are replacing an old monitor, reconnect it and adjust the display mode for your new monitor. • If using a Windows system, reset the system in safe mode, then select a supported display mode for your monitor. • If these options do not work, contact the Support Center.
There is no image and the power on indicator is flashing green.		

For additional troubleshooting information, please refer to the User's Guide.

Si un incident se produit lors de la configuration ou de l'utilisation de votre moniteur, vous pouvez peut-être le résoudre vous-même. Avant d'appeler votre revendeur ou Lenovo, essayez d'effectuer les actions préconisées correspondant à l'incident.

Table 2-2 Identification des incidents

Incident	Cause possible	Action préconisée
Le voyant d'alimentation n'est pas allumé et aucun image n'est affichée.	• L'interrupteur d'alimentation du moniteur n'est pas allumé. • Le cordon d'alimentation est mal connecté ou débranché. • La prise de courant n'est pas alimentée en électricité.	• Assurez-vous que le cordon d'alimentation est bien connecté. • Assurez-vous que la prise de courant est alimentée. • Mettez le moniteur sous tension. • Essayez un autre cordon d'alimentation. • Essayez une autre prise de courant.
Le voyant d'alimentation est vert, mais aucun image n'est affichée.	Le câble d'interface vidéo est mal connecté ou il est débranché du système ou du moniteur.	Vérifiez la connexion du câble d'interface vidéo au système.
	La luminosité ou le contraste du moniteur sont réglés au plus bas.	Régler la luminosité et le contraste à l'aide du menu OSD (On Screen Display).
La qualité de l'image n'est pas acceptable.	Le câble d'interface vidéo n'est pas bien connecté au moniteur ou au système.	Vérifiez la connexion du câble d'interface vidéo au moniteur et au système.
	Les paramètres de couleur sont peut-être incorrects.	Sélectionner un autre paramètre de couleur à partir du menu OSD.
	Le réglage automatique de l'image n'a pas été effectué.	Effectuez un réglage automatique de l'image.
Le message "Out of range" or "H2T" s'affiche à l'écran.	Le système est configuré pour un mode d'affichage qui n'est pas pris en charge par le moniteur.	• Si vous remplacez un ancien moniteur, reconnectez-le et réglez le mode d'affichage en tenant compte de la plage spécifiée pour le nouveau moniteur.
Il n'y a pas d'image et le voyant d'alimentation est vert et clignote.		

Pour plus d'informations sur la résolution des incidents, consultez le Guide d'utilisation.

Problem	Possible cause	Suggested action
The Betriebsanzeige leuchtet nicht, und es wird kein Bild angezeigt.	• Der Netzschalter des Bildschirms ist nicht eingeschlossen ist. • Das Netzkabel ist nicht fest oder ist abgezogen. • Die Netzsteckdose wird nicht mit Strom versorgt.	• Vergewissern Sie sich, dass das Netzkabel ordnungsgemäß eingeschlossen ist. • Vergewissern Sie sich, dass die Netzsteckdose mit Strom versorgt wird. • Schalten Sie den Bildschirm ein. • Prüfen Sie, ob Sie ein anderes Netzkabel aus. • Prüfen Sie eine andere Netzsteckdose aus.
Die Betriebsanzeige leuchtet grün, es wird jedoch kein Bild angezeigt.	Das Bildschirmkabel ist nicht richtig fest oder ist vom System oder vom Bildschirm abgeschossen.	Vergewissern Sie sich, dass das Bildschirmkabel ordnungsgemäß an das System angeschlossen ist.
	Die Einstellungen für Helligkeit und Kontrast befinden sich auf der niedrigsten Stufe.	Passen Sie die Einstellungen für Helligkeit und Kontrast über das Menü für die Anzeige am Bildschirm an.
Die Bildqualität ist nicht akzeptabel.	Das Bildschirmkabel ist nicht ordnungsgemäß an das System und dem Bildschirm verbunden ist.	Vergewissern Sie sich, dass das Signalkabel fest mit dem System und dem Bildschirm verbunden ist.
	Möglicheweise sind die Farbeeinstellungen falsch.	Wählen Sie im Menü für die Anzeige am Bildschirm eine andere Farbeinstellung aus.
Es wird die Nachricht "Out of range" (außerhalb des zulässigen Bereichs) oder "H2T" angezeigt.	Für das System ist ein Anzeigemodus eingestellt, der von diesem Bildschirm nicht unterstützt wird.	• Wenn Sie einen alten Anzeigemonitor austauschen, schließen Sie den neuen Bildschirm an, und passen Sie den Anzeigemodus an den für den neuen Bildschirm angegebenen Bereichs. • Wenn Sie ein Windows-System verwenden, starten Sie das System erneut im gesicherten Modus, und wählen Sie dann einen unterstützten Anzeigemodus für Ihren Bildschirm. • Wenn diese Optionen nicht funktionieren, wenden Sie sich an das Lenovo Support Center.
Es wird keine Nachricht "Out of range" (außerhalb des zulässigen Bereichs) oder "H2T" angezeigt, und der Anzeiger blinkt grün.		

Problem	Possible Cause	Suggested Action
O indicador de energia não está aceso e não há nenhuma imagem.	• O computador de energia do monitor não está ligado. • O cabo de alimentação está solto ou desconectado. • Não há energia na tomada.	• Certifique-se de que o cabo de alimentação esteja ligado corretamente. • Certifique-se de que a tomada tenha energia. • Ligue o monitor. • Tente utilizar outro cabo de alimentação. • Tente utilizar outra tomada.
O indicador de energia está verde, mas não há nenhuma imagem.	O cabo de sinal do vídeo está solto ou desconectado do sistema ou do monitor.	Certifique-se de que o sinal de vídeo esteja conectado corretamente ao sistema.
	Os níveis de brilho e contraste do monitor estão na definição mais baixa.	Ajuste a definição de brilho e contraste no menu OSD (On Screen Display).
A qualidade da imagem é inaceitável.	O cabo de sinal do vídeo não está conectado corretamente ao sistema ou ao sistema.	Certifique-se de que o cabo de sinal esteja firmemente conectado ao sistema e ao monitor.
	As definições de cor podem estar incorretas.	Selecione outra definição de cor no menu OSD (On Screen Display).
	A função de configuração automática de imagem não foi executada.	Execute a configuração automática de imagem.
Há uma mensagem na tela que informa "Fora do intervalo" ou "H2T".	O sistema está definido como um modo de exibição que não é suportado pelo monitor.	Se o usuário estiver substituindo um monitor antigo, reconecte-o e ajuste o modo de exibição dentro do intervalo especificado para o novo monitor.
Não há nenhuma imagem e o novo monitor está piscando em verde.		

Problem	Possible Cause	Suggested Action
Die Betriebsanzeige leuchtet nicht, und es wird kein Bild angezeigt.	• Der Netzschalter des Bildschirms ist nicht eingeschlossen. • Das Netzkabel ist nicht fest oder ist abgezogen. • Die Netzsteckdose wird nicht mit Strom versorgt.	• Vergewissern Sie sich, dass das Netzkabel ordnungsgemäß eingeschlossen ist. • Vergewissern Sie sich, dass die Netzsteckdose mit Strom versorgt wird. • Schalten Sie den Bildschirm ein. • Prüfen Sie, ob Sie ein anderes Netzkabel aus. • Prüfen Sie eine andere Netzsteckdose aus.
Die Betriebsanzeige leuchtet grün, es wird jedoch kein Bild angezeigt.	Das Bildschirmkabel ist nicht richtig fest oder ist vom System oder vom Bildschirm abgeschossen.	Vergewissern Sie sich, dass das Bildschirmkabel ordnungsgemäß an das System angeschlossen ist.
	Die Einstellungen für Helligkeit und Kontrast befinden sich auf der niedrigsten Stufe.	Passen Sie die Einstellungen für Helligkeit und Kontrast über das Menü für die Anzeige am Bildschirm an.
Die Bildqualität ist nicht akzeptabel.	Das Bildschirmkabel ist nicht ordnungsgemäß an das System und dem Bildschirm verbunden ist.	Vergewissern Sie sich, dass das Signalkabel fest mit dem System und dem Bildschirm verbunden ist.
	Möglicheweise sind die Farbeeinstellungen falsch.	Wählen Sie im Menü für die Anzeige am Bildschirm eine andere Farbeinstellung aus.
Es wird die Nachricht "Out of range" (außerhalb des zulässigen Bereichs) oder "H2T" angezeigt.	Für das System ist ein Anzeigemodus eingestellt, der von diesem Bildschirm nicht unterstützt wird.	• Wenn Sie einen alten Anzeigemonitor austauschen, schließen Sie den neuen Bildschirm an, und passen Sie den Anzeigemodus an den für den neuen Bildschirm angegebenen Bereichs. • Wenn Sie ein Windows-System verwenden, starten Sie das System erneut im gesicherten Modus, und wählen Sie dann einen unterstützten Anzeigemodus für Ihren Bildschirm. • Wenn diese Optionen nicht funktionieren, wenden Sie sich an das Lenovo Support Center.
Es wird keine Nachricht "Out of range" (außerhalb des zulässigen Bereichs) oder "H2T" angezeigt, und der Anzeiger blinkt grün.		

Problem	Possible Cause	Suggested Action
Le voyant d'alimentation n'est pas allumé et aucun image n'est affichée.	• L'interrupteur d'alimentation du moniteur n'est pas allumé. • Le cordon d'alimentation est mal connecté ou débranché. • La prise de courant n'est pas alimentée en électricité.	• Assurez-vous que le cordon d'alimentation est bien connecté. • Assurez-vous que la prise de courant est alimentée. • Mettez le moniteur sous tension. • Essayez un autre cordon d'alimentation. • Essayez une autre prise de courant.
Le voyant d'alimentation est vert, mais aucun image n'est affichée.	Le câble d'interface vidéo est mal connecté ou il est débranché du système ou du moniteur.	Vérifiez la connexion du câble d'interface vidéo au système.
	La luminosité ou le contraste du moniteur sont réglés au plus bas.	Régler la luminosité et le contraste à l'aide du menu OSD (On Screen Display).
La qualité de l'image n'est pas acceptable.	Le câble d'interface vidéo n'est pas bien connecté au moniteur ou au système.	Vérifiez la connexion du câble d'interface vidéo au moniteur et au système.
	Les paramètres de couleur sont peut-être incorrects.	Sélectionner un autre paramètre de couleur à partir du menu OSD.
	Le réglage automatique de l'image n'a pas été effectué.	Effectuez un réglage automatique de l'image.
Le message "Out of range" or "H2T" s'affiche à l'écran.	Le système est configuré pour un mode d'affichage qui n'est pas pris en charge par le moniteur.	• Si vous remplacez un ancien moniteur, reconnectez-le et réglez le mode d'affichage en tenant compte de la plage spécifiée pour le nouveau moniteur.
Il n'y a pas d'image et le voyant d'alimentation est vert et clignote.		

Problem	Possible Cause	Suggested Action
There is a screen message that reads "Out of range" or "H2T".	The system is set to a display mode which is not supported by this monitor.	• If you are replacing an old monitor, reconnect it and adjust the display mode for your new monitor. • If using a Windows system, reset the system in safe mode, then select a supported display mode for your monitor. • If these options do not work, contact the Support Center.
There is no image and the power on indicator is flashing green.		

Problem	Possible Cause	Suggested Action
There is a screen message that reads "Out of range" or "H2T".	The system is set to a display mode which is not supported by this monitor.	• If you are replacing an old monitor, reconnect it and adjust the display mode for your new monitor. • If using a Windows system, reset the system in safe mode, then select a supported display mode for your monitor. • If these options do not work, contact the Support Center.
There is no image and the power on indicator is flashing green.		

Problem	Possible Cause	Suggested Action
There is a screen message that reads "Out of range" or "H2T".	The system is set to a display mode which is not supported by this monitor.	• If you are replacing an old monitor, reconnect it and adjust the display mode for your new monitor. • If using a Windows system, reset the system in safe mode, then select a supported display mode for your monitor. • If these options do not work, contact the Support Center.
There is no image and the power on indicator is flashing green.		

Problem	Possible Cause	Suggested Action
There is a screen message that reads "Out of range" or "H2T".	The system is set to a display mode which is not supported by this monitor.	• If you are replacing an old monitor, reconnect it and adjust the display mode for your new monitor. • If using a Windows system, reset the system in safe mode, then select a supported display mode for your monitor. • If these options do not work, contact the Support Center.
There is no image and the power on indicator is flashing green.		

Problem	Possible Cause	Suggested Action
There is a screen message that reads "Out of range" or "H2T".	The system is set to a display mode which is not supported by this monitor.	• If you are replacing an old monitor, reconnect it and adjust the display mode for your new monitor. • If using a Windows system, reset the system in safe mode, then select a supported display mode for your monitor. • If these options do not work, contact the Support Center.
There is no image and the power on indicator is flashing green.		

Problem	Possible Cause	Suggested Action
There is a screen message that reads "Out of range" or "H2T".	The system is set to a display mode which is not supported by this monitor.	• If you are replacing an old monitor, reconnect it and adjust the display mode for your new monitor. • If using a Windows system, reset the system in safe mode, then select a supported display mode for your monitor. • If these options do not work, contact the Support Center.
There is no image and the power on indicator is flashing green.		

Problem	Possible Cause	Suggested Action
There is a screen message that reads "Out of range" or "H2T".	The system is set to a display mode which is not supported by this monitor.	• If you are replacing an old monitor, reconnect it and adjust the display mode for your new monitor. • If using a Windows system, reset the system in safe mode, then select a supported display mode for your monitor. • If these options do not work, contact the Support Center.
There is no image and the power on indicator is flashing green.		

Problem	Possible Cause	Suggested Action
There is a screen message that reads "Out of range" or "H2T".	The system is set to a display mode which is not supported by this monitor.	• If you are replacing an old monitor, reconnect it and adjust the display mode for your new monitor. • If using a Windows system, reset the system in safe mode, then select a supported display mode for your monitor. • If these options do not work, contact the Support Center.
There is no image and the power on indicator is flashing green.		

Problem	Possible Cause	Suggested Action
There is a screen message that reads "Out of range" or "H2T".	The system is set to a display mode which is not supported by this monitor.	• If you are replacing an old monitor, reconnect it and adjust the display mode for your new monitor. • If using a Windows system, reset the system in safe mode, then select a supported display mode for your monitor. • If these options do not work, contact the Support Center.
There is no image and the power on indicator is flashing green.		

Problem	Possible Cause	Suggested Action
There is a screen message that reads "Out of range" or "H2T".	The system is set to a display mode which is not supported by this monitor.	• If you are replacing an old monitor, reconnect it and adjust the display mode for your new monitor. • If using a Windows system, reset the system in safe mode, then select a supported display mode for your monitor. • If these options do not work, contact the Support Center.
There is no image and the power on indicator is flashing green.		

Problem	Possible Cause	Suggested Action
There is a screen message that reads "Out of range" or "H2T".	The system is set to a display mode which is not supported by this monitor.	• If you are replacing an old monitor, reconnect it and adjust the display mode for your new monitor. • If using a Windows system, reset the system in safe mode, then select a supported display mode for your monitor. • If these options do not work, contact the Support Center.
There is no image and the power on indicator is flashing green.		

Problem	Possible Cause	Suggested Action
There is a screen message that reads "Out of range" or "H2T".	The system is set to a display mode which is not supported by this monitor.	• If you are replacing an old monitor, reconnect it and adjust the display mode for your new monitor. • If using a Windows system, reset the system in safe mode, then select a supported display mode for your monitor. • If these options do not work, contact the Support Center.
There is no image and the power on indicator is flashing green.		

Si tiene un problema a la hora de configurar o utilizar el monitor, es posible que pueda solucionarlo usted mismo. Antes de llamar a su concesionario o a Lenovo, intente llevar a cabo las acciones sugeridas que correspondan a su problema.

Problema	Causa posible	Acción sugerida
El indicador de alimentación no está encendido y no hay ninguna imagen.	• El interruptor de alimentación del monitor no está encendido. • El cable de alimentación está suelto o desconectado. • No llega energía a la toma de alimentación.	• Asegúrese de que el cable de alimentación esté bien conectado. • Asegúrese de que llegue energía a la toma de alimentación. • Encienda el monitor. • Intente utilizar otro cable de alimentación. • Intente utilizar otra toma de alimentación eléctrica.
El indicador de alimentación está de color verde pero no hay ninguna imagen.	El cable de señal de vídeo está suelto o desconectado del sistema o del monitor.	Asigne de que el cable de señal de vídeo este bien conectado al sistema.
	Los niveles de brillo y contraste del monitor están en el valor mínimo.	Ajuste los niveles de brillo y contraste del OSD (On Screen Display - Visualización por pantalla).
La calidad de la imagen no es aceptable.	El cable de señal de vídeo no está completamente conectado al monitor o al sistema.	Asegúrese de que el cable de señal esté bien enchufado al sistema y al monitor.
	Los valores de color pueden ser incorrectos.	Seleccione otro valor de color del menú OSD.
	La función de configuración automática de la imagen no se ha llevado a cabo.	Lleve a cabo la configuración automática de la imagen.
Aparece un mensaje por pantalla que indica "Out of range" or "H2T".	El sistema está establecido en una modalidad de visualización que este monitor no admite.	• Si está sustituyendo un monitor antiguo, vuelvalo a conectar y ajuste la modalidad de visualización en el rango especificado para el monitor nuevo. • Si utiliza un sistema Windows, reinicie el sistema en modalidad seguridad y, a continuación, seleccione una modalidad de visualización que su monitor admita. • Si estas opciones no funcionan, póngase en contacto con el centro de soporte de Lenovo.
No aparece ninguna imagen y el indicador de encendido parpadea de color verde.		

Problem	Possible Cause	Suggested Action
Le voyant d'alimentation n'est pas allumé et aucun image n'est affichée.	• L'interrupteur d'alimentation du moniteur n'est pas allumé. • Le cordon d'alimentation est mal connecté ou débranché. • La prise de courant n'est pas alimentée en électricité.	• Assurez-vous que le cordon d'alimentation est bien connecté. • Assurez-vous que la prise de courant est alimentée. • Mettez le moniteur sous tension. • Essayez un autre cordon d'alimentation. • Essayez une autre prise de courant.
Le voyant d'alimentation est vert, mais aucun image n'est affichée.	Le câble d'interface vidéo est mal connecté ou il est débranché du système ou du moniteur.	Vérifiez la connexion du câble d'interface vidéo au système.
	La luminosité ou le contraste du moniteur sont réglés au plus bas.	Régler la luminosité et le contraste à l'aide du menu OSD (On Screen Display).
La qualité de l'image n'est pas acceptable.	Le câble d'interface vidéo n'est pas bien connecté au moniteur ou au système.	Vérifiez la connexion du câble d'interface vidéo au moniteur et au système.
	Les paramètres de couleur sont peut-être incorrects.	Sélectionner un autre paramètre de couleur à partir du menu OSD.
	Le réglage automatique de l'image n'a pas été effectué.	Effectuez un réglage automatique de l'image.
Le message "Out of range" or "H2T" s'affiche à l'écran.	Le système est configuré pour un mode d'affichage qui n'est pas pris en charge par le moniteur.	• Si vous remplacez un ancien moniteur, reconnectez-le et réglez le mode d'affichage en tenant compte de la plage spécifiée pour le nouveau moniteur.
Il n'y a pas d'image et le voyant d'alimentation est vert et clignote.		

Problem	Possible Cause	Suggested Action
There is a screen message that reads "Out of range" or "H2T".	The system is set to a display mode which is not supported by this monitor.	• If you are replacing an old monitor, reconnect it and adjust the display mode for your new monitor. • If using a Windows system, reset the system in safe mode, then select a supported display mode for your monitor. • If these options do not work, contact the Support Center.
There is no image and the power on indicator is flashing green.		

Problem	Possible Cause	Suggested Action
There is a screen message that reads "Out of range" or "H2T".	The system is set to a display mode which is not supported by this monitor.	• If you are replacing an old monitor, reconnect it and adjust the display mode for your new monitor. • If using a Windows system, reset the system in safe mode, then select a supported display mode for your monitor. • If these options do not work, contact the Support Center.
There is no image and the power on indicator is flashing green.		

Problem	Possible Cause	Suggested Action
There is a screen message that reads "Out of range" or "H2T".	The system is set to a display mode which is not supported by this monitor.	• If you are replacing an old monitor, reconnect it and adjust the display mode for your new monitor. • If using a Windows system, reset the system in safe mode, then select a supported display mode for your monitor. • If these options do not work, contact the Support Center.
There is no image and the power on indicator is flashing green.		

Problem	Possible Cause	Suggested Action
There is a screen message that reads "Out of range" or "H2T".	The system is set to a display mode which is not supported by this monitor.	• If you are replacing an old monitor, reconnect it and adjust the display mode for your new monitor. • If using a Windows system, reset the system in safe mode, then select a supported display mode for your monitor. • If these options do not work, contact the Support Center.
There is no image and the power on indicator is flashing green.		

Problem	Possible Cause	Suggested Action
There is a screen message that reads "Out of range" or "H2T".	The system is set to a display mode which is not supported by this monitor.	• If you are replacing an old monitor, reconnect it and adjust the display mode for your new monitor. • If using a Windows system, reset the system in safe mode, then select a supported display mode for your monitor. • If these options do not work, contact the Support Center.
There is no image and the power on indicator is flashing green.		

Problem	Possible Cause	Suggested Action
There is a screen message that reads "Out of range" or "H2T".	The system is set to a display mode which is not supported by this monitor.	• If you are replacing an old monitor, reconnect it and adjust the display mode for your new monitor. • If using a Windows system, reset the system in safe mode, then select a supported display mode for your monitor. • If these options do not work, contact the Support Center.
There is no image and the power on indicator is flashing green.		

Problem	Possible Cause	Suggested Action
There is a screen message that reads "Out of range" or "H2T".	The system is set to a display mode which is not supported by this monitor.	• If you are replacing an old monitor, reconnect it and adjust the display mode for your new monitor. • If using a Windows system, reset the system in safe mode, then select a supported display mode for your monitor. • If these options do not work, contact the Support Center.
There is no image and the power on indicator is flashing green.		

Problem	Possible Cause	Suggested Action
There is a screen message that reads "Out of range" or "H2T".	The system is set to a display mode which is not supported by this monitor.	• If you are replacing an old monitor, reconnect it and adjust the display mode for your new monitor. • If using a Windows system, reset the system in safe mode, then select a supported display mode for your monitor. • If these options do not work, contact the Support Center.
There is no image and the power on indicator is flashing green.		

Problem	Possible Cause	Suggested Action
There is a screen message that reads "Out of range" or "H2T".	The system is set to a display mode which is not supported by this monitor.	• If you are replacing an old monitor, reconnect it and adjust the display mode for your new monitor. • If using a Windows system, reset the system in safe mode, then select a supported display mode for your monitor. • If these options do not work, contact the Support Center.
There is no image and the power on indicator is flashing green.		

Problem	Possible Cause	Suggested Action
There is a screen message that reads "Out of range" or "H2T".	The system is set to a display mode which is not supported by this monitor.	• If you are replacing an old monitor, reconnect it and adjust the display mode for your new monitor. • If using a Windows system, reset the system in safe mode, then select a supported display mode for your monitor. • If these options do not work, contact the Support Center.
There is no image and the power on indicator is flashing green.		

Problem	Possible Cause	Suggested Action
There is a screen message that reads "Out of range" or "H2T".	The system is set to a display mode which is not supported by this monitor.	• If you are replacing an old monitor, reconnect it and adjust the display mode for your new monitor. • If using a Windows system, reset the system in safe mode, then select a supported display mode for your monitor. • If these options do not work, contact the Support Center.
There is no image and the power on indicator is flashing green.		

Problem	Possible Cause	Suggested Action
There is a screen message that reads "Out of range" or "H2T".	The system is set to a display mode which is not supported by this monitor.	• If you are replacing an old monitor, reconnect it and adjust the display mode for your new monitor. • If using a Windows system, reset the system in safe mode, then select a supported display mode for your monitor. • If these options do not work, contact the Support Center.
There is no image and the power on indicator is flashing green.		

Problem	Possible Cause	Suggested Action
There is a screen message that reads "Out of range" or "H2T".	The system is set to a display mode which is not supported by this monitor.	• If you are replacing an old monitor, reconnect it and adjust the display mode for your new monitor. • If using a Windows system, reset the system in safe mode, then select a supported display mode for your monitor. • If these options do not work, contact the Support Center.
There is no image and the power on indicator is flashing green.		

Problem	Possible Cause	Suggested Action
There is a screen message that reads "Out of range" or "H2T".	The system is set to a display mode which is not supported by this monitor.	• If you are replacing an old monitor, reconnect it and adjust the display mode for your new monitor. • If using a Windows system, reset the system in safe mode, then select a supported display mode for your monitor. • If these options do not work, contact the Support Center.
There is no image and the power on indicator is flashing green.		

Problem	Possible Cause	Suggested Action
There is a screen message that reads "Out of range" or "H2T".	The system is set to a display mode which is not supported by this monitor.	• If you are replacing an old monitor, reconnect it and adjust the display mode for your new monitor. • If using a Windows system, reset the system in safe mode, then select a supported display mode for your monitor. • If these options do not work, contact the Support Center.
There is no image and the power on indicator is flashing green.		

Problem	Possible Cause	Suggested Action
There is a screen message that reads "Out of range" or "H2T".	The system is set to a display mode which is not supported by this monitor.	• If you are replacing an old monitor, reconnect it and adjust the display mode for your new monitor. • If using a Windows system, reset the system in safe mode, then select a supported display mode for your monitor. • If these options do not work, contact the Support Center.
There is no image and the power on indicator is flashing green.		

Problem	Possible Cause	Suggested Action
There is a screen message that reads "Out of range" or "H2T".	The system is set to a display mode which is not supported by this monitor.	• If you