

**DISPL AY
GREATNESS**

TCL onetouch
5041

Note:

This is a user manual for TCL T314D/T314Q

There may be certain differences between the user manual description and the phone's operation, depending on the software release of your phone or specific operator services.

Finding your serial number or IMEI

You can find your serial number or International Mobile Equipment Identity (IMEI) on the packaging materials. Or, on the phone, press *#06#. or **Settings > Regulatory & safety > IMEI**.

Obtaining warranty service

First follow the advice in this guide or go to www.tcl.com/global/en/service-support-mobile.html. Then check hotlines and repair centre information through www.tcl.com/global/en/service-support-mobile/hotline&service-center.html

Viewing legal information

On the phone, go to **Settings > About > Privacy and User Terms** or **Settings > Privacy and User Terms⁽¹⁾**.

⁽¹⁾ Depending on the device you purchased.

1 Table of Contents


1	Your mobile.....	5
1.1	Keys and connectors	5
1.2	Getting started.....	9
1.3	Home screen.....	12
1.4	App list	13
2	Call logs	15
2.1	Making a call	15
2.2	Answer or decline a call.....	16
2.3	Accessing voicemail	16
3	Contacts	17
3.1	Consult your Contacts.....	17
3.2	Adding a contact	18
3.3	Editing your contacts.....	18
3.4	Deleting a contact	19
3.5	Available options	19
4	Tools	21
4.1	Alarm.....	21
4.2	Calculator	21
4.3	Clock	21
4.4	Torch	21
4.5	Recorder	21

4.6	Convert.....	22
4.7	SIM Toolkit.....	22
5	Message	23
5.1	Write message	23
5.2	Send a multimedia message	24
5.3	How to type a message	24
6	Camera	26
6.1	Camera	26
6.2	Video	26
7	Gallery	27
8	Calendar	27
9	Settings	28
9.1	Phone settings	28
9.2	Profiles	29
9.3	Bluetooth	29
9.4	Display	29
9.5	Layout	30
9.6	Call settings.....	30
9.7	Security	31
9.8	Network settings.....	33
9.9	Connections	33
9.10	Power saving mode	33
9.11	Call Filter.....	33
9.12	Check for updates.....	33


9.13	Regulatory & Safety.....	34
9.14	Privacy and User Terms.....	34
9.15	Version info	34
10	My files	34
11	Troubleshooting	35
12	Specifications	41
13	Accessories	42
14	Licences	43

1 Your mobile

1.1 Keys and connectors

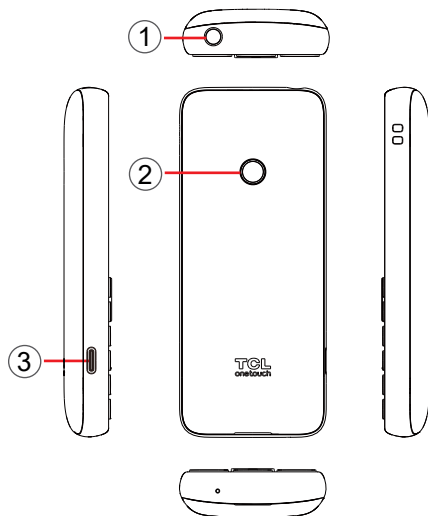

1. Torch
2. Camera (T314D only)
3. USB port

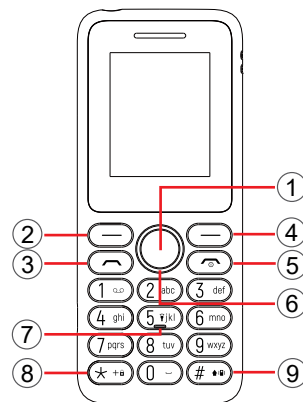

1. OK key
 - Confirm an option (press the middle of the key)
 - Press: access to the app list (from Home screen)
2. Left soft key
 - Confirm an option
 - Press: access to the app list (from Home screen)
3. Call key
 - Pick up/send a call
 - Press: enter call log (from Home screen)
4. Right soft key (Back key)
 - Press: access to Contacts (from Home screen)

5. End key

- Return to Home screen
- Press: end a call

6. Navigation key

- Move to top, bottom, left or right menus.
- Press (from Idle screen):
- Up: to access Calendar
- Down: to access Contacts
- Right: to access Message
- Left: to access Tools

7. "5" key

- In idle screen:
- Press: Input "5"
- Long press: switch on/off the torch

8. "*" key

- In idle screen
- Press: Input "*"
- Long press: lock screen
- In Edit mode:
- Press: insert symbols

9. "#" key


- Idle screen
- Press: Input "#"
- Long press: Vibrate mode on/off
- In edit mode
- Press: Enter method settings

1.2 Getting started


1.2.1 Set up

- ① With the device facing down, remove the back cover by using your fingernail to carefully lift the cover from the device body.
- ② To insert SIM card or micro SD card, push the SIM card or micro SD card into the card slot with the gold-colored contacts facing down. Power off your phone before inserting or removing the SIM/micro SD card.
- ③ Insert the battery by connecting the gold contacts in the device battery cavity. The battery will only fit one way.
- ④ Carefully align the back cover with tabs and press into place. It only fits one direction.

T314D:

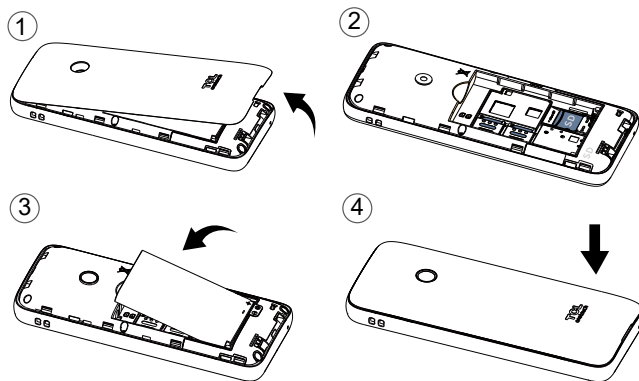


T314Q:

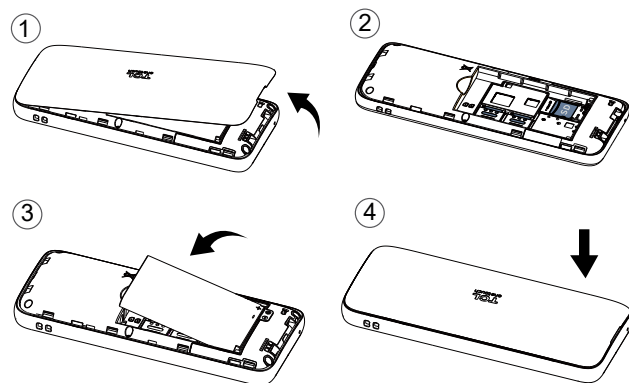

Charging the battery

Connect the battery charger to your phone and plug into the socket.

- Be careful not to force the plug into the socket.
- Make sure the battery is correctly inserted before connecting the charger.
- The mains socket must be near to the phone and easily accessible (avoid electric extension cables).

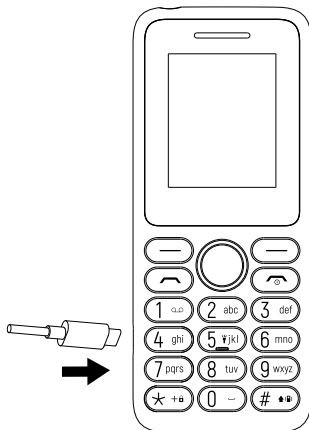

To reduce power consumption and energy waste, disconnect your charger when the battery is fully charged; switch off Bluetooth. In Settings you can also lower the brightness of the screen, and shorten the length of time before the screen goes to sleep.

1.2.2 Power on your phone


To turn your phone on, hold down the **End** key until the phone powers on. It will take a few seconds before the screen lights up. Long press/Press⁽¹⁾ **Left soft key** to unlock your phone.

Even if no SIM card is installed, your phone will still power on and you will be able to use some of the phone's features.

1.2.3 Power off your phone

To turn your phone off, hold down the **End** key.

1.3 Home screen

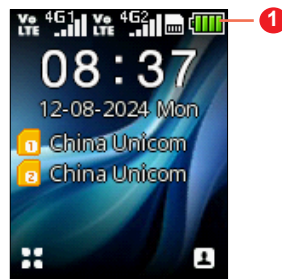

1 Status bar


- Status/Notifications

⁽¹⁾ Depending on the device you purchased.


1.4 App list ⁽¹⁾

Press the **Left soft key** or **OK key** from the Home screen to access the App list.

T314D:

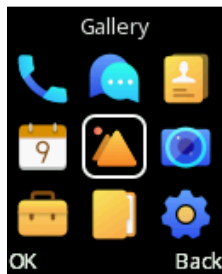



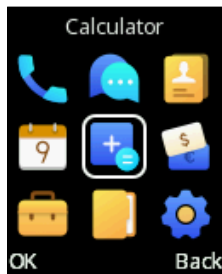



T314Q:




⁽¹⁾ App list varies according to country and operator.

1.4.1 Status bar ⁽¹⁾

The Status bar appears at the top of your Home screen. Icons indicate your phone's status and new notification alerts appear in the Status bar.

	New message or multimedia message		No SIM card installed
	Silent mode		Alarm is set
	Level of network reception		Bluetooth is on

1.4.2 Change Home screen wallpaper


- From the Home screen, press the **OK key**, select the **Settings** icon , and then press the **Navigation key** to select **Display > Wallpaper settings**.
- Select a new image from **Static wallpaper** or **More pictures** and press the **Left soft key** to select. Exit and the new image will then be displayed on your Home screen.

⁽¹⁾ The icons and illustrations in this guide are provided for information purposes only.

2 Call logs

2.1 Making a call

Dial the desired number, press the **Call key** to place the call, or press the **Right soft key** from Home screen to select a contact from **Contacts**. Use the up or down action of the **Navigation key** to select the desired contact and press the **Call key**. If you make a mistake, you can delete the incorrect digits by pressing the **Right soft key**. To hang up the call, press the **End key**.

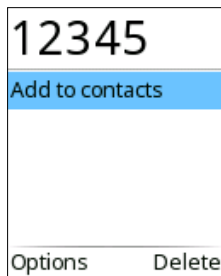


International call

To dial an international call, press $\times + \#$ twice to enter “+”, then enter the international country prefix followed by the full phone number and finally press the **Call key**.

Emergency call

If your phone has network coverage, dial the emergency number and press the **Call key** to make an emergency call.


2.2 Answer or decline a call

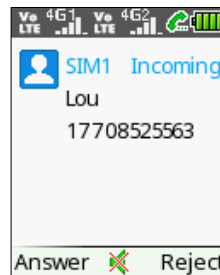

When you receive a call:

- Press the **Left soft key** or **Call key** to answer.
- Press the **Right soft key** or **End key** to decline.

2.3 Accessing voicemail ⁽¹⁾

- Press and hold **1**  to call voicemail.
- Follow the prompts to set up your voicemail account.

⁽¹⁾ Contact your network operator to check service availability.

3 Contacts




3.1 Consult your Contacts

Contacts enables quick and easy access to the contact you want to reach.

You can access this function through any of the following methods:


- pressing the **OK key** from the Home screen and select **Contacts**.
- pressing the **Right soft key** from the Home screen.

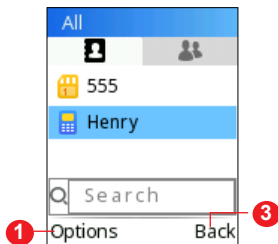

- 1 Press the **Left soft key** to access more options.
- 2 Press the **Navigation key** to select and then press **OK key** to enter the menu.
- 3 Press the **End key** to return to the previous menu.

3.2 Adding a contact


In your contacts list screen, select **Options** > **New** to add new contacts with detailed information.

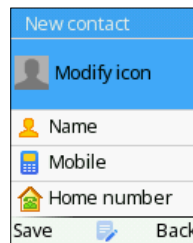

When finished, press the **Left soft key** to save.

3.3 Editing your contacts

Select a contact, press the **OK key** to access **Details**, select **Options** > **Edit**, and press the **OK key** to edit.

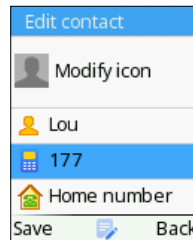

3.4 Deleting a contact

In your contacts list screen, press the **Left soft key** to access **Options**, select **Delete**, and press the **OK key** to delete.

3.5 Available options

From the contact list, you can access the following options:

New

Create a new contact on your Phone or SIM.

Write message

Send an SMS to a contact you've selected from **Contacts**.

Call

Make a call to the selected contact.

Delete

Delete the contact you've selected.

Delete multiple

Delete one or more contacts at a time.

Import/ Export

- Copy

Copy contacts from phone or SIM card to your desired location.

- Import contacts

Import contacts to your phone.

- Export contacts

Export contacts from your phone or SIM card.

Send vCard

Send a contact via SMS/MMS/Bluetooth.

Others

- Speed dial

Set one or more speed dial contacts at a time.

- Own number

Set Name and Mobile of your own.

- Service number
- Memory status

Review the memory status of your phone and SIM card.

4 Tools

4.1 Alarm

Your phone has a built-in alarm clock with snooze feature. You can set up to three alarms with different wake-up times.

4.2 Calculator

Press the up, down, left, right and Centre soft key to select "+, -, ×, ÷" and "=" respectively.

4.3 Clock

The first clock displays the time based on your location when you insert your SIM card. You can choose other cities to show the time in their time zones.

4.4 Torch

Turn on/off the torch.

4.5 Recorder

Use this function to record audio files. The phone supports AMR. When completed, the file will be stored in Audio automatically.

4.6 Convert

Convert supports weight conversion and length conversion. in Audio automatically.

4.7 SIM Toolkit


This menu provides convenient SIM card management features, such as SIM card services, SIM applications.

5 Message

Use the messaging feature to send and receive text (SMS/MMS) messages.

5.1 Write message

- From the Home screen, press the **OK key** and select **Message > Write message**.
- Enter the phone number of the recipient in the **To** bar or press the **Centre soft key** to add recipients.
- Press the **Message** bar to enter the text of the message.
- When finished, press **Left soft key** to select **Options > Send** to send your messages.

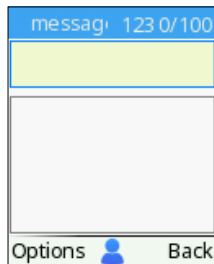

5.2 Send a multimedia message⁽¹⁾



MMS enables you to send video clips, images, photos, contacts and sounds. From the Message screen, select **Options > Add** and select the attachment.

An SMS will be converted to MMS automatically when media files (image, video, audio, etc.) are attached.

5.3 How to type a message

When in edit mode, you can press the Keypad to change the input method to access numbers 1,2,3... or long press the corresponding key to get the number you want.

You can enter text using predictive text input, or press # to set your desired text input.

- For normal text input, press a number key, 2-9, repeatedly until the desired character is displayed. If the next letter you want is located on the same key as the present one, press the key repeatedly until the next cursor is displayed.
- Press the  key to choose Abc/abc/ABC/123 modes or write language.
- To insert a punctuation mark or special character, press the  key.
- If you want to delete any previously typed letters or symbols, press the **Right soft key** to delete them one by one.

⁽¹⁾ Depending on the device you purchased.

Settings

- SIM1/SIM2 Message centre

You can view your message centre number here.

- Message validity period

You can set your message validity period as 1 hour, 6 hours, 24 hours, 72 hours, 1 week or Maximum.

- Status report

You can choose to enable or disable status reports.

- Reply path

Mark the checkbox to enable reply path.

- Alphabet management

You can set the character code as GSM alphabet, UCS2 or Auto.

- Save sent messages

You can choose to save or not save the sent messages.

- Preferred storage

Set the path for the location of your saved messages.

- Export SMS

Set the SMS path you want to export from.

- Auto signature

Select to apply an auto signature to your messages.

6 Camera⁽¹⁾

Your mobile phone is equipped with a camera for taking photos and shooting videos.

6.1 Camera

To access this function, press the **Centre soft key** from the Home screen and select **Camera**.

To take a picture

The screen acts as the viewfinder. Position the object or landscape in the viewfinder, and press the **Centre soft key** to take pictures, press **Left soft key** to save.

6.2 Video

To shoot a video

- Press the **Left soft key** and choose DV mode to switch to Video mode from Camera mode.
- Press the **Centre soft key** to shoot a video.
- When finished, press the **Left soft key**, it will be automatically saved. You can view the file by pressing **Gallery** in the app list.

⁽¹⁾ T314D only.

7 Gallery⁽¹⁾

Gallery acts as a media player for you to view photos and play videos. In addition, a set of further operations to pictures and videos are available for selection.

To access this function, press the **OK key** from the Home screen and select **Gallery**.

8 Calendar

Use **Calendar** to keep track of important meetings, appointments, etc.

To create new event, select the date by pressing navigation key and then press **OK key**, fill in all required information for this new event, press the **Left soft key** to save.

⁽¹⁾ T314D only.

9 Settings

To access this function, press the **OK key** from the Home screen and select **Settings**.

9.1 Phone settings

- **Time & date**

It allows you to modify date and time settings, including 12/24h format and date format (Year-Mon-Day/Mon-Day-Year/Day-Mon-Year). You can also choose to update the time display automatically by selecting **Phone settings > Auto update time**.

- **Language settings**

You can customize various language-related options, such as display language and writing language. Please note that the availability of certain languages and features may vary depending on your device model and software version.

- **Auto power on/off**

You can set the power on/off times using this function.

- **Power management**

You can see battery power in this manu.

- **Restore factory settings**

This feature allows you to reset your device to its original factory state. Before initiating the restoration process, it is important to note that all data and personalized settings will be permanently deleted. It is highly recommended to back up any important files, contacts, or data before proceeding.

9.2 Profiles

The **Profiles** provides a series of settings to adapt to various scenarios, you can set the sound mode to **Normal**, **Silent**, **Meeting**, **Indoor**, **Outdoor** or **Flight mode**.

9.3 Bluetooth

You can exchange data, such as video, images, and audio, with other Bluetooth supported devices within a limited range after pairing.

9.4 Display

You can set animation effect, wallpaper, auto lock, etc. within this menu. These features and settings contribute to enhancing your display experience, allowing you to personalize and optimize your device to meet your preferences and needs.

9.5 Layout

There are two layouts for your option: **Super icon mode** and **3*3 mode**. In Super icon mode, each option is presented with large and eye-catching icons, while 3*3 mode arranges the menu options in a traditional grid layout with smaller icons and accompanying text descriptions.

9.6 Call settings

- **Dual-SIM**

With Dual SIM functionality, you have the flexibility to manage two phone numbers on a single device.

- **Call forwarding**

You can activate, cancel or verify the status of call forwarding to voicemail or to a specified number.

- **Call waiting**

Activate/Deactivate the notification of a second incoming call by a beep. You can also check the status of waiting calls.

- **Call barred**

This feature allows you to restrict certain types of calls on your device. By enabling call barring, you can control incoming and outgoing calls, ensuring privacy, security, and avoiding unwanted disturbances.

- **Hide ID**

With Hide ID, you can selectively conceal or mask your identity when interacting with others, ensuring your anonymity and safeguarding your sensitive data.

- **Others**

The **Others** menu provides convenient features such as **Call time minute reminder**, **Auto redial**, **Vibration when connected** and **Reply SMS after reject**.

9.7 Security

You can protect your phone by activating and changing the PIN and password, this feature also allows you to lock your phone by activating the PIN2 for Fixed dial number.

- **PIN**

The SIM card protection code is requested each time the phone is powered on.

- **Modify PIN2**

A protection code for certain SIM card features (FDN) will be requested if you attempt to access the card when the code is activated. Select to update it with a new one (between 4 and 8 digits).

- **Phone locked**

An unlock code is requested each time the phone is powered on.

- **Modify the phone password**

Change the phone's password .

* You will need to set a password before accessing this function.

- **Privacy**

This allows applications to be locked. Enter the password, and mark the checkbox to activate the lock for Call logs, Message, Contacts, My files, Calendar, etc.

- **Auto keypad lock**

You can activate/deactivate the Auto keypad lock and set a time for it.

- **Lock screen by end-key**

Once this feature is enabled, pressing the end key will instantly lock the screen. This feature allows you to quickly secure your device with just a press of the end key.

- **Fixed dialing number**

This allows the phone to be "locked" so that it can only dial certain numbers, or numbers with certain prefixes. To activate this function, a PIN2 code is mandatory.

9.8 Network settings

Within this menu, you can set **Network selection**, **Network type** and **Network information**.

9.9 Connections

Within this menu, you can set **Data account**, **Data roaming**, **Data roaming**, etc.

9.10 Power saving mode

Power saving mode on your phone helps conserve battery by reducing background processes and adjusting settings for optimal energy efficiency, allowing your device to last longer between charges. Activate this feature when your battery is low to extend usage time.

9.11 Call Filter

Take control of your calls with **Call Filter**, block unwanted calls and create custom blacklists.

9.12 Check for updates

If you want to update the system, select check for updates and when that's finished, your phone will have the latest version of the software.

9.13 Regulatory & Safety

View information about your phone, such as Product Model, Manufacturer Name, IMEI, CU Reference, etc.

9.14 Privacy and User Terms

You can view Privacy and User Terms under this menu.

9.15 Version info

This menu provides details about the current software version running on your device.

10 My files ⁽¹⁾.....

To access this function, press the **Centre soft key** from the Home screen and select **My files**.

Your phone provides internal storage space for you to manage files and also supports a microSD card. The contents of the microSD card are editable. You can create a new folder and delete, edit, search, mark, and view the details and files it contains.

⁽¹⁾ **My files** availability depends on country and operator.

11 Troubleshooting

Before contacting the service centre, you are advised to follow the instructions below:

- You are advised to fully charge the battery for optimal operation.
- Avoid storing large amounts of data in your phone as this may affect its performance.

and carry out the following checks:

My phone can't be switched on or is frozen

- Check the battery contacts, remove and reinstall your battery, then turn your phone on.
- Check the battery power level, charge for at least 20 minutes.

My phone has not responded for several minutes

- Restart your phone by pressing and holding the **End key**.
- Remove the battery and re-insert it, then restart the phone.

My phone turns off by itself

- Check whether your phone is locked when not in use, and make sure you don't accidentally turn off your phone when locking it by pressing the **End key**.
- Check the battery charge level.

My phone can't charge properly

- Make sure you are using a standard battery and the charger from the box.
- Make sure your battery is inserted properly. It must be inserted before plugging in the charger.
- Make sure that your battery is not completely discharged; if battery power is empty for a long time, it may take around 20 minutes to display the battery charger indicator on the screen.
- Make sure charging is carried out under normal conditions (0°C to +40°C).
- When abroad, check that the voltage input is compatible.

My phone can't connect to a network or "No service" is displayed

- Try connecting in another location.
- Verify the network coverage with your operator.
- Check with your operator that your SIM card is valid.
- Try selecting the available network(s) manually.
- Try connecting at a later time if the network is overloaded.

My phone can't connect to the Internet

- Make sure that the internet access service of your SIM card is available.
- Check your phone's Internet connection settings.
- Make sure you are in a place with network coverage.
- Try connecting at a later time or another location.

Invalid SIM card

- Make sure the SIM card has been correctly inserted.
- Make sure the chip on your SIM card is not damaged or scratched.
- Make sure the service of your SIM card is available.

Unable to make outgoing calls

- Make sure you have dialled a valid number and have pressed the **call key**.
- For international calls, check the country and area codes.
- Make sure your phone is connected to a network, and the network is not overloaded or unavailable.
- Check your subscription status with your operator (credit, SIM card valid, etc.).
- Make sure you have not barred outgoing calls.
- Make sure that your phone is not in flight mode.

Unable to receive incoming calls

- Make sure your phone is switched on and connected to a network (check if the network is overloaded or unavailable).
- Check your subscription status with your operator (credit, SIM card valid, etc.).
- Make sure you have not forwarded incoming calls.
- Make sure that you have not barred certain calls.
- Make sure that your phone is not in flight mode.


The caller's name/number does not appear when a call is received

- Check that you have subscribed to this service with your operator.
- Your caller has concealed his/her name or number.

I can't find my contacts

- Make sure your SIM card is not broken.
- Make sure your SIM card is inserted properly.
- Import all contacts stored in SIM card to phone.

The sound quality of the calls is poor

- You can adjust the volume during a call by pressing the **Volume Up/down** key.
- Check the network strength .
- Make sure that the receiver, connector or speaker on your phone is clean.

I am unable to use the features described in the manual

- Check with your operator to make sure that your subscription includes this service.
- Make sure this feature does not require an **TCL** accessory.

When I select a number from my contacts, the number can't be dialled

- Make sure that you have correctly recorded the number in your file.
- Make sure that you have selected the country prefix when calling a foreign country.

I am unable to add a contact to my contacts

- Make sure that your SIM card contacts are not full; delete some files or save the files in the phone contacts.

My callers are unable to leave messages on my voicemail

- Contact your network operator to check service availability.

I can't access my voicemail

- Make sure your operator's voicemail number is correctly entered.
- Try later if the network is busy.

SIM card PIN locked

- Contact your network operator to obtain the PUK code (Personal Unblocking Key).

The phone can't be detected by others via Bluetooth

- Make sure that Bluetooth is turned on and your phone is visible to other users.
- Make sure that the two phones are within Bluetooth's detection range.

How can I transfer data between my phone and PC?

- If you want to transfer data between a memory card/ SD card and your PC, connect your phone to the PC via the user data cable and select "SD card" on your phone. You will then be able to transfer data between the two locations.

12 Specifications

OS	Mocor (RTOS)
Memory	128MB ROM + 64MB RAM
Dimensions (LxWxT)	113*48*14.5 mm
Weight	80g
Display	1.8" main LCD screen
Network	T314D: <ul style="list-style-type: none">• 2G: 900/1800• 3G: B1/8• 4G: B1/3/7/8/20/28(full) T314Q: <ul style="list-style-type: none">• 2G: 900/1800/1900• 3G: B1/5/8• 4G: B1/3/5/7/8/20/28(full)/38/40/41(full)
Connectivity	<ul style="list-style-type: none">• Bluetooth 5.0• Type C

Audio supported formats	AMR-NB, AMR-WB, MID
Video supported formats	3gp, MJPG
Battery	Capacity: 1030 mAh
Expansion Slot	Dual SIMs + SD card

Note: Specifications are subject to change without prior notice.

13 Accessories

Standard accessories

- Battery
- Charger⁽¹⁾
- Quick Start Guide
- Wrap film



Only use the standard batteries, chargers⁽¹⁾, and accessories along with your device.

⁽¹⁾ If sold with the device, depending on the device you purchased

14 Licences



The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by TCL Communication Ltd. and its affiliates is under licence. Other trademarks and trade names are those of their respective owners.

**TCL T314D/T314Q Bluetooth Declaration
ID D065426**
