


# SAMSUNG



## About the Buttons on the Samsung Smart Remote

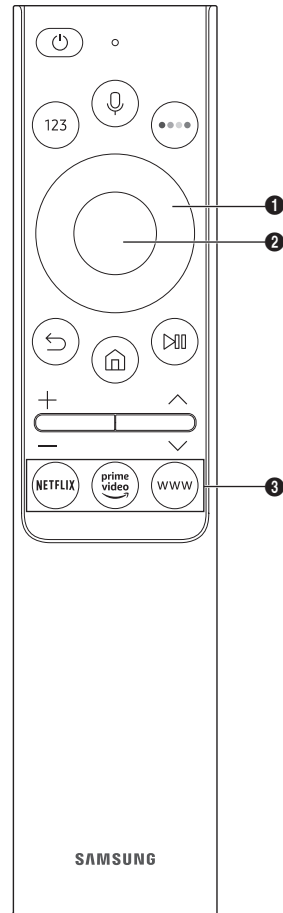

**Consumes  
86% less energy  
than previous  
model**

THE PLASTIC PART OF 21 SMART CONTROL CONTAINS A MINIMUM OF 24% POST-CONSUMER RECYCLED POLY ETHYLENE TEREPHTHALATE (PET) UL.COM/ECV

**Independently verified!**

This product has been independently verified.

TMZ180E/F

- Consumes 86% less energy than previous model


TMZ180A/B

- Consumes 86% less energy than previous model
- The plastic part of 21 Smart control contains a minimum of 24% post consumer recycled Poly Ethylene Terephthalate (PET)

**Intertek**

[www.intertek.com/consumer/certified](http://www.intertek.com/consumer/certified)

NO. : SE-GL-2002861


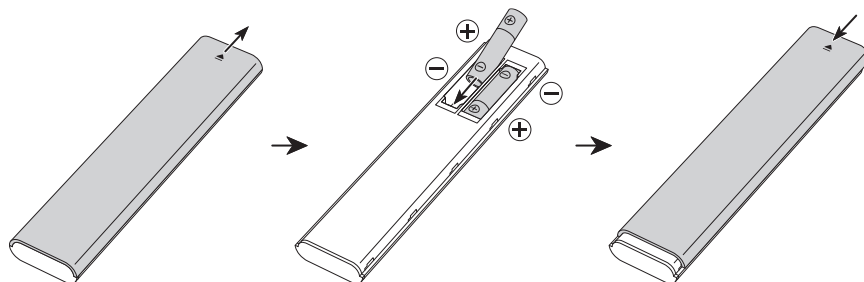


Button	Description
(Power)	Press to turn the TV on or off.
(Voice Assistant)	Runs Voice Assistant. Press and hold the button, say a command, and then release the button to run Voice Assistant. ⚠ Keep the remote more than 0.6 inches (15.24 mm) from your face when using and speaking to Voice Assistant through the mic on the remote. <ul style="list-style-type: none"> <li>The supported Voice Assistant's languages and features may differ by geographical region.</li> </ul>
(Number button)	When pressed, a number strip appears on the bottom of the screen. Select numbers and then select <b>Done</b> to enter a numeric value. Use to change the channel, enter a PIN, enter a ZIP code, etc.
(Color button)	Use these colored buttons to access additional options specific to the feature you are using.
(Directional button (up, down, left, right))	Use to navigate the menu or move the focus to highlight items on the Home Screen.
(Select)	Selects or runs a focused item. When pressed while you are watching a broadcast program, detailed program information appears.
(Return)	Press to return to the previous menu. When pressed for 1 second or more, the running function is terminated. When pressed while you are watching a program, the previous channel appears.
(Smart Hub)	Press to return to the Home Screen.
(Play/pause)	When pressed, the playback controls appear. Using these controls, you can control the media content that is playing.
(+ / - (Volume))	Move the button up or down to adjust the volume. To mute the sound, press the button. When pressed for 1 second or more, the <b>Accessibility Shortcuts</b> appears.
(^ / v (Channel))	Move the button up or down to change the channel. To see the <b>Guide</b> screen, press the button. Press and hold the button up or down to quickly change the channel.
(Launch app button)	Launch the app indicated by the button.
(Pairing)	If the Samsung Smart Remote does not pair to the TV automatically, point it at the front of the TV, and then press and hold the  and  buttons simultaneously for 3 seconds or more.

- Use the Samsung Smart Remote less than 20 feet (6 m) from the TV. The usable distance may vary with the wireless environmental conditions.
- The images, buttons, and functions of the Samsung Smart Remote may differ with the model or geographical area.
- The Universal Remote function operates normally only when you use the Samsung Smart Remote that comes with the TV.

# SAMSUNG

## Acerca de los botones del Control remoto Samsung Smart

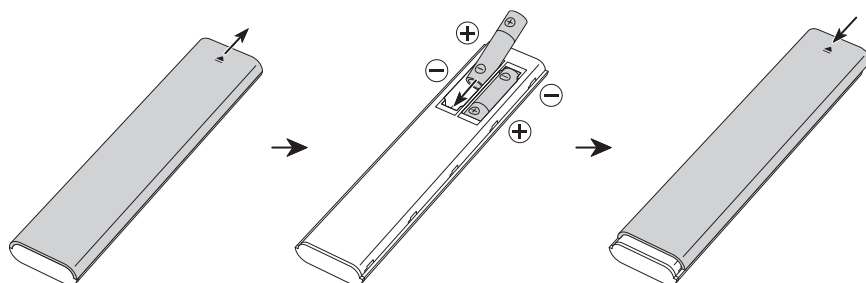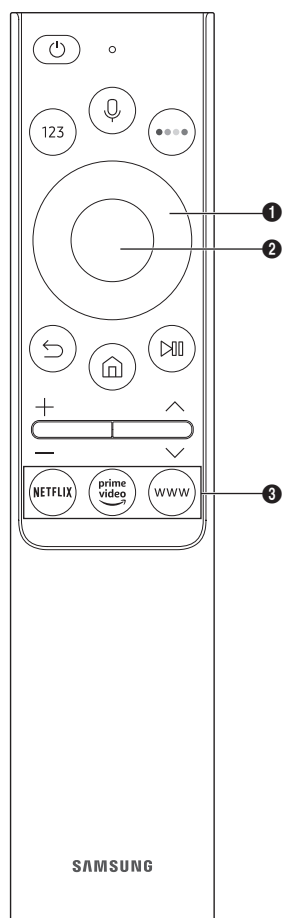

Botón	Descripción
(Encendido)	Presione para encender o apagar el televisor.
(Asistente de voz)	Ejecuta Asistente de voz. Mantenga presionado el botón, diga un comando y suelte el botón para ejecutar Asistente de voz. ⚠ Mantenga el control remoto a más de 0.6 pulgadas (15.24 mm) de su rostro cuando use o le hable al Asistente de voz a través del micrófono del control remoto. <ul style="list-style-type: none"> <li>Los idiomas y funciones admitidos para Asistente de voz pueden diferir según la región geográfica.</li> </ul>
(Botón Número)	Cuando se presiona, aparecen unos números en la parte inferior de la pantalla. Seleccione los números y, luego, seleccione <b>Completado</b> para ingresar un valor numérico. Se utiliza para cambiar el canal, ingresar un PIN o un código ZIP, etc.
(Botón Color)	Use estos botones de color para acceder a opciones adicionales específicas de la función que esté utilizando.
Botón direccional (arriba, abajo, izquierda, derecha)	Se utiliza para navegar por el menú o desplazar el resaltado entre elementos en la Pantalla Inicio.
Selección	Selecciona o ejecuta el elemento resaltado. Cuando lo presiona mientras mira un programa transmitido, aparece la información detallada del programa.
(Regresar)	Presione para regresar al menú anterior. Cuando se lo presiona 1 segundo o más, la función que se está ejecutando se cierra. Cuando lo presiona mientras mira un programa, aparece el canal anterior.
(Smart Hub)	Presione para regresar a la Pantalla Inicial.
(Reproducir/pausa)	Cuando se presiona, aparecen los controles de reproducción. Puede utilizarlos para controlar el contenido multimedia que se está reproduciendo.
(+ / -) (Volumen)	Mueva el botón hacia arriba o hacia abajo para ajustar el volumen. Para enmudecer el sonido, presione el botón. Cuando se lo presiona 1 segundo o más, aparece <b>Atajos de accesibilidad</b> .
(^ / v) (Canal)	Mueva el botón hacia arriba o hacia abajo para cambiar el canal. Para ver la pantalla de la <b>Guía</b> , presione el botón. Mantenga presionado el botón hacia arriba o hacia abajo para cambiar rápidamente el canal.
(Inicia el botón de la aplicación)	Inicia la aplicación que indica el botón.
(Vinculación)	Si el Control remoto Samsung Smart no se vincula automáticamente al televisor, apúntelo al frente del televisor y luego mantenga presionados los botones  y  simultáneamente durante 3 segundos o más.

- Use el Control remoto Samsung Smart a menos de 20 pies (6 m) del televisor. La distancia adecuada puede variar dependiendo de las condiciones del entorno inalámbrico.
- Las imágenes, botones y funciones del Control remoto Samsung Smart pueden variar según el modelo o el área geográfica.
- La función Configuración de control remoto universal solo opera correctamente cuando se usa el Control remoto Samsung Smart provisto con el televisor.