

SAMSUNG



BN68-11631A-05

About the Buttons on the Samsung SolarCell Remote (Samsung Smart Remote)



Consumes 86% less energy than previous model



THE PLASTIC PART OF 21 SOLAR SMART CONTROL CONTAINS A MINIMUM OF 24% POST-CONSUMER RECYCLED POLYCARBONATE (PC) UL.COM/EGV

Independently verified!

This product has been independently verified.

TMZ180E/F
- Consumes 86% less energy than previous model

TMZ180A/B
- Consumes 86% less energy than previous model
- The plastic part of 21 Smart control contains a minimum of 24% post consumer recycled Poly Ethylene Terephthalate (PET)


www.intertek.com/consumer/certified

NO. : SE-GL-2002861

Solar Cell
Expose to light when the remote is not in use. This will extend the remote's operating time.

USB port (C-type) for charging
Used for quick charging. The LED on the front will light when charging. When the battery is fully charged, the LED will turn off.

- The USB Cable is not provided.

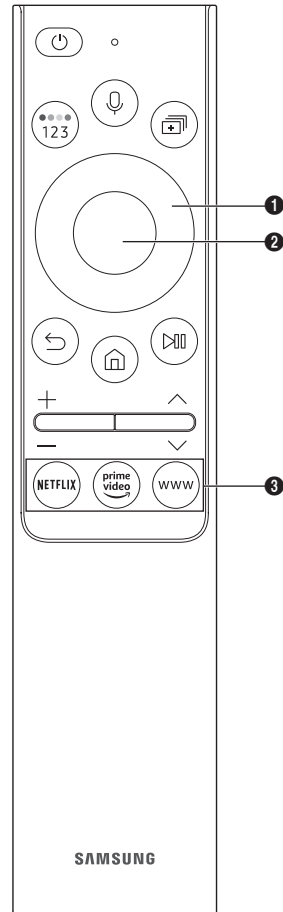

Button	Description
(Power)	Press to turn the TV on or off. For The Frame model, When watching TV, press to switch to Art mode. In Art mode, press to switch to watching TV. Press and hold to turn off the TV completely.
(Voice Assistant)	Runs Voice Assistant. Press and hold the button, say a command, and then release the button to run Voice Assistant. ⚠ Keep the remote more than 0.6 inches (15.24 mm) from your face when using and speaking to Voice Assistant through the mic on the remote. <ul style="list-style-type: none"> The supported Voice Assistant's languages and features may differ by geographical region.
(Color - Number button)	Each time you press this button, the colored buttons window and the virtual numeric pad are displayed alternately. <ul style="list-style-type: none"> Use this button to access additional options that are specific to the feature in use. Press to bring up the virtual numeric pad on the screen. Use the numeric keypad to enter numeric values. Select numbers and then select Done to enter a numeric value. Use to change the channel, enter a PIN, enter a ZIP code, etc.
(Multi View)	Press the button to directly enter the Multi View function.
(up, down, left, right)	Use to navigate the menu or move the focus to highlight items on the Home Screen.
(Select)	Selects or runs a focused item. When pressed while you are watching a broadcast program, detailed program information appears.
(Return)	Press to return to the previous menu. When pressed for 1 second or more, the running function is terminated. When pressed while you are watching a program, the previous channel appears.
(Smart Hub)	Press to return to the Home Screen.
(Play/pause)	When pressed, the playback controls appear. Using these controls, you can control the media content that is playing. To use Game Bar, press and hold the button in Game Mode . <ul style="list-style-type: none"> Game Bar may not be supported depending on the model or geographical area.
(Volume)	Move the button up or down to adjust the volume. To mute the sound, press the button. When pressed for 1 second or more, the Accessibility Shortcuts appears.
(Channel)	Move the button up or down to change the channel. To see the Guide screen, press the button. Press and hold the button up or down to quickly change the channel.
(Launch app button)	Launch the app indicated by the button.
(Pairing)	If the Samsung Smart Remote does not pair to the TV automatically, point it at the front of the TV, and then press and hold the and buttons simultaneously for 3 seconds or more.





Fire or explosion may occur, resulting in damage to the remote control or personal injury.

- Do not apply shock to the remote control.
- Be careful not to let foreign substances such as metal, liquid, or dust come in contact with the charging terminal of the remote control.
- When the remote control is damaged or you smell smoke or burning fumes, immediately stop operation and then repair it at the Samsung service center.
- Do not arbitrarily disassemble the remote control.
- Be careful not to let infants or pets suck or bite the remote control. Fire or explosion may occur, resulting in damage to the remote control or personal injury.

- Use the Samsung Smart Remote less than 20 feet (6 m) from the TV. The usable distance may vary with the wireless environmental conditions.
- The images, buttons, and functions of the Samsung Smart Remote may differ with the model or geographical area.
- The Universal Remote function operates normally only when you use the Samsung Smart Remote that comes with the TV.
- It is recommended to use an original Samsung charger. Otherwise, it may cause performance degradation or failure of the product. In this case, the warranty service is not applicable.
- When the remote control does not work due to low battery, charge it by using the USB-C type port.

SAMSUNG

Acerca de los botones del Samsung SolarCell Remote (Control remoto Samsung Smart)

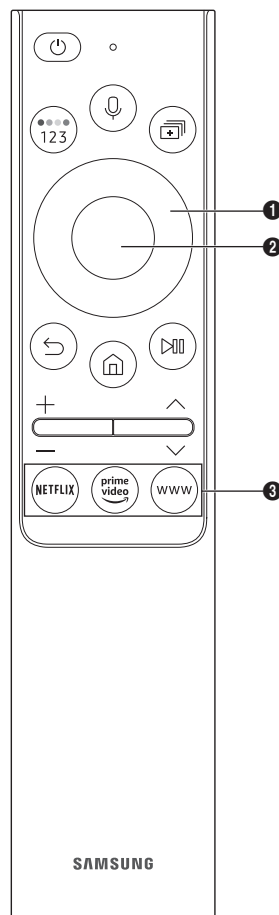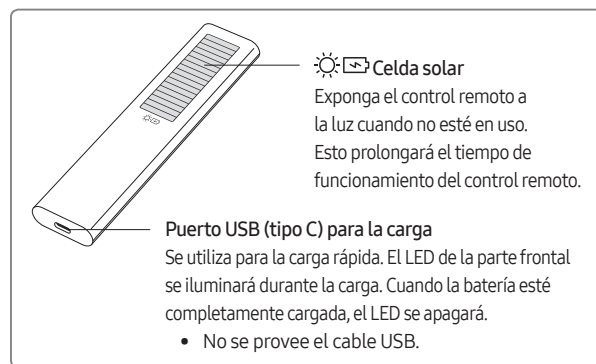

Botón	Descripción
(Encendido)	Presione para encender o apagar el televisor. En el modelo The Frame, al mirar televisión, presione para cambiar al modo Arte . En el modo Arte , presione para ver televisión. Mantenga presionado para apagar el televisor completamente.
(Asistente de voz)	Ejecuta Asistente de voz. Mantenga presionado el botón, diga un comando y suelte el botón para ejecutar Asistente de voz. ⚠ Mantenga el control remoto a más de 0.6 pulgadas (15.24 mm) de su rostro cuando use o le hable al Asistente de voz a través del micrófono del control remoto. <ul style="list-style-type: none"> Los idiomas y funciones admitidos para Asistente de voz pueden diferir según la región geográfica.
(Color - botón Number)	Cada vez que presiona este botón, la ventana de los botones de colores y el panel numérico virtual se visualizan alternativamente. <ul style="list-style-type: none"> Utilice este botón para acceder a opciones adicionales específicas de la función que está en uso. Presione para que aparezca el panel numérico virtual en la pantalla. Utilice el teclado numérico para ingresar valores numéricos. Seleccione los números y, luego, seleccione Completado para ingresar un valor numérico. Se utiliza para cambiar el canal, ingresar un PIN o un código ZIP, etc.
(Multi View)	Presione el botón para ingresar a la función Multi View directamente.
(Botón direccional (arriba, abajo, izquierda, derecha))	Se utiliza para navegar por el menú o desplazar el resaltado entre elementos en la Pantalla Inicio.
(Selección)	Selecciona o ejecuta el elemento resaltado. Cuando lo presiona mientras mira un programa transmitido, aparece la información detallada del programa.
(Regresar)	Presione para regresar al menú anterior. Cuando se lo presiona 1 segundo o más, la función que se está ejecutando se cierra. Cuando lo presiona mientras mira un programa, aparece el canal anterior.
(Smart Hub)	Presione para regresar a la Pantalla Inicial.
(Reproducir/pausa)	Cuando se presiona, aparecen los controles de reproducción. Puede utilizarlos para controlar el contenido multimedia que se está reproduciendo. Para usar la Barra de juegos, mantenga presionado el botón en Modo Juego . <ul style="list-style-type: none"> Barra de juegos may not be supported depending on the model or geographical area.
(+/-) (Volumen)	Mueva el botón hacia arriba o hacia abajo para ajustar el volumen. Para enmudecer el sonido, presione el botón. Cuando se lo presiona 1 segundo o más, aparece Atajos de accesibilidad .
(^/∨) (Canal)	Mueva el botón hacia arriba o hacia abajo para cambiar el canal. Para ver la pantalla de la Guía , presione el botón. Mantenga presionado el botón hacia arriba o hacia abajo para cambiar rápidamente el canal.
(Inicia el botón de la aplicación)	Inicia la aplicación que indica el botón.
(Vinculación)	Si el Control remoto Samsung Smart no se vincula automáticamente al televisor, apúntelo al frente del televisor y luego mantenga presionados los botones y simultáneamente durante 3 segundos o más.



Se podría producir un incendio o una explosión y causar daños al control remoto o lesiones personales.

- Evite que el control remoto reciba golpes.
- Tenga cuidado de que las sustancias extrañas, como polvo, metal o líquidos, no entren en contacto con el terminal de carga del control remoto.
- Si el control remoto está dañado o huele humo o a quemado, detenga su funcionamiento inmediatamente y llévalo a reparar a un centro de servicio de Samsung.
- No desensamble el control remoto de manera arbitraria.
- Tenga cuidado de que los niños o las mascotas no chupen ni muerdan el control remoto. Se podría producir un incendio o una explosión y causar daños al control remoto o lesiones personales.

- Use el Control remoto Samsung Smart a menos de 20 pies (6 m) del televisor. La distancia adecuada puede variar dependiendo de las condiciones del entorno inalámbrico.
- Las imágenes, botones y funciones del Control remoto Samsung Smart pueden variar según el modelo o el área geográfica.
- La función Configuración de control remoto universal solo opera correctamente cuando se usa el Control remoto Samsung Smart provisto con el televisor.
- Se recomienda utilizar un cargador Samsung original. De lo contrario, se puede producir una degradación del rendimiento o una falla del producto. En este caso, no se aplica el servicio de garantía.
- Cuando el control remoto se quede sin batería y deje de funcionar, cárguelo a través del puerto USB-C.