StarTech.com

Hard-to-find **made easy** ®

10/100 Mbps Ethernet to USB 2.0 Network LPR Print Server

PM1115U2

DE: Bedienungsanleitung - de.startech.com
FR: Guide de l'utilisateur - fr.startech.com
ES: Guía del usuario - es.startech.com
IT: Guida per l'uso - it.startech.com
NL: Gebruiksaanwijzing - nl.startech.com
PT: Guia do usuário - pt.startech.com

Packaging contents

- 1 x USB 2.0 network LPR print server
- 1 x universal power adapter (NA/UK/EU/AU)
- 1 x RJ45 network cable
- 1 x driver CD
- 1 x quick start guide

System requirements

A computer running one of the following operating systems:
- Windows® 7 (32-bit or 64-bit)
- Windows 8 (32-bit or 64-bit)
- Windows 8.1 (32-bit or 64-bit)
- Windows Server® 2003
- Windows Server 2008
- Windows Server 2012
- Windows® XP
- Mac OS 10.7 and later (tested up to 10.10)

Operating system requirements are subject to change. For the latest requirements, please visit www.startech.com/PM1115U2.

Product diagram

Front view

Power LED

Power jack

Link LED   RJ45 Ethernet port   Activity LED

Rear view

USB type-A port
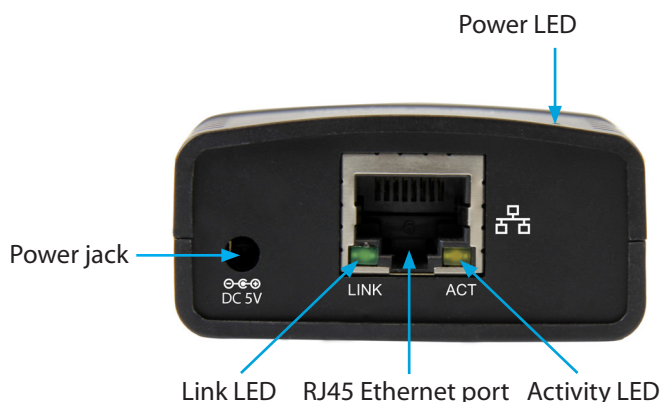
Hardware installation

Connect a printer to the print server
1. Turn off the printer that you want to connect to the print server.
2. Connect one end of a USB 2.0 cable (not included) to the printer and the other end of the cable to the USB type-A port on the print server.
3. Turn on the printer.
4. Plug one end of the universal power adapter into the power jack on the back of the print server and the other end into a power source. The power LED (green) illuminates to indicate that the print server is turned on.

When the print server is connected correctly to the network, the link LED (green) illuminates.

Software installation

Install the software on a computer running a version of Windows OS
1. Connect an Ethernet cable to the RJ45 Ethernet port on the print server and then to your router or network.
2. On the computer that's connected to the same router or network, insert the provided CD into the CD or DVD drive.
3. In the **AutoPlay** message, click **Networking Printer Wizard** and follow the on-screen instructions.
4. Click the **Network Printer Wizard** shortcut on your desktop.
5. When prompted, install the drivers for the printer.

When the wizard is complete, the printer is ready to be used.

*actual product may vary from photos

For the latest information, technical specifications, and support for this product, please visit www.startech.com/PM1115U2.

Manual Revision: 07/03/2015

About the LED indicators

PM115U2 includes three LEDs. See the tables below for more information about what the LED behaviors signify.

Power LED

LED behavior	Signifies
LED is illuminated	The print server is turned on and receiving power.
LED isn't illuminated or is blinking	An error is occurring with the print server or the power adapter.

RJ45 LEDs

LED behavior	Signifies
Link LED (green) is illuminated	The print server is connected to the network.
Link LED (green) isn't illuminated	The print server isn't connected to the network.
Activity LED (yellow) is blinking	Activity is occurring on the network.

Reset to the default factory settings

1. To reset the print server to the default factory settings, while the print server is turned on, insert a small pin or paperclip into the **Reset** hole located on the right side of the print server.
2. Press and hold the **Reset** button for 10 seconds.
3. Unplug the power adapter from the power source and plug it in again.

The print server should restart and operate using the default factory settings.