

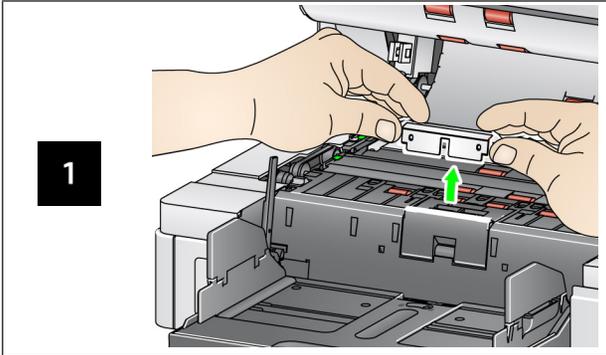


Replace pre-separation pad Replace separation roller

Pre-separation Pad

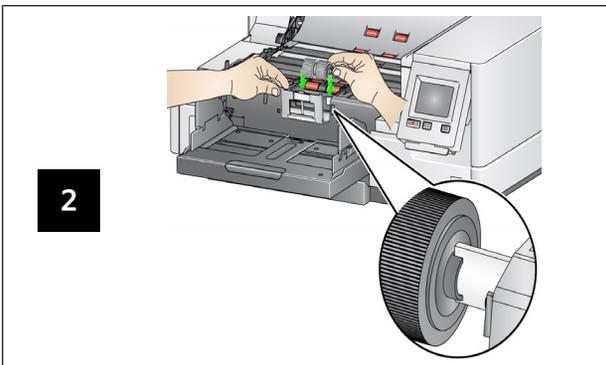

Separation Roller

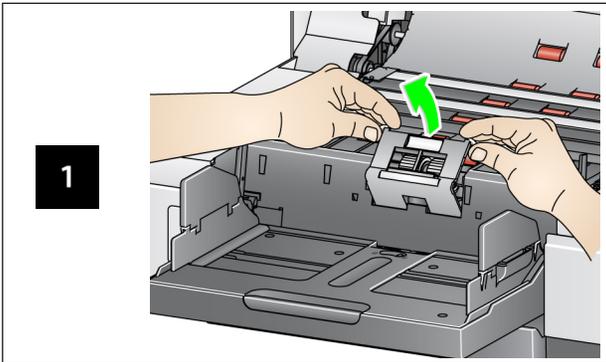

See the User's Guide for feed module replacement procedures.

Supplies and Accessories

CAT No.	Description
832 7538	Feeder Consumables Kit
838 7938	Extra-Large Feeder Consumables Kit
146 2415	Extra-Extra-Large Feeder Consumables Kit
844 5280	Feeder Kit for Ultralightweight Paper
871 4438	Image Guide Set
161 2605	Lower/Upper Flippable White Background i5x50
183 3946	66.04 cm (26 in.) document extender
162 6803	76.2 cm (30 in.) document extender
149 8476	86.36 cm (34 in.) document extender
167 3953	Manual Feed Shelf (i5250/i5650 Scanners)
169 4256	Manual Feed Shelf (i5850 Scanner)
118 5859	Lead Edge Alignment Exit Tray Accessory
121 3743	Enhanced Printer Accessory for i5x50 and i5x50V Series Scanners (Front and Rear)
125 7633	Printer Ink Blotters
818 3386	Enhanced Printer Black Cartridge
159 6832	Enhanced Printer Red Cartridge
176 3218	Enhanced Printer: Ink Cartridge Carrier
896 5519	Staticide Wipes for <i>Kodak</i> Scanners*
169 0783	Transport Cleaning Sheets
100 2716	Roller Cleaning Pads
826 6488	Brilliance Detailer Wipes

* Staticide Wipes are not available in all countries. Brilliance Detailer Wipes should be used if Staticide Wipes are not available.

All trademarks and trade names used are the property of their respective holders.

The Kodak trademark and trade dress are used under license from Eastman Kodak Company.

© 2019 Kodak Alaris Inc.
TM/MC/MR: Alaris

A-61847/ Part # 5K8415 / April 2019



i5250/i5650/i5650S/i5850/i5850S
Scanners



Reference Guide

The illustrations in this guide may look different than your scanner model. However, the procedures are the same, unless otherwise noted.

Support Information

www.AlarisWorld.com/go/IMcontacts

When contacting support, have the following available:

- A description of your problem
- Scanner model and serial number
- Computer configuration
- Software application you are using



Cleaning Frequency Chart

Procedure	Start of day	Middle of Shift	Start of new shift
1 Vacuum output tray and input areas (input elevator and transport)	x		
2 Clean all rollers; including feed module	x		x
3 Run transport cleaning sheet	x		x
4 Clean imaging guides	x	x	x

IMPORTANT:

- ❑ The Roller Cleaning Pad contains sodium lauryl ether sulfate which can cause eye irritation. Refer to the Safety Data Sheet (SDS) for more information (www.kodakalaris.com/go/ehs).
- ❑ Staticide Wipes contain isopropanol which can cause eye irritation and dry skin. Refer to the SDS for more information.
- ❑ Wash your hands with soap and water after performing maintenance procedures.

Cleaning the transport and rollers

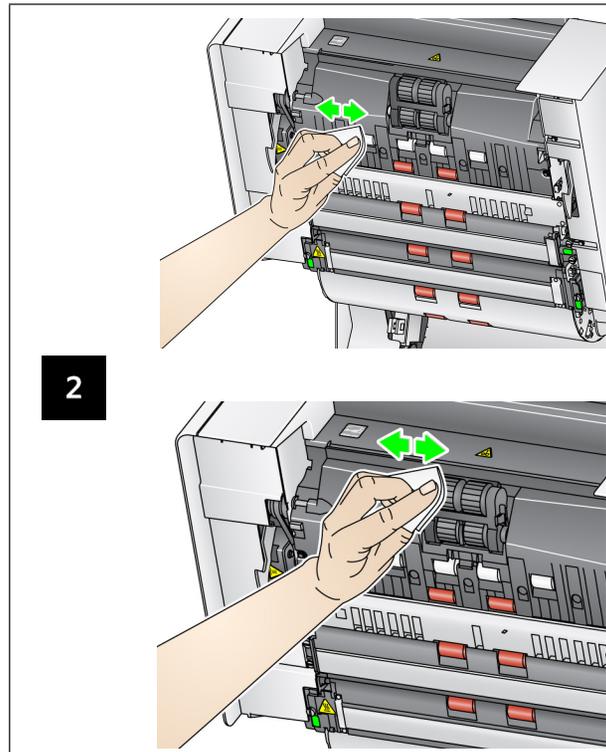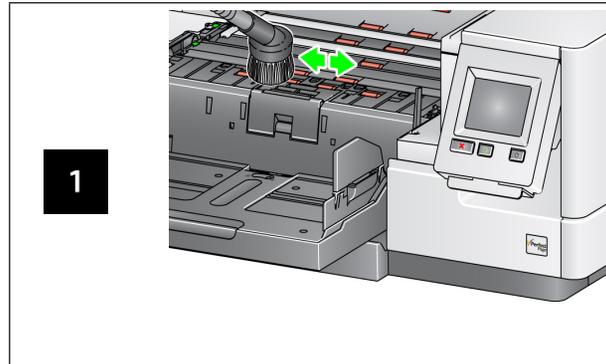

Running a cleaning sheet and cleaning the imaging guides

