

DIGITAL VIDEO RECORDER



EN

INSTRUCTION MANUAL

Important Information

FCC Verification

This equipment has been tested and found to comply with the limits for Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and the receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

These devices comply with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- These devices may not cause harmful interference
- These devices must accept any interference received, including interference that may cause undesired operation

Important Note: All jurisdictions have specific laws and regulations relating to the use of cameras. Before using any camera for any purpose, it is the buyer's responsibility to be aware of all applicable laws and regulations that prohibit or limit the use of cameras and to comply with the applicable laws and regulations.

FCC Regulation (for USA): Prohibition against eavesdropping

Except for the operations of law enforcement officers conducted under lawful authority, no person shall use, either directly or indirectly, a device operated pursuant to the provisions of this Part for the purpose of overhearing or recording the private conversations of others unless such use is authorized by all of the parties engaging in the conversation.

Warning: Changes or modifications made to this device not approved expressly by the party responsible for compliance could void the user's authority to operate the equipment.

Important Safety Instructions

- Make sure product is fixed correctly and stable if fastened in place
- Do not operate if wires and terminals are exposed
- Do not cover vents on the back of the device and allow adequate space for ventilation

Default Password Information

To ensure your privacy, this device supports password protection.


The default, all-access username is **admin**, the default password is **12345**.

To ensure your ongoing privacy, we strongly recommend setting a password as soon as possible. Choose something that you'll remember, but that others would be unlikely to guess.

Contents

Important Information	2
Contents	3
What is 960H?	4
Display: Camera	5
Display: Output	6
Recording: Encode	7
Recording: Option	8
Recording: Schedule	9
Search: Playback	10
Search: Playback Interface	11
Search: Backup	
Search: Event & Log Search	
Network: General	14
Network: Advanced & Network Status	15
Alarm: Motion: Motion Detection & Sensitivity	
Alarm: Motion: Schedule & Action	
Motion Detection Tips	18
Alarm: Video Loss	
Alarm: Alarm Devices	20
Alarm: Exception	21
Device: HDD & S.M.A.R.T	22
Device: PTZ	23
System: General	24
System: User	25
System: System Information & Maintenance	26
SwannView Link Windows Software	27
Warranty Information	
Helpdesk/Technical Support	

What is 960H?

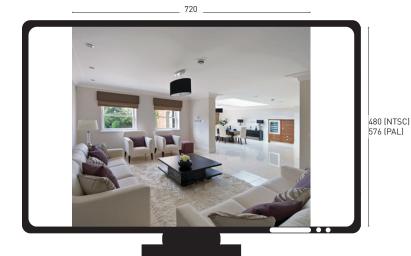

4:3 Aspect Ratio

480 (NTSC) 576 (PAL)

16:9 Aspect Ratio

"960H" is the term used for a composite video signal which utilises additional horizontal lines of resolution. The additional horizontal space creates a significantly larger and sharper image, and also allows for higher dynamic range.

If you connect traditional CCTV cameras to the DVR, it will automatically upscale the image to make use of the entire screen. This will allow higher quality videos than would otherwise be available, particularly for 700TVL+ cameras, but will warp the image to appear a little wider than it should be.

If you do end up with a recording at the incorrect aspect ratio, this isn't a disaster. You'll still be able to clearly see the details and identify individuals, up to the limits imposed by the camera itself.

The correct aspect ratio can easily be applied using a media player such as VLC (www. videolan.org). Just backup your footage that is located on the DVR and play it back on a computer. Select the appropriate aspect ratio (16:9 for 960H cameras and 4:3 for standard CCTV cameras).

Display: Camera



The "Display: Camera" menu is where you can make adjustments to how the DVR displays the feed coming from your cameras.

You can adjust aspects of each channel/camera, such as:

- the camera's name
- what information will be displayed on-screen, and where this information will be displayed
- whether information such as the date will be recorded directly onto your videos
- any areas of the video you want "masked" that is, left blank

Camera No: Choose the channel you want to edit here. The Camera No is the same thing as the number written on the rear panel next to the BNC socket used to connect the camera.

Camera Name: Enter a name for the camera you've selected. By default, all channels are named as the Camera No. field, but this can be set to anything you'd like up to 16 characters.

Display Camera Name: When checked, the name you've entered for the camera/channel will be displayed on-screen as an overlay.

Record Date: When checked, the date (as displayed) will be recorded directly on to your videos. This can be useful, as it creates an inseparable record of exactly when the footage was captured.

OSD Display Position: Gives you access to a screen where you can easily set the exact positions of any overlaid text, such as the camera name and the date and time.

Simply select any item you want to move (such as the Channel Name and/or the Date and Time) and click and drag it to the position you'd like it to be.

To exit the OSD Display Position screen, press the right click button. A context menu

will appear with two options: Save and Exit. To exit without saving, simply choose Exit. If you want to save your changes, choose Save first.

Image Settings: Gives you access to image adjustment tools, allowing you to adjust the way the DVR interprets and displays video images. See opposite for more information.

Mask: When checked, allows you to create, place and shape a "privacy mask" which obscures part of the image on the associated channel.



The Image Settings you choose will affect your recorded footage. Rather than applying the changes after the video has been processed (like many older DVRs) the Image Settings affect how the DVR decodes the video it is receiving from the cameras.

Display: Output



The "Display: Output" menu is where you can control how the DVR is going to deliver an image to your television, screen or monitor.

You'll be able to adjust items such as:

- screen resolution and position on your monitor
- the audio output
- the appearance of the menus
- the sensitivity of the USB mouse

Resolution: The number of "little dots" that make up an image. This should be set as high as possible, but equal to or lower than the maximum resolution your screen/monitor can display. Things change a little depending on what kind of monitor you're using, and how it's connected.

Transparency: You can set the DVR's menus to be partially transparent (see-through) - in case you need to keep an eye on things while adjusting settings. The best way to set this is to simply experiment over time and see what works for you.

Mouse Sensitivity: How sensitive the mouse will be. On lowest, large and dramatic arm movements are required to move the mouse but a few inches onscreen. At the other end of the spectrum, a tiny bump or knock can send the cursor from one side of the screen to the other. Try somewhere around the lower end for starters, and then increase it little by little if it's moving too slowly.

Border Adjustment: Changes the size and position of the DVR's images on the screen. Altering the border size can be useful if you've got parts of the DVR's image extending beyond the part of the screen you can see.

The border adjustment is more likely to be required for older, CRT computer monitors connected via the VGA output. HDMI should (in theory) automatically adjust the DVR's

image to perfectly fit your screen.

Audio: Whether the DVR will output an audio signal. When checked, the DVR will output audio to a compatible device (via the HDMI [see note on the right] or the RCA Audio Output). When unchecked, the DVR will not output an audio signal at all.

Note: If you want to send audio via the HDMI, then you'll need to use a standard HD resolution. This is due to the way that HDMI embeds audio information around video information. The two resolutions that will stream audio correctly are 720p (1280 x 720) and 1080p (1920 x 1080). Selecting any other resolution will prevent audio being sent via HDMI.

Recording: Encode



The "Recording: Encode" menu allows you to alter and customize how the DVR records footage and encodes the files.

Encoding is a term which refers to the compression algorithm (a fancy computer term for "make the file smaller while retaining visual quality") used by the DVR.

You can choose and alter -

- The frame rate (how many images per second the DVR records)
- The bit rate of each video stream. The higher the data rate, the "better" your images will look, but the more space they'll require on your memory card

Camera No: The channel feed you want to alter the settings for.

Encoding Parameters: Whether you're editing the parameters for the mainstream or the substream.

Main-Stream: The main-stream is the video feed that the device will record and display. This is the higher-quality stream.

Sub-Stream: The sub-stream is the video stream that the device will send to remote devices via a network or the Internet. It is the lower-quality stream as a reduction in video size makes it easier to send over a network.

Record Audio: Select this if you would like this particular channel to record audio. If you don't have any audio devices connected, leave this disabled.

Resolution: 960H is the default recording resolution (960 x 576 PAL, 960 x 480 NTSC). As noted on page 4 - "What is 960H?" a standard CCTV camera's horizontal image will be slightly stretched when recorded.


Frame Rate: The number of frames per second (fps) that the device will record. The default (and maximum) is referred to as "real-time" and is 15fps.

Max. BitRate(Kbps): The actual amount of data that the device will use to record video. The higher the bitrate, the more space each recording will take. Generally speaking, recordings encoded at higher bitrates will be of better quality, especially when recording movement.

The main-stream uses a variable bitrate to record video - the more movement occurs in the video, the higher the bitrate will have to be. When there's little movement in view, the device will automatically reduce the bitrate to conserve space.

The sub-stream uses a constant bit-rate. This makes the video easier to stream over a network or the Internet.

Recording: Option

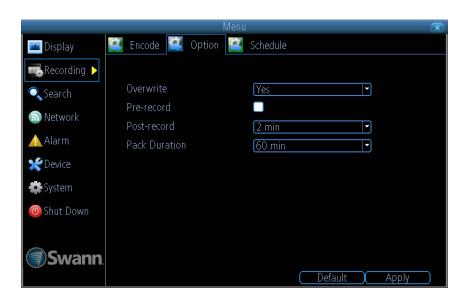

The "Recording: Option" menu allows you to change aspects of how the DVR will record footage such as -

- Whether the DVR will record a short video before events take place
- How long the DVR will continue to record after events have taken place
- How the DVR will store and divide long recordings into "packs"
- Whether the DVR will record over old footage to make room for future events

Overwrite: When enabled, the DVR will record over the files already stored on the hard drive. The DVR will always record over the oldest files on your hard drive first. Using the overwrite option is advisable, as the DVR will always be able to record events as they happen. However, it does mean that you'll need to get important events off the hard drive before they're overwritten.

Pre-Record: When enabled the DVR will record for a few seconds before an event occurs. It is recommended to enable this when using motion detection as your primary recording method.

Post-Record: How long the DVR will continue to record after events have taken place. It can be very useful - for example, if an intruder or potential target triggers the motion detection but pauses in view. Having this enabled will get a much better look at them.

Pack Duration: This is a measurement of how long the DVR will record for before splitting the output file into discrete units. "Packs" are something like the chapter numbers on a DVD - though the video is broken up into separate units, it will still play through as one continuous movie (unless interrupted by the schedule or motion detection turning the recording on or off). If you don't want to worry about setting pack durations, you can leave the default value as it will make little difference to the day-to-day running of the DVR.

Recording: Schedule



The image on the left shows a recording schedule defined for channel 1. If the DVR was started with this schedule, channel 1 would -

- Not record anything from midnight (00:00) to 6am (06:00)
- Record based on Motion from 6am (06:00) until 6pm (18:00)
- Record constantly from 6pm (18:00) until midnight (00:00)

The "Recording: Schedule" menu enables you to specify when the DVR records video and under what modes for each channel.

The schedule presented on-screen applies to one channel only over one whole week. Use the "Copy To" function to quickly assign identical schedule layouts to multiple channels at once. There is a 24-hour timeline for each day of the week. Each square in the timeline represents an hour in the 24-hour period.

Copy To: Located at the base of the screen, with "Default" on one side and "Apply" on the other. This will allow you to copy the schedule from the channel you're editing to another channel or channels.

Note: The action options for motion detection will affect the way the schedule works. By default, all channels are armed to use motion detection as their recording mode.

Any adjustments in the "Alarm" menu will change the device's behaviour, even when it is set to motion recording mode.



By default, all channels are armed to use motion detection as their recording mode. To disable the recording schedule for a particular channel, simply uncheck the "Enable" box.

There are several modes of recording to choose from:

Normal: The device will constantly record for any period where Normal is selected. You won't miss anything, but constant recording will fill your memory card very quickly. Typically, we suggest Motion as a better recording mode for most users.

Motion: The default and recommended recording setting. The device will only record when it detects something moving in front of a camera, and will then only record footage from the camera(s) that do detect motion unless you alter your Action settings.


Alarm: The DVR is armed to record if it detects an alarm event. This is the setting that you will need to use if you have external sensors connected to the DVR's alarm block or configured wirelessly.

Alarm/MD: Will trigger the DVR to record either an alarm event or when motion is being detected.


None: As the name suggests, the device will not record anything.

Search: Playback

To play your video recordings:

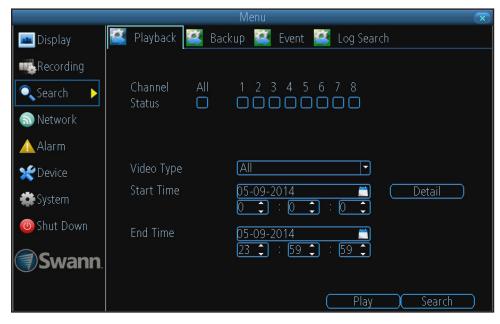

- 1. Select one or more channels you'd like to play back.
- 2. From the Video Type menu, select the type(s) of video you'd like to playback. The options are "All", "Manual", "Schedule", "Motion", "Alarm" and "Motion or Alarm".
- 3. Specify a Start Date/Time and an End Date/Time.
- 4. Click **Search**. The DVR displays a list of video events found based on your search criteria.
- 5. Choose the recorded event that you want to watch, and then click Play.

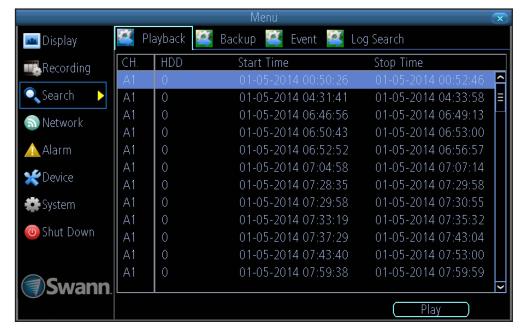

Search: Playback Interface

The **Playback Interface** is guite similar to a computer's media player, or to the on-screen display of a DVD/Blu-ray player. Most of the controls are quite straight forward, and operate in the same way as a standard media player.

Current Position: A basic progress meter. You can click to move the current position icon to quickly scan through video events.

Mute: Turn off sound from the video.

Cut & Copy: Allows you to copy interesting parts of the recorded video to a USB storage device.

- 1. To activate, click Cut. A red dot appears in the Cut button.
- 2. Click and drag the mouse cursor (this displays the scissors icons) along the video timeline to set the beginning and end points of video segment you want to save. You can select as many segments as you want by repeating this step. If you make a mistake, click Cut to cancel and start over from step 1.
- 3. When you're done, click Copy to initiate a backup to a USB storage device. Make sure you have inserted a USB storaged into your DVR.

Fast Rewind: Reverses the footage.

Play: Plays footage at normal speed.

Pause / Single Frame: Pauses playback. Subsequent presses will move a single frame forward in the video.

Fast Forward: Speeds up playback.


Slow Forward: Plays back footage at reduced speed.

Recording Type: Whether the video segment being played back was recorded under **normal recording** or based on **event**.

Hide: Maximizes the area on-screen for playing back your footage by hiding the on-screen controls.


Exit: Leaves the playback interface.



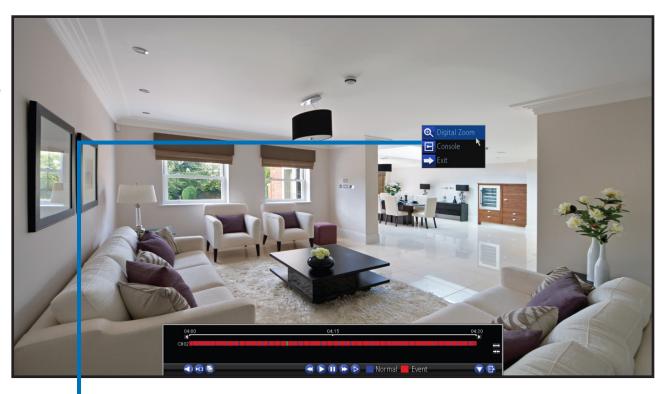



Search: Backup

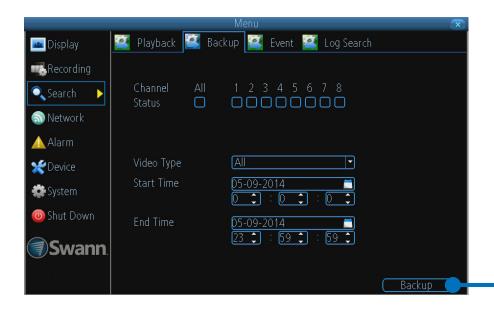


- 1. Select one or more channels you'd like to back up videos from.
- 2. From the "Video Type" menu, select the type(s) of video you'd like to back up. The options are All, Manual, Schedule, Motion, Alarm and Alarm/MD.
- 3. Set the Start Date/Time and the End Date/Time.
- 4. Click Backup. Make sure a USB storage device is plugged into an available USB port on your DVR.




While the backup process is executed, the DVR will display a pair of progress meters. The top one indicates the progress of the current video event and the lower one shows the overall progress. Please be patient as the backup process can be time consuming - doubly so when creating AVI files.

Search: Event & Log Search

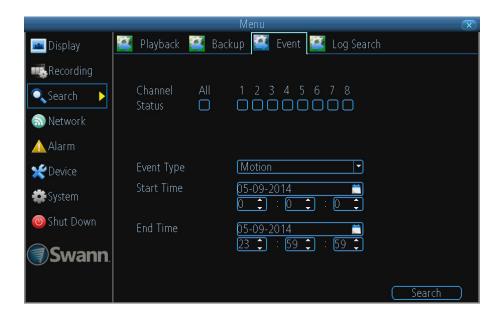

Event Settings


The "Search: Event" feature has a similar function to "Playback" but is specific to searching for motion and alarm events. You can search for one or more cameras and a particular time and date. Typically, the majority of recordings based upon events are likely to be recordings triggered by the DVR's motion detection and/or alarm feature.

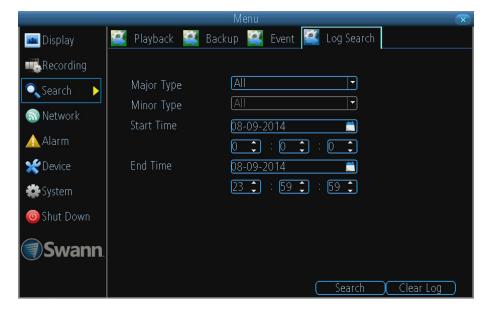

Log Search Settings

The "Search: Log Search" allows you to search for different types of system events such as video losses, exceptions, video playbacks, etc which occured through a period of time. Results are presented in a chronological order. The most recent events will be at the end of the list.

Network: General

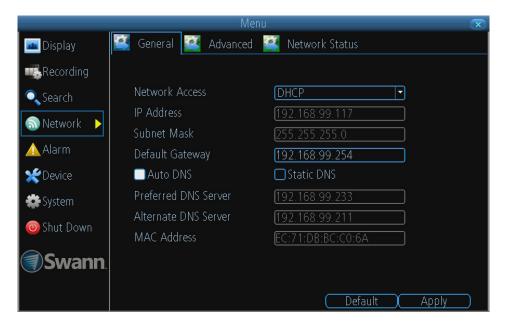

Network Access: Here you can choose between the three different types of networks that the DVR can be connected to. The three types of networks are:

- DHCP (Dynamic Host Configuration Protocol): Is a system where one device on your network (usually a router) will automatically assign IP addresses to devices connected to the network.
- Static: Static networks require all devices to have their IP addresses manually defined, as there is no device dedicated to automatically assigning addresses.
- **PPPoE:** An advanced protocol that allows the DVR to be more directly connected via a DSL modem. This is an option for advanced users only.

IP Address: Just as houses and businesses need to have an address which identifies their location on the road network, so too do computers and other devices need addresses to identify their position on the electronic network. The device uses IPv4 addressing, which consists of four groups of numbers between 0 and 255, separated by periods. For example, a typical IP address might be "192.168.1.24" or something similar. The most important thing when setting the IP address is that nothing else on your network shares that IP address.


Subnet Mask: If the IP address is like a street address, then a subnetwork is like your neighbourhood. This will be formatted in a similar way to the IP address (e.g. four numbers up to 255 separated by periods) but contain very different numbers. In the above example, the Subnet Mask might be something like "255.255.255.0".


Default Gateway: This is the address of the "way to the Internet" - to continue the road analogy, this is like your local access point to the highway. This is an IP address in the same format as the others, and is typically very similar to the IP address of the device. To continue the above examples, it might be something such as "192.168.1.254".

Preferred DNS Server: Everything on the Internet is located via an IP address - however, for ease of use, we associate domain names with those IP addresses.

Alternate DNS Server: A backup DNS server. This is here as a redundancy; your device will probably work without one.

Network: Advanced & Network Status

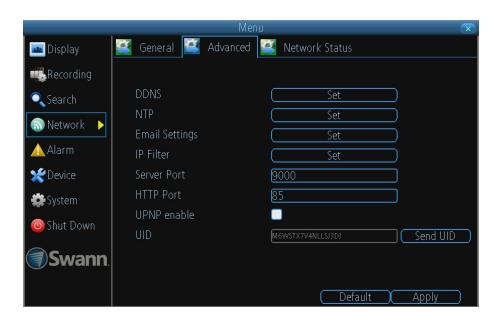

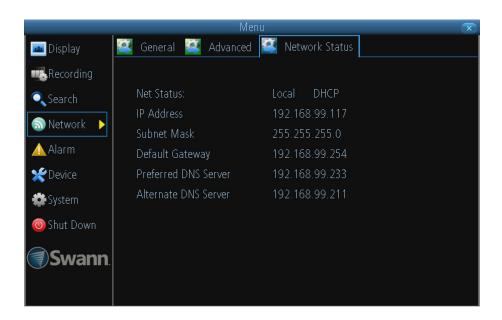

Advanced Settings

Note: Many of the following networking settings are not required when using SwannLink P2P for remote access.

DDNS: The place to configure the DVR to automatically update a dynamic DNS service. DDNS is not required for SwannLink P2P remote access. If you intend to access your DVR using older IP technology you will need to configure this service.

NTP: Network Time Protocol. If the DVR connected to the Internet, it will automatically sync time with an online server.

Email Settings: Where you can configure the DVR to work with an email account of your choice. This must be correctly configured for the DVR's auto-email feature to work. This section has been covered in the guick start guide.

IP Filter: An advanced feature that allows you to exercise precise control over which devices can communicate with the DVR.

Server Port: This is the port that the device will use to send information through. Enabling UPnP on your router allows the DVR to communicate via the Internet.

HTTP Port: This is the port through which you will be able to log in to the device.


RTSP Port: This is the port through which the mobile app communicates with the DVR.


UPnP Enable: This is enabled by default.

Network Status

The "Network: Network Status" screen displays a quick summary of your current network settings. You can't alter anything here.

Alarm: Motion: Motion Detection & Sensitivity

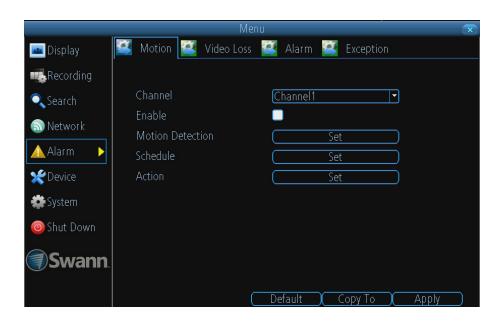

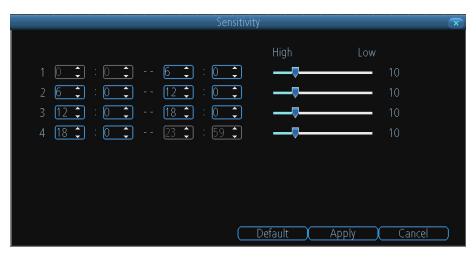

Motion Settings

The way that the device looks for motion is quite straight forward - it's a process where it compares one frame with the next. A certain amount of "difference" between these two "frames" is interpreted as motion. As a result, the device is able to detect when there is a change in the picture. However, this does not necessarily need to be something moving in the frame. For example, a light being turned on or off, a lightning flash or even the sun coming out momentarily on a cloudy day might be enough to trigger the motion detection. However, as these events last only a moment (and are relatively rare) they will only create a few very short redundant clips, which will not take up too much space or pose a problem with scanning through footage.

Channel: Select the camera that you would like to alter.


Enable: Whether or not motion detection is enabled on a selected channel. Each channel can be configured independently of one another.

Motion Detection: Click the Set button to setup the motion detection area for that channel. You will see a grid of red boxes. The outlined boxes mark the area that is sensitive to motion. The area without the red outlines is not sensitive to motion. Click and drag to select the area you want to select or de-select.

Adjusting motion sensitivity

You can access this by right-clicking the mouse when you are setting up or changing the motion detection area. The Sensitivity setting is controlled by a slider, allowing you to set a value between 0 and 50. The lower the number, the more sensitive the motion detection will be. There are four time periods which you can define different motion sensitivity values for. You can change what time(s) each period starts and ends to best match the changing lighting conditions in your location. At night, you may get numerous false triggers unless you raise the sensitivity setting, perhaps as high as 25 - 30. This is because when cameras use active infrared night vision, they dramatically increase the gain controls to the image sensor. To find the best sensitivity values for different times of day/night, it's best to test the system during different time periods. Get an able-bodied volunteer to move about in front of the cameras you'd like to tune the sensitivity for. The ideal sensitivity level is when your volunteer moving about always triggers the motion detection, but there are no false triggers (or very few) when your volunteer isn't moving about.

Alarm: Motion: Schedule & Action

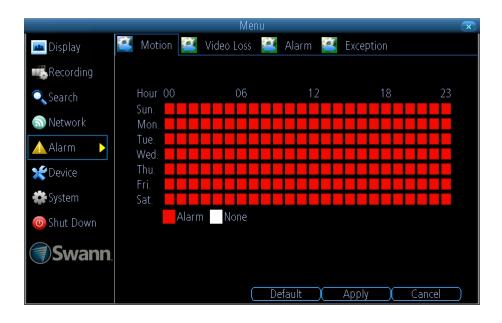

Schedule

Allows you to select which day and what time that you would like Motion Detection to be enabled for. By default Motion Detection is enabled 7 days a week for 24 hours. If you want to alter this, click on the day and time that you want to change.



Action Settings

Audio Warning: The DVR will use its buzzer to emit an alarm tone.

Send Email: The DVR will send an auto-email alert when the event type you've selected occurs.

Push: The DVR will send a push notification to your SwannView Link app.

Trigger Camera: You can define a camera's motion detection to trigger recording on one or more other cameras. This can be useful in a number of situations -

- If you have two cameras overlooking a yard, one with a wide view from well overhead and one with a much narrower view of a corner or path. You may find that using the camera with the narrow view for motion detection gives fewer false triggers, so triggering the wide view to record as well ensures you know where the subject went after they left the narrow view
- One camera might face a public area, while another camera looks down a private corridor which exits into the public area. Having the camera in the private area trigger the one in the public area to record can give you a record of where a subject went

Motion Detection Tips

Consider how important it is to be notified of motion events as they happen. Using email or app alerts are a great way to be kept up-to-speed on what's happening, but may quickly become annoying if something occurs which will generate a number of false triggers. As a rule, we suggest employing email or app alerts only on interior cameras during times that no one should be moving about in front of them. It can be important to have a complete record of a subject's movements and actions for legal reasons.

If your cameras capture an illegal event (typically an intruder) it is important to have as much information as possible. For example, images of someone in your home may not actually prove that they broke in - but footage of them breaking a window does. If you use a camera inside the home to trigger all exterior cameras with pre-record enabled, then you will have a record of how they entered in addition to what they did.

Always consider what's really important. Which is the bigger problem - a dozen false triggers per day, or missing one critical event? There's no magic setting which will make motion detection work perfectly. There will always be some events that are not sensitive enough to catch, or minor happenings that will trigger an overly sensitive camera to record. Typically, the best motion detection settings are one's that give few false triggers but don't miss anything.

Even motion detection which false triggers a few times per hour will still save a significant amount of hard drive space compared with a constant recording schedule for the same duration -

- Position your cameras well
- Many issues seen with motion detection and security cameras can be traced back to poor positioning of the camera itself
- Make sure the area in front of your cameras is as clear as possible so it has an unobstructed view of potential activity

Consider the centre of the camera image is the "sweet spot" which gives you the highest detail and the best image clarity so the centre of the image should be right where you need to see the real activity.

Position you camera so that any potential intruder's face will have to pass the centre of the image as closely as possible without allowing the camera to be tampered with.

Also note that while having the cameras show some sky in the image might make the picture look nice it is also a higher level of contrast the camera has to deal with, keep the sky and any other bright objects to a minimum so that the camera has the best chance of getting the image you need to identify the intruder or licence plate -

- Keep the view distance to the shortest possible
- Place the cameras as close to the subject as possible to ensure you get the best possible level of detail


Digital zoom can make the image bigger but if the camera is too far away then no amount of digital zoom will make the subject any clearer.

Where possible have some overlap for your cameras. Overlapping camera views make it difficult for someone to access and tamper with one camera without another camera capturing some video of the event.

Keep your cameras clean. Dirty lenses can affect the image quality; give the lens a clean from time to time.

Note that spider webs are almost invisible during the day but are extremely reflective at night which can dramatically affect the night vision from your cameras, so keep the spider webs away from your cameras too.

Alarm: Video Loss

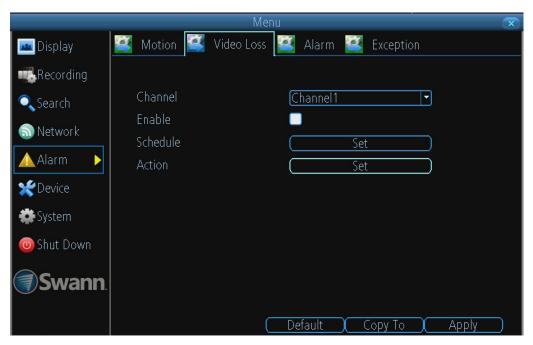


"Video Loss" is regarded as a potential alarm event, and is considered to occur any time that the DVR doesn't receive an active video signal on any of its inputs. The default behaviour of the DVR, when a channel has no incoming video signal, is simply to display "Video Loss" in white text on a black background over the associated channel. If you're not using all the inputs on your DVR, then some channels will be in "permanent" video loss state. Just be sure that you don't enable a video loss action for these channels.

Channel: Which channel/camera you'd like to set the video loss behaviour for.

Enable: Whether the selected channel has video loss monitoring active or not.

Schedule: Schedule when the current video loss action will be active.

Action: The action you'd like the DVR to take when this event occurs. It's set in the same way as the action for any other event.

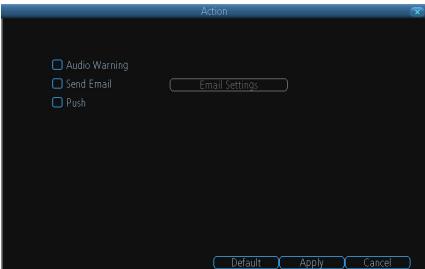

Action Settings

Audio Warning: The DVR will use its buzzer to emit an alarm tone.

Send Email: The DVR will send an auto-email alert when the event type you've selected occurs.

Push: The DVR will send a push notification to your SwannView Link app.

Alarm: Alarm Devices

Note: The menu settings displayed here are applicable only to Swann's latest Alarm DVR kit models.





On this menu, you can configure settings for your motion sensors, remote controls and siren.

Exit/Entry Delay: Allows you to specify the length of time that you have to leave or enter the premises before the alarm will be activated. This is linked to the "Entry Path" option.

Siren Duration: Specify how long you want the siren to sound when activated.

Channel: Click to select a paired sensor or remote. When a sensor or remote is activated, the channel number will momentarily flash red.

Name: Click to change the name of the paired sensor or remote.

Channel: Click to select a paired sensor or remote. When a sensor or remote is activated, the channel number will momentarily flash red.

Group: There are three options available to group your sensors.

- For the PIR motion sensor, it is recommended that you set this to "General". This means any movement within the vicinity of the sensor will then activate the siren to be activated when you select "Arm" in the "Alarm Control" menu.
- For the window/door sensor, it is recommended that you set this to "Perimeter". The perimeter group allows movement inside the house (when you select "Home" in the "Alarm Control" menu) `but if a window or door is opened this will activate the siren.
- The remote control is always set to "SOS" and cannot be changed.

Entry Path: Select this if the sensor will be activated when entering or leaving your home. This gives you extra time (that you've selected for exit and entry) to disable the alarm before the sensor is activated.


Action: Click to enter the "Action" menu (see screenshot on the bottom left). When a sensor has been activated, you can instruct the DVR to emit an audio warning, send an email, activate the siren, send a notification to the SwannView Link app and to display a warning on-screen. You also have the option of triggering the DVR to record from one or more cameras.

Pair Siren: Click to start the pairing process between your siren and your DVR. This is only required if your siren is no longer detected by your DVR. You can also use this to pair new sirens with your DVR.

Begin Pairing: Click to start the pairing process between your sensor and your DVR. This is only required if your sensor is no longer detected by your DVR. You can also use this to pair new sensors with your DVR.

Delete: Delete a selected sensor or remote.

Alarm: Exception

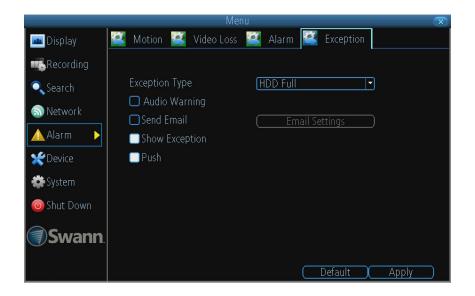

An "Exception" is any deviation from the DVR's normal behaviour - phrased another way, it's like saying the DVR has been working fine except for these events.

Exception Type: What event type you'd like the DVR to react to. By configuring the action for these events, you can create any combination of audio alerts or auto-emails to be sent for different event types.

HDD Full: As the name suggests, this event occurs when the DVR runs out of space on the hard drive to save new footage. This event is redundant if you've got overwrite enabled, as the DVR will automatically delete old footage to ensure it can continue to record.

HDD Error: Occurs when the DVR has trouble accessing its hard drive, or when it cannot detect one at all. This error could be generated by either an internal hard drive, or an external one connected to the eSATA port.

Net Disconnected: Will occur if the DVR has problems connecting to the Internet. This may indicate a problem with the DVR's configuration, a fault with your network or a problem with your Internet Service Provider (ISP).


IP Conflict: This event will occur if the DVR detects another device on the network using the same IP address. This shouldn't occur if you're using DHCP.

Audio Warning: The DVR will use its buzzer to emit an alarm tone.

Send Email: The DVR will send an auto-email alert when the event type you've selected occurs.

Show Exception: The DVR will display an "error' icon at the bottom right corner of the main screen when the event type that you've selected occurs. Click on the icon to know more about the exception that occurred.

Device: HDD & S.M.A.R.T

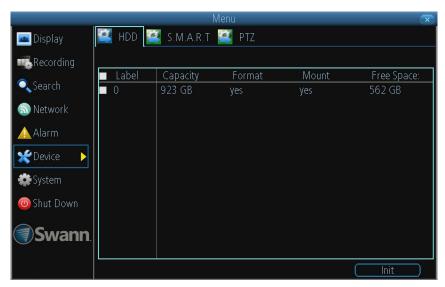

HDD


Here you'll find a comprehensive list of hard drives connected to the DVR.

External drives connected via eSATA will be listed here, and will behave like a standard hard drive. They will be labeled as eSATA.

External drives connected via USB will not appear on this list, and can't be used to record footage - USB lacks the bandwidth to write multiple streams simultaneously. External USB drives can only be used for backing up footage.

Init: Initializes the hard drive. You'll only need to do this for drives once, assuming that it's not already initialized. If the Mount column reads "No", select the hard drive and then choose Init. to initialize the drive.

Warning! Don't initialize a drive that already has data on it, as the initialization process will erase any information on the drive.

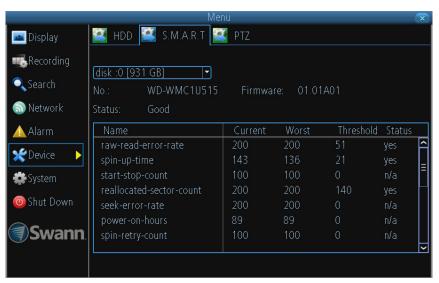

S.M.A.R.T

S.M.A.R.T (Self-Monitoring, Analysis and Reporting Technology) is your hard drive's way of telling the DVR how it's going.

Status: The current condition of the hard drive. It should say "Good". If it says anything else, this indicates there's a problem with your hard drive.


If there's no problem, there's little else to do here, unless reading the output of the dozens of self-tests the hard drive performs on itself is of interest to you.

If you have been confronted with a HDD Error, or the Status entry doesn't read "Good" then you can use the S.M.A.R.T. information to attempt to diagnose the problem. The information presented in the S.M.A.R.T. report is practically identical to what you'd see on a desktop PC while using *Administrator Tools*, or a similar service.

Device: PTZ

Right-click to access PTZ context menu



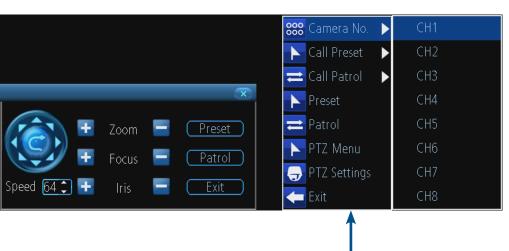

PTZ

This is where you can configure the DVR to be able to operate PTZ devices. PTZ stands for Pan, Tilt & Zoom.

The DVR is compatible with many - but not all - PTZ devices available. For the best results, we suggest using a *Swann* PTZ camera, as we know what they're compatible with and we'll be able to offer support for both devices at once (should you need it).

Camera No: The camera you'd like to associate a PTZ device with.

Baudrate: Check the PTZ device's documentation to learn this value. Most *Swann* PTZ units operate at 2400 or 9600bps.

Data Bit, Stop Bit & Parity: Options that subtly change the way the DVR talks to the device. This is important to get right - check your PTZ device's documentation to learn the correct settings.

PTZ Protocol: A protocol is like a language that the DVR uses to talk to the PTZ device. Ensure that this setting matches the requirement of your device.

Address (0 - 255): The command address of the PTZ device you want to associate with this channel.

Important: Don't use Motion Detection on channels with PTZ cameras attached. The DVR can't tell the difference between something moving in front of the camera and the camera itself moving!

PTZ Control Window

The PTZ controls can be accessed from the Live Viewing screen by left-clicking once on the

channel screen of the corresponding PTZ camera and then clicking the 🔙 PTZ icon.

Arrows: Moves the camera in the direction selected.

Speed: How fast the camera will move. The higher the number, the faster the movement. Note that the actual speed of movement will depend upon the capabilities of your particular PTZ device.

Zoom: Increases or decreases the magnification of a varifocal lens. **Not all PTZ devices have varifocal lenses.**

Focus: Alters the focal point of a PTZ device with a varifocal lens. Try adjusting this control if your images seem "soft" or blurry. **Not all cameras support this function.**


Iris: Alters how much light gets into the camera by opening and closing the iris of the camera. Not all PTZ cameras have an adjustable iris. Also called an "aperture". **Not all cameras support this function.**

Preset: A Preset is a position that the camera is in which is saved to memory to be retrieved later.

Patrol: Initiates patrol mode (also sometimes called "cruise" mode). You'll need to define a series of Preset points for the camera to patrol between.

Exit: Closes the PTZ control window.

System: General

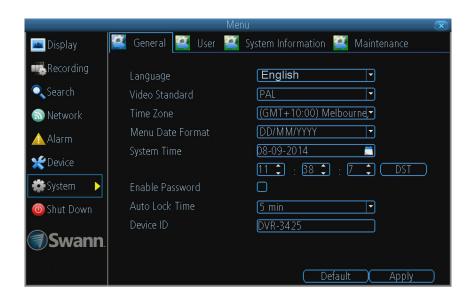

The "System: General" menu contains many of the settings you'll need to configure to get the most out of your DVR system.

Most importantly:

- You can set the time and date here.
- You can select the language you want for the menus.
- The configuration for automatic adjustment to daylight savings time is here.
- You can easily enable or disable password protection but will have to create a valid username/password.

Language: The language that the DVR's menus, alerts and other communications will use. This usually defaults to English.

Video Standard: Here you can choose between PAL and NTSC. PAL is used in Western Europe and Australia, NTSC is used in the US, Canada and Japan. If the DVR's picture is black and white, flickering or similar, then this is probably caused by the video system being set incorrectly.

Time Zone: Particularly important if you've enabled NTP - set this to the time zone where you happen to be. For example, people in eastern Australia (Canberra, Sydney and Melbourne) choose GMT+10:00, whilst the Eastern Time zone in the USA and Canada is GMT-05:00. (GMT stands for Greenwich Mean Time - it's the baseline that keeps all the different time zones in sync.)

Menu Date Format: The format of the date (e.g. DD/MM/YYYY or MM/DD/YYYY and so on).

DST Setting: As the standards for daylight savings differ from country to country, and often state to state, you might need to manually tell the DVR exactly when it commences and ends in your locality. First, turn DST on. We suggest setting the Daylight Saving Time Mode to Date, and manually entering the dates and times that daylight savings


time applies to and from, in your locality.

Enable Password: When enabled, the DVR will require a password to access, even for local users. It's advisable to enable password protection

Auto Lock Time: When password protection is enabled, the DVR will automatically time-out, where after it will ask for a password before returning to normal functioning. The Auto Lock Time determines how long a period of inactivity will cause the DVR to lock itself again.

Device ID: Differentiates your DVR from other devices. If you don't have any other DVRs or similar devices, then you can leave this as is. If you've got multiple DVRs running on the same network, then it's a great idea to give each a unique ID.

System: User

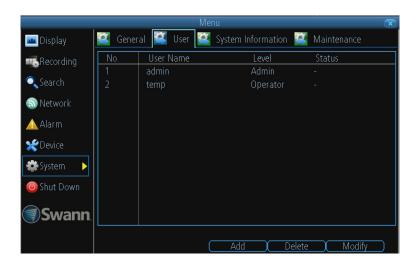

Add User Screen



User Name: Select a name for the user you want to define. The best usernames are short, to the point, are relevant to the specific user they're intended for, are easily memorable and hard to guess.

Password: A password can be any combination of numbers (0 though 9) between one and eight characters long.

Confirm Password: Must exactly match the password for the definition of a new user to be successful.

Level: There are two default levels of access to the DVR - Guests and Operators.

- Guest: By default, a Guest user has access to the live images on the DVR and can search through recorded events. They cannot change any settings or configure the DVR in any way.
- Operator: The default permissions of an Operator allow them to access and configure all aspects of the DVR.

Customizing User Access Permissions

You can easily customize the level of access each individual user has. Simply choose the **Permission** button on either the **Add User** or **Modify** to set the specific access for the user you want. The Permission menu has two tabs - **Configuration** and **Operation**.

The "System: User" menu is where you can define and configure the different levels of access various users have to the DVR.

We suggest that at minimum the admin account be password protected, as it has access to all aspects of the DVR's operation.

- To add additional users, choose Add.
- To remove a user, choose Delete.
- To customize a user's level of access, choose Modify.


You cannot modify the access level of the default admin account - they can do everything. This is to prevent an unfortunate incident where, for example, no user has the permissions required to change another user's permissions - which could lead to the DVR being, in at least some senses, inoperable.


Configuration: The configuration page specifies which menu(s) the user can access. There is no hierarchy and any combination of menus can be selected (although some combinations would make little sense in practice).

Operation: You can select which channels the user has access to, and what they can do with them. For example, you could set a user to have permission to view all channels in live viewing mode, but only playback channels 2 and 4.

Click the **Set** button next to each type of access to select specific channels that the user can access.

Also, this page contains permissions for **HDD Management** and **Shutdown**. These are surprisingly powerful levels of access: between them, a user can remove all footage from a DVR's hard drive and turn the DVR off. Be careful assigning these permissions!

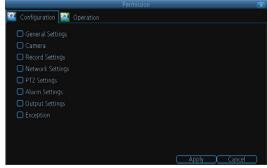

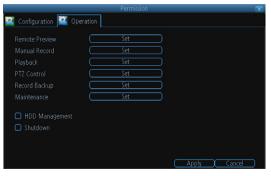

System: System Information & Maintenance




System Information

If you're looking at the System Information screen, you've probably been directed to do so by Swann Technical Support.

If we haven't told you to come here, you might be wondering what all the information means. On a day-to-day level, the answer is very little. However, if you're still curious -

Device Name: The name that the device considers to be its own and what it will use to register an IP address with.

The remaining information is for use by Swann's Technical Support, in the event that you require assistance. The various model and build numbers help us track down any known issues, or catalogue new issues as they come to light. It also helps us figure out if you're running the most recent firmware on the device, and whether you'd benefit from an upgrade.

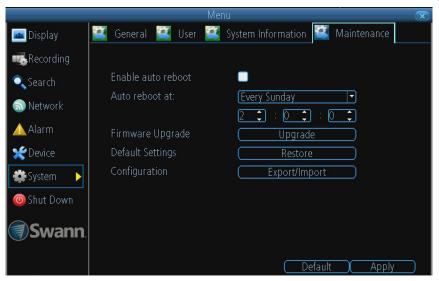

Maintenance

Enable auto reboot: To maintain the operational integrity of the device, it is suggested that it be rebooted periodically. In much the same way that a computer can become unstable if left on for an extremely long time, the device can become unstable. It is strongly suggested that the device be rebooted at least once per week.


Auto reboot at: Choose when you'd like the device to reboot. Typically, this will be a time when it's unlikely there'll be any activity for the device to record.

Firmware Upgrade: Instructs the device to update its firmware. You'll only need to use this option if instructed to do so by Swann Technical Support (remember to export your configuration first so you don't have to re-set everything!).

Default Settings: Loads the factory default settings.

Configuration: Creates a file (Export) containing all the settings you've customized on the DVR, including your recording preferences, schedule, user-list and so on or loads (Import) a previously saved configuration file.

SwannView Link Windows Software

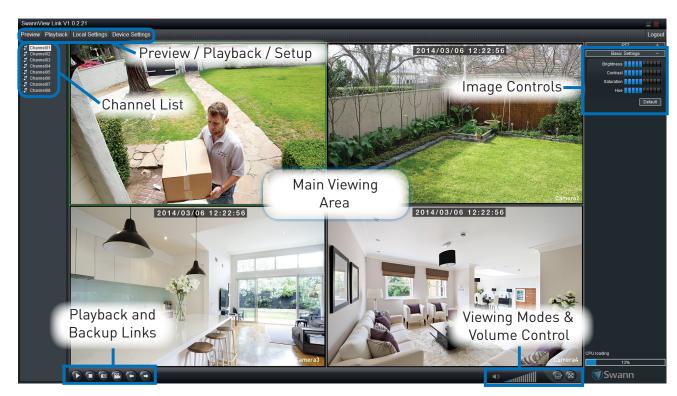

The SwannView Link Windows software enables you to control your DVR from within the same network (this usually means in the same building) or remotely over the Internet. The software interface is functionally very similar to the DVR's menu system, and you'll find more detailed information about all menu options and settings in this section.

Live View Screen

Preview: The default live-view screen of SwannView Link.

The screen layout emulates the multi-channel live view screen of the DVR, showing you images coming directly from your cameras in near real-time (some delay is caused by the network/Internet connection you're using to access the DVR).

You can select a single camera, or multi-channel viewing by selecting either the **Split-Screen** or **Full Screen** viewing mode buttons in the lower right corner. When in Split-Screen view, you can double-click the mouse on one of the cameras to switch to a full screen view. Double-click again to return back to split-screen view.

Playback: Opens the Playback interface, which operates in much the same way as the playback interface on the DVR itself.

Local Settings: Here you can specify where to save footage and still images in your computer. See "Local Settings Screen" on page 28 for more information.

Device Settings: Opens the DVR's settings screen. The configurable options are very

similar to those you'll find in the DVR menus.


PTZ Controls: These buttons are used to control PTZ devices (if connected to the DVR). They operate in the same way as those you'll find on the DVR itself.

Basic Settings: You can control the brightness, contrast, saturation and hue of your images here.

CPU Loading: How hard your computer is working to decode and display images as they arrive from the DVR. If this is consistently high, you can try:

- disabling multiple monitor setups. The SwannView Link application doesn't support hardware acceleration across multiple monitors. Disabling all but your primary monitor will greatly increase performance.
- reduce the number of video feeds being displayed. Select a channel and click Stop to disable the monitoring.
- switch to single channel view.

Local Settings Screen

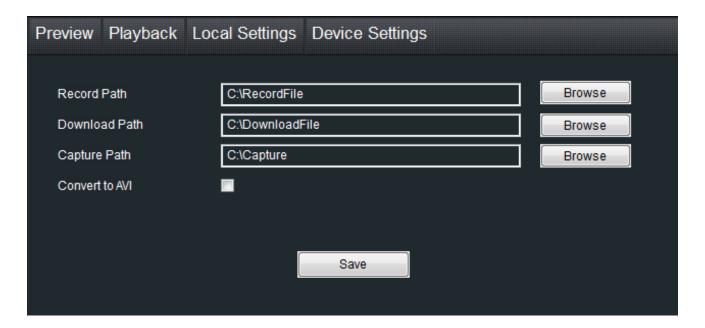

The local configuration screen is where you can customise how SwannView Link will store and process footage on the local PC when you download it from the device.

Record Path: Where SwannView Link will save recordings if you select **Record** from the **Preview** screen.

Download Path: Where SwannView Link will save footage that you've downloaded from the device.

Snapshot Path: Where SwannView Link will save still images captured using the snapshot function.

Convert to AVI: When selected, SwannView Link will use your computer to transcode footage from the device's native format (H.264) into a format that your computer (indeed, almost any computer) will be able to playback without special software.

About transcoding to AVI

Don't be put off by the complex word - transcoding is just a shortening of "translating code".

Transcoding, while a straight-forward process, is very processor intensive. You may notice significant slow-down on your computer while the transcoding takes place. For best results, try not to over-burden your computer; just let it transcode the footage in peace.

If you have playback problems...

Some media players have trouble playing back the transcoded AVI files from the SwannView Link software.

We recommend using VLC media player, which has no problems with the DVR's AVI files.

You can get it for free from: www.videolan.org/vlc

Device Settings Screen

Display: Channel Settings

Channel: Choose the channel that you want to edit here.

Channel Name (checkbox): Enable the display of the channel's name on screen.

Channel Name: Enter a name for the camera you've selected.


Position Settings: Select the position of the channel name label that is overlaid on screen.

Date/Time (checkbox): Enable the display of the date and time displayed on screen.

Position Settings: Select the position of the Date/Time labels that are overlaid on screen.

Mask (checkbox): Enable the masking function.

Mask (Setup): Lets you create and place a "privacy mask" to conceal parts of the image on the associated channel.

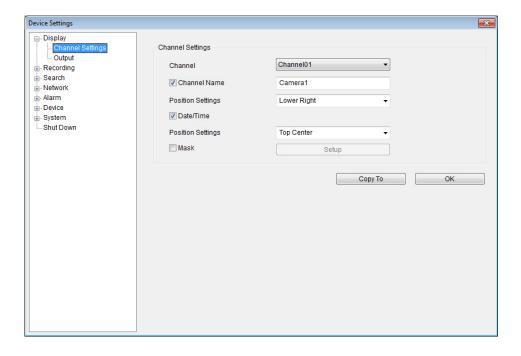

Display: Output


Resolution: Set the screen resolution to output to your monitor.

Transparency: How transparent you want the menus to be.

Mouse Sensitivity: Adjust the sensitivity of mouse movements.

Dwell Time: Select how long channels will be displayed when using auto-sequence mode.

Audio: This function is not supported by the camera(s) supplied with the DVR.

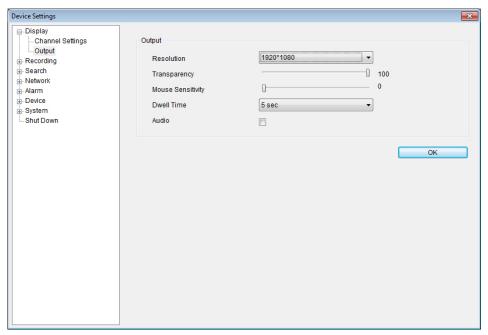

Recording: General

Channel: Choose the channel that you want to edit here.

Stream Type Choose the encoding stream you want to configure settings for.

- Main Stream: The main stream is the video feed that the DVR will record and display.
 This is the higher-quality stream.
- **Sub Stream:** The sub-stream is the video stream that the DVR will send to remote devices via a network or the Internet. It is the lower-quality stream as a reduction in video size makes it easier to send over a network.

Record Audio (checkbox): This function is not supported by the camera(s) supplied with the DVR.

Resolution: How many pixels (little dots) make up your image.

Frame Rate: How many images per second the DVR will capture.

Maximum Bitrate: The actual amount of data that the DVR will use to record video. The higher the bitrate, the more space each recording will take up on the hard disk. Generally speaking, recordings encoded at higher bitrates will be of better quality, especially when recording movement.


Recording: Advanced Settings


Overwrite (checkbox): Enable the DVR to erase old recordings to make room for new ones.

Pre-record (checkbox): Enable the DVR to cache and save footage that occurs immediately before an alarm/motion event.

Delay: How long after an alarm event or motion the DVR will continue to record for.

Pack Duration: The amount of video that will be stored as a single "pack". Unless you have very specific requirements, leave this at the default value.

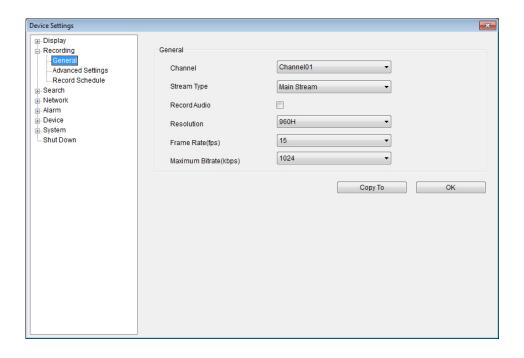

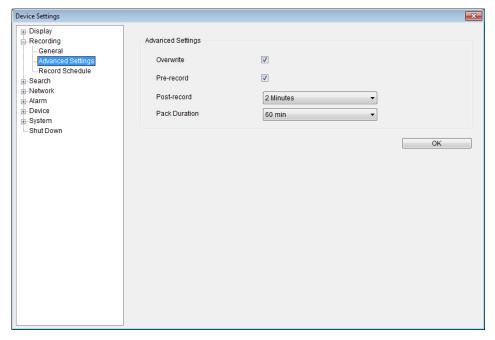


Recording: Record Schedule

Channel: Choose the channel that you want to edit here.

Defining a Schedule

- To set a recording mode for a specific time and day, click the corresponding square(s) in the timeline until the colour changes to your desired recording mode Blue (Normal recording), Green (Motion recording), Red (Alarm recording), Brown (Motion or Alarm recording) and White (Not recording).
- A quick way to set a specific type of recording over a large period of time is by clicking
 on the desired recording mode button below the timeline then clicking and dragging
 the mouse over the squares corresponding to your desired days and times.

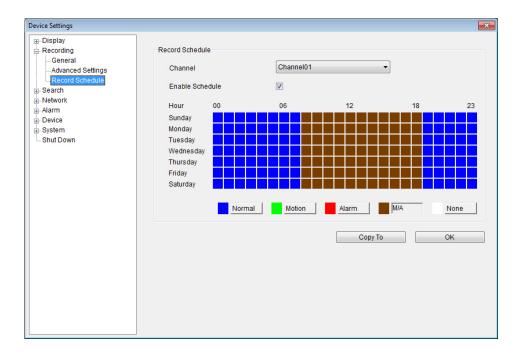

Network: General

Be careful adjusting settings here - if the DVR can't access the network anymore, you won't be able to configure it remotely!

Network Access: How your network is addressed - either DHCP or STATIC IP addressing.

IP Address: The DVR's assigned IP address.


Subnet Mask: A required additional piece of IP addressing information.

Gateway: The way "out" of your network, to the Internet.

Auto DNS / Static DNS: Whether the DVR will automatically select a DNS server, or use one you assign.

Preferred / Alternate DNS: The DVR has two DNS servers, essentially a primary and a backup.

MAC Address: The Media Access Control address. This is a unique code which nothing else should share. You can't change this one - it's pre-set when the DVR ships out.

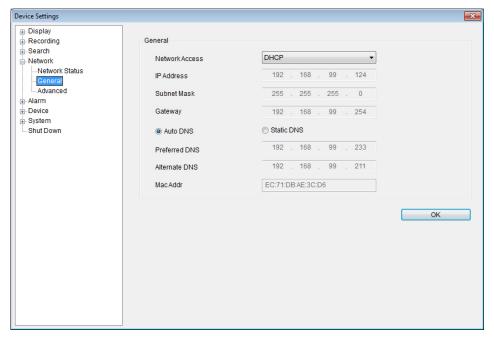

Network: Advanced Settings

DDNS Setup: Open the DDNS setup window where you can configure a Dynamic DNS server for your DVR.

NTP Setup: Open the Network Time Protocol setup window where you can configure the NTP server details to obtain current date and time.

Email Setup: Open the Email Setup window where you can configure your email account details to receive alerts automatically from the DVR.

IP Filter Setup: Open the IP Filter window where you can configure the lists of IP addresses that have permission or are prohibited to connect to the DVR.

Media (Server) Port: One of the two ports the DVR needs to communicate over your network. Ensure nothing else uses this port. The default value is **9000**. This is the port number you'll use when logging in over the Internet from the *SwannView Link* software or remote access from a mobile device.

HTTP Port: The second of two ports the DVR needs to communicate over your network. Ensure nothing else uses this port. The default value is **85**.

RTSP Port: This is the port through which the mobile app communicates with the DVR.

Device Settings ⊕ Display - Recording Advanced Search DDNS Setup - Network - Network Status NTP Setup General E-mail Setup Alarm IP Filter Setun - Device System Media Port 9000 Shut Down 85 HTTP Port 554 RTSP port 1 UPnP enable M6M8VT7V177385LD UID OK

Alarm: Motion


Channel: Choose the channel that you want to configure motion detection settings for.

Enable (checkbox): Tick to enable motion detection for the selected channel.

Sensitivity: Open the Sensitivity window where you can set motion sensitivity levels according to different times of the day.

Schedule: Open the Schedule window where you can define a schedule for when the camera will be sensitive to motion. By default, all cameras are scheduled to look out for motion the entire time throughout the week.

Action: Open the Action window where you can specify what actions the DVR should take when it detects motion. The DVR can be configured to trigger an email alert, or sound its internal buzzer, or both.

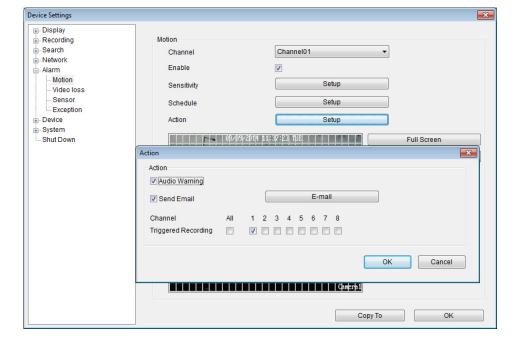


Alarm: Video Loss

Channel: Choose the channel that you want to configure video loss settings for.

Enable (checkbox): Tick to enable video loss monitoring for the selected channel.

Schedule: Open the Schedule window where you can configure when current Video Loss Action will be active.

Action: Open the Action window where you can specify what actions the DVR should take when a video loss event occurs. It's set in the same way as the Action for any other event.

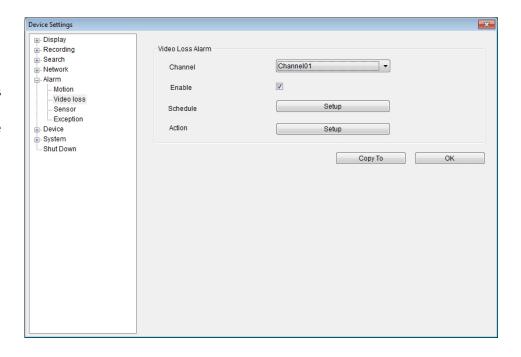


Alarm: Exception

Exception Type: What event type you'd like the DVR to react to. By configuring the **Action** for these events, you can create any combination of audio alerts or auto-emails to be sent for different event types.

Audio Warning: Tick to enable the DVR to sound its internal buzzer.

Send Email: Tick to enable the DVR to send an email alert.


Show Exception: Shows any alerts that occur at the bottom right corner of the main screen. Double-click on the alert notification to see details.

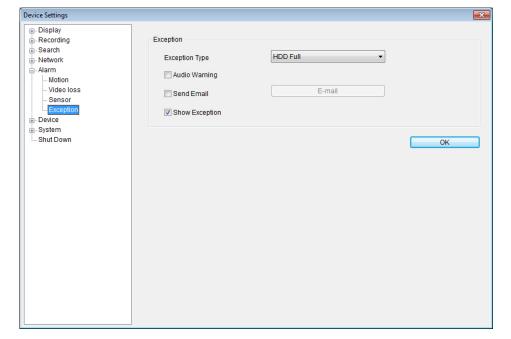

Device: HDD

Init: Initializes the hard drive. You'll only need to do this for drives once, assuming that it's not already initialized. If the **Mount** column reads "**No**", select the hard drive and then choose **Init.** to initialize the drive.

Warning! Don't initialize a drive that already has data on it, as theinitialization process will erase any information on the drive.

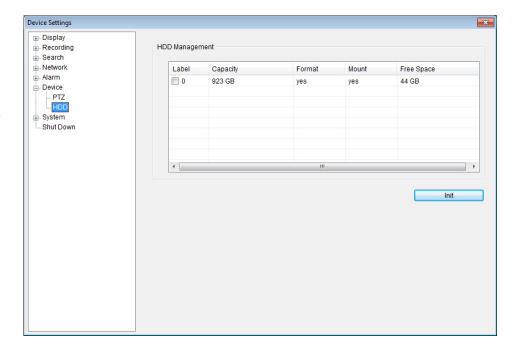

Warranty Information

USA

Swann Communications USA Inc. 12636 Clark Street Santa Fe Springs CA 90670 USA **Australia**

Swann Communications
Unit 13, 331 Ingles Street
Port Melbourne Vic 3207
Australia

United Kingdom

Swann Communications LTD.
Stag Gates House 63/64 The Avenue
S0171XS
United Kingdom

Warranty Terms & Conditions: Swann Communications warrants this product against defects in workmanship and material for a period of one (1) year from its original purchase date. You must present your receipt as proof of date of purchase for warranty validation. Any unit which proves defective during the stated period will be repaired without charge for parts or labour or replaced at the sole discretion of Swann. The end user is responsible for all freight charges incurred to send the product to Swann's repair centres. The end user is responsible for all shipping costs incurred when shipping from and to any country other than the country of origin.

The warranty does not cover any incidental, accidental or consequential damages arising from the use of or the inability to use this product. Any costs associated with the fitting or removal of this product by a tradesman or other person or any other costs associated with its use are the responsibility of the end user. This warranty applies to the original purchaser of the product only and is not transferable to any third party. Unauthorized end user or third party modifications to any component or evidence of misuse or abuse of the device will render all warranties void.

By law some countries do not allow limitations on certain exclusions in this warranty. Where applicable by local laws, regulations and legal rights will take precedence.

For Australia: Our goods come with guarantees which cannot be excluded under Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to major failure.

Helpdesk/Technical Support

Technical Support E-mail: tech@swann.com

Telephone Helpdesk

USA Toll Free 1-800-627-2799

USA Parts & Warranty 1-800-627-2799

(M-F, 9am-5pm US PT)

AUSTRALIA 1300 138 324

NEW ZEALAND Toll Free 0800 479 266

UK 0203 027 0979



Tell us what you think!

We are constantly working to improve the quality of our documentation, and we would appreciate your feedback.
You can give us your feedback by clicking here to complete a short survey.

