





## 2MP/4MP Low Light WDR IP Camera

H4W2GR1V	H3W2GR1V	HBW2GR1V	HCL2GV	H2W2GR1
H4L2GR1V	H3W4GR1V	HBL2GR1V	HCW2GV	
H4W4GR1V		HBW2GR3V		

## User Guide



# Cautions and Warnings

	<b>CAUTION</b> RISK OF ELECTRIC SHOCK DO NOT OPEN		 THIS SYMBOL INDICATES THAT DANGEROUS VOLTAGE CONSTITUTING A RISK OF ELECTRIC SHOCK IS PRESENT WITHIN THE UNIT.
CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE THE COVER. NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.			 THIS SYMBOL INDICATES THAT IMPORTANT OPERATING AND MAINTENANCE INSTRUCTIONS ACCOMPANY THIS UNIT.

**CAUTION** To ensure compliance with electrical safety standards, CSA Certified/UL Listed LPS or Class 2 power adapters are required. Power over Ethernet (PoE) shall be provided by listed information technology equipment meeting the IEEE 802.3af PoE standard. The PoE is not intended to be connected to exposed (outside plant) networks.

**CAUTION** To comply with EN50130-4 requirements, a UPS should be employed when powering on the camera from 24 V AC.

**CAUTION** Installation and servicing should be performed only by qualified and experienced technicians to conform to all local codes and to maintain your warranty.

# Regulatory Statements

## FCC Compliance Statement

**Information to the User:** This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

---

**Note** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

---

## Canadian Compliance Statement

This Class A digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la Classe A est conforme à la norme NMB-003 du Canada.

# Manufacturer's Declaration of Conformity

## North America

The equipment supplied with this guide conforms to UL 60950-1 and CSA C22.2 No. 60950-1.

## Europe

The manufacturer declares that the equipment supplied is compliant with the European Parliament and Council Directive on the Restrictions of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment (2011/65/EU), General Product Safety Directive (2001/95/EC), and the essential requirements the EMC directive 2004/108/EC, conforming to the requirements of standards EN 55032 for emissions, EN 50130-4 for immunity, and EN 60950-1 for electrical equipment safety.

## Waste Electrical and Electronic Equipment (WEEE)

---



**Correct Disposal of this Product** (applicable in the European Union and other European countries with separate collection systems).

This product should be disposed of, at the end of its useful life, as per applicable local laws, regulations, and procedures.

---

## Safety Instructions

**Before installing or operating the unit, read and follow all instructions. After installation, retain the safety and operating instructions for future reference.**

1. **HEED WARNINGS** - Adhere to all warnings on the unit and in the operating instructions.
2. **INSTALLATION**
  - Install in accordance with the manufacturer's instructions.
  - Installation and servicing should be performed only by qualified and experienced technicians to conform to all local codes and to maintain your warranty.
  - Do not install the unit in an extremely hot or humid location, or in a place subject to dust or mechanical vibration. The unit is not designed to be waterproof. Exposure to rain or water may damage the unit.
  - Any wall or ceiling mounting of the product should follow the manufacturer's instructions and use a mounting kit approved or recommended by the manufacturer.
3. **POWER SOURCES** - This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supplied to your facility, consult your product dealer or local power company.
4. **HEAT** - Situate away from items that produce heat or are heat sources such as radiators, heat registers, stoves, or other products (including amplifiers).
5. **WATER AND MOISTURE** - (*Indoor models only*) Do not use this unit near water or in an unprotected outdoor installation, or any area classified as a wet location.

6. **MOUNTING SYSTEM** - Use only with a mounting system recommended by the manufacturer, or sold with the product.
7. **ATTACHMENTS** - Do not use attachments not recommended by the product manufacturer as they may result in the risk of fire, electric shock, or injury to persons.
8. **ACCESSORIES** - Only use accessories specified by the manufacturer.
9. **CLEANING** - Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
10. **SERVICING** - Do not attempt to service this unit yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
11. **REPLACEMENT PARTS** - When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock or other hazards. Using replacement parts or accessories other than the original manufacturers may invalidate the warranty.
12. **DAMAGE REQUIRING SERVICE** - Unplug the unit from the outlet and refer servicing to qualified service personnel under the following conditions:
  - When the power supply cord or plug is damaged.
  - If liquid has been spilled, or objects have fallen into the unit.
  - If the unit has been exposed to rain or water.
  - If the unit does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the unit to its normal operation.
  - If the unit has been dropped or the enclosure has been damaged.
  - When the unit exhibits a distinct change in performance - this indicates a need for service.
13. **SAFETY CHECK** - Upon completion of any service or repairs to this unit, ask the service technician to perform safety checks to determine that the unit is in proper operating condition.

## Warranty and Service










Subject to the terms and conditions listed on the Product warranty, during the warranty period Honeywell will repair or replace, at its sole option, free of charge, any defective products returned prepaid.

In the event you have a problem with any Honeywell product, please call Customer Service at 1.800.323.4576 for assistance or to request a **Return Merchandise Authorization (RMA)** number. Be sure to have the model number, serial number, and the nature of the problem available for the technical service representative.

Prior authorization must be obtained for all returns, exchanges, or credits. Items shipped to Honeywell without a clearly identified Return Merchandise Authorization (RMA) number may be refused.

# List of Symbols

The following table contains a list of symbols that may appear on the camera:

Symbol	Explanation
	<p>The WEEE symbol.</p> <p>This symbol indicates that when the end-user wishes to discard this product, it must be sent to separate collection facilities for recovery and recycling. By separating this product from other household-type waste, the volume of waste sent to incinerators or landfills will be reduced, and thus natural resources will be conserved.</p>
	<p>The UL compliance logo.</p> <p>This logo indicates that the product has been tested and is listed by the Underwriters Laboratories.</p>
	<p>The FCC compliance logo.</p> <p>This logo indicates that the product conforms to Federal Communication's Commission compliance standards.</p>
	<p>The direct current symbol.</p> <p>This symbol indicates that the power input/output for the product is direct current.</p>
	<p>The alternating current symbol.</p> <p>This symbol indicates that the power input/output for the product is alternating current.</p>
	<p>The RCM Compliance symbol.</p> <p>This symbol indicates that the product conforms with the Australian RCM guidelines.</p>
	<p>The CE Compliance logo.</p> <p>This logo indicates that the product conforms to the relevant guidelines/standards for the European Union harmonization legislation.</p>
	<p>This symbol is used to direct attention to important information.</p>
	<p>The Protective Earth symbol.</p> <p>This symbol indicates that the marked terminal is intended for connection to the protective earth/grounding conductor.</p>

# Contents

- About This Document.....viii**
- Overview of Contents.....viii
- 1 Accessing the Camera ..... 1**
- Installing the IPC Tool Utility..... 1
- Discovering Your Camera on the Network..... 1
- Assigning a New IP Address to Your Camera ..... 1
- Upgrading the Camera’s Firmware ..... 2
- Accessing the Camera from a Web Browser ..... 2
- 2 Logging In and Viewing Live Video ..... 4**
- Logging In to the Web Client ..... 4
- Overview of the Live Interface..... 5
- Configuring the Live Interface ..... 6
- Working in the Live Interface ..... 7
- Setting Up Live Video Streaming ..... 8
  - Setting the Stream Type..... 8
  - Setting the Stream Protocol ..... 8
- Logging Out of the Web Client..... 8
- 3 Playing Back Recorded Video ..... 9**
- Overview of the Playback Interface ..... 9
  - Playback Controls..... 9
  - Video Clip Controls..... 10
  - Timeline ..... 10
- Playing Back Recorded Video ..... 11
- Downloading Recorded Video ..... 11
- Viewing Snapshots ..... 12
- 4 Configuring Video and Audio Settings ..... 14**
- Configuring Video Settings..... 14
  - Configuring Camera Settings ..... 14
  - Managing Profiles ..... 17
  - Configuring Streaming Settings..... 18
  - Configuring Snapshot Settings..... 19
  - Configuring Privacy Masks ..... 20
  - Configuring the Channel Title..... 21
  - Configuring the Time Title ..... 22
  - Configuring Customized Text Overlays..... 22
  - Configuring Picture Overlays ..... 23
  - Configuring Regions of Interest ..... 23
  - Configuring Zoom and Focus Settings..... 23
- Configuring Audio Settings ..... 24
- 5 Configuring Network Settings..... 26**
- Configuring TCP/IP..... 26
  - IPv4 Address Configuration..... 27
  - IPv6 Address Configuration..... 27
  - ARP/Ping..... 27
- Configuring Network Connections..... 28
- Configuring ONVIF ..... 29

Configuring RSTP.....	29
Configuring PPPoE Settings.....	30
Configuring DDNS Settings.....	30
Filtering IP/MAC Addresses.....	31
Adding IP/Mac Addresses to the List of Approved Users.....	32
Editing IP/Mac Addresses.....	32
Deleting IP/Mac Addresses from the List of Approved Users.....	33
Configuring Email Settings.....	33
Configuring UPnP Port Mapping.....	34
Configuring SNMP Settings.....	35
Configuring Bonjour.....	36
Configuring Multicast Settings.....	36
Configuring 802.1X Settings.....	37
Configuring QoS Settings.....	37
Working with Certificates.....	38
Importing Certificates.....	38
Certificate Request.....	39
<b>6 Configuring Event Settings.....</b>	<b>40</b>
Configuring Alarm Events.....	40
Configuring System Events.....	42
Configuring SD Card Event Settings.....	42
Configuring Network Event Settings.....	42
Configuring Illegal Access Event Settings.....	43
Configuring Motion Detection Events.....	44
Configuring Camera Tampering Events.....	46
Configuring Scene Change Events.....	47
Configuring Audio Events.....	48
Configuring Smart Plan.....	49
Configuring IVS Analysis Events.....	50
Configuring Face Detection Events.....	51
Configuring People Counting Events.....	52
People Counting.....	52
Report.....	53
Configuring Heat Map Events.....	54
<b>7 Intelligent Analytics System.....</b>	<b>55</b>
<b>8 Configuring Recording Settings.....</b>	<b>56</b>
Configuring Recording Schedules.....	56
Configuring Storage Settings.....	57
Configuring Storage Paths.....	57
Configuring the Local SD Card for Storage.....	58
Configuring an FTP Server for Storage.....	58
Configuring an NAS Disk for Storage.....	59
Configuring Recording Settings.....	59
<b>9 Configuring System Settings.....</b>	<b>61</b>
Configuring General System Settings.....	61
Configuring Date and Time Settings.....	61
Changing the Date and Time Format.....	62
Setting the Date and Time.....	62
Configuring Account Settings.....	63
Managing Groups.....	63
Managing Users.....	65



Resetting the Camera.....	67
Backing Up/Restoring a Configuration .....	68
Configuring Maintenance Settings .....	68
Upgrading the Firmware .....	69
Viewing Version Information .....	69
Managing Logs .....	70
Viewing Logs .....	70
Backing Up Logs .....	71
Deleting Logs.....	71
Viewing Online Users .....	71
<b>10 Appendix A Technical Specifications .....</b>	<b>73</b>
HBW2GR3V/HBW2GR1V/HBL2GR1V Bullet Camera .....	73
HCL2GV/HCW2GV Box Camera .....	76
H3W2GR1V/H3W4GR1V Indoor Dome Camera.....	79
H4W2GR1V/H4L2GR1V/H4W4GR1V Outdoor Dome Camera .....	82
H2W2GR1 Micro Dome Camera .....	84



# About This Document

This manual is intended for system installers, administrators, and users of Honeywell's *equiP*® Series 2MP/4MP LOW LIGHT WDR IP cameras and contains instructions for accessing, configuring, and operating the cameras.

## Overview of Contents

This manual contains the following chapters and appendixes:

- [Chapter 1, Accessing the Camera](#), describes how to access the camera remotely from a web browser.
- [Chapter 2, Logging In and Viewing Live Video](#), describes how to log in to the camera and how to use the Live interface.
- [Chapter 3, Playing Back Recorded Video](#), describes how to play back and export recorded video and snapshots.
- [Chapter 4, Configuring Video and Audio Settings](#), describes how to set up video and audio streams.
- [Chapter 5, Configuring Network Settings](#), describes how to set up the camera on a network. (For advanced users only.)
- [Chapter 6, Configuring Event Settings](#), provides instructions for configuring alarm inputs/outputs, motion detection, audio detection, tampering detection, and system event settings.
- [Chapter 7, Intelligent Analytics System](#), describes how to access the Intelligent Analytics System.
- [Chapter 8, Configuring Recording Settings](#), describes how to set up a recording schedule and how to manage recording and storage settings.
- [Chapter 9, Configuring System Settings](#), provides instructions for configuring language and date and time options, managing user accounts and permissions, setting maintenance tasks, upgrading firmware, and resetting a camera to its factory defaults.
- [Chapter 10, Appendix A Technical Specifications](#), lists camera specifications.




# 1 Accessing the Camera

This chapter contains the following sections:



- [Installing the IPC Tool Utility, page 1](#)
- [Discovering Your Camera on the Network, page 1](#)
- [Assigning a New IP Address to Your Camera, page 1](#)
- [Upgrading the Camera's Firmware, page 2](#)
- [Accessing the Camera from a Web Browser, page 2](#)


## Installing the IPC Tool Utility

To install the IPC Tool utility and create a desktop shortcut:

1. Insert the included Software and Document disc into your PC's disc drive.
2. Install the IPC Tool utility to your PC. The shortcut  is added to the desktop.

## Discovering Your Camera on the Network

To discover your network camera(s), open the IPC Tool utility , enter your user name and password, and then click **Connect**. Cameras that are online have a green connected icon  next to them. Cameras that are offline have a gray X next to them. To refresh the list, click **Refresh**.

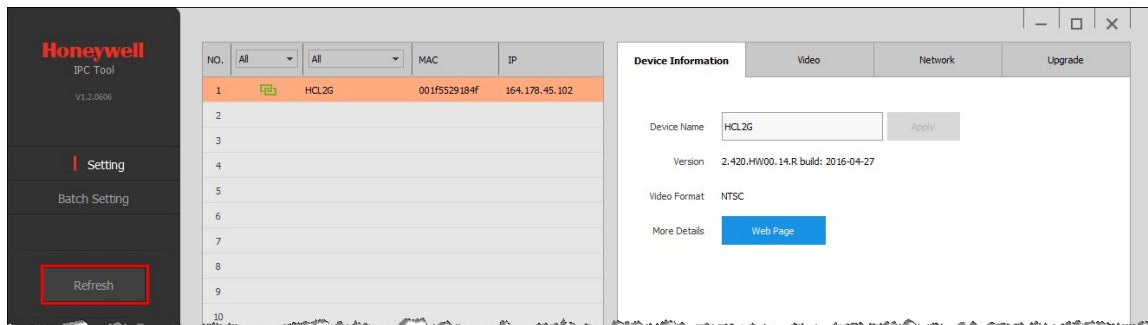

## Assigning a New IP Address to Your Camera

The current IP address of your camera appears in the **IP** column of the devices list. If you want, you can assign a new static IP address to the camera.

**To change the IP address of a single camera:**

1. Select the camera that you want to configure from the devices list.

2. Click the **Network** tab.
3. Clear the **DHCP** check box.
4. Enter the new IP settings in the **IP Address**, **Subnet Mask**, and **Default Gateway** fields.
5. Click **Apply** to apply the settings.

**To change the IP addresses of multiple cameras at the same time:**

1. In the left-most pane of the IPC Tool utility, click **Batch Setting**.
2. Select all of the cameras that you want to configure from the devices list.
3. Click the **Network** tab.
4. Do one of the following:
  - To assign dynamic IP addresses, select the **Set all to DHCP** check box, and then click **Apply**.
  - To assign static IP addresses, enter the settings in **IP Range**, **Subnet Mask**, and **Default Gateway** fields, and then click **Apply**.

## Upgrading the Camera's Firmware

Before you begin using your camera, make sure you have the latest firmware installed. You can upgrade a single camera or multiple cameras at the same time.

**To upgrade a single camera:**


1. Select the camera that you want to upgrade from the devices list.
2. Click the **Upgrade** tab.
3. Click **Browse**, navigate to the directory that contains the firmware file (.bin), select the file, and then click **Open**. The firmware file appears in the **Target File** field.
4. Click **Upgrade**. When the upgrade is complete, the camera will reboot.

**To upgrade multiple cameras at the same time:**

1. In the left-most pane of the IPC Tool utility, click **Batch Setting**.
2. Select all of the cameras that you want to upgrade from the devices list.
3. Click the **Upgrade** tab.
4. Click **Browse**, navigate to the directory that contains the firmware file (.bin), select the file, and then click **Open**. The firmware file appears in the **Target File** field.
5. Click **Upgrade**. When the upgrade is complete, the cameras will reboot.

## Accessing the Camera from a Web Browser

**To access the camera from a web browser:**

1. Select the camera that you want to access from the devices list. The camera must be online .

2. On the **Device Information** tab, click **Web Page**. The web client opens in your default browser.


## 2 Logging In and Viewing Live Video

This chapter contains the following sections:

- [Logging In to the Web Client, page 4](#)
- [Overview of the Live Interface, page 5](#)
- [Configuring the Live Interface, page 6](#)
- [Working in the Live Interface, page 7](#)
- [Setting Up Live Video Streaming, page 8](#)
- [Logging Out of the Web Client, page 8](#)

### Logging In to the Web Client

If this is your first time logging in to the web client, on the login page, enter the default user name (**admin**) and password (**1234**), and then click **Login**.

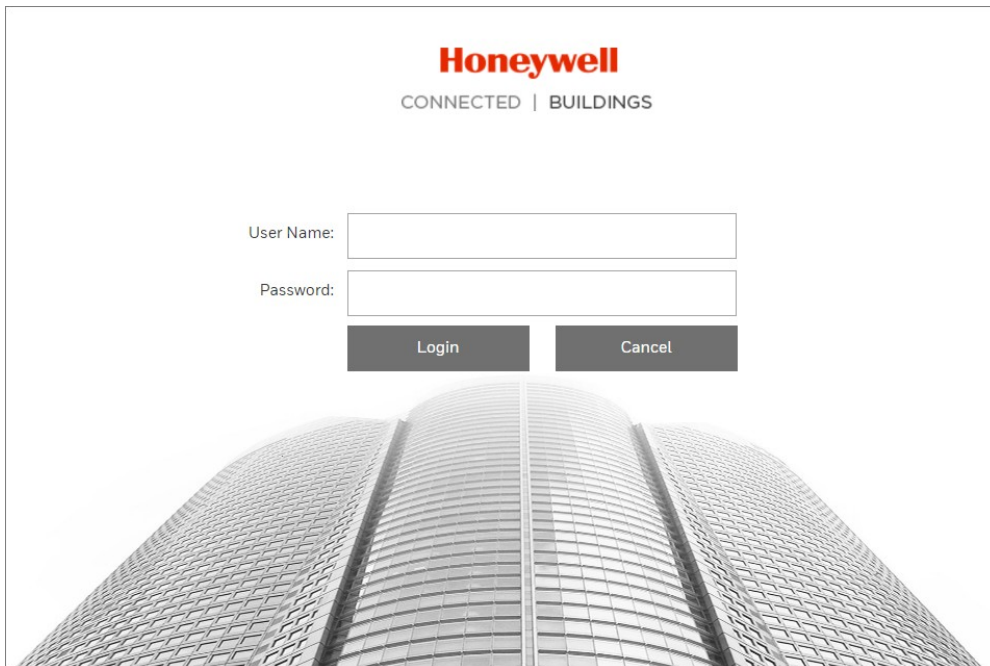

For security purposes, you are required to create a new secure password.



**Please change password.**

New Password

Weak Medium Strong

Confirm Password

Don't show this again.


OK Cancel

The password must be at least 8 characters long and contain at least one lowercase letter, one number, and one special character. The password cannot be blank.

## Overview of the Live Interface

The following figure shows the layout of the web client's Live interface.

Figure 2-1 Live Interface

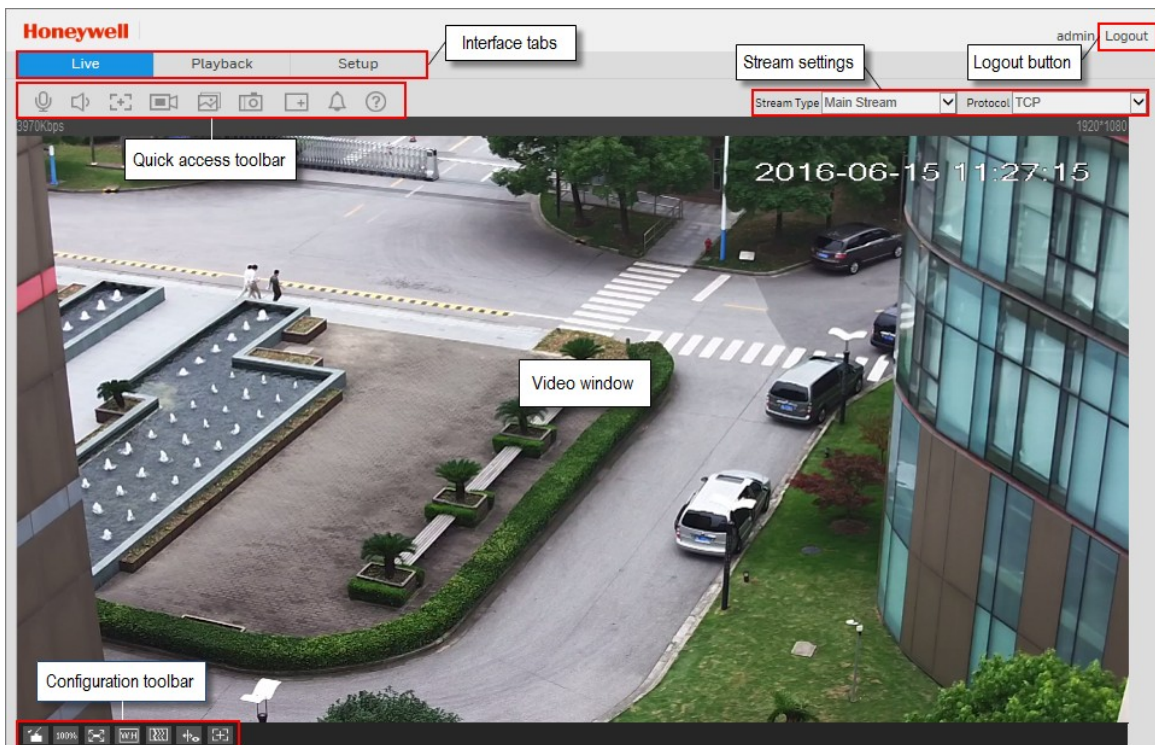

## Configuring the Live Interface

**Note** The first time you log into the web client, follow the on-screen instructions to download and install the web browser plug-in.

You can configure the Live interface using the configuration controls located in the lower left corner of the screen, immediately below the video window.

**Figure 2-2 Live Configuration Toolbar**



**Table 2-1 Live Configuration Controls**

	<b>Image Adjustment</b>	<p>Opens the <b>Image Adjustment</b> panel. Move the sliders to adjust the image brightness, contrast, hue, or saturation. Click the – and + signs to make fine adjustments. To restore the settings to their default values (<b>64</b>), click <b>Reset</b>.</p>	
	<b>Original Size</b>	<p>Displays the video at actual size (the exact dimensions are determined by the stream resolution).</p>	
	<b>Full Screen</b>	<p>Displays the video in full-screen mode. Double-click (or press Esc) to exit full-screen mode.</p>	
	<b>Width:Height Ratio</b>	<p>Displays the video in its original size (<b>Original</b>) or fitted to your screen (<b>Adaptive</b>).</p>	
	<b>Fluency</b>	<p>Sets the video fluency level (<b>Realtime</b>, <b>Normal</b>, or <b>Fluency</b>). Select a fluency level based on the capabilities of your network.</p> <p>For example, if your connection is slow, selecting <b>Fluency</b> will prioritize smoothness over image quality.</p>	
	<b>Rules Info</b>	<p>Tracks movement in the video window when intelligent video surveillance (IVS) is enabled.</p>	

	<b>Zoom and Focus</b>	<p>Opens the <b>Zoom and Focus</b> panel. Move the sliders to adjust the zoom and focus settings. Click the – and + signs to make fine adjustments. The <b>Step</b> number determines the magnitude of the adjustment. To set the focus automatically, click <b>Auto Focus</b>. To restore the default zoom and focus settings, click <b>Restore All</b>. To focus on a specific region, click <b>Regional Focus</b>, and then drag your mouse over the area in the video window.</p>	
--	-----------------------	---	--

## Working in the Live Interface

The toolbar in the upper left corner of the screen, immediately above the video window, provides quick access to commonly used controls.



Figure 2-3 Quick Access Toolbar



Table 2-2 Quick Access Controls

	<b>Talk</b>	Click to enable or disable bidirectional talk (audio must also be enabled).
	<b>Audio</b>	Click to enable or disable the audio input stream.
	<b>Easy Focus</b>	Displays the current video definition (AF Peak) and target video definition (AF Max). For auto focus to work, the AF Peak and AF Max values must be close together. If the values are far apart, the camera must be re-aimed or focused manually.
	<b>Record</b>	<p>Click to start or stop recording video. The icon appears red when video is being recorded, gray when video is not being recorded.</p> <p>The recorded video is saved to the location specified in <b>Setup → Storage Setup → Destination → Path → Live Record</b>.</p>
	<b>Triple Snapshot</b>	Click to take three snapshots in quick succession (1 per second). The snapshots are saved to the location specified in <b>Setup → Storage Setup → Destination → Path → Live Snapshot</b> .
	<b>Snapshot</b>	Click to take a snapshot of the current video. The snapshot is saved to the location specified in <b>Setup → Storage Setup → Destination → Path → Live Snapshot</b> .
	<b>Digital Zoom</b>	When this function is enabled, you can drag your mouse over an area of the video to enlarge that area. Right-click to return to the previous magnification.

---

	<b>Alarm Output</b>	Click to generate or cancel an alarm output. The icon appears red when the alarm is active, gray when the alarm is inactive.
	<b>Help</b>	Displays online help for the <b>Live</b> interface.

---

## Setting Up Live Video Streaming

In the upper right corner of the screen, immediately above the video window, you can set the stream type and protocol for live video streaming.

### Setting the Stream Type

To set the stream type, in the **Stream Type** list, select **Main Stream**, **Sub Stream 1**, or **Sub Stream 2**.

- Main Stream** Delivers high definition video for real-time monitoring, recording, and storage. Uses the most bandwidth.
- Sub Stream 1** Delivers low/standard definition video, typically for remote monitoring in lower network bandwidth environments.
- Sub Stream 2** Delivers low, standard, or high definition video.

The properties for each stream type are configured on the **Setup > Compression Setup > Video** page (see [Configuring Streaming Settings](#) on page 18).

### Setting the Stream Protocol

To set the stream protocol, in the **Protocol** list, select **TCP**, **UDP**, or **Multicast**.

- TCP** Provides most reliable data transmission. Higher latency and bandwidth use than UDP.
- UDP** Provides fastest data transmission. Lower latency and bandwidth use than TCP but allows some data loss (such as dropped frames).
- Multicast** Provides the most efficient use of bandwidth if large numbers of clients are viewing the video simultaneously.

## Logging Out of the Web Client

To log out of the web client, in the upper right corner of the screen, click **Logout**.

# 3 Playing Back Recorded Video


This chapter contains the following sections:

- [Overview of the Playback Interface, page 9](#)
- [Playing Back Recorded Video, page 11](#)
- [Downloading Recorded Video, page 11](#)
- [Viewing Snapshots, page 12](#)

## Overview of the Playback Interface

The following figure shows the layout of the web client's Playback interface.

Figure 3-1 Playback Interface

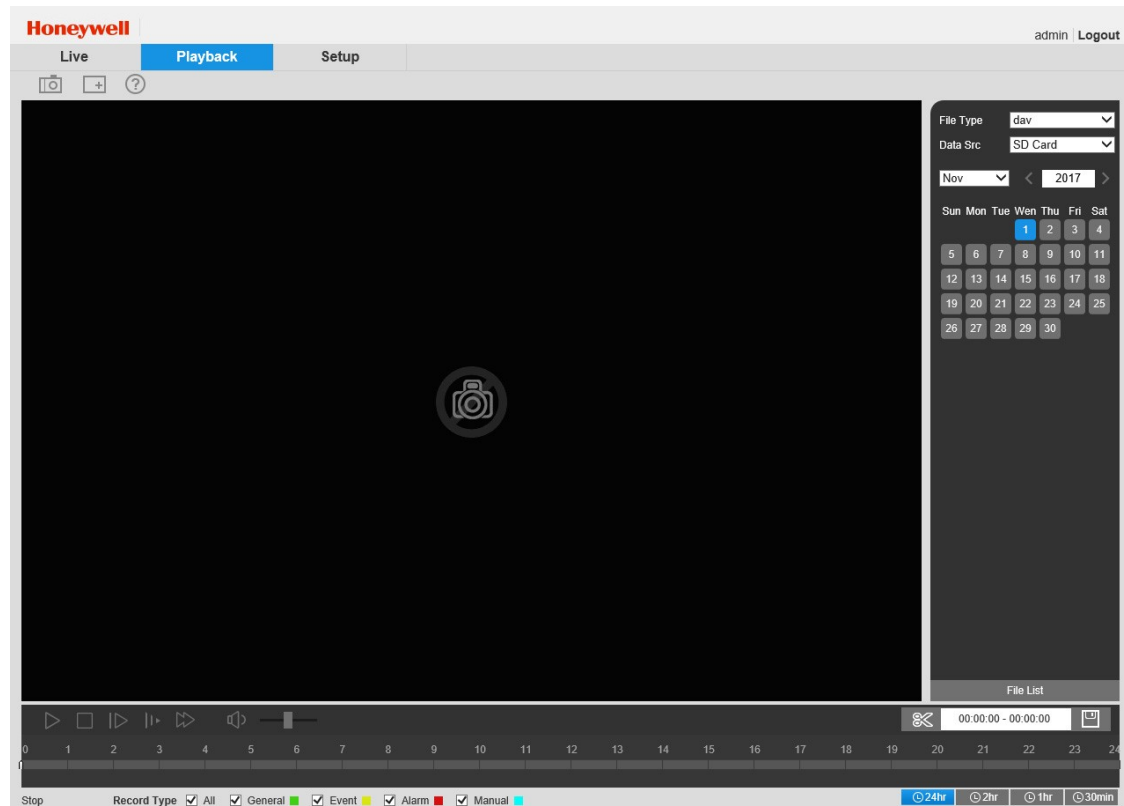

## Playback Controls

The playback controls are located in the lower left corner of the screen, immediately below the video window. For instructions on how to play back video, see [Playing Back Recorded Video](#) on page 9.

**Figure 3-2 Playback Toolbar**




**Table 3-1 Playback Controls**

	<b>Play/Pause</b>	Click to play recorded video.
	<b>Pause</b>	Click to pause playback.
	<b>Stop</b>	Click to stop playback.
	<b>Next Frame</b>	Click to advance to the next frame when playback is paused.
	<b>Slow Play</b>	Click to slow down playback.
	<b>Fast Play</b>	Click to speed up playback.
	<b>Volume</b>	Click to enable sound.
	<b>Mute</b>	Click to disable sound.
	<b>Volume Level</b>	Drag the slider to adjust the sound volume.

## Video Clip Controls

The video clip controls are located in the lower right corner of the screen, immediately below the file list button. For instructions on how to create and export a video clip, see [Downloading Recorded Video](#) on page 11.

**Figure 3-3 Video Clip Area**



**Table 3-2 Video Clip Controls**

	<b>Clip</b>	Click to start/stop clipping video.
	<b>Download</b>	Click to download the video clip that you have created to a local drive on your PC.

## Timeline

The timeline is located below the playback and video clip controls.

**Figure 3-4 Timeline Area**









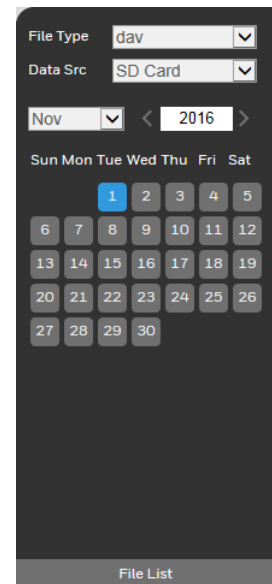
Table 3-3 Timeline Controls

<b>Record Type</b>	<b>General</b>	Displays video saved during normally scheduled recording in the timeline.
	<b>Motion</b>	Displays video saved during a motion detection event in the timeline.
	<b>Alarm</b>	Displays video saved during an alarm event in the timeline.
	<b>Manual</b>	Displays video saved manually during live monitoring in the timeline.
	<b>24hr</b>	Displays 24 hours of video in the timeline.
	<b>2hr</b>	Displays 2 hours of video in the timeline.
	<b>1hr</b>	Displays 1 hour of video in the timeline.
	<b>30min</b>	Displays 30 minutes of video in the timeline.

## Playing Back Recorded Video

To play back recorded video:

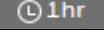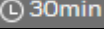
- From the **File Type** list, select **dav**.
- From the **Data Src** list, select the location where the video files are stored.  
The storage location is configured in **Setup → Storage Setup → Destination** (see [Configuring Storage Settings](#) on page 57).
- Locate the file that you want to play back.
  - Above the calendar, select the month and year that you want to search.
  - On the calendar, click the date that you want to search. Recordings for the selected date appear in the timeline (color coded according to recording type).
  - Below the calendar, click the **File List** button to narrow your search by time period and/or by download format.
- Play the file using one of the following methods:
  - In the file list, double-click the file that you want to play.
  - In the timeline, click a colored bar at the time that you want to start playing from (click  to zoom in on the timeline), and then click the **Play** button.




## Downloading Recorded Video

There are two ways to download recorded video: you can download a complete video file (the maximum length is specified in **Setup → Storage Setup → Record Control**) or you can create and export a video clip that you have created.




To download a video file:

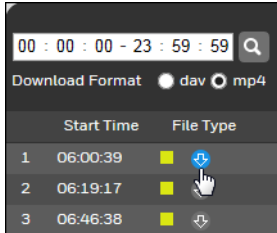1. From the **File Type** list, select **dav**.
2. From the **Data Src** list, select the location where the video files are stored.
3. On the calendar, click the date that the video was recorded.
4. Click **File List** to display the list of video files for that date.
5. Set the **Download Format** to **dav** or **mp4**.
6. From the file list, click the download button  of the file that you want to download.



The button changes to  and the file is saved to the location specified in **Setup → Compression Setup → Path → Playback Download**.

#### To create and export a video clip:

1. Open a video file in the playback window.
2. Pause the video at the time when you want to start the clip.
3. In the video clip area, click the **Select Start Time** button .
4. Resume playing the video.
5. Pause the video at the time when you want to stop the clip.
6. Click the **Select Stop Time** button .
7. Stop the video, and then click the **Download** button .


---

**Note** You cannot download the clip while the video file is still open in the web client.

---

The clip is saved to the location specified in **Setup → Compression Setup → Path → Video Clips**.

## Viewing Snapshots

You can take snapshots of video during playback by clicking the **Snapshot** button . The snapshot is saved to the location specified in **Setup → Compression Setup → Path → Playback Snapshot**.


To view a snapshot that you have saved manually during live monitoring, go the directory specified in **Setup → Compression Setup → Path → Live Snapshot** and double-click the file to open it.



To view a snapshot that you have saved manually during playback, go the directory specified in **Setup → Compression Setup → Path → Playback Snapshot** and double-click the file to open it.

If you have configured the system to take snapshots on a schedule, or during motion detection or alarm events, you can view and download them.

**To view or download a system-generated snapshot:**

1. From the **File Type** list, select **jpg**.
2. From the **Data Src** list, select the location where the snapshot files are stored.
3. On the calendar, click the date that the snapshot was taken.
4. Click **File List** to display the list of snapshots for that date.
5. Double-click the snapshot file that you want to view. The file opens in the video window.
6. To download the file, click the download button . The file opens in a new browser window. Right-click the image and then click **Save picture as** or **Save image as** to save the snapshot to a local directory.

# 4 Configuring Video and Audio Settings

This chapters contains the following sections:

- [Configuring Video Settings, page 14](#)
- [Configuring Audio Settings, page 24](#)

## Configuring Video Settings

This section describes how to configure camera properties (picture, exposure, lighting compensation, white balance, day and night, IR light, and defog) and video streaming properties (format, resolution, frame rate, bit rate, and I-frame interval).

### Configuring Camera Settings

You can configure camera properties on the **Setup → Camera Setup → Properties** page.

#### Profile

In the **Profile** list, select the camera profile that you want to configure settings for: **Normal**, **Day**, or **Night**.

#### Picture

In the **Picture** area, select a picture style from the **Style** list: **Soft**, **Standard**, or **Vivid**.

To adjust the image brightness, contrast, saturation, sharpness, or gamma settings, drag the slider left or right or click the – and + signs to make fine adjustments.

**Brightness** Adjusts the black level of the image.

**Contrast** Adjusts the white level of the image.


**Saturation** Adjusts the intensity of the image colors.

**Sharpness** Adjusts the edge sharpness of image elements. Keep in mind that increasing sharpness in a moving image will create more noise, resulting in a larger bit stream and saved file size.

**Gamma** Adjusts the amount of gamma correction applied to the image. Use fine adjustments to accent darker areas of the image.

You can also change the image orientation:

- To reverse the image, set **Mirror** to **ON**.

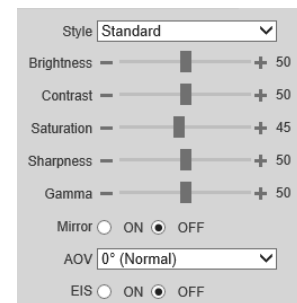

- To rotate the image 90 degrees, 180 degrees, or 270 degrees, set **AOV** to **90° (Flip Mode 1)**, **180° Inverted**, or **270° (Flip Mode 2)** respectively.

If the camera is mounted on a pole or in an environment subject to vibration, you can set **EIS** (Electronic Image Stabilization) to **ON** to improve image stability. Click **Save** to apply the settings.

## Exposure

In the **Exposure** area, you can set the anti-flicker mode, exposure mode, auto iris, and digital noise reduction level.

Set **Anti-Flicker** to **Outdoor**, **50Hz**, or **60Hz**.



- Outdoor** Minimizes flicker in outdoor applications. Works with auto, low noise, low motion blur, and manual exposure modes
- 50Hz** Minimizes flicker in indoor applications where the AC frequency is 50 Hz (generally PAL regions). Works with auto and manual exposure modes.
- 60Hz** Minimizes flicker in indoor applications where the AC frequency is 60 Hz (generally NTSC regions). Works with auto and manual exposure modes.

Set Mode to Auto, Gain Priority, Shutter Priority, Iris Priority, or Manual.

- Auto** Exposure settings change automatically with changes in the scene's lighting.
- Gain Priority** The shutter speed and iris are adjusted automatically for the specified gain value.
- Shutter Priority** The iris and gain are adjusted automatically for the specified shutter speed.
- Iris Priority** The shutter speed and gain are adjusted automatically for the specified iris value.
- Manual** Maximum shutter speed and maximum gain for normal light conditions are set by the user.

**3DNR** (3D noise reduction) is enabled by default. Drag the **Grade** slider left or right to decrease or increase the level of digital noise reduction applied to the image. To disable 3D noise reduction, set **3DNR** to **OFF**.

Click **Save** to apply the settings.

## Lighting Compensation

In the **Lighting Compensation** area, you can apply backlight compensation (BLC), highlight compensation (HLC), wide dynamic range (WDR), or scene adaptive control (SAC) adjustment to the image.

Set Lighting Mode to OFF, BLC, HLC, WDR, or SAC.

- BLC** Corrects the exposure of strongly backlit scenes. To apply BLC to the entire scene, click **Default**. To apply BLC to a specific area of the scene, click **Customized**. A yellow rectangle appears in the preview window. To move it, drag the center of the frame. To resize it, drag one of the corner handles.
- HLC** Masks strong light sources in the scene. Drag the slider to adjust the HLC level.

Click the – and + signs to make fine adjustments.

- WDR** Corrects the exposure of overexposed and underexposed areas of the scene. Drag the slider to adjust the WDR level. Click the – and + signs to make fine adjustments.
- SAC** Automatically decreases the brightness of bright areas and increases the brightness of dark areas according to the environmental lighting.

Click **Save** to apply the settings.

## White Balance

White balance compensates for the different color temperatures of different light sources, ensuring consistent colors- in the image.

In the White Balance area, you can set the white balance mode to Auto, Natural, Street Lamp, Outdoor, Manual or Customize Region.

- Auto** White balance is adjusted automatically.
- Natural** White balance is optimized for natural lighting.
- Street Lamp** White balance is optimized for yellow-tinted lighting.
- Outdoor** White balance is optimized for outdoor environments.
- Manual** Red gain and blue gain values are set by the user.
- Customize Region** White balance is applied to a user-defined area within the scene.

Click **Save** to apply the settings.

## Day and Night

In the **D&N Mode** area, you can set the day and night mode, sensitivity, and delay time.

By default, the camera automatically outputs color video or black-and-white video depending on the amount of light in the scene. To output *only* color video, set **Mode** to **Color**. To output *only* black-and-white video, set **Mode** to **Black & White**.

Mode: Auto  
Sensitivity: Medium  
Delay: 6s  
Smart IR:  ON  OFF

**Sensitivity** controls the sensitivity to lighting changes that cause the camera to switch between day (color) and night (black-and-white) mode. Select **Low**, **Medium**, or **High**.

**Delay** defines the delay time before switching between modes. Select a value between **2s** and **10s**.

**Smart IR** function is disabled by default. To enable it, click **ON**. Click **Save** to apply the settings.

## IR Light

In the **IR Light** area, you can set the infrared LED mode and other settings. Set **Mode** to **Manual**, **Zoom Priority**, **Smart IR**, or **OFF**.

- Manual** IR near and far distance brightness are set by the user.
- Zoom Priority** IR settings are adjusted automatically based on the zoom setting.
- SmartIR** IR settings are adjusted automatically to prevent overexposure or

underexposure.

If **Mode** is set to **Manual**, set the **Near Light** and **Far Light** brightness levels. Drag the slider left or right to decrease or increase the value. Click the – and + signs to make fine adjustments.

If **Mode** is set to **Zoom Priority**, set the **IR Correction** level to correct focusing problems caused by bright IR light.

## Defog


To enable the defog function, set **Mode** to **OFF**, **Manual**, or **Auto**.

**Auto** The defog function is enabled automatically when the scene is obscured by fog or haze.

**Manual** The defog function is always enabled.

If **Mode** is set to **Manual**, do the following:

1. Set **Intensity** to **Low**, **Medium**, or **High**.
2. Set **Airlight Mode** to **Auto** or **Manual**.

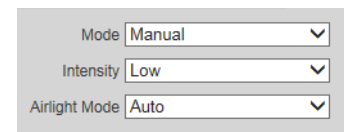


**Auto** The defog function is fine-tuned automatically (recommended).

**Manual** The defog function is fine-tuned by the user using the **Grade** slider.

Click **Save** to apply the settings.

## Managing Profiles

After you have configured the camera properties for each profile (Normal, Day, Night), you can set the profile(s) that you want the system to use on the **Setup → Camera Setup → Profile Management** page.

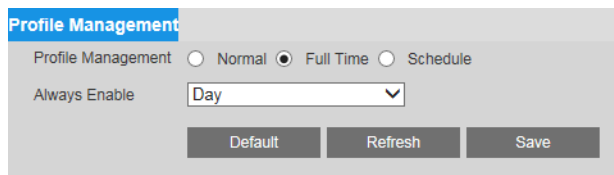


Next to **Profile Management**, select **Normal**, **Full Time**, or **Schedule**. By default, the system has the **Day** profile always enabled.

**Normal** The Normal profile is always enabled.

**Full Time** The Day profile or Night profile is always enabled, depending on your selection.

**Schedule** The system switches between the Day profile and Night profile. Drag the sliders on the left and right sides of the timeline to set the Night-to-Day and Day-to-Night switching times.

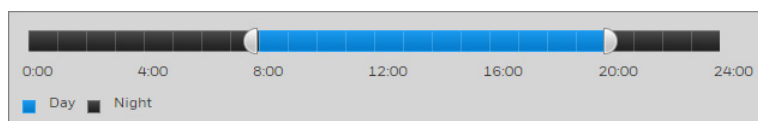

Click **Save** to apply the settings.

## Configuring Streaming Settings

You can configure video streaming properties on the **Setup → Compression Setup → Video** page.

The page is divided into two sections: **Main Stream** and **Sub Stream**. In the **Sub Stream** section, two sub streams are configurable: **Sub Stream 1** and **Sub Stream 2**. To enable a sub stream, select one of the sub streams, and then select the **Enable** check box.

The screenshot shows the 'Video' configuration page with two main sections: 'Main Stream' and 'Sub Stream'. The 'Main Stream' section has the following settings: Format: H.264H, Smart Codec: OFF, Resolution: 4K (4096x2160), Frame Rate (FPS): 30, Bit Rate Type: VBR, Quality: 4, Reference Bit Rate: 4352-16384Kb/S, Bit rate: 12288, I-Frame Interval: 60 (range 1-150), and Watermark Settings: checked with Watermark Text: DigitalCCTV. The 'Sub Stream' section has: Enable: checked, Format: H.264H, Resolution: D1 (704x480), Frame Rate (FPS): 30, Bit Rate Type: VBR, Quality: 4, Reference Bit Rate: 512-2048Kb/S, Bit rate: 1024, and I-Frame Interval: 60 (range 1-150). At the bottom, there are three buttons: Default, Refresh, and Save.

For each record type (**General, Motion, Alarm**), you can configure the encoding format, resolution, frame rate, bit rate, and I-frame interval settings. You can also apply a custom watermark to the main stream.

### Format

In the **Format** box, select **H.264B**, **H.264**, **H.264H**, **MJPEG**, or **H.265**.

**H.264** Main Profile. Uses less bandwidth than Baseline Profile at the same quality.

**H.264B** Baseline Profile. Uses up to 50% less bandwidth than MPEG4 and up to 80% less than MJPEG. Higher compression and lower quality than H.264.

**H.264H** High Profile. Uses less bandwidth than Main Profile at the same quality. Lower compression and higher quality than H.264.

**MJPEG** Uses the most bandwidth but produces excellent image quality with access to every image in the stream.

**H.265** High Efficiency Video Coding. Supports 4K resolution. Twice as efficient as H.264.

### Smart Codec

Set **Smart Codec** to **ON** or **OFF**.

By taking reference frames and applying them to refreshed frames, Smart Codec eliminates the need to transmit data for an unchanged image or parts of the image where there is no

movement. Used together with H.264, Smart Codec can lead to storage savings of up to 60 percent and bandwidth savings of up to 40 percent over H.264 alone.

---

**Note** If **Smart Codec** is set to **ON**, video analytics will be unavailable.

---

## Resolution

In the **Resolution** box, select a resolution from the list. The available options differ between the main stream and sub streams.

## Frame Rate

In the **Frame Rate (FPS)** box, select a frame rate within the available range (1–60 fps for NTSC cameras; 1–50 fps for PAL cameras).

## Bit Rate

In the **Bit Rate Type** box, select **CBR** or **VBR**.

**CBR** Constant bit rate. The bit rate remains constant (recommended for low-bandwidth environments). Required if MJPEG compression is used.

**VBR** Variable bit rate. The bit rate changes according to the complexity of the scene. Select a **Quality** level between **1** (lowest quality) and **6** (highest quality).

In the **Bit Rate** box, select a bit rate from the list using the **Reference Bit Rate** as a guide.

## I-Frame Interval

In the **I-Frame Interval** box, enter a value between 1 and 150. The default I-frame interval is two times the frame rate. For example, if the frame rate is 30 fps, the I-frame interval will be 60.

## Watermark

To apply a custom watermark to the main stream, select the **Watermark Settings** check box. In the **Watermark Text** box, enter the watermark text. The text cannot have any spaces but underscores (\_), and hyphens (-) are acceptable.

Click **Save** to apply the settings.

## Configuring Snapshot Settings

You can configure snapshot properties on the **Setup → Compression Setup → Snapshot** page.

The screenshot shows a configuration panel for snapshots. It has a blue header labeled 'Snapshot'. Below the header, there are four rows of settings, each with a label on the left and a dropdown menu on the right:

- Snapshot Type:** General
- Image Size:** 4096x2160 (4096x2160)
- Quality:** 5
- Interval:** 1s

At the bottom of the panel, there are three buttons: 'Default', 'Refresh', and 'Save'.

## Snapshot Type

Set the **Snapshot Type** to **General** or **Event**.

**General** Snapshots are taken according to a user-defined schedule.

**Event** Snapshots are taken whenever an alarm, motion detection, camera tampering, or system event occurs.

## Image Size

The image size is determined by the main stream resolution setting. It is not configurable. (See [Resolution](#) on page 19).

## Quality

Set the **Quality** to a value between **1** (lowest) and **6** (highest).


## Interval

Select a snapshot frequency between 1 snapshot per second (**1s**) and 7 snapshots per second (**7s**), or click **Customized** to define a custom setting between 1 and 50,000 seconds.


Click **Save** to apply the settings.

## Configuring Privacy Masks

You can configure privacy mask properties on the **Setup** → **Compression Setup** → **Overlay** → **Privacy Masking** page.

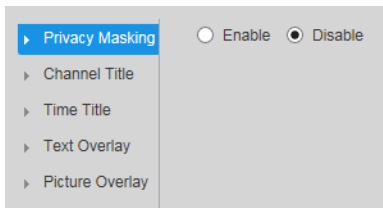

To enable privacy masking, click **Enable**. Four privacy masks appear in the preview window.

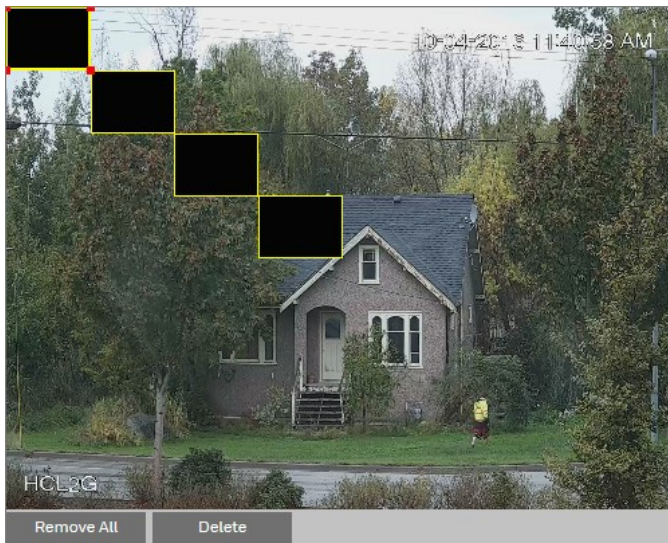



Delete any masks that you don't need. To delete a mask, right-click it or select it and then click **Delete**. To remove all the masks, click **Remove All**.

To move a mask, select it and drag the center of the mask.

To resize a mask, drag one of the corner handles. To draw a new mask, drag your mouse anywhere in the preview window.



Click **Save** to apply the settings.

## Configuring the Channel Title


You can configure the channel title properties on the **Setup → Compression Setup → Overlay → Channel Title** page.

To display the channel title, click **Enable**, and then click **Save**. By default, the channel title appears in the lower left corner of the video image.

To move the channel title, drag the yellow **Channel Title** box to the desired location in the preview window, and then click **Save**.

To modify the channel title, enter the new title in the **Input Channel Title** field, and then click **Save**.

To hide the channel title, click **Disable**, and then click **Save**.

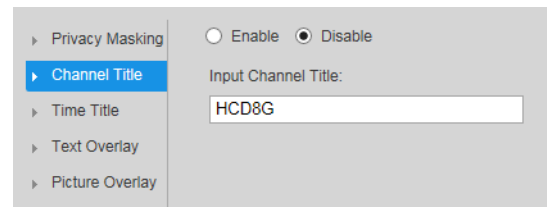

## Configuring the Time Title


You can configure the time title properties on the **Setup → Compression Setup → Overlay → Time Title** page.

To display the channel title, click **Enable**, and then click **Save**. By default, the channel title appears in the upper right corner of the video image.

To display the day of the week, select the **Show Day of Week** check box, and then click **Save**.

To move the time title, drag the yellow **Time Title** box to the desired location in the preview window, and then click **Save**.

To hide the time title, click **Disable**, and then click **Save**.

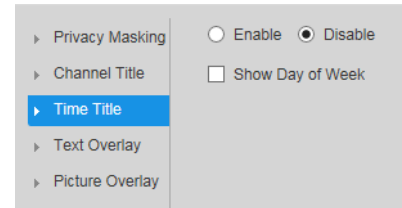


## Configuring Customized Text Overlays

You can configure customized text overlays on the **Setup > Compression Setup → Overlay → Text Overlay** page.

To display the text overlay, click **Enable**, enter the desired text in the **Input Text** field, and then click **Save**. By default, the text overlay appears in the lower right corner of the video image.

Set **Text Alignment** to **Left** or **Right**.

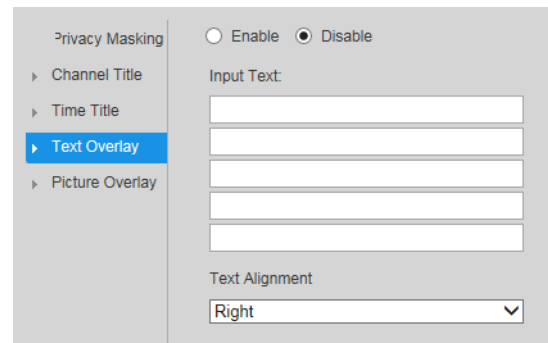

To move the text overlay, drag the yellow **Text Overlay** box to the desired location in the preview window, and then click **Save**.

To hide the text overlay, click **Disable**, and then click **Save**.


## Configuring Picture Overlays

You can configure picture overlays on the **Setup → Compression Setup → Overlay → Picture Overlay** page.

To display a picture overlay, click **Enable**, click **Upload Picture**, upload the picture, and then click **Save**. The file must be in BMP format, less than 16 KB, and no more than 128×128 pixels.

To move the picture overlay, drag the yellow frame to the desired location in the preview window, and then click **Save**.

To hide the picture overlay, click **Disable**, and then click **Save**.

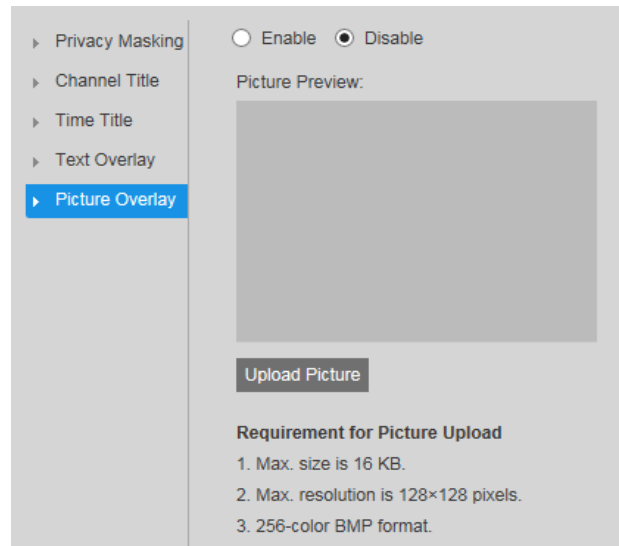

## Configuring Regions of Interest


You can configure regions of interest (ROI) on the **Setup → Compression Setup → ROI** page. To enable the ROI function, click **Enable**.

In the preview window, drag your mouse over the portion of the scene that you want to designate as a region of interest, select an **Image Quality** level between **1** (lowest) and **6** (highest), and then click **Save**. You can add up to 4 regions of interest.

To delete a single region of interest, select it, and then click **Delete**. To delete all regions of interest, click **Remove All**.

## Configuring Zoom and Focus Settings

You can configure zoom and focus on the **Setup → Zoom and Focus → Zoom and Focus** page.

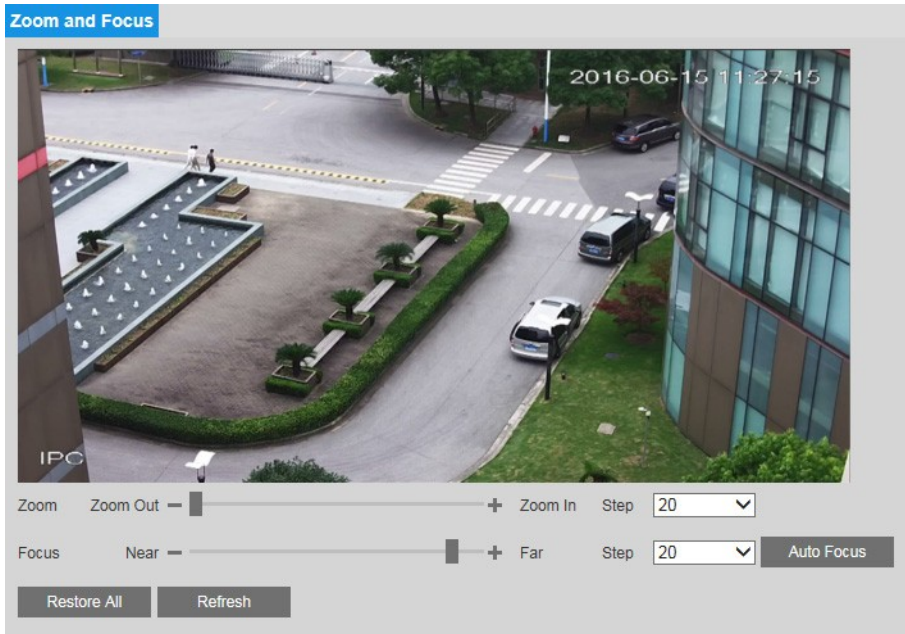

To adjust the zoom magnification, drag the slider right or left. Click the + and - signs to make fine adjustments. The **Step** number determines the magnitude of the adjustment.

To adjust the focus manually, drag the slider right or left. Click the + and - signs to make fine adjustments. The **Step** number determines the magnitude of the adjustment.

To set the focus automatically, click **Auto Focus**.

To restore the default zoom and focus settings, click **Restore All**.

## Configuring Audio Settings

You can configure audio settings for Main Stream, Sub Stream 1, and Sub Stream 2 profiles on the **Setup → Audio Setup → Audio** page.

The screenshot shows the 'Audio' configuration window. It is divided into three main sections: 'Encoding', 'Properties', and a bottom control bar. The 'Encoding' section contains two sub-sections: 'Main Stream' and 'Sub Stream'. In the 'Main Stream' section, the 'Enable' checkbox is checked, the 'Format' is set to 'G.711Mu', and the 'Sampling Frequency' is set to '8k'. In the 'Sub Stream' section, the 'Enable' checkbox is unchecked, the 'Format' is set to 'G.711Mu', and the 'Sampling Frequency' is set to '8k'. The 'Properties' section includes 'Audio In Type' set to 'Mic', 'Noise Filter' set to 'Enable', and two volume sliders for 'Microphone Volume' and 'Speaker Volume', both currently set to 50. The bottom control bar contains three buttons: 'Default', 'Refresh', and 'Save'.

To enable audio for the stream, select the **Enable** check box, select the format (**G.711A**, **G.711Mu**, **G.726**, **AAC**), and then select a sampling frequency (**8–64 kHz**).

In the **Properties** area, select the audio input type (**LineIn**, **Mic**), enable or disable noise filtering, and adjust the microphone and/or speaker volumes by moving the sliders. Click the + and - signs to make fine adjustments. Click **Save** to apply the settings.

# 5 Configuring Network Settings

This chapter contains the following sections:

- [Configuring TCP/IP, page 26](#)
- [Configuring Network Connections, page 28](#)
- [Configuring ONVIF, page 29](#)
- [Configuring RSTP, page 29](#)
- [Configuring PPPoE Settings, page 30](#)
- [Configuring DDNS Settings, page 30](#)
- [Filtering IP/MAC Addresses, page 31](#)
- [Configuring Email Settings, page 33](#)
- [Configuring UPnP Port Mapping, page 34](#)
- [Configuring SNMP Settings, page 35](#)
- [Configuring Bonjour, page 36](#)
- [Configuring Multicast Settings, page 36](#)
- [Configuring 802.1X Settings, page 37](#)
- [Configuring QoS Settings, page 37](#)
- [Working with Certificates, page 38](#)

## Configuring TCP/IP

You can configure TCP/IP settings, including IPv4/IPv6 and ARP/Ping settings, on the **Setup** → **Network Setup** → **TCP/IP** page.

The screenshot shows the TCP/IP configuration page. The title bar is labeled "TCP/IP". The form contains the following fields and options:

Hostname	HCD8G
Ethernet Card	Wire(Default) ▼
Mode	<input type="radio"/> Static <input checked="" type="radio"/> DHCP
MAC Address	00 . 1f . 55 . 2d . 07 . 16
IP Version	IPv4 ▼
IP Address	159 . 99 . 251 . 86
Subnet Mask	255 . 255 . 255 . 0
Default Gateway	159 . 99 . 251 . 1
Preferred DNS Server	199 . 63 . 219 . 166
Alternate DNS Server	165 . 195 . 30 . 99
<input checked="" type="checkbox"/> Enable ARP/Ping	

At the bottom of the form are three buttons: "Default", "Refresh", and "Save".

## IPv4 Address Configuration

By default, the camera uses IPv4 and obtains IP settings automatically via DHCP.

In the **Hostname** field, enter a nickname for the camera that can be mapped to the IP address and used to identify the camera.

To manually assign IP address settings, set **Mode** to **Static**, and then replace the values in the **IP Address**, **Subnet Mask**, and **Default Gateway** fields.

To manually assign DNS server addresses, replace the values in the **Preferred DNS Server** and **Alternate DNS Server** fields. Click **Save** to apply the settings.

## IPv6 Address Configuration

To enable IPv6, set **IP Version** to **IPv6**. Verify that the IP address and default gateway (router) address are in the same network segment. Click **Save** to apply the settings.

The screenshot shows the TCP/IP configuration interface. The **IP Version** dropdown menu is highlighted with a red box and set to **IPv6**. The **Link Address** field is set to `fe80::021f:55ff:fe2d:0716/64`. Other fields include **Hostname** (HCD8G), **Ethernet Card** (Wire(Default)), **Mode** (Static selected), **MAC Address** (00 . 1f . 55 . 2d . 07 . 16), **IP Address** (2001:250:3000:1::1:2 / 112), **Default Gateway** (2001:250:3000:1::1:1), **Preferred DNS Server** (2001:da8:2000:2017::33), and **Alternate DNS Server** (2001:da8:2000:2193::33). The **Enable ARP/Ping** checkbox is checked. Buttons for **Default**, **Refresh**, and **Save** are at the bottom.

## ARP/Ping

You can assign an IP address to the camera using the ARP/Ping service.

**To enable ARP/Ping to set the IP address:**

1. Obtain an unused IP address in the same LAN as your PC.
2. Write down the MAC address of the camera (it is listed on the label).
3. Select the **Enable ARP/Ping** check box, and then click **Save**.

4. Open the **Command Prompt** window on your PC (in Windows 7, click **Start → All Programs → Accessories → Command Prompt**) and type the appropriate commands for your operating system:

Windows syntax
arp -s <IP Address> <MAC> ping -l 480 -t <IP Address>
Windows example
arp -s 192.168.0.125 11-40-8c-18-10-11 ping -l 480 -t 192.168.0.125

UNIX/Linux/Mac syntax
arp -s <IP Address> <MAC> ping -s 480 <IP Address>
UNIX/Linux/Mac example
arp -s 192.168.0.125 11:40:8c:18:10:11 ping -s 480 192.168.0.125

5. Reboot the camera. If the setup was successful, the Command Prompt window will display "Reply from" and the IP address (for example, "Reply from 192.168.0.125 ...").

To verify that the IP address works, open your browser and type in the address bar **http://** followed by the IP address (for example, http://192.168.0.125), then press **Enter**.

## Configuring Network Connections

You can configure network connections and port settings on the **Setup → Network Setup → Connection → Connection** page.



Field	Value	Range
Max Connections	10	(1-20)
TCP Port	37777	(1025-65534)
UDP Port	37778	(1025-65534)
HTTP Port	80	
RTSP Port	554	
HTTPS Port	443	

By default, the maximum number of simultaneous connections the camera will support is set to **10**. To change this setting, in the **Max Connections** field, enter a value between **1** and **20**.

If you want, you can change the TCP, UDP, HTTP, RTSP, and HTTPS port numbers from their defaults.

Click **Save** to apply the settings.

## Configuring ONVIF

ONVIF (Open Network Video Interface Forum) is a global standard for the interoperability of IP-based physical security products.

You can enable or disable ONVIF authentication on the **Setup → Network Setup → Connection → ONVIF** page.

ONVIF login authentication is enabled by default. To disable it, select **OFF**, and then click **Save**.

---

**Note** HTTPS is enabled by default. If your headend only supports ONVIF HTTP, you can disable HTTPS by clearing the **HTTPS Setting** check box and then clicking **Save**. A warning message will appear indicating that your connection is no longer secure.

---

## Configuring RSTP


**RTSP Over TLS** is used to encrypt video stream transmit between browser and device or device and headend.

---

**Note** RTSP Over TLS is effective only for TCP protocol.

---

You can enable or disable RTSP Over TLS on the **Setup → Network Setup → Connection → RTSP** page.

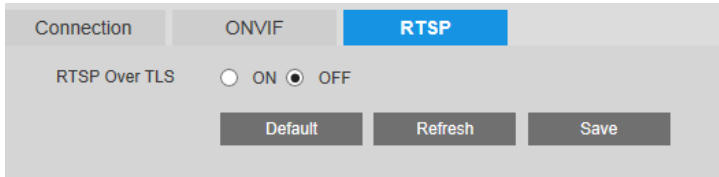


The screenshot shows the RTSP configuration page. At the top, there are three tabs: 'Connection', 'ONVIF', and 'RTSP'. The 'RTSP' tab is selected and highlighted in blue. Below the tabs, the 'RTSP Over TLS' setting is shown with two radio buttons: 'ON' and 'OFF'. The 'OFF' radio button is selected. At the bottom of the configuration area, there are three buttons: 'Default', 'Refresh', and 'Save'.

RTSP Over TLS is disabled by default. To enable it, click **ON**, and then click **Save**.

## Configuring PPPoE Settings

You can configure Point-to-Point Protocol over Ethernet (PPPoE) settings on the **Setup > Network Setup > PPPoE** page.

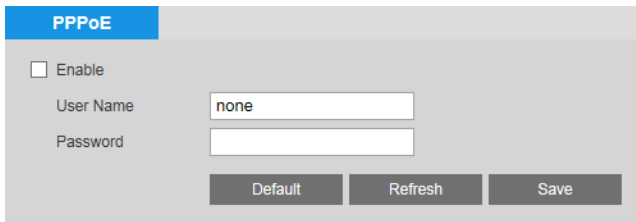

The screenshot shows the PPPoE configuration page. At the top, there is a blue tab labeled 'PPPoE'. Below the tab, there is a checkbox labeled 'Enable' which is currently unchecked. Below the checkbox, there are two text input fields: 'User Name' with the value 'none' and 'Password' which is empty. At the bottom of the configuration area, there are three buttons: 'Default', 'Refresh', and 'Save'.

**To enable PPPoE:**

1. Select the **Enable** check box.
2. In the **User Name** and **Password** fields, enter the user name and password that you received from your Internet service provider (ISP).
3. Click **Save** to apply the settings. The camera will connect to the Internet via PPPoE after rebooting.

## Configuring DDNS Settings

You can configure Dynamic DNS (DDNS) settings on the **Setup → Network Setup → DDNS** page.

The screenshot shows a configuration panel for DDNS. At the top, there is a blue header with the text 'DDNS'. Below it, there are several fields: 'Server Type' with a dropdown menu showing 'Honeywell DDNS', 'Server Address' with a text box containing 'www.hennvr-ddns.com', 'Mode' with radio buttons for 'Auto' (selected) and 'Manual', 'Domain Name' with a text box containing '001F552D0716' and a suffix '.hennvr-ddns.com', and 'User Name' with an empty text box and a note '(Optional) Enter email address'. At the bottom of the panel are three buttons: 'Default', 'Refresh', and 'Save'.

You can use a DDNS service to track and update your camera's dynamic IP address, so that even when the numeric IP address changes the DDNS address always remains the same.

#### To access your camera using a DDNS service:

1. Register an account with a supported DDNS service, such as DynDNS or Honeywell's free DDNS service ([www.hennvr-ddns.com](http://www.hennvr-ddns.com)).
2. Select the **Server Type** check box.
3. Select your DDNS service from the **Server Type** drop-down list.
4. In the **Domain Name** field, enter the domain name (hostname) that you registered with the DDNS service (for example, *mycamera.dyndns.org*).
5. In the **User Name** and **Password** fields, enter the user name and password of the account that you registered in step 1.
6. In the **Update Period** field, enter the interval in minutes between address updates sent to the DDNS server.

---

#### Note


If you selected Honeywell DDNS as your DDNS service, the domain name is set to the camera's MAC address by default and no user name or password are required. Set **Mode** to **Auto** or **Manual**. If you configure the domain name manually, click **Test** to verify that the domain name is registered.

---

7. Click **Save** to apply the settings. You can now access the camera by entering the domain name in your browser's address bar.

## Filtering IP/MAC Addresses

You can configure IP filter settings on the **Setup** → **Network Setup** → **IP Filter** page.

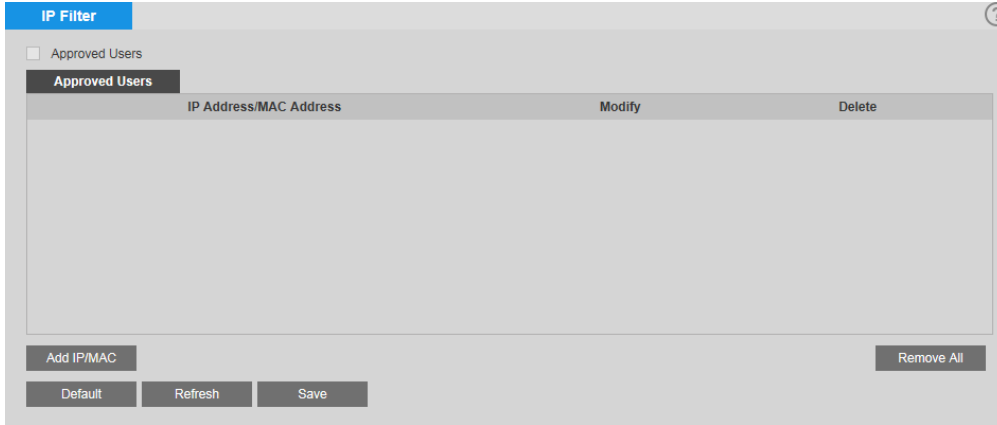


When the IP filter is enabled, remote access to the camera is restricted to specific IP or MAC addresses. You can add or remove addresses from the list at any time. If a user is accessing the camera over a WAN, enter the MAC address of the user's router instead of an IP address.


## Adding IP/Mac Addresses to the List of Approved Users

To add an IP/MAC address:

1. Click **Add IP/MAC**.
2. In the **Add IP/MAC** window, select **IP Address**, **IP Segment**, or **MAC** from the drop-down list, enter the relevant address, and then click **Save**.

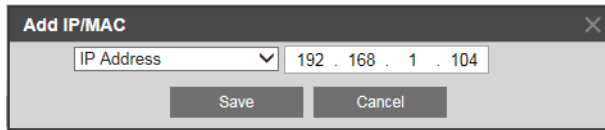

The address is added to the list of approved users.

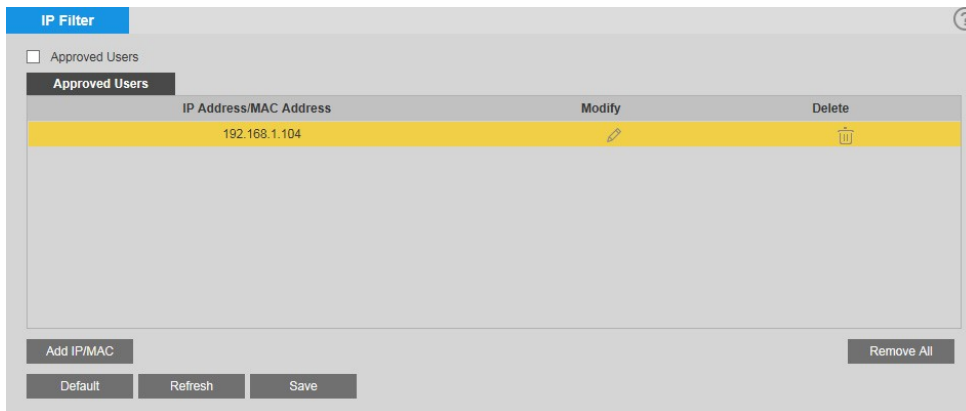

3. Select the **Approved Users** check box, and then click **Save** to apply the settings.

## Editing IP/Mac Addresses


To edit an IP/MAC address:

1. In **Address List**, click the **Modify** icon  of the address that you want to edit.

- In the **Modify IP/MAC** window, edit the address as needed, and then click **Save**.

## Deleting IP/Mac Addresses from the List of Approved Users

To delete a single IP/MAC address:

- In the **Address List**, click the **Delete** icon  of the address that you want to delete.
- A confirmation message appears. Click **OK** to continue, and then click **Save** to apply the settings. The address is removed from the list of approved users.

To delete multiple IP/MAC addresses:

- Click **Remove All**.
- A confirmation message appears. Click **OK** to continue, and then click **Save** to apply the settings. All addresses are removed from the list of approved users.

## Configuring Email Settings

You can configure email notification settings on the **Setup → Network Setup → SMTP** page.

To set up email notifications:

- In the **SMTP Server** and **Port** fields, enter the SMTP server and port information.
- In the **User Name** and **Password** fields, enter the sender's email user name and password. Alternatively, if the server supports anonymous login, you can select the

**Anonymous** check box to log in without a user name and password.

3. In the **Sender** field, enter the sender's email address.
4. From the **Authentication** list, select an encryption mode (**SSL** or **TLS**) or select **None**.
5. In the **Title** field, enter the text that you want to appear in the subject line of the email.
6. Select the **Attachment** check box if you want to enable snapshot attachments.
7. In the **Mail Receiver** field, enter the recipient's email address, and then click the **+** sign to add it to the list. You can enter up to three email addresses. To remove an address from the list, select it, and then click the **-** sign.
8. In the **Interval** field, specify the interval between email notification messages. Enter a value between **0** (no interval) and **3600** seconds (60 minutes).

---


**Note** Setting an interval between email notifications reduces the load on the email server if multiple notifications are triggered simultaneously.

---

9. To have the system periodically verify that the email notification settings are working, select the **Send Health Messages** check box, and specify the **Interval**.
10. Click **Save** to apply the settings.
11. Click **Email Test** to send a test email to verify that the settings are configured properly.

## Configuring UPnP Port Mapping

You can configure Universal Plug and Play (UPnP) settings on the **Setup → Network Setup → UPnP** page.

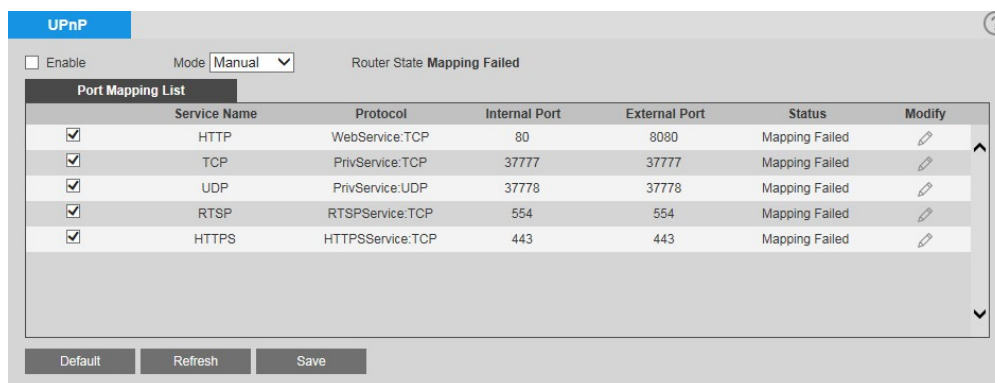

The UPnP protocol is used to detect network devices with clients running Windows.

To enable UPnP, select the **Enable** check box. The camera can now be detected by Windows' built-in network browser (My Network Places in Windows XP; Network in Windows 7).

### To enable UPnP in Windows XP:

1. Go to **Start > Control Panel > Add or remove programs**.
2. Click **Add or remove programs**, then select **Networking Services** in the Windows

Components Wizard.

3. Click **Details**, then select **Internet Gateway Device Discovery** and **Control Client and UPnP User Interface**.
4. Click **OK** to begin the installation.

**To enable UPnP in Windows 7:**

1. Go to **Start > Control Panel > Network and Internet > Network and Sharing Center**.
2. On the left pane, click **Change advanced sharing settings**.
3. On your current network profile, in the **Network discovery** area, click **Turn on network discovery**, and then click **Save changes**.

## Configuring SNMP Settings

You can configure Simple Network Management Protocol (SNMP) settings on the **Setup → Network Setup → SNMP** page.

SNMP is a protocol for collecting, organizing, and exchanging management information between managed devices on a network.

**To enable SNMP:**

1. Next to **SNMP Version**, select the SNMP version(s) that you want to use. For best security, use SNMPv3. You can select SNMPv1 only, SNMPv2 only, both SNMPv1 and SNMPv2, or SNMPv3 only.

---

**Note** If you select SNMPv1 or SNMPv2, a warning message will appear.

---

2. By default, the **SNMP Port** is **161**. To change the port, enter a number in the range 1–65535.
3. In the **Trap Address** field, enter the IP address of the SNMP server where trap notifications will be sent.
4. By default, the **Trap Port** is **162**. To change the port, enter a number in the range 1–65535.

5. If SNMPv3 is selected, for both read-only and read-write, enter a user name, select an authentication method (MD5 or SHA), and create authentication and encryption passwords (must be at least 8 characters long).
6. Click **Save** to apply the settings.

## Configuring Bonjour

You can configure Bonjour settings on the **Setup** → **Network Setup** → **Bonjour** page.

Bonjour is a zero configuration networking application that allows you to create a network in which devices can discover each other without requiring any user configuration.

When this function is enabled, you can discover the camera on a Mac OS computer by opening Safari and going to **Display All Bookmarks** > **Bonjour**.

Bonjour is enabled by default. To disable it, clear the **Enable** check box, and then click **Save**.

## Configuring Multicast Settings

You can configure multicast settings on the **Setup** → **Network Setup** → **Multicast** page.

Multicast is a transmission mode for data packets that minimizes bandwidth use and CPU load when multiple computers are receiving the same data packet simultaneously. You can configure multicast for Main Stream, Sub Stream 1, and Sub Stream 2 profiles.

### To enable multicast:

1. For each stream that you want to enable multicast in, select the **Enable** check box, and then enter a multicast address and port, using the suggested ranges as a guide.
2. Click **Save** to apply the settings.

### To view video in multicast mode:

- In **Live** view, select **Multicast** from the **Protocol** drop-down list.



## Configuring 802.1X Settings

You can configure 802.1X settings on the **Setup → Network Setup → 802.1X** page.

802.1X is a port-based network access control protocol for preventing unauthorized devices from accessing the LAN. You can set up user name and password credentials for the camera so that it is not blocked by the network switch.

### To enable 802.1X:

1. Select the **Enable** check box.
2. In the **User Name** field, enter the user name that will be used to authenticate the camera.
3. In the **Password** field, enter the password that will be used to authenticate the camera.
4. Click **Save** to apply the settings.

## Configuring QoS Settings

You can configure Quality of Service (QoS) settings on the **Setup → Network Setup → QoS** page.

QoS settings control bandwidth use by prioritizing certain data packets over others.

### To enable QoS:

1. In the **Realtime Monitor** field, enter a DSCP (Differentiated Services Codepoint) value for live video packets. Select a value between 0 (lowest priority) and 63 (highest priority).
2. In the **Command** field, enter a DSCP (Differentiated Services Codepoint) value for non-video packets. Select a value between 0 (lowest priority) and 63 (highest priority).
3. Click **Save** to apply the settings.

# Working with Certificates

## Importing Certificates

You can configure certificate settings on the **Setup → Network Setup → Certificate** page.

### To install a Honeywell-signed root certificate:

1. Click **Export**, navigate to the directory where you want to save the certificate (**ca.crt**) on your PC, and then click **Save**.
2. Go to the directory where you saved the certificate and double-click the certificate. The **Certificate** window opens.
3. In the **Certificate** window, on the **General** tab, click **Install Certificate** to open the Certificate Import Wizard.
4. Click **Next** to continue.
5. Click **Place all certificates in the following store**, click **Browse**, click **Trusted Root Certification Authorities**, and then click **OK**.
6. Click **Next**, and then click **Finish** to close the Certificate Import Wizard. A confirmation dialog box appears with the message “The import was successful.”
7. Click **OK**, and then click **OK** to close the **Certificate** window.

### To import certificate from 3<sup>rd</sup> party:

1. Select a certificate type from the **Type** drop-down list.
2. In the **File** field, click **Browse** to select a certificate file you have already applied from 3rd party or CA domain.
3. In the **Key** field, click **Browse** to select a certificate key you have already applied from 3rd party or CA domain.
4. Click **Import** button and reboot camera.

---


**Note** Supported certificate type: HTTPS protocol.  
Supported certificate file and Key: PEM format.

---

## Certificate Request

You can fill in certificate information and the certificate request file can be exported to the certificate issuing authority for signing and then being imported to camera.

1. Navigate to **Setup → Network Setup → Certificate Request** page.
2. Enter the required information and then click **Export**.

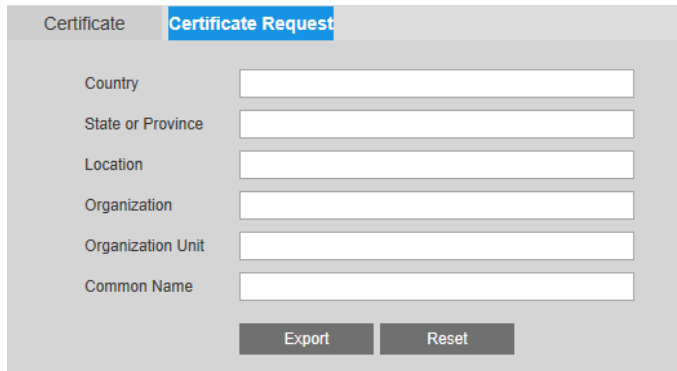

The screenshot shows a web interface for configuring network settings. At the top, there are two tabs: "Certificate" and "Certificate Request", with the latter being selected and highlighted in blue. Below the tabs, there are six input fields for certificate information, each with a label to its left: "Country", "State or Province", "Location", "Organization", "Organization Unit", and "Common Name". At the bottom of the form, there are two buttons: "Export" and "Reset".

## 6 Configuring Event Settings

This chapter contains the following sections:

- [Configuring Alarm Events, page 40](#)
- [Configuring System Events, page 42](#)
- [Configuring Motion Detection Events, page 44](#)
- [Configuring Camera Tampering Events, page 46](#)
- [Configuring Scene Change Events, page 47](#)
- [Configuring Audio Events, page 48](#)
- [Configuring Smart Plan, page 49](#)
- [Configuring IVS Analysis Events, page 50](#)
- [Configuring Face Detection Events, page 51](#)
- [Configuring People Counting Events, page 52](#)
- [Configuring Heat Map Events, page 54](#)

### Configuring Alarm Events

You can configure alarm event settings on the **Setup** → **Alarm Setup** → **Alarm Setup** page.

**To enable the alarm function:**

1. Select the **Enable** check box.
2. From the **Alarm Input** list, select the alarm input that you want to configure (**Alarm1** or **Alarm2**).
3. Next to **Alarm Period**, click **Setup**. The **Alarm Period** window opens.

The screenshot shows the 'Alarm Period' configuration window. It features a 24-hour grid for each day of the week. The 'Sunday' row is highlighted in green. Below the grid, there are checkboxes for each day, with 'Sunday' checked. Underneath, there are six 'Period' settings, each with a start and end time in HH:MM:SS format. The first period is selected and set from 00:00:00 to 23:59:59. At the bottom, there are 'Save' and 'Cancel' buttons.

4. Set the days and times when you want the alarm function to be active, and then click **Save**.
5. In the **Anti-Dither** field, enter the anti-dither time in seconds. Enter a value between **0** and **100** seconds. The system will only allow one alarm event within this period.
6. Set **Sensor Type** to **NO** (normally open) or **NC** (normally closed), depending on the alarm input type.
7. To start recording video when an alarm event is detected, select the **Record** check box.
8. In the **Record Delay** field, enter the number of seconds that the system will continue to record video after an alarm event has ended. Enter a value between **10** and **300**.
9. To generate an alarm output when an alarm event is detected, select the **Alarm Output** check box and select the alarm output(s) to be activated.
10. In the **Alarm Delay** field, enter the number of seconds that the system will continue to generate an alarm output after an alarm event has ended. Enter a value between **10** and **300**.
11. To send an email notification when an alarm event is detected, select the **Send Email** check box. Email settings must be configured in **Setup → Network Setup → SMTP (Email)**. See [Configuring Email Settings](#) on page 33.
12. To take a snapshot when an alarm event is detected, select the **Snapshot** check box.

---

**Note** For the snapshot to be attached to the email notification, the **Attachment** check box must be selected in **Setup → Network Setup → SMTP (Email)**. See [Configuring Email Settings](#) on page 33.

---

13. Click **Save** to apply the settings.

## Configuring System Events


You can configure system event settings (for SD card and network errors and illegal login attempts) on the **Setup → Alarm Setup → Event** page.

### Configuring SD Card Event Settings

There are three types of SD card events:

- **No SD Card:** There is no microSD card installed in the camera.
- **SD Card Error:** The installed microSD card is not working.
- **Capacity Warning:** The installed microSD card is full.

You can configure settings for each type of event.

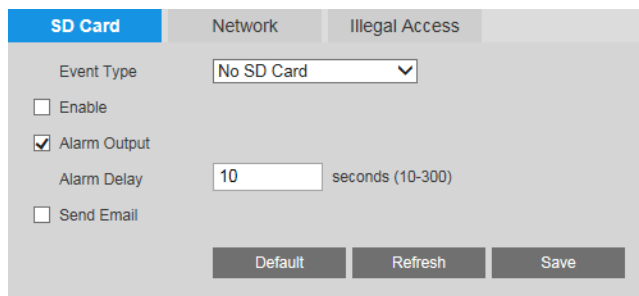

The screenshot shows the 'SD Card' tab selected in a configuration interface. The 'Event Type' dropdown is set to 'No SD Card'. The 'Enable' checkbox is unchecked, 'Alarm Output' is checked, and 'Alarm Delay' is set to 10 seconds. The 'Send Email' checkbox is unchecked. At the bottom, there are 'Default', 'Refresh', and 'Save' buttons.

**To enable SD card event detection:**

1. On the **SD Card** tab, select the event type that you want to configure from the **Event Type** list (**No SD Card**, **SD Card Error**, or **Capacity Warning**).
2. Select the **Enable** check box.
3. To generate an alarm output when an event is detected, select the **Alarm Output** check box and select the alarm output(s) to be activated.
4. In the **Alarm Delay** field, enter the number of seconds that the system will continue to generate an alarm output after the event has ended. Enter a value between **10** and **300**.
5. To send an email notification when the event is detected, select the **Send Email** check box. Email settings must be configured in **Setup → Network Setup → SMTP (Email)**. See [Configuring Email Settings](#) on page 33.
6. Click **Save** to apply the settings.

### Configuring Network Event Settings

There are two types of network events:

- **Network Disconnected:** The camera is offline.
- **IP Conflict:** The camera has the same IP address as another device on the network.

You can configure settings for each type of event.

#### To enable network event detection:

1. On the **Network** tab, select the event type that you want to configure from the **Event Type** list (**Network Disconnected** or **IP Conflict**).
2. Select the **Enable** check box.
3. In the **IP Address** field, enter the IP address of the headend, and in the **Time** field, enter the countdown time. If no connection is established with the IP address within the specified time, the system will detect a network disconnection event.
4. To start recording video when the event is detected, select the **Record** check box.
5. In the **Record Delay** field, enter the number of seconds that the system will continue to record video after the event has ended. Enter a value between **10** and **300**.
6. To generate an alarm output when an event is detected, select the **Alarm Output** check box and select the alarm output(s) to be activated.
7. In the **Alarm Delay** field, enter the number of seconds that the system will continue to generate an alarm output after the event has ended. Enter a value between **10** and **300**.
8. Click **Save** to apply the settings.

## Configuring Illegal Access Event Settings

An illegal access event occurs when a specified number of unsuccessful login attempts is exceeded.

#### To enable illegal access detection:

1. On the **Illegal Access** tab, select the **Enable** check box.

2. In the **Failed Login Attempts** field, enter the number of unsuccessful login attempts the system will allow before an illegal access event is detected. Enter a value between **3** and **10**.
3. To generate an alarm output when an event is detected, select the **Alarm Output** check box and select the alarm output(s) to be activated.
4. In the **Alarm Delay** field, enter the number of seconds that the system will continue to generate an alarm output after the event has ended. Enter a value between **10** and **300**.
5. To send an email notification when an illegal access event is detected, select the **Send Email** check box. Email settings must be configured in **Setup → Network Setup → SMTP (Email)**, See [Configuring Email Settings](#) on page 33.


## Configuring Motion Detection Events

You can configure motion detection event settings on the **Setup → Onboard Video Analytics → Video Detection → Motion Detection** page.

**To enable motion detection:**


1. Select the **Enable** check box.
2. Next to **Alarm Period**, click **Setup**. The **Alarm Period** window opens.
3. Set the days and times when you want the alarm function to be active, and then click **Save**.
4. In the **Anti-Dither** field, enter the anti-dither time in seconds. Enter a value between **0** and **100** seconds. The system will only allow one motion detection event within this period.
5. Set up motion detection areas:
  - a. Next to **Area**, click **Setup**. The **Area** window opens.



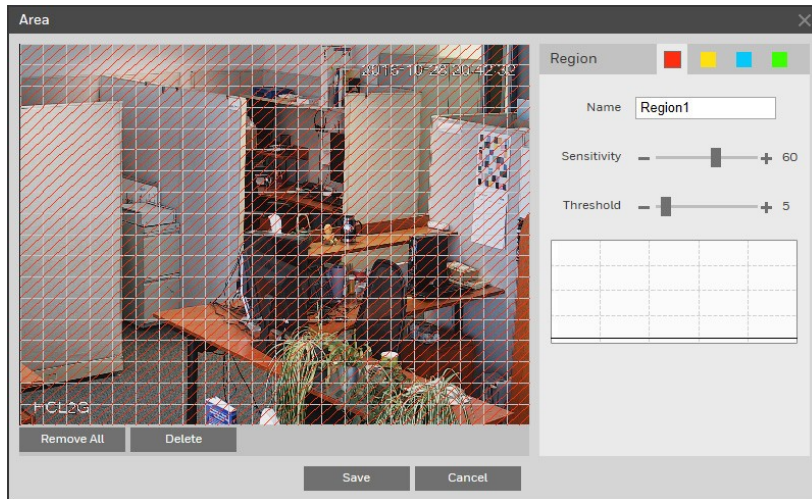

- b. By default, the whole video window is configured as a motion detection area. To define a smaller area, drag your mouse over the area(s) that you want to deselect, or click **Remove All**, and then redraw the area(s) with your mouse.
- c. You can define up to 4 motion detection profiles (regions), each with different sensitivity and threshold settings. Next to **Region**, click one of the solid color tiles to select a region. Drag the **Sensitivity** and **Threshold** sliders to the desired values. Click the – and + signs to make fine adjustments.

Sensitivity measures the amount of change in a scene that qualifies as motion. Threshold measures the amount of motion in a scene required to trigger a motion detection event.

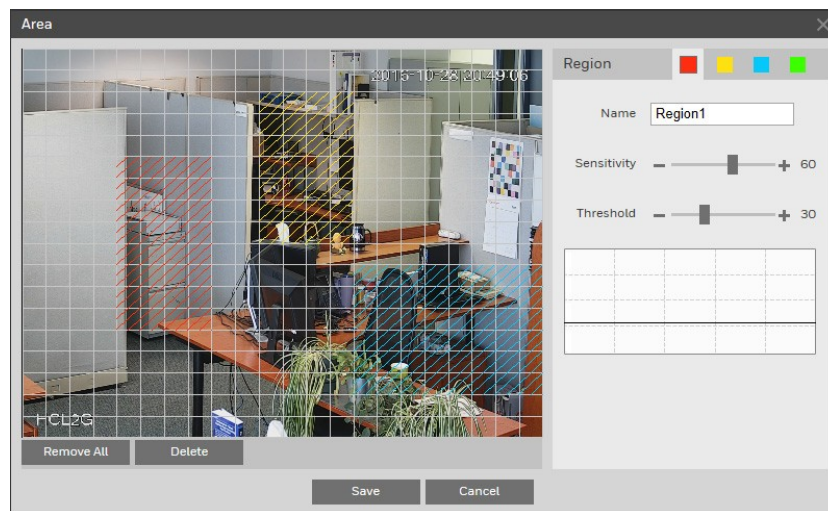

- d. Click **Save** to apply the settings.
6. To start recording video when motion is detected, ensure that the **Record** check box is selected.
  7. In the **Record Delay** field, enter the number of seconds that the system will continue to record video after the event has ended. Enter a value between **10** and **300**.
  8. To generate an alarm output when motion is detected, select the **Alarm Output** check box and select the alarm output(s) to be activated.
  9. In the **Alarm Delay** field, enter the number of seconds that the system will continue to

generate an alarm output after the event has ended. Enter a value between **10** and **300**.

10. To send an email notification when motion is detected, select the **Send Email** check box. Email settings must be configured in **Setup → Network Setup → SMTP (Email)**. See [Configuring Email Settings](#) on page 33.
11. To take a snapshot when motion is detected, select the **Snapshot** check box.

---

**Note** For the snapshot to be attached to the email notification, the **Attachment** check box must be selected in **Setup > Network Setup > SMTP (Email)**. See [Configuring Email Settings](#) on page 33.

---

12. Click **Save** to apply the settings.

## Configuring Camera Tampering Events

You can configure camera tampering event settings on the **Setup → Onboard Video Analytics → Video Detection → Video Tampering** page.

**To enable camera tampering detection:**

1. Select the **Enable Tamper Detect** and/or the **Enable Defocus Detect** check box(es).
2. Next to **Alarm Period**, click **Setup**. The **Alarm Period** window opens.
3. Set the days and times when you want the alarm function to be active, and then click Save.
4. To start recording video when a tampering event is detected, ensure that the **Record** check box is selected.
5. In the **Record Delay** field, enter the number of seconds that the system will continue to record video after a tampering event has ended. Enter a value between **10** and **300**.
6. To generate an alarm output when a tampering event is detected, select the **Alarm Output** check box and select the alarm output(s) to be activated.
7. In the **Alarm Delay** field, enter the number of seconds that the system will continue to generate an alarm output after a tampering event has ended. Enter a value between **10** and **300**.
8. To send an email notification when a tampering event is detected, select the **Send Email**

check box. Email settings must be configured in **Setup → Network Setup → SMTP (Email)**. See [Configuring Email Settings](#) on page 33.

- To take a snapshot when a tampering event is detected, select the **Snapshot** check box.

---

**Note** For the snapshot to be attached to the email notification, the **Attachment** check box must be selected in **Setup → Network Setup → SMTP (Email)**. See [Configuring Email Settings](#) on page 33.

---

- Click **Save** to apply the settings.

## Configuring Scene Change Events

You can configure scene change event settings on the **Setup → Onboard Video Analytics → Video Detection → Scene Change** page.

**To enable scene change detection:**

- Select the **Enable** check box.
- Next to **Alarm Period**, click **Setup**. The **Alarm Period** window opens.
- Set the days and times when you want the alarm function to be active, and then click **Save**.
- To start recording video when a scene change event is detected, select the **Record** check box.
- In the **Record Delay** field, enter the number of seconds that the system will continue to record video after a scene change event has ended. Enter a value between **10** and **300**.
- To generate an alarm output when a scene change event is detected, select the **Alarm Output** check box and select the alarm output(s) to be activated.
- In the **Alarm Delay** field, enter the number of seconds that the system will continue to generate an alarm output after a scene change event has ended. Enter a value between **10** and **300**.
- To send an email notification when an alarm event is detected, select the **Send Email** check box. Email settings must be configured in **Setup → Network Setup → SMTP (Email)**. See [Configuring Email Settings](#) on page 33.

- To take a snapshot when an alarm event is detected, ensure that the **Snapshot** check box is selected.

---

**Note** For the snapshot to be attached to the email notification, the **Attachment** check box must be selected in **Setup → Network Setup → SMTP (Email)**. See [Configuring Email Settings](#) on page 33.

---

- Click **Save** to apply the settings.

## Configuring Audio Events

You can configure audio event settings on the **Setup → Onboard Video Analytics → Audio Detection** page.

### To enable audio event detection:

- To detect faults in the audio input, select the **Enable Input Abnormality** check box.
- To detect unusual changes in the audio input:
  - Select the **Enable Intensity Change** check box.
  - Drag the **Sensitivity** and **Threshold** sliders to the desired values. Click the – and + signs to make fine adjustments. **Sensitivity** controls changes to the audio input volume. **Threshold** controls the amount of change allowed in the audio environment before an audio detection event is triggered.

3. Next to **Alarm Period**, click **Setup**. The **Alarm Period** window opens.
4. Set the days and times when you want the alarm function to be active, and then click **Save**.
5. In the **Anti-Dither** field, enter the anti-dither time in seconds. Enter a value between **0** and **100** seconds. The system will only allow one audio event within this period.
6. To start recording video when an audio event is detected, ensure that the **Record** check box is selected.
7. In the **Record Delay** field, enter the number of seconds that the system will continue to record video after an audio event has ended. Enter a value between **10** and **300**.
8. To generate an alarm output when an audio event is detected, select the **Alarm Output** check box and select the alarm output(s) to be activated.
9. In the **Alarm Delay** field, enter the number of seconds that the system will continue to generate an alarm output after an audio event has ended. Enter a value between **10** and **300**.
10. To send an email notification when an audio event is detected, select the **Send Email** check box. Email settings must be configured in **Setup → Network Setup → SMTP (Email)**. See [Configuring Email Settings](#) on page 33.
11. To take a snapshot when an audio event is detected, select the **Snapshot** check box.

---

**Note** For the snapshot to be attached to the email notification, the **Attachment** check box must be selected in **Setup → Network Setup → SMTP (Email)**. See [Configuring Email Settings](#) on page 33.


---

12. Click **Save** to apply the settings.

## Configuring Smart Plan


Smart plan is a master switch for the intelligent analytics such as “Face Detection”, “Heat Map”, “IVS” and “People Counting” etc. The device intelligent functions can be valid after smart plan is enabled.

You can configure smart plan on the **Setup → Event → Smart Plan** page. Select the plan by clicking its icon and click **Save**.

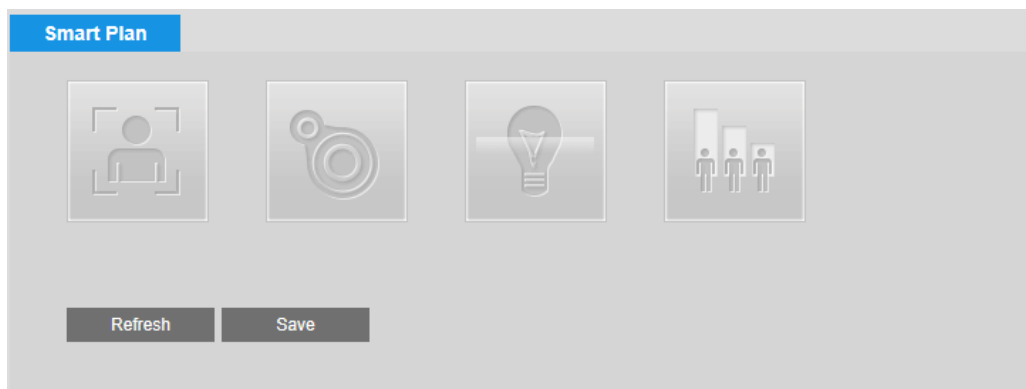

## Configuring IVS Analysis Events

You can configure IVS analysis event settings on the **Setup → Onboard Video Analytics → IVS Analysis** page.

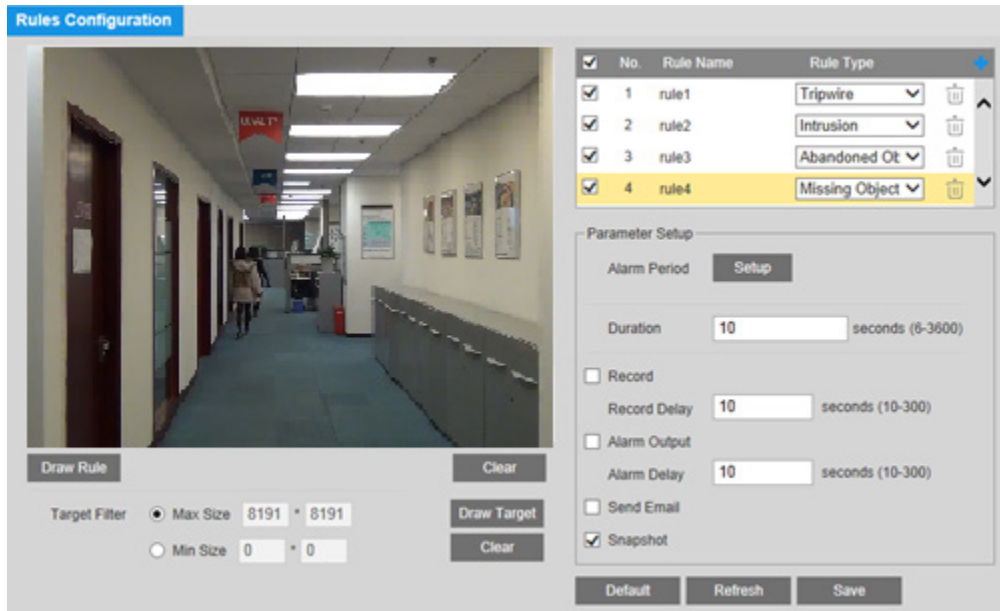

### To enable IVS Analysis:

1. Select the check box of rules to be applied and set the rule type.
2. Click **Draw Rule** to set up an area for people counting. You can move or resize the area using your mouse. To move the area, drag one of the sides. To resize the area, drag one of the corner handles.
3. Click **Draw Target** to set up the target size. You can move or resize the area using your mouse. To move the area, drag one of the sides. To resize the area, drag one of the corner handles.
4. Next to **Alarm Period**, click **Setup**. The **Alarm Period** window opens.
5. Set the days and times when you want the alarm function to be active, and then click **Save**.
6. In the **Duration** field, enter the number of seconds of duration. Enter a value between **6** and **3600**.
7. To start recording video when an event is detected, select the **Record** check box.
8. In the **Record Delay** field, enter the number of seconds that the system will continue to record video after the event has ended. Enter a value between **10** and **300**.
9. To generate an alarm output when an event is detected, select the **Alarm Output** check box and select the alarm output(s) to be activated.
10. In the **Alarm Delay** field, enter the number of seconds that the system will continue to generate an alarm output after the event has ended. Enter a value between **10** and **300**.
11. To send an email notification when an event is detected, select the **Send Email** check box. Email settings must be configured in **Setup → Network Setup → SMTP (Email)**. See [Configuring Email Settings](#) on page 33.
12. To take a snapshot when an event is detected, select the **Snapshot** check box.

---

**Note** For the snapshot to be attached to the email notification, the **Attachment** check box must be selected in **Setup → Network Setup → SMTP (Email)**. See [Configuring Email Settings](#) on page 33.

---

13. Click **Save** to apply the settings.

## Configuring Face Detection Events

You can configure face detection event settings on the **Setup → Onboard Video Analytics → Face Detection** page.

### To enable face detection:

1. Select the **Enable** check box.
2. Click **Draw Target** to set up the face detection area. You can move or resize the area using your mouse. To move the area, drag one of the sides. To resize the area, drag one of the corner handles.
3. Next to **Alarm Period**, click **Setup**. The **Alarm Period** window opens.
4. Set the days and times when you want the alarm function to be active, and then click **Save**.
5. To enable face enhancement, select the **Enable Face Enhancement** check box.
6. To start recording video when an event is detected, select the **Record** check box.
7. In the **Record Delay** field, enter the number of seconds that the system will continue to record video after the event has ended. Enter a value between **10** and **300**.
8. To generate an alarm output when an event is detected, select the **Alarm Output** check box and select the alarm output(s) to be activated.
9. In the **Alarm Delay** field, enter the number of seconds that the system will continue to generate an alarm output after the event has ended. Enter a value between **10** and **300**.

- To send an email notification when an event is detected, select the **Send Email** check box. Email settings must be configured in **Setup → Network Setup → SMTP (Email)**. See [Configuring Email Settings](#) on page 33.
- To take a snapshot when an event is detected, select the **Snapshot** check box.

---

**Note** For the snapshot to be attached to the email notification, the **Attachment** check box must be selected in **Setup → Network Setup → SMTP (Email)**. See [Configuring Email Settings](#) on page 33.

---

- Click **Save** to apply the settings.

## Configuring People Counting Events

### People Counting

You can configure IVS analysis event settings on the **People Counting** tab of the **Setup → Onboard Video Analytics → People Counting** page.

The screenshot displays the 'People Counting' configuration page. It features a video preview window showing a hallway with a red 'QUALITY' sign. To the right of the video are several configuration sections:

- Enable**: A checkbox to turn the feature on or off.
- Enable OSD**: A checkbox with a 'Clear' button to remove the overlay.
- Alarm Period**: A 'Setup' button to define the time window.
- visualAngle**: A dropdown menu currently set to 'vertical'.
- Rule Name**: A text input field containing 'NumberStat'.
- Direction**: A dropdown menu set to 'A->B'.
- People Counting Alarm**: Three input fields for 'Enter Number', 'Leave Number', and 'Stranded Number', all currently set to '0'.
- Record**: A checkbox with a 'Record Delay' input field set to '10' seconds (range 10-300).
- Alarm Output**: A checkbox with an 'Alarm Delay' input field set to '10' seconds (range 10-300).
- Send Email**: A checkbox.
- Snapshot**: A checked checkbox.
- Target Filter**: Radio buttons for 'Max Size' (2560 \* 2560) and 'Min Size' (1792 \* 1792, range 960-2560). Buttons for 'Draw Rule', 'Draw Target', and 'Clear' are present.
- Bottom Buttons**: 'Default', 'Refresh', and 'Save' buttons.

#### To enable people counting:

- Select the **Enable** check box.
- Click **Draw Rule** to set up an area for people counting. You can move or resize the area using your mouse. To move the area, drag one of the sides. To resize the area, drag one of



the corner handles.

3. Click **Draw Target** to set up the target size. You can move or resize the area using your mouse. To move the area, drag one of the sides. To resize the area, drag one of the corner handles.
4. To enable OSD which displays the Enter and Leave numbers, select the **Enable OSD** check box. To restore the numbers, click **Clear**.
5. Next to **Alarm Period**, click **Setup**. The **Alarm Period** window opens.
6. Set the days and times when you want the alarm function to be active, and then click **Save**.
7. In the **Rule Name** field, enter the name of rule.
8. In the **Direction** field, select the direction of people counting. You can select A->B or B->A, the arrow direction always means the entrance direction.
9. In the People Counting Alarm field, set the enter number, leave number, stranded number. It will trigger alarm when it exceeds the limited stranded number.
10. To start recording video when an event is detected, select the **Record** check box.
11. In the **Record Delay** field, enter the number of seconds that the system will continue to record video after the event has ended. Enter a value between **10** and **300**.
12. To generate an alarm output when an event is detected, select the **Alarm Output** check box and select the alarm output(s) to be activated.
13. In the **Alarm Delay** field, enter the number of seconds that the system will continue to generate an alarm output after the event has ended. Enter a value between **10** and **300**.
14. To send an email notification when an event is detected, select the **Send Email** check box. Email settings must be configured in **Setup → Network Setup → SMTP (Email)**. See [Configuring Email Settings](#) on page 33.
15. To take a snapshot when an event is detected, select the **Snapshot** check box.

---


**Note** For the snapshot to be attached to the email notification, the **Attachment** check box must be selected in **Setup → Network Setup → SMTP (Email)**. See [Configuring Email Settings](#) on page 33.

---

16. Click **Save** to apply the settings.

## Report

You can run and export report of people counting on the **Report** tab of the **Setup → Onboard Video Analytics → People Counting** page.

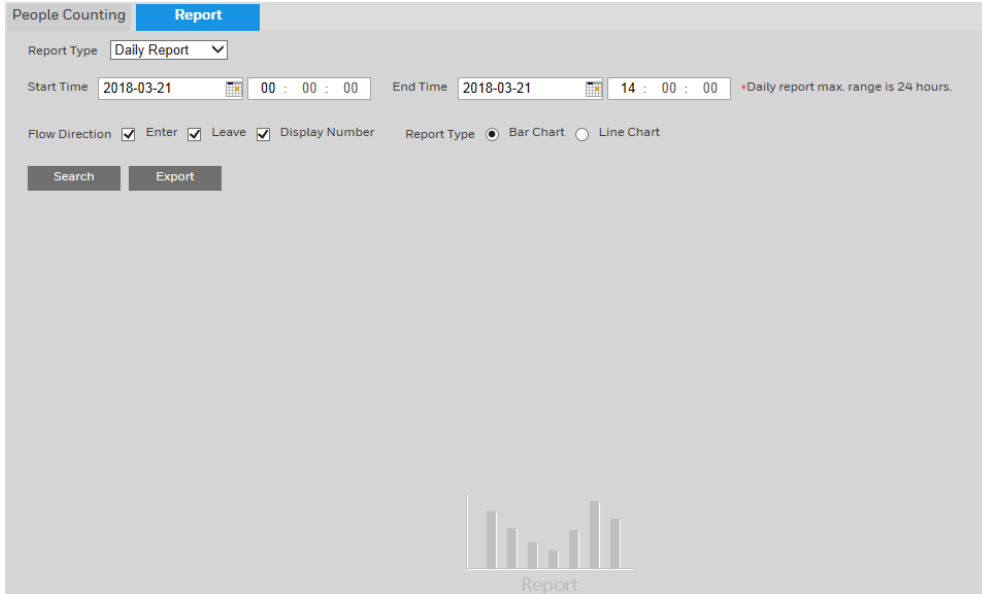


To run a report, select the report type and set the criteria as needed. Click **Search** and the report will be displayed.

To export the report, click **Export**.

## Configuring Heat Map Events

You can configure IVS analysis event settings on the **Setup → Onboard Video Analytics → Heat Map** page.

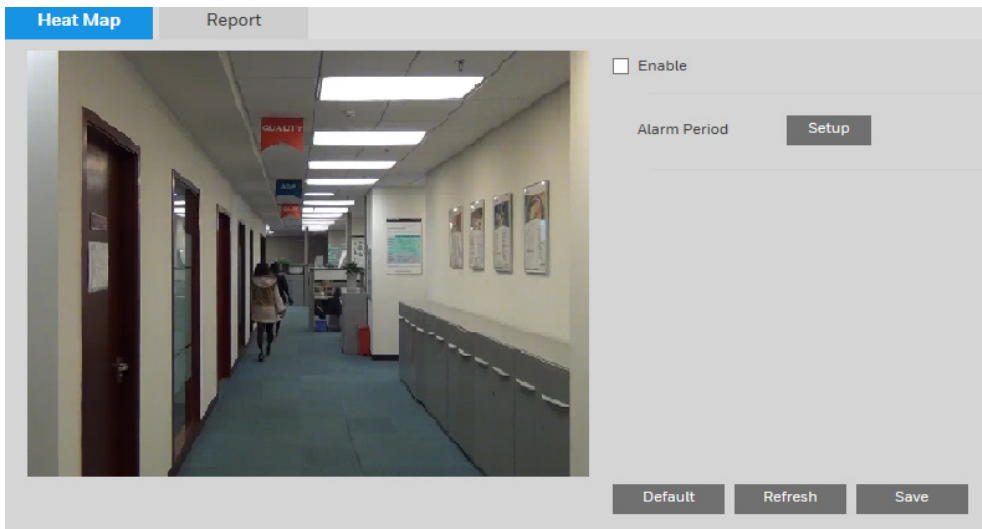


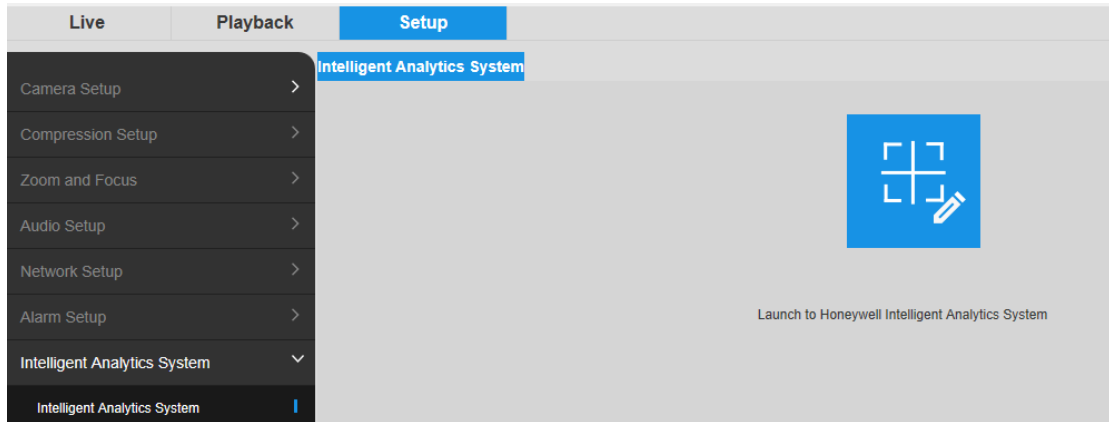
**To enable heat map:**

1. Select the **Enable** check box.
2. Next to **Alarm Period**, click **Setup**. The **Alarm Period** window opens. Set the days and times when you want the alarm function to be active, and then click **Save**.

Click **Save** to apply the settings.

# 7 Intelligent Analytics System

You can access the Intelligent Analytics System from the **Setup** → **Intelligent Analytics System** page. Click  to go to **INTELLIGENT ANALYTICS SYSTEM** webpage.




# 8 Configuring Recording Settings

This chapter contains the following sections:


- [Configuring Recording Schedules, page 56](#)
- [Configuring Storage Settings, page 57](#)
- [Configuring Recording Settings, page 59](#)

## Configuring Recording Schedules

You can set up both regular and holiday schedules for recording video and saving snapshots on the **Setup** → **Storage Setup** → **Schedule** page.

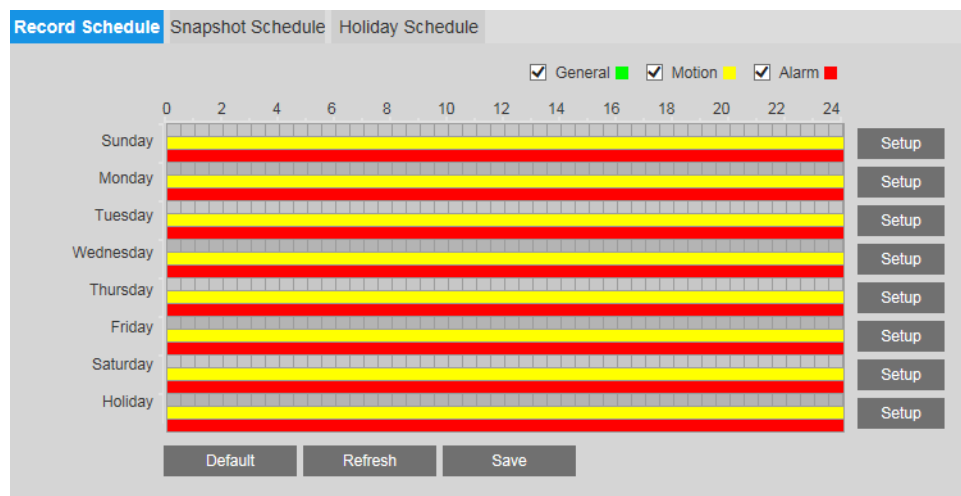


On the **Record Schedule** tab, click the **Setup** buttons to configure weekend, weekday, and holiday settings, for general video recording as well as motion detection and alarm recording.

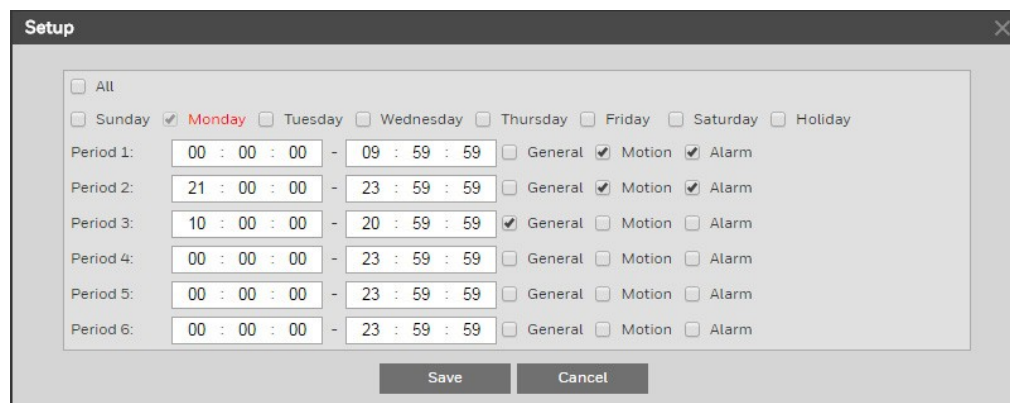

You can configure up to 6 different recording periods per day. Click **Save** to apply the settings.

Follow the same procedure to configure the settings on the **Snapshot Schedule** tab.

On the **Holiday Schedule** tab, you can designate holidays by clicking dates on the calendar.

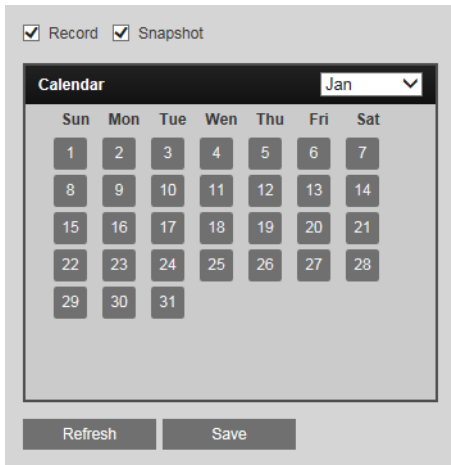


On the selected dates, the video recording/snapshot schedule will follow the holiday settings you configured in the **Record Schedule** and **Snapshot Schedule** tabs. Click **Save** to apply the settings.

## Configuring Storage Settings

You can configure recording storage settings on the **Setup → Storage Setup → Destination** page.

### Configuring Storage Paths

On the **Path** tab, you can specify where you want recorded video and snapshots—whether scheduled or triggered by a motion detection or alarm event—to be saved: to a local SD card, to an FTP server, or to an NAS disk.

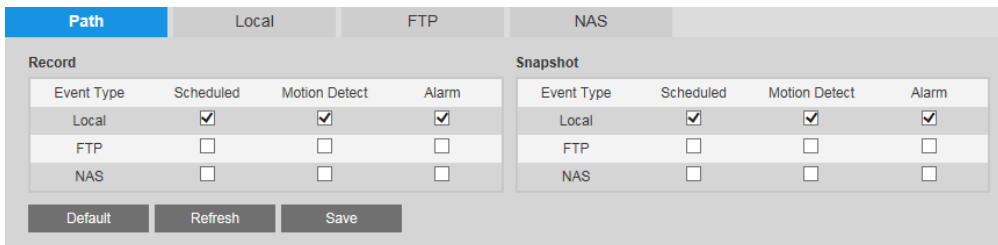

Select which recorded events you want to save and where you want to save them, then click **Save** to apply the settings.


---

**Note** Only one network storage option can be used at a time. FTP and NAS cannot be used together.

---

## Configuring the Local SD Card for Storage

If the camera has a microSD card installed, the **Local** tab displays the microSD card details.

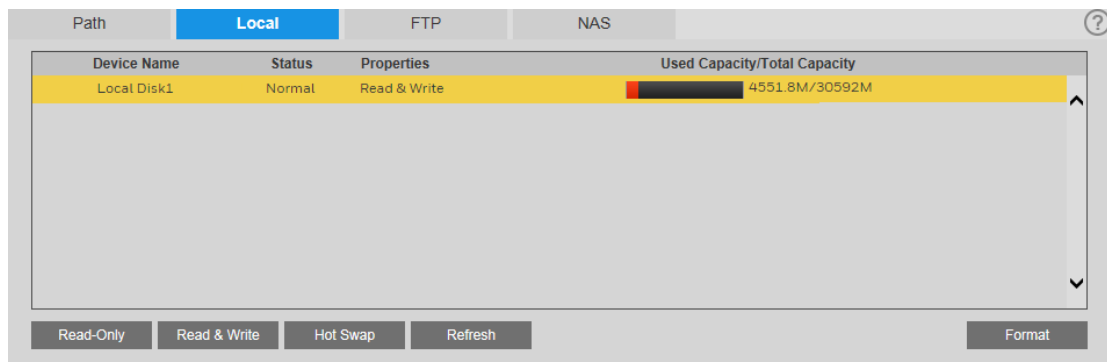

You can set up the installed microSD card for read-only, read-and-write, or hot swap operation by clicking the corresponding button.

- **Read Only:** Data on card can be displayed but not modified.
- **Read & Write:** Data on card can be displayed and modified.
- **Hot Swap:** Card can be inserted or removed without turning off the camera.

If you want to erase all of the data on the microSD card, click **Format**. A confirmation message appears. Click **OK** to continue. The card is formatted and the camera reboots.

## Configuring an FTP Server for Storage

On the **FTP** tab, you can enable FTP storage and configure storage settings.

### To enable FTP storage:

1. Select the **Enable** check box.
2. In the **Server Address** and **Port** fields, enter the address and port number of the FTP server.
3. In the **User Name** and **Password** fields, enter the user name and password of the server.
4. In the **Remote Directory** field, enter the directory on the server where the recorded video/snapshot files will be stored.
5. Click **Save** to apply the settings.

### Panic Save

To save recorded video/snapshots to the camera's microSD card when the network connection to the FTP is offline or unavailable, select the **Panic Save (Local)** check box, and then click **Save** to apply the setting.

## Configuring an NAS Disk for Storage

On the **NAS** tab, you can enable network attached storage and configure storage settings.

**To enable network attached (NAS) storage:**

1. Select the **Enable** check box.
2. In the **Server Address** field, enter the address of the NAS server.
3. In the **Remote Directory** field, enter the directory on the server where the recorded video/snapshot files will be stored.
4. Click **Save** to apply the settings.

## Configuring Recording Settings

You can configure recording settings on the **Setup → Storage Setup → Record Control** page.

By default, recorded video files are 8 minutes or 30 minutes long (depending on your camera model). To change this setting, enter a time between **1** and **120** minutes in the **Record Length** field.

By default, the pre-event record time (the number of seconds the system stores in a buffer) is 5 seconds. To change this setting, enter a time between **0** and **5** seconds in the **Pre-Event Record** field.

In the **Auto-Delete Old Files** field, set the number of days to delete video files automatically.

From the **Disk Full** list, select **Overwrite** or **Stop**.

- **Overwrite:** Recording continues when disk capacity is reached and overwrites previously saved video.
- **Stop:** Recording stops when disk capacity is reached. Nothing is overwritten and no further video is recorded.

Set **Record Mode** to **Auto**, **Manual**, or **Off**.

- **Auto:** Video records continuously.
- **Manual:** Video recording must be initiated by user.
- **Off:** Video recording is disabled.

From the **Record Stream** list, select the stream profile that you want to use for recording video: **Main Stream** or **Sub Stream**.

Click **Save** to apply the settings.



# 9 Configuring System Settings

This chapter contains the following sections:

- [Configuring General System Settings, page 61](#)
- [Configuring Date and Time Settings, page 61](#)
- [Configuring Account Settings, page 63](#)
- [Resetting the Camera, page 67](#)
- [Backing Up/Restoring a Configuration, page 68](#)
- [Configuring Maintenance Settings, page 68](#)
- [Upgrading the Firmware, page 69](#)
- [Viewing Version Information, page 69](#)
- [Managing Logs, page 70](#)
- [Viewing Online Users, page 71](#)

## Configuring General System Settings

You can configure the device name, user interface language, video standard, analog output, and status LED settings on the **Setup** → **System Setup** → **General** page.

To change the device name, in the **Device Name** field, enter a new name, and then click **Save**.

To change the interface language, select a language from the **Language** list, and then click **Save**. To change the video standard, select **NTSC** or **PAL** from the **Video Standard** list, and then click **Save**.

To change the analog output, select **ON** or **OFF** from the **Analog Output** list, and then click **Save**.

To change the **Max Log Quantity**, enter a value between **1** and **1024**, and then click **Save**.

## Configuring Date and Time Settings

You can configure the date and time settings on the **Setup** → **System Setup** → **Date & Time** page.

## Changing the Date and Time Format

You can change the format of the date and time that appear in the text overlay on the video. To change the date format, select one of the following formats from the **Date Format** list: **Year-Month-Day**, **Month-Day-Year**, or **Day-Month-Year**. Click **Save** to apply the settings.

To change the time format, select **24\_Hour\_Standard** or **12\_Hour\_Standard** from the **Time Format** list.

## Setting the Date and Time

There are three ways you can set the camera's date and time. You can manually enter the date and time, synchronize with your PC's internal clock, or set up the camera to synchronize automatically with a Network Time Protocol (NTP) server at regular intervals.

To manually set the date and time, enter the date and time in the **Current Time** fields, and then click **Save**.

To synchronize the date and time with your PC, click **Sync PC**. If the synchronization is successful, the message "Save succeeded" appears. You must manually click **Sync PC** each time you want the date and time to synchronize with the PC.


### To synchronize the time with an NTP server:

1. From the **Time Zone** list, select your time zone.
2. If you are in an area that observes Daylight Saving Time (DST):
  - a. Select the **Enable DST** check box.
  - b. Set **DST Type** to **Week**.
  - c. Set **Start Time** to **Mar 2nd Sunday 02:00:00 AM**.
  - d. Set **End Time** to **Nov 1st Sunday 02:00:00 AM**.
3. Select the **Synchronize with NTP** check box.
4. If you want, you can change the **NTP Server** from the default (time-a.nist.gov).

5. In **Update Period** field, enter the interval at which you want the camera's date and time to synchronize with the NTP server. You can enter a value between **0** and **30**.
6. Click **Save** to apply the settings.

## Configuring Account Settings

You can manage user accounts and permissions on the **Setup → System Setup → Account** page.

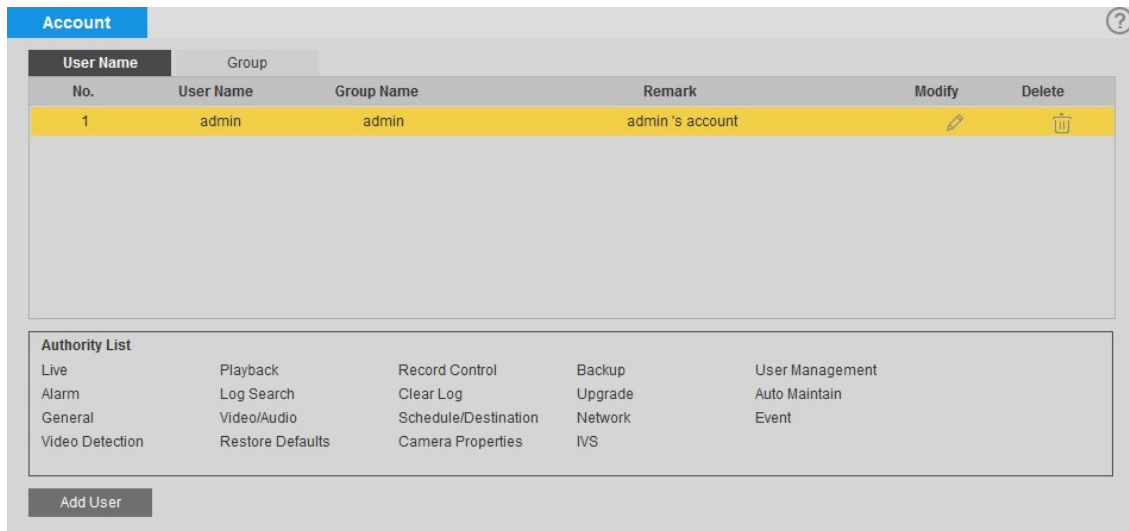

## Managing Groups


By default, there are two categories or “groups” of users: **admin** and **user**. If you want, you can create additional custom groups.

### Creating a Group

You can create a new custom group and assign permissions to it.

**To create a group:**

1. On the **Group** tab, click **Add Group** to open the **Add Group** window.

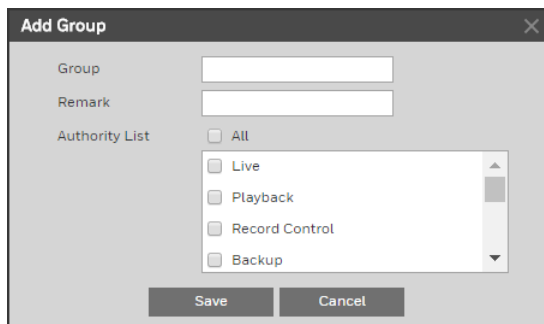

2. Enter a name for the group in the **Group** field.

3. If you want, you can enter a brief description in the **Remark** field.
4. From the **Authority List**, select permissions for the group.

**Table 9-1 Permissions**

<b>Name</b>	<b>Description</b>
Live	The user can view live video and access all of the controls in the Live interface.
Playback	The user can play back recorded video and access all of the controls in the Playback interface.
Record Control	The user can access the settings in <b>Setup → Storage Setup → Record Control</b> .
Backup	The user can save and export video clips in the Playback interface.
User Management	The user can access the settings in <b>Setup → System Setup → Account</b> .
Alarm	The user can access the settings in <b>Setup → Alarm Setup → Alarm</b> .
Log Search	The user can search logs in <b>Setup → Information → Log</b> .
Clear Log	The user can clear logs in <b>Setup → Information → Log</b> .
Upgrade	The user can upgrade firmware in <b>Setup → System Setup → Upgrade</b> .
Auto Maintain	The user can access the settings in <b>Setup → System Setup → Auto Maintain</b> .
General	The user can access the settings in <b>Setup → System Setup → General</b> .
Video/Audio	The user can access the settings in <b>Setup → Compression Setup → Video</b> and in <b>Setup → Audio Setup</b> .
Schedule/Destination	The user can access the settings in <b>Setup → Storage Setup &gt; Schedule</b> and in <b>Setup → Storage Setup → Destination</b> .
Network	The user can access the settings in <b>Setup → Network Setup</b> .
Event	The user can access the settings in <b>Setup → Alarm Setup &gt; Event</b> .
Video Detection	The user can access the settings in <b>Setup → Video Analytics → Video Detect</b> .
Restore Defaults	The user can access the settings in <b>Setup → System Setup → Default</b> .
Camera Properties	The user can access the settings in <b>Setup → Camera Setup → Properties</b> .
IVS	The user can access the settings in <b>Setup → Video Analytics</b> .


5. Click **Save** to apply the settings. The group is added to the list.


## Modifying a Group

You can modify the permissions of the administrator group, user group, and any custom groups that you have created.

### To modify a group:

1. On the **Group** tab, select the group that you want to modify (your selection will be

highlighted yellow), and then click the **Modify** icon  to open the **Modify Group** window.

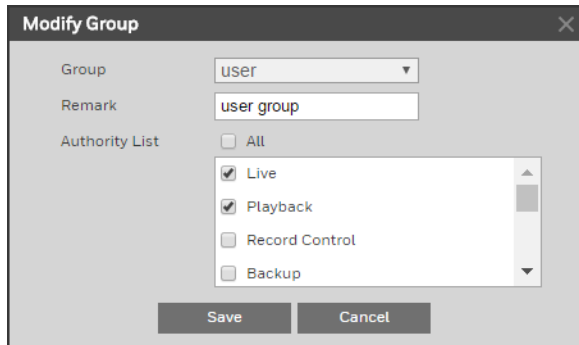


2. If you want, you can edit the description in the **Remark** field.
3. From the **Authority List**, select or deselect specific permissions for the group (see [Table 9-1](#)), or select the **All** check box to select/deselect all of the permissions.
4. Click **Save** to apply the settings.

## Deleting a Group

You can delete any custom group that you have created (you cannot delete the administrator group or the user group).

### To delete a group:

1. On the **Group** tab, select the group that you want to delete (your selection will be highlighted yellow), and then click the **Delete** icon .
2. A confirmation message appears. Click **OK** to continue. The group is removed from the list.

## Managing Users

You can create, modify, or delete a user account.

### Creating a User Account

You can create a new user account and assign permissions to it.

#### To create a user account:

1. On the **User Name** tab, click **Add User** to open the **Add User** window.

The screenshot shows a dialog box titled "Add User" with a close button (X) in the top right corner. The dialog contains the following fields and controls:

- User Name:** A text input field.
- Password:** A text input field.
- Confirm Password:** A text input field with three tabs above it labeled "Weak", "Medium", and "Strong".
- Group:** A dropdown menu currently showing "admin".
- Remark:** A text input field.
- Authority List:** A list of permissions with checkboxes:
  - All
  - Live
  - Playback
  - Record Control
  - Backup
- Buttons:** "Save" and "Cancel" buttons at the bottom.

2. Assign the account a user name and password.
  - a. In the **User Name** field, enter a unique user name.
  - b. In the **Password** field, enter a password. The password must be at least 8 characters in length and contain a combination of uppercase and lowercase letters, at least one number, and at least one special character.
3. Assign the account to a group (**admin**, **user**, or a custom group that you have created) chosen from the **Group** list.
4. If you want, you can enter a brief description in the **Remark** field.
5. From the **Authority List**, select permissions for the account (see [Table 9-1](#)).

---

**Note** Each user is assigned to a group. The individual user's permissions cannot exceed those of the group to which the user belongs. To modify permissions at the group level, see [Modifying a Group](#) on page [64](#).


---

6. Click **Save** to apply the settings. The user account is added to the list.

## Modifying a User Account

You can modify the user name, password, and permissions of a user account.

### To modify a user account:

1. On the **User Name** tab, select the user account that you want to modify (your selection will be highlighted yellow), and then click the **Modify** icon  to open the **Modify User** window.

2. To change the password, select the **Modify Password** check box, enter the **Old Password** and the **New Password** in the corresponding fields, and then re-enter the new password in the **Confirm Password** field.
3. To change the group, select a group from the **Group** list.
4. If you want, you can edit the description in the **Remark** field.
5. From the **Authority List**, select or deselect specific permissions for the account (see [Table 8-1](#)), or select **All** to select/deselect all of the available permissions.

---

**Note**

Each user is assigned to a group. The individual user's permissions cannot exceed those of the group to which the user belongs. To modify permissions at the group level, see [Modifying a Group](#) on page [64](#).


---

6. Click **Save** to apply the settings.

## Deleting a User Account


You can delete any user account that you have created (you cannot delete the admin user).

### To delete a user account:

1. On the **User Name** tab, select the user account that you want to delete (your selection will be highlighted yellow), and then click the **Delete** icon .
2. A confirmation message appears. Click **OK** to continue. The user account is removed from the list.

## Resetting the Camera

You can reset the camera to its factory default settings on the **Setup → System Setup → Default** page.

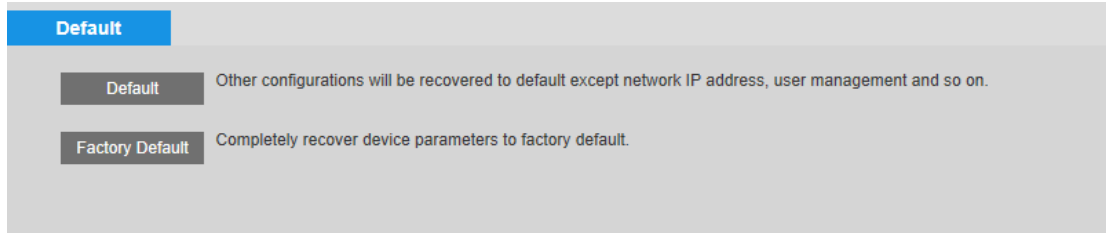


To reset the camera, click:

- **Default** – Recover configurations to default except network IP address and user management.
- **Factory Default** – Completely recover device parameters to factory default.

A confirmation message appears. Click **OK** to continue. The camera reboots automatically and reverts to its factory default settings.

## Backing Up/Restoring a Configuration

You can back up or restore configuration settings on the **Setup > System Setup > Import/Export** page.

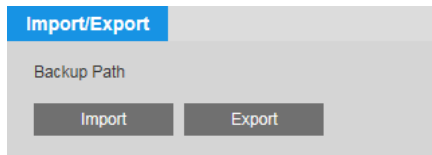

To back up a configuration:

1. Click **Export**. The **Input Key** window pops up and enter a key for encryption.
2. The **Save As** window opens. By default, the backup file is named **DeviceConfig.backup**. Rename the file if you want, navigate to the directory where you want to save the file, and then click **Save**. The file path is displayed under **Backup Path**.

To restore a saved configuration:

1. Click **Import**. The **Input Key** window pops up and enter the key for decryption.
2. The directory displayed under **Backup Path** opens in a new window.
3. Click the backup file (for example, **DeviceConfig.backup**). The configuration settings are applied immediately.

## Configuring Maintenance Settings

Two automatic maintenance functions are available on the **Setup → System Setup → Auto Maintain** page. You can set up the camera to reboot daily or weekly and delete old files automatically.



To enable the auto reboot function, select the **Auto Reboot** check box, and then specify the reboot schedule (for example, every Tuesday at 2 a.m.). Click **Save** to apply the settings.

To enable the auto delete function, select the **Auto Delete Old Files** check box, and then specify the age (in days) of the files to be deleted. For example, if you enter **30**, files that are 30 days old and older will be deleted automatically. Click **Save** to apply the settings.

## Upgrading the Firmware

You can upgrade the camera firmware on the **Setup → System Setup → Upgrade** page.

---

**Note** Before you begin, you will need to obtain the new firmware and save it to your PC or to an external drive.

---

### To upgrade the firmware:

1. Click **Import**.
2. Navigate to the location of the firmware file (.bin), select it, and then click **Open**. The file name appears in the **Firmware File** field.
3. Click **Upgrade** to install the firmware.
4. Reboot the camera.

---

**Note** If you attempt to install an older version of the firmware, a warning message will appear.

---

## Viewing Version Information

You can view the camera's firmware version, web client version, ONVIF version, and serial number on the **Setup → Information → Version** page.

## Managing Logs

You can view, back up, and delete log files on the **Setup → Information → Log** page.

The screenshot shows the 'Log' management interface. At the top, there are search filters for 'Start Time' (2017-02-20 10:45:06) and 'End Time' (2017-02-21 10:45:06). Below these is a dropdown for 'All Types' set to 'All' and a 'Search' button. A status message indicates 'found 14 log(s) Time 2017-02-20 19:44:31 – 2017-02-21 10:00:09'. The main area contains a table with the following data:

No.	Log Time	User Name	Event
1	2017-02-21 10:00:09	admin	Logout
2	2017-02-21 09:55:36	admin	Login
3	2017-02-21 09:54:50	System	Save Configuration
4	2017-02-21 09:54:50	System	Save Configuration
5	2017-02-21 09:54:50	System	Save Configuration
6	2017-02-21 09:54:50	System	Save Configuration
7	2017-02-21 09:54:26	System	Start
8	2017-02-21 09:54:26	System	Abort

Below the table is a 'System Log Information' box with fields for 'Time:', 'User Name:', 'Type:', and 'Content:'. At the bottom right, there are navigation controls (back, forward, page 1 of 1) and 'Backup' and 'Clear' buttons.

## Viewing Logs

There are seven log types: System, Setting, Data, Event, Record, Account, and Clear Log.

### To view logs by type:

1. Enter the **Start Time** and **End Time** search parameters.
2. From the **All Types** list, select the log type(s) that you want to retrieve, and then click **Search**. The logs are listed by time, user name, and event (if applicable).
3. To view detailed information about a specific log, click the log. The information is displayed in the **System Log Information** box.

No.	Log Time	User Name	Event
1	2017-02-21 10:00:09	admin	Logout
2	2017-02-21 09:55:36	admin	Login
3	2017-02-21 09:54:50	System	Save Configuration
4	2017-02-21 09:54:50	System	Save Configuration
5	2017-02-21 09:54:50	System	Save Configuration
6	2017-02-21 09:54:50	System	Save Configuration
7	2017-02-21 09:54:26	System	Start
8	2017-02-21 09:54:26	System	Abort

**System Log Information**  
 Time: 2017-02-21 10:00:09  
 User Name: admin  
 Type: Logout  
 Content: Address: 159.99.251.254

## Backing Up Logs

To back up a log:

1. Click **Backup**. The **Save As** window opens.
2. By default, the backup file is named **LogBackup[YYYY-MM-DD].txt**. Rename the file if you want, locate the directory where you want to save the file, and then click **Save**.


## Deleting Logs

To delete all logs:

1. Click **Clear**.
2. A confirmation message appears. Click **OK** to continue. All of the logs that you have not backed up are deleted.

## Viewing Online Users

You can see which users are currently online on the **Setup → Information → Online User** page. The users are listed by user name, IP address, and login time. To refresh the list, click **Refresh**.

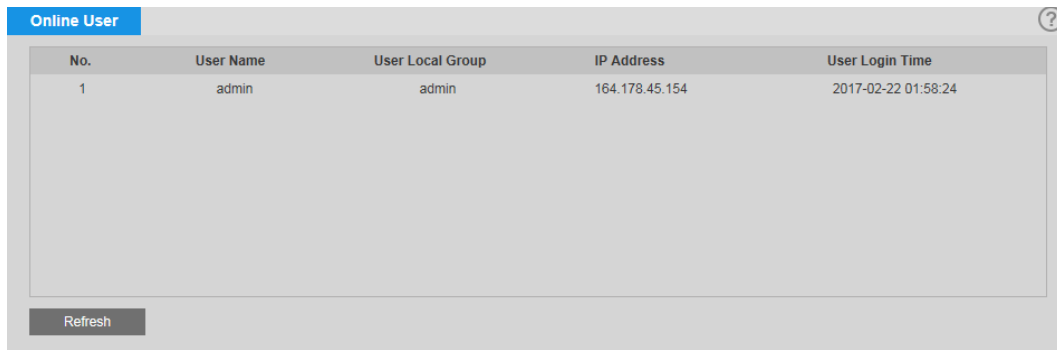

The screenshot displays a web interface titled "Online User" with a help icon in the top right corner. Below the title is a table with five columns: "No.", "User Name", "User Local Group", "IP Address", and "User Login Time". The table contains one row of data. At the bottom left of the interface is a "Refresh" button.

No.	User Name	User Local Group	IP Address	User Login Time
1	admin	admin	164.178.45.154	2017-02-22 01:58:24

Refresh

# 10 Appendix A Technical Specifications

## HBW2GR3V/HBW2GR1V/HBL2GR1V Bullet Camera

Table 10-1 HBW2GR3V/HBW2GR1V/HBL2GR1V Specifications

OPERATIONAL	
VIDEO STANDARD	NTSC/PAL
SCANNING SYSTEM	Progressive scan
IMAGE SENSOR	1/2.8" 2Megapixel progressive scan CMOS
NUMBER OF PIXELS (H × V)	2MP - 1920x1080
MINIMUM ILLUMINATION	Color: 0.001Lux @f/1.6, B/W: 0Lux @f/1.6(IR on)
S/N RATIO	50db minimum
ELECTRONIC SHUTTER SPEED	Auto/Manual, 1/3(4)~1/100000s
IR DISTANCE	60m
DAY/NIGHT	Mechanical ICR (ON / OFF / AUTO selectable)
BACKLIGHT COMPENSATION	BLC / HLC / WDR / SAC(Scene Adaptive Control)
WIDE DYNAMIC RANGE (WDR)	HBL2GR1V: 140dB (50/60fps off) HBW2GR1V/HBW2GR3V: 120dB (50/60fps off)
WHITE BALANCE	Auto/Natural/Street Lamp/Outdoor/Manual/ Customize Region
GAIN CONTROL	Auto/Manual
NOISE REDUCTION	3DNR
PRIVACY MASKING	4 configurable windows
ELECTRONIC IMAGE STABILIZATION	<b>HBW2GR3V, HBW2GR1V:</b> Not supported <b>HBL2GR1V:</b> OFF/ON
DEFOG	Auto/Manual/Off
LENS	<b>HBW2GR3V:</b> 5-60mm MFZ, HALL IRIS(Extended Focal Depth), optical zoom 12x lens F1.6
	<b>HBW2GR1V:</b> 2.7-13.5 mm MFZ, DC IRIS, optical zoom 5x lens F1.6
	<b>HBL2GR1V:</b> 2.7-12 mm MFZ, HALL IRIS(Extended Focal Depth), optical zoom 4x lens F1.6
ANGLE OF VIEW	<b>HBW2GR3V:</b> H: 62° - 6°, V: 34° - 4°
	<b>HBW2GR1V:</b> H: 110° - 32°, V: 59° - 19°
	<b>HBL2GR1V:</b> H: 102° - 35°, V: 54° - 21°
AUDIO/TWO-WAY	Line In/Out
ALARM INPUT/OUTPUT	2 In / 1 Out
ANALOG OUTPUT SUPPORT	Twin outputs (for adjustment only)
ETHERNET	<b>HBW2GR3V, HBW2GR1V:</b> RJ-45 (10/100Base-T)
	<b>HBL2GR1V:</b> RJ-45 (100/1000Base-T)

IP SPECIFICATIONS		
<b>VIDEO COMPRESSION</b>	H.265+, H.265, H.264 and MJPEG bit rate control (CBR and VBR)	
<b>RESOLUTION</b>	<b>16:9</b>	1080p (1920×1080)/ 720p (1280×720)
	<b>4:3</b>	1.3M (1280×960)/VGA (640×480)
<b>OTHER MAIN STREAM</b>	<b>OTHER</b>	D1 (704×576/704×480)/ CIF (352×288/352×240)
	<b>MAIN STREAM</b>	1080P (1-50/60fps WDR off)
<b>FRAME RATE</b>	<b>SUB STREAM</b>	D1 (1-50/60fps WDR off)
	<b>THIRD STREAM</b>	<b>HBW2GR3V, HBW2GR1V:</b> 1080P (1-25/30fps) <b>HBL2GR1V:</b> 1080P (1-50/60fps WDR off) <b>HBW2GR3V, HBW2GR1V:</b> Simultaneous Main stream and Third stream at 1080P (Main stream +Third stream ≤68fps, WDR off, 2nd stream off) <b>HBL2GR1V:</b> Simultaneous Main stream and Third stream at 1080P (Main stream at 50/60fps WDR off, Third stream at 50/60fps WDR off)
<b>AUDIO COMPRESSION</b>	G.711a/ G.711Mu/ AAC/G.726	
<b>AUDIO STREAM</b>	Full duplex, simplex	
<b>SUPPORTED WEB BROWSERS</b>	IE11/Chrome(with application)/Firefox(earlier than 52.0 version)	
<b>SUPPORTED OS</b>	Windows® 7 32-bit/64-bit; Windows® 10 32-bit/64-bit	
<b>SUPPORTED PROTOCOLS SUPPORTED PROTOCOLS*</b>	HTTP; HTTPs; TCP; ARP; RTSP; RTP; UDP; SMTP; FTP; DHCP; DNS; DDNS; PPPOE; IPv4/v6; QoS; UPnP; NTP; Bonjour; 802.1x; Multicast; ICMP;SNMP	
<b>COMPATIBILITY</b>	ONVIF Profile S, G and Q	
<b>MAXIMUM USERS ACCESS</b>	20 users	
<b>SECURITY</b>	User account and password protection HTTPS, IP Filter, IEEE 802.1x, Digest authentication, User access log, TLS1.2, AES-256, SSH/Telnet closed, FTP disabled, PCI-DSS compliance, Hardware chipset for private key	
<b>HEAT MAP</b>	HBL2GR1V: Support	
<b>BUILT-IN ALARM &amp; EVENT</b>	<b>EVENT TYPE</b>	HBW2GR1V/HBW2GR3V: Motion Detection/Video Tampering/Face Detection/SD Card Error/SD Card Capacity Warning/Audio Detection/ Object Abandoned/Object Missing/Tripwire/Intrusion HBL2GR1V: Motion Detection/Video Tampering/Face Detection/ SD Card Error/SD Card Capacity Warning/Audio Detection/Object Abandoned/Object Missing/People counting
	<b>EVENT LINKAGE</b>	Recording on SD card, Relay output, Email, Snapshot
	<b>EVENT OUTPUT</b>	ONVIF, ISOM
<b>UPLOADABLE VIDEO ANALYTICS (HBL2GR1V ONLY)</b>	<b>BASIC</b>	Trigger line/Intrusion/Loitering available now (Please download from <a href="http://www.honeywellvideo.com">www.honeywellvideo.com</a> . Free of Charge, but please email to <a href="mailto:VALicensing@Honeywell.com">VALicensing@Honeywell.com</a> to get license.)
	<b>ADVANCED LICENSED ANALYTICS</b>	IntrusionTrace/LoiterTrace for advanced applications coming soon. ( Need to purchase separately)
	<b>ANALYTICS OUTPUT</b>	ISOM event output, Metadata
<b>MICRO SD</b>	Micro SDHC Capacity Max 32GB Micro SDXC Capacity Max 128GB	
<b>MICRO SD FUNCTION</b>	Event trigger recording; Continuous and scheduled recording; Automatic recording when network fails	
<b>LANGUAGES SUPPORTED</b>	English, Arabic, Czech, Dutch, French, German, Italian, Japanese, Korean, Polish, Portuguese, Russian, Simplified Chinese, Spanish, Turkish	

ELECTRICAL	
POWER SUPPLY	PoE+(802.3at) Class 4/12VDC/AC24V
LONG DISTANCE POE SUPPORT	3X POE (300m @100Mbps)
AC FREQUENCY	50/60 Hz
POWER CONSUMPTION	<b>HBW2GR3V:</b> Max 17.3W ; <b>HBW2GR1V:</b> Max 20.5W <b>HBL2GR1V:</b> Max 17W
AUXILIARY POWER SUPPLY	2.0W, DC12V (+/-5%)
MECHANICAL	
DIMENSIONS	11.1 × 4.3 in. (281.0 × 110.0 mm)
WEIGHT	<b>Product weight:</b> 4.70lb (2130g) <b>Package Weight:</b> 6.28lb (2847g)
CONSTRUCTION	Die-cast aluminum housing with powder coat
CONSTRUCTION COLOR	RAL 9003 (White) and RAL 7022 (Grey)
ENVIRONMENTAL	
OPERATING TEMPERATURE	-40°F to 140°F (-40°C to 60°C)
RELATIVE HUMIDITY	0% to 95%, non-condensing
GORE VENTS	Yes
INGRESS PROTECTION	IP 67
IMPACT RESISTANCE	IK10
HEATER, FAN OPTION	Heater
REGULATORY	
EMISSIONS	FCC Part 15, CE (EN 55032); Complies with RCM (AS/NZS)
IMMUNITY	CE (EN 50130-4)
SAFETY	North America UL Listed to UL/CSA 60950-1, CE (EN 60950-1); North America UL Listed to UL/CSA 60950-22, CE (EN 60950-22)
ROHS	EN50581

## HCL2GV/HCW2GV Box Camera

Table 10-2 HCL2GV/HCW2GV Specifications

OPERATIONAL	
VIDEO STANDARD	NTSC/PAL
SCANNING SYSTEM	Progressive scan
IMAGE SENSOR	1/2.8" 2 Megapixel progressive scan CMOS
NUMBER OF PIXELS (H × V)	2MP - 1920x1080
MINIMUM ILLUMINATION	Color: 0.001Lux @f/1.6, B/W: 0.001Lux @f/1.6
S/N RATIO	50 db minimum
ELECTRONIC SHUTTER SPEED	Auto/Manual, 1/3~1/100000s
DAY/NIGHT	Mechanical ICR (ON / OFF / AUTO selectable)
BACKLIGHT COMPENSATION	BLC / HLC / WDR / SAC(Scene Adaptive Control)
WIDE DYNAMIC RANGE (WDR)	HCL2GV: 140dB (50/60fps off) HCW2GV: 120dB (50/60fps off)
WHITE BALANCE	Auto/Natural/Street Lamp/Outdoor/Manual/Customize Region
GAIN CONTROL	Auto/Manual
NOISE REDUCTION	3D Noise Reduction (ON / OFF selectable)
PRIVACY MASKING	Up to 4 configurable areas
ELECTRONIC IMAGE STABILIZATION	HCW2GV: Not supported HCL2GV: ON/OFF
DEFOG	Auto/Manual/Off
LENS	Option, support DC-Iris
AUDIO/TWO-WAY	Line In/Out, 1 built-in Mic
ALARM INPUT/OUTPUT	2 in / 1 out
ANALOG OUTPUT SUPPORT	Supported
ETHERNET	HCW2GV: RJ-45 (10/100 Base-T) HCL2GV: RJ-45 (100/1000 Base-T)



IP SPECIFICATIONS		
<b>VIDEO COMPRESSION</b>		H.265+, H.265, H.264 and MJPEG bit rate control (CBR and VBR)
<b>RESOLUTION</b>	<b>16:9</b>	1080p (1920×1080)/ 720p (1280×720)
	<b>4:3</b>	1.3M (1280×960)/VGA (640×480)
<b>FRAME RATE</b>	<b>OTHER</b>	D1 (704×576/704×480)/ CIF (352×288/352×240)
	<b>MAIN STREAM</b>	1080P (1~50/60fps WDR off)
	<b>SUB STREAM</b>	D1 (1~50/60fps WDR off)
	<b>THIRD STREAM</b>	HCL2GV: 1080P (1~50/60fps WDR off) HCW2GV: 1080P (1~25/30fps) <b>HCW2GV:</b> Simultaneous Main stream and Third stream at 1080P (Main stream +Third stream <=68fps, WDR off, 2nd stream off) <b>HCL2GV:</b> Simultaneous Main stream and Third stream at 1080P (Main stream at 50/60fps WDR off, Third stream at 50/60fps WDR off)
<b>AUDIO COMPRESSION</b>		G.711a/ G.711Mu/ AAC/G.726
<b>AUDIO STREAM</b>		Full duplex, simplex
<b>SUPPORTED WEB BROWSERS</b>		IE11/Chrome(with application)/Firefox(earlier than 52.0 version)
<b>SUPPORTED OS</b>		Windows® 7 32-bit/64-bit; Windows® 10 32-bit/64-bit
<b>SUPPORTED PROTOCOLS*</b>		HTTP; HTTPs; TCP; ARP; RTSP; RTP; UDP; SMTP; FTP; DHCP; DNS; DDNS; PPPOE; IPv4/v6; QoS; UPnP; NTP; Bonjour; 802.1x; Multicast; ICMP;SNMP
<b>COMPATIBILITY</b>		ONVIF Profile S, G and Q
<b>MAXIMUM USERS ACCESS</b>		20 users
<b>SECURITY</b>		User account and password protection HTTPS, IP Filter, IEEE 802.1x, Digest authentication, User access log, TLS1.2, AES- 256, SSH/Telnet closed, FTP disabled, PCI-DSS compliance, Hardware chipset for private key
<b>HEAT MAP</b>		HCL2GV: Support
<b>BUILT-IN ALARM &amp; EVENT</b>	<b>EVENT TYPE</b>	HCW2GV: Motion Detection/Video Tampering/Face Detection/ SD Card Error/SD Card Capacity Warning/Audio Detection/Object Abandoned/Object Missing/Tripwire/Intrusion HCL2GV: Motion Detection/Video Tampering/Face Detection/ SD Card Error/SD Card Capacity Warning/Audio Detection/Object Abandoned/Object Missing/People counting
	<b>EVENT LINKAGE</b>	Recording on SD card, Relay output, Email, Snapshot
	<b>EVENT OUTPUT</b>	ONVIF, ISOM
<b>UPLOADABLE VIDEO ANALYTICS (HCL2GV ONLY)</b>	<b>BASIC</b>	Trigger line/Intrusion/Loitering available now (Please download from <a href="http://www.honeywellvideo.com">www.honeywellvideo.com</a> . Free of Charge, but please email to <a href="mailto:VALicensing@Honeywell.com">VALicensing@Honeywell.com</a> to get license.)
	<b>ADVANCED LICENSED ANALYTICS</b>	IntrusionTrace/LoiterTrace for advanced applications coming soon. ( Need to purchase separately)
	<b>ANALYTICS OUTPUT</b>	ISOM event output, Metadata
<b>MICRO SD</b>		Micro SDHC Capacity Max 32GB Micro SDXC Capacity Max 128GB
<b>MICRO SD FUNCTION</b>		<ul style="list-style-type: none"> <li>• Event trigger recording</li> <li>• Continuous and scheduled recording</li> <li>• Automatic recording when network fails</li> </ul>
<b>LANGUAGES SUPPORTED</b>		English, Arabic, Czech, Dutch, French, German, Italian, Japanese, Korean, Polish, Portuguese, Russian, Simplified Chinese, Spanish, Turkish

## 2MP/4MP Low Light WDR IP Camera User Guide

ELECTRICAL	
<b>POWER SUPPLY</b>	PoE(802.3af) Class 0/12VDC/24VAC
<b>LONG DISTANCE POE SUPPORT</b>	3X POE (300m @100Mbps)
<b>AC FREQUENCY</b>	50/60 Hz
<b>POWER CONSUMPTION</b>	<b>HCW2GV:</b> Max 10W <b>HCL2GV:</b> Max 9.5W
<b>AUXILIARY POWER SUPPLY</b>	2.0W, DC12V (+/-5%)
MECHANICAL	
<b>DIMENSIONS</b>	125.0×75.8×69.0 mm (4.92×2.98×2.72 in.)
<b>WEIGHT</b>	<b>HCW2GV:</b> Product weight: 535g (1.18lb); Package Weight: 756g (1.67lb) <b>HCL2GV:</b> Product weight: 534g (1.18lb); Package Weight: 755g (1.66lb)
<b>CONSTRUCTION</b>	Die-cast aluminum housing with powder coat
<b>CONSTRUCTION COLOUR</b>	RAL 9003 (White) and RAL 7022 (Grey)
ENVIRONMENTAL	
<b>OPERATING TEMPERATURE</b>	-30°C to 60°C (-22°F to 140°F)
<b>RELATIVE HUMIDITY</b>	0% to 95%, non-condensing
REGULATORY	
<b>EMISSIONS</b>	FCC Part 15, CE (EN 55032); Complies with RCM (AS/NZS)
<b>IMMUNITY</b>	CE (EN 50130-4)
<b>SAFETY</b>	North America UL Listed to UL/CSA 60950-1, CE (EN 60950-1)
<b>ROHS</b>	EN50581

## H3W2GR1V/H3W4GR1V Indoor Dome Camera

Table 10-3 H3W2GR1V/H3W4GR1V Specifications

OPERATIONAL	
VIDEO STANDARD	NTSC/PAL
SCANNING SYSTEM	Progressive scan
IMAGE SENSOR	<b>H3W2GR1V:</b> 1/2.8" 2Megapixel progressive scan CMOS <b>H3W4GR1V:</b> 1/3" 4Megapixel progressive scan CMOS
NUMBER OF PIXELS (H × V)	2MP - 1920x1080
MINIMUM ILLUMINATION	<b>H3W2GR1V:</b> Color: 0.001Lux @f/1.6, B/W:0Lux@f/1.6(IR on) <b>H3W4GR1V:</b> Color : 0.01Lux @f/1.6, B/W : 0Lux@f/1.6(IR on)
S/N RATIO	50db minimum
ELECTRONIC SHUTTER SPEED	Auto/Manual, 1/3~1/100000s
IR DISTANCE	20m
DAY/NIGHT	Mechanical ICR (ON / OFF / AUTO selectable)
BACKLIGHT COMPENSATION	BLC / HLC / WDR /SAC(Scene Adaptive Control)
WIDE DYNAMIC RANGE(WDR)	120dB (50/60fps off)
WHITE BALANCE	Auto/Natural/Street Lamp/Outdoor/Manual/Customize Region
GAIN CONTROL	Auto/Manual
NOISE REDUCTION	3D Noise Reduction (ON / OFF selectable)
PRIVACY MASKING	Up to 4 configurable areas
DEFOG	Auto/Manual/Off
LENS	2.7-13.5 mm MFZ, DC IRIS, optical zoom 5x lens F1.6
ANGLE OF VIEW	<b>H3W2GR1V:</b> FOV depending on different resolution H: 110° - 32°, V: 59° - 19° <b>H3W4GR1V:</b> FOV depending on different resolution H: 110° - 30°, V: 53° - 18°
AUDIO/TWO-WAY	Line In/Out, 1 built-in Mic
ALARM INPUT/OUTPUT	2 In / 1 Out
ANALOG OUTPUT SUPPORT	Supported
ETHERNET	RJ-45 (10/100Base-T)

IP SPECIFICATIONS		
<b>VIDEO COMPRESSION</b>		H.265+, H.265, H.264 and MJPEG bit rate control (CBR and VBR)
<b>RESOLUTION</b>	<b>16:9</b>	<b>H3W2GR1V:</b> 1080p (1920×1080)/ 720p (1280×720) <b>H3W4GR1V:</b> 3M (2304×1296)/1080p (1920×1080)/ 720p (1280×720)
	<b>4:3</b>	1.3M (1280×960)/VGA (640×480)
	<b>OTHER</b>	<b>H3W2GR1V:</b> D1 (704×576/704×480)/ CIF (352×288/352×240) <b>H3W4GR1V:</b> 4M(2688×1520)/(2560×1440), /D1 (704×576/704×480)/ CIF(352×288/352×240)
<b>FRAME RATE</b>	<b>MAIN STREAM</b>	<b>H3W2GR1V:</b> 1080P(1~50/60fps WDR off) <b>H3W4GR1V:</b> 4M(1~25/30fps)
	<b>SUB STREAM</b>	H3W2GR1V: D1(1-50/60fps WDR off) H3W4GR1V: D1(1-25/30fps)
	<b>THIRD STREAM</b>	<b>H3W2GR1V:</b> 1080P(1-25/30fps) <b>H3W4GR1V:</b> 4M(1~25/30fps)
		<b>H3W2GR1V:</b> Simultaneous Main stream and Third stream at 1080P (Main stream +Third stream <=68fps, WDR off, 2nd stream off) <b>H3W4GR1V:</b> Simultaneous Main stream and Third stream at 4MP (Main stream +Third stream <=34fps, 2nd stream off)
<b>AUDIO COMPRESSION</b>		G.711a/ G.711Mu/ AAC/G.726
<b>AUDIO STREAM</b>		Full duplex, simplex
<b>SUPPORTED WEB BROWSERS</b>		IE11/Chrome(with application)/Firefox(earlier than 52.0 version)
<b>SUPPORTED OS</b>		Windows® 7 32-bit/64-bit; Windows® 10 32-bit/64-bit
<b>SUPPORTED PROTOCOLS*</b>		HTTP; HTTPS; TCP; ARP; RTSP; RTP; UDP; SMTP;FTP; DHCP; DNS; DDNS; PPPOE; IPv4/v6; QoS; UPnP; NTP; Bonjour; 802.1x; Multicast; ICMP;SNMP
<b>COMPATIBILITY</b>		ONVIF Profile S, G and Q
<b>MAXIMUM USERS ACCESS</b>		20 users
<b>SECURITY</b>		User account and password protection HTTPS, IP Filter, IEEE 802.1x, Digest authentication, User access log, TLS1.2, AES-256, SSH/Telnet closed, FTP disabled, PCI-DSS compliance, Hardware chipset for private key
<b>BUILT-IN ALARM &amp; EVENT</b>	<b>EVENT TYPE</b>	Motion Detection/Video Tampering/Face Detection/ SD Card Error/SD Card Capacity Warning/Audio Detection/ Object Abandoned/Object Missing/Tripwire/ Intrusion
	<b>EVENT LINKAGE</b>	Recording on SD card, Relay output, Email, Snapshot
	<b>EVENT OUTPUT</b>	ONVIF, ISOM
<b>MICRO SD</b>		Micro SDHC Capacity Max 32GB Micro SDXC Capacity Max 128GB
<b>MICRO SD FUNCTION</b>		Event trigger recording Continuous and scheduled recording Automatic recording when network fails
<b>LANGUAGES SUPPORTED</b>		English, Arabic, Czech, Dutch, French, German, Italian, Japanese, Korean, Polish, Portuguese, Russian, Simplified Chinese, Spanish, Turkish
ELECTRICAL		
<b>POWER SUPPLY</b>		PoE(802.3af) Class 0/12VDC/24VAC
<b>LONG DISTANCE POE SUPPORT</b>		3X POE (300m @100Mbps)
<b>AC FREQUENCY</b>		50/60 Hz
<b>POWER CONSUMPTION</b>		<b>H3W2GR1V:</b> 11W <b>H3W4GR1V:</b> 10.5W
<b>AUXILIARY POWER SUPPLY</b>		2.0W, DC12V (+/-5%)

MECHANICAL	
<b>DIMENSIONS</b>	4.96 × 4.80 in. (126.0 × 122.0 mm)
<b>WEIGHT</b>	<b>H3W2GR1V:</b> Product weight: 1.14lb (519g) Package Weight: 2.07lb (937g) <b>H3W4GR1V:</b> Product weight: 1.14lb (516g) Package Weight: 2.04lb (924g)
<b>CONSTRUCTION</b>	Plastic
<b>CONSTRUCTION COLOR</b>	RAL 9003 (White)
ENVIRONMENTAL	
<b>OPERATING TEMPERATURE</b>	-22°F to 140°F (-30°C to 60°C)
<b>RELATIVE HUMIDITY</b>	0% to 95%, non-condensing
REGULATORY	
<b>EMISSIONS</b>	FCC Part 15, CE (EN 55032); Complies with RCM (AS/ NZS)
<b>IMMUNITY</b>	CE (EN 50130-4)
<b>SAFETY</b>	North America UL Listed to UL/CSA 60950-1, CE (EN 60950-1)
<b>ROHS</b>	EN50581

## H4W2GR1V/H4L2GR1V/H4W4GR1V Outdoor Dome Camera

Table 10-4 H4W2GR1V/H4L2GR1V/H4W4GR1V Specifications

OPERATIONAL	
VIDEO STANDARD	NTSC/PAL
SCANNING SYSTEM	Progressive scan
IMAGE SENSOR	<b>H4W2GR1V, H4L2GR1V:</b> 1/2.8" 2 Megapixel progressive scan CMOS <b>H4W4GR1V:</b> 1/3" 4 Megapixel progressive scan CMOS
NUMBER OF PIXELS (H×V)	<b>H4W2GR1V, H4L2GR1V:</b> 2MP - 1920x1080 <b>H4W4GR1V:</b> 4MP - 2560x1440/2688x1520
MINIMUM ILLUMINATION	<b>H4W2GR1V, H4L2GR1V:</b> Color : 0.001Lux @f/1.6, B/W : 0Lux @f/1.6(IR on) <b>H4W4GR1V:</b> Color : 0.01Lux @f/1.6, B/W : 0Lux @f/1.6(IR on)
S/N RATIO	50 db minimum
ELECTRONIC SHUTTER SPEED	Auto/Manual, 1/3~1/100000s
IR DISTANCE	50m
DAY/NIGHT	Mechanical ICR (ON / OFF / AUTO selectable)
BACKLIGHT COMPENSATION	BLC/HLC/WDR/SAC(Scene Adaptive Control)
WIDE DYNAMIC RANGE(WDR)	<b>H4L2GR1V:</b> 140 dB (50/60fps off) <b>H4W4GR1V, H4W2GR1V:</b> 120 dB (50/60fps off)
WHITE BALANCE	Auto/Natural/Street Lamp/Outdoor/Manual Customize Region
GAIN CONTROL	Auto/Manual
NOISE REDUCTION	3D Noise Reduction (ON / OFF selectable)
PRIVACY MASKING	Up to 4 configurable areas
ELECTRONIC IMAGE STABILIZATION	<b>H4W2GR1V, H4W4GR1V:</b> Not supported <b>H4L2GR1V:</b> Off/On
DEFOG	Auto/Manual/Off
LENS	<b>H4W2GR1V, H4W4GR1V:</b> 2.7-13.5 mm MFZ, DC IRIS, optical zoom 5x lens F1.6 <b>H4L2GR1V:</b> 2.7-12 mm MFZ, HALL IRIS(Extended Focal Depth), optical zoom 4x lens F1.6
ANGLE OF VIEW	<b>H4W2GR1V:</b> FOV depending on different resolution, H: 110° - 32°, V: 59° - 19° <b>H4L2GR1V:</b> FOV depending on different resolution H: 102° - 35°, V: 54° - 21° <b>H4W4GR1V:</b> FOV depending on different resolution H: 110° - 30°, V: 53° - 18°
AUDIO/TWO-WAY	Line In/Out
ALARM INPUT/OUTPUT	2 In/1 Out
ANALOG OUTPUT SUPPORT	Supported
ETHERNET	<b>H4W2GR1V, H4W4GR1V:</b> RJ-45 (10/100Base-T) <b>H4L2GR1V:</b> RJ-45 (100/1000Base-T)

IP SPECIFICATIONS		
<b>VIDEO COMPRESSION</b>		H.265+, H.265, H.264 and MJPEG bit rate control (CBR and VBR)
<b>RESOLUTION</b>	<b>16:9</b>	<b>H4W2GR1V, H4L2GR1V:</b> 1080p (1920×1080)/ 720p (1280×720) <b>H4W4GR1V:</b> 3M (2304×1296)/1080p (1920×1080)/720p (1280×720)
	<b>4:3</b>	1.3M (1280×960)/VGA (640×480)
	<b>OTHER</b>	<b>H4W2GR1V, H4L2GR1V:</b> D1 (704×576/704×480)/ CIF (352×288/352×240) <b>H4W4GR1V:</b> 4M (2688×1520)/ (2560×1440), /D1 (704×576/704×480)/ CIF (352×288/352×240)
<b>FRAME RATE</b>	<b>MAIN STREAM</b>	<b>H4W2GR1V, H4L2GR1V:</b> 1080P (1~50/60fps WDR off) <b>H4W4GR1V:</b> 4M (1~25/30fps)
	<b>SUB STREAM</b>	<b>H4W2GR1V, H4L2GR1V:</b> D1 (1~50/60fps WDR off) <b>H4W4GR1V:</b> D1 (1~25/30fps)
	<b>THIRD STREAM</b>	<b>H4W2GR1V:</b> 1080P (1~25/30fps) <b>H4L2GR1V:</b> 1080P(1-50/60fps WDR off) <b>H4W4GR1V:</b> 4M(1~25/30fps)
		<b>H4W2GR1V:</b> Simultaneous Main stream and Third stream at 1080P (Main stream +Third stream <=68fps, WDR off, 2nd stream off) <b>H4L2GR1V:</b> Simultaneous Main stream and Third stream at 1080P (Main stream at 50/60fps WDR off, Third stream at 50/60fps WDR off) <b>H4W4GR1V:</b> Simultaneous Main stream and Third stream at 4MP (Main stream +Third stream <=34fps, 2nd stream off)
<b>AUDIO COMPRESSION</b>		G.711a/ G.711Mu/ AAC/G.726
<b>AUDIO STREAM</b>		Full duplex, simplex
<b>SUPPORTED WEB BROWSERS</b>		IE11/Chrome(with application)/Firefox(earlier than 52.0 version)
<b>SUPPORTED OS</b>		Windows® 7 32-bit/64-bit; Windows® 10 32-bit/64-bit
<b>SUPPORTED PROTOCOLS*</b>		HTTP; HTTPS; TCP; ARP; RTSP; RTP; UDP; SMTP; FTP; DHCP; DNS; DDNS; PPPOE; IPv4/v6; QoS; UPnP; NTP; Bonjour; 802.1x; Multicast; ICMP; SNMP
<b>COMPATIBILITY</b>		ONVIF Profile S, G and Q
<b>MAXIMUM USERS ACCESS</b>		<b>20 users</b>
<b>SECURITY</b>		User account and password protection HTTPS, IP Filter, IEEE 802.1x, Digest authentication, User access log, TLS1.2, AES-256, SSH/Telnet closed, FTP disabled, PCI-DSS compliance, Hardware chipset for private key
<b>HEAT MAP</b>		H4L2GR1V: Support
<b>BUILT-IN ALARM &amp; EVENT</b>	<b>EVENT TYPE</b>	H4W2GR1V, H4W4GR1V: Motion Detection/Video Tampering/Face Detection/SD Card Error/SD Card Capacity Warning/Audio Detection/Object Abandoned/Object Missing/Tripwire/Intrusion H4L2GR1V: Motion Detection/Video Tampering/Face Detection/SD Card Error/SD Card Capacity Warning/Audio Detection/Object Abandoned/Object Missing/People counting
	<b>EVENT LINKAGE EVENT OUTPUT</b>	Recording on SD card, Relay output, Email, Snapshot ONVIF, ISOM
<b>UPLOADABLE VIDEO ANALYTICS (H4L2GR1V ONLY)</b>	<b>BASIC</b>	Trigger line/Intrusion/Loitering available now (Please download from www.honeywellvideo.com. Free of Charge, but please email to VALicensing@Honeywell.com to get license.)
	<b>ADVANCED LICENSED ANALYTICS</b>	IntrusionTrace/LoiterTrace for advanced applications coming soon. ( Need to purchase separately)
	<b>ANALYTICS OUTPUT</b>	ISOM event output, Metadata
<b>MICRO SD</b>		Micro SDHC Capacity Max 32GB Micro SDXC Capacity Max 128GB
<b>MICRO SD FUNCTION</b>		<ul style="list-style-type: none"> <li>• Event trigger recording</li> <li>• Continuous and scheduled recording</li> <li>• Automatic recording when network fails</li> </ul>
<b>LANGUAGES SUPPORTED</b>		English, Arabic, Czech, Dutch, French, German, Italian, Japanese, Korean, Polish, Portuguese, Russian, Simplified Chinese, Spanish, Turkish

ELECTRICAL	
POWER SUPPLY	PoE+(802.3at) Class 4/12VDC/24VAC
LONG DISTANCE POE SUPPORT	3X POE (300m @100Mbps)
AC FREQUENCY	50/60 Hz
POWER CONSUMPTION	<b>H4W2GR1V:</b> Max 22W <b>H4L2GR1V:</b> Max 20.5W <b>H4W4GR1V:</b> Max 15W
AUXILIARY POWER SUPPLY	2.0W, DC12V (+/-5%)
MECHANICAL	
DIMENSIONS	6.2" × 4.6" ( 159.0 × 118.0 mm)
WEIGHT	<b>H4W2GR1V:</b> Product weight: 2.46lb (1117g) Package Weight: 4.40lb (1994g) <b>H4L2GR1V:</b> Product weight: 2.49lb (1130g) Package Weight: 4.42lb (2007g) <b>H4W4GR1V:</b> Product weight: 2.47lb (1119g) Package Weight: 4.40lb (1997g)
CONSTRUCTION	Die-cast aluminum housing with powder coat
CONSTRUCTION COLOUR	RAL 9003 (White)
ENVIRONMENTAL	
OPERATING TEMPERATURE	-40°F to 140°F (-40°C to 60°C)
RELATIVE HUMIDITY	0% to 95%, non-condensing
GORE VENTS	Yes
INGRESS PROTECTION	IP 67
IMPACT RESISTANCE	IK10
HEATER, FAN OPTION	Heater, Fan
REGULATORY	
EMISSIONS	FCC Part 15, CE (EN 55032); Complies with RCM (AS/NZS)
IMMUNITY	CE (EN 50130-4)
SAFETY	North America UL Listed to UL/CSA 60950-1, CE (EN 60950-1); North America UL Listed to UL/CSA 60950-22, CE (EN 60950-22)
ROHS	EN50581

## H2W2GR1 Micro Dome Camera

Table 10-5 H2W2GR1 Specifications

OPERATIONAL	
VIDEO STANDARD	NTSC/PAL
SCANNING SYSTEM	Progressive scan
IMAGE SENSOR	1/2.8" 2Megapixel progressive scan CMOS
NUMBER OF PIXELS (H × V)	2MP - 1920x1080
MINIMUM ILLUMINATION	Color: 0.001Lux @f/2.0, B/W: 0Lux @f/2.0(IR on)
S/N RATIO	50 db minimum
ELECTRONIC SHUTTER SPEED	Auto/Manual, 1/3~1/100000s
IR DISTANCE	15m
DAY/NIGHT	Mechanical ICR (ON / OFF / AUTO selectable)
BACKLIGHT COMPENSATION	BLC / HLC / WDR /SAC(Scene Adaptive Control)
WIDE DYNAMIC RANGE(WDR)	120dB (50/60fps off)
WHITE BALANCE	Auto/Natural/Street Lamp/Outdoor/Manual/ Customize Region
GAIN CONTROL	Auto/Manual
NOISE REDUCTION	3D Noise Reduction (ON / OFF selectable)
PRIVACY MASKING	Up to 4 configurable areas
DEFOG	Auto/Manual/Off
LENS	2.8mm, F2.0
ANGLE OF VIEW	H: 110°, V: 58°
AUDIO/TWO-WAY	1 Built-in Mic
ETHERNET	RJ-45 (10/100Base-T)



IP SPECIFICATIONS		
<b>VIDEO COMPRESSION</b>		
H.265+, H.265, H.264 and MJPEG Bit rate control (CBR and VBR)		
<b>RESOLUTION</b>	<b>16:9</b>	1080p (1920×1080)/ 720p (1280×720)
	<b>4:3</b>	1.3M (1280×960)/VGA (640×480)
	<b>OTHER</b>	D1 (704×576/704×480)/ CIF (352×288/352×240)
<b>FRAME RATE</b>	<b>MAIN STREAM</b>	1080P(1~50/60fps WDR off)
	<b>SUB STREAM</b>	D1(1~50/60fps WDR off)
	<b>THIRD STREAM</b>	1080P(1~25/30fps)
		Simultaneous Main stream and Third stream at 1080P (Main stream +Third stream <=68fps, WDR off, 2nd stream off)
<b>AUDIO COMPRESSION</b>		
G.711a/ G.711Mu/ AAC/G.726		
<b>AUDIO STREAM</b>		
Simplex		
<b>SUPPORTED WEB BROWSERS</b>		
IE11/Chrome(with application)/Firefox(earlier 52.0 version)		
<b>SUPPORTED OS</b>		
Windows® 7 32-bit/64-bit; Windows® 10 32-bit/64-bit		
<b>SUPPORTED PROTOCOLS*</b>		
HTTP; HTTPS; TCP; ARP; RTSP; RTP; UDP; SMTP; FTP; DHCP; DNS; DDNS; PPPOE; IPv4/v6; QoS; UPnP; NTP; Bonjour; 802.1x; Multicast; ICMP; SNMP		
<b>COMPATIBILITY</b>		
ONVIF Profile S, G and Q		
<b>MAXIMUM USERS ACCESS</b>		
20 users		
<b>SECURITY</b>		
User account and password protection HTTPS, IP Filter, IEEE 802.1x, Digest authentication, User access log, TLS1.2, AES-256, SSH/Telnet closed, FTP disabled, PCI-DSS compliance, Hardware chipset for private key		
<b>BUILT-IN ALARM &amp; EVENT</b>	<b>EVENT TYPE</b>	Motion Detection/Video Tampering/Face Detection/ SD Card Error/SD Card Capacity Warning/Audio Detection/ Object Abandoned/Object Missing/ Tripwire/Intrusion
	<b>EVENT LINKAGE</b>	Recording on SD card, Email, Snapshot
	<b>EVENT OUTPUT</b>	ONVIF, ISOM
<b>MICRO SD</b>		
Micro SDHC Capacity Max 32GB Micro SDXC Capacity Max 128GB		
<b>MICRO SD FUNCTION</b>		
<ul style="list-style-type: none"> <li>Event trigger recording</li> <li>Continuous and scheduled recording</li> <li>Automatic recording when network fails</li> </ul>		
<b>LANGUAGES SUPPORTED</b>		
English, Arabic, Czech, Dutch, French, German, Italian, Japanese, Korean, Polish, Portuguese, Russian, Simplified Chinese, Spanish, Turkish		
ELECTRICAL		
<b>POWER SUPPLY</b>		
PoE(802.3af) Class 0/12VDC		
<b>POWER CONSUMPTION</b>		
Max 4.4W		
MECHANICAL		
<b>DIMENSIONS</b>		
109.9 x 55.0mm (4.33 x 2.17in.)		
<b>WEIGHT</b>		
Product weight: 334g (0.74lb) Package Weight: 730g (1.61lb)		
<b>CONSTRUCTION</b>		
Die-cast aluminum housing with powder coat		
<b>CONSTRUCTION COLOUR</b>		
RAL 9003 (White)		
ENVIRONMENTAL		
<b>OPERATING TEMPERATURE</b>		
-30°C to 60°C (-40°F to 140°F)		
<b>RELATIVE HUMIDITY</b>		
0% to 95%, non-condensing		
<b>GORE VENTS</b>		
Yes		
<b>INGRESS PROTECTION</b>		
IP67		
<b>IMPACT RESISTANCE</b>		
IK10		
REGULATORY		
<b>EMISSIONS</b>		
FCC Part 15, CE (EN 55032); Complies with RCM (AS/NZS)		
<b>IMMUNITY</b>		
CE (EN 50130-4)		
<b>SAFETY</b>		
North America UL Listed to UL/CSA 60950-1, CE (EN 60950-1)		
<b>ROHS</b>		
EN50581		





**Honeywell Security Products Americas (Head Office)**

2700 Blankenbaker Pkwy, Suite 150 Louisville, KY 40299,  
USA

[www.honeywell.com/security](http://www.honeywell.com/security)

☎ +1 800 323 4576

**Honeywell Security Europe/South Africa**

Aston Fields Road, Whitehouse Industrial Estate Runcorn,  
WA7 3DL, United Kingdom

[www.honeywell.com/security/uk](http://www.honeywell.com/security/uk)

☎ +44 (0) 1928 754 028

**Honeywell Security Products Americas Caribbean/Latin America**

9315 NW 112th Ave.

Miami, FL 33178, USA

[www.honeywell.com/security/clar](http://www.honeywell.com/security/clar)

☎ +1 305 805 8188

**Honeywell Security Asia Pacific**

Building #1, 555 Huanke Road, Zhang Jiang Hi-Tech Park,  
Pudong New Area, Shanghai, 201203, China

[www.asia.security.honeywell.com](http://www.asia.security.honeywell.com)

☎ +86 400 840 2233

**Honeywell Security Middle East/N. Africa**

Emaar Business Park, Sheikh Zayed Road Building No. 2, Office  
No. 301

Post Office Box 232362 Dubai, United Arab  
Emirates

[www.honeywell.com/security/me](http://www.honeywell.com/security/me)

☎ +971 (0) 4 450 5800

**Honeywell Security Northern Europe**

Ampèrestraat 41

1446 TR Purmerend, The Netherlands

[www.honeywell.com/security/nl](http://www.honeywell.com/security/nl)

☎ +31 (0) 299 410 200

**Honeywell Security Deutschland**

Johannes-Mauthe-Straße 14 72458 Albstadt, Germany

[www.honeywell.com/security/de](http://www.honeywell.com/security/de)

☎ +49 (0) 7431 801-0

**Honeywell Security France**

Immeuble Lavoisier

Parc de Haute Technologie 3-7 rue Georges Besse 92160  
Antony, France

[www.honeywell.com/security/fr](http://www.honeywell.com/security/fr)

☎ +33 (0) 1 40 96 20 50

**Honeywell Security Italia SpA**

Via della Resistenza 53/59 20090 Buccinasco Milan, Italy

[www.honeywell.com/security/it](http://www.honeywell.com/security/it)

☎ +39 (0) 2 4888 051

**Honeywell Security España**

Avenida de Italia, nº 7, 2ª planta  
C.T. Coslada

28821 Coslada, Madrid, Spain

[www.honeywell.com/security/es](http://www.honeywell.com/security/es)

☎ +34 902 667 800

**Honeywell Security Россия и СНГ**

121059 Moscow, UI, Kiev 7 Russia

[www.honeywell.com/security/ru](http://www.honeywell.com/security/ru)

☎ +7 (495) 797-93-71

**Honeywell Security and Fire (ASEAN)**

Honeywell International Sdn Bhd

Level 25, UOA Corp Tower, Lobby B

Avenue 10, The Vertical, Bangsar South City

59200, Kuala Lumpur, Malaysia

Visit Partner Connect: [www.partnerconnect.honeywell.com](http://www.partnerconnect.honeywell.com)

Email: [hsf.comms@honeywell.com](mailto:hsf.comms@honeywell.com)

Order management: [customersupportHSFASEAN@honeywell.com](mailto:customersupportHSFASEAN@honeywell.com)

**Technical support:**

Vietnam: +84 4 4458 3369

Thailand: +66 2 0182439

Indonesia: +62 21 2188 9000

Malaysia: +603 7624 1530

Singapore: +65 3158 6830

Philippines: +63 2 231 3380

**Honeywell Home and Building Technologies (India)**

HBT India Buildings

Unitech Trade Centre, 5th Floor,

Sector – 43, Block C, Sushant Lok Phase – 1,

Gurgaon – 122002, Haryana, India

Visit Partner Connect: [www.partnerconnect.honeywell.com](http://www.partnerconnect.honeywell.com)

Email: [HBT-IndiaBuildings@honeywell.com](mailto:HBT-IndiaBuildings@honeywell.com)

Toll Free No: 1-800-103-0339

☎ +91 124 4975000

**Honeywell Security and Fire (Korea)**

Honeywell Co., Ltd. (Korea)

5F SangAm IT Tower,

434, Worldcup Buk-ro, Mapo-gu,

Seoul 03922, Korea

Visit: <http://www.honeywell.com>

Email: [info.security@honeywell.com](mailto:info.security@honeywell.com)

Customer support: [HSG-CS-KR@honeywell.com](mailto:HSG-CS-KR@honeywell.com); +82 1522-8779

☎ +82-2-799-6114

**Honeywell Security & Fire (Pacific)**

Honeywell Ltd

9 Columbia Way

BAULKHAM HILLS NSW 2153

Visit: [www.honeywellsecurity.com.au](http://www.honeywellsecurity.com.au)

Email: [hsf.comms.pacific@Honeywell.com](mailto:hsf.comms.pacific@Honeywell.com)

Technical support:

Australia: 1300 220 345

New Zealand: +64 9 623 5050

# Honeywell

[www.honeywell.com/security](http://www.honeywell.com/security)

+1 800 323 4576 (North America only)

<https://www.honeywellsystems.com/ss/techsupp/index.html>

Document 800-24234 Rev A –06/2018

© 2018 Honeywell International Inc. All rights reserved. No part of this publication may be reproduced by any means without written permission from Honeywell. The information in this publication is believed to be accurate in all respects. However, Honeywell cannot assume responsibility for any consequences resulting from the use thereof. The information contained herein is subject to change without notice. Revisions or new editions to this publication may be issued to incorporate such changes.