


## Vertical Lift, High Traffic Areas

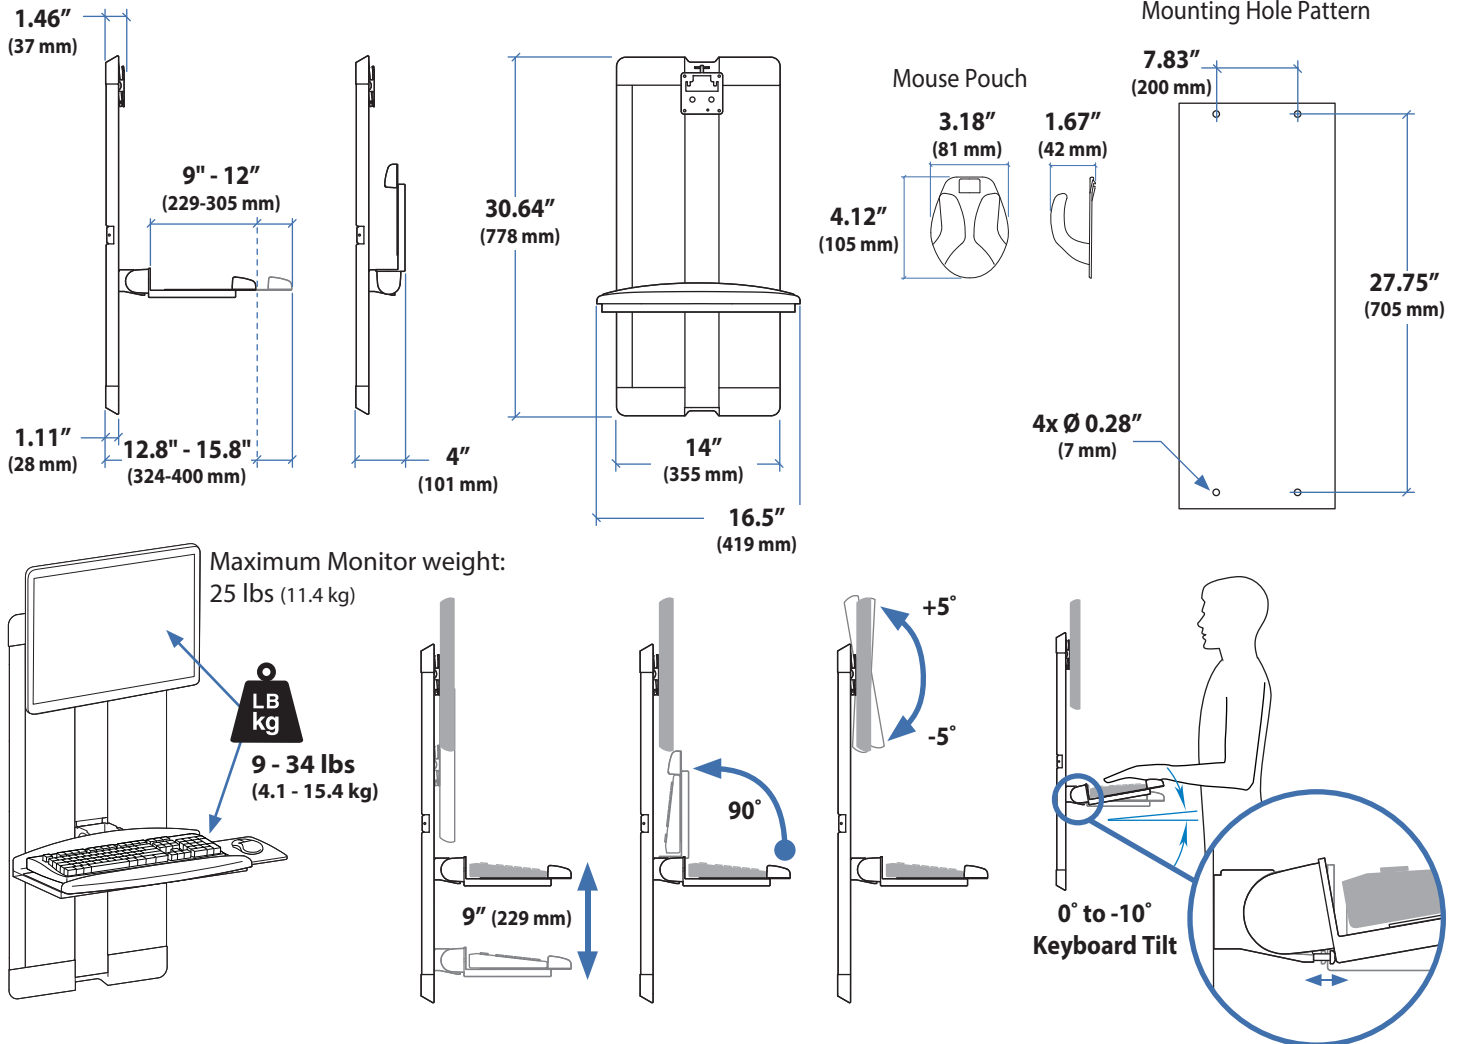

Centerline of Four-Hole VESA FDMI Pattern

Rear of Monitor

**Fig. 1**

Side View

**Fig. 2**

**Minimizing Vertical Lift Storage Profile**  
 For VL Series to remain less than 4" (102 mm)\* from the wall\* when in storage position, follow these guidelines:

1. Monitor must not be more than 2-1/2" (63 mm) thick.
2. Keyboard should not be more than 7-1/4" (184 mm) deep.
3. Dimension "A" must be no greater than 8-3/4" (222 mm).
4. Use Standard Keyboard Tray option only (Slide-Out Keyboard Tray option depth  $\geq$  4-1/2", 114 mm).

\* Exceptions: If you want to install your keyboard in a forward position while remaining  $\leq$  4" (102 mm) from the wall, "A"  $\leq$  7" (178 mm). See Figure 1.  
 If you want to use a keyboard wrist rest, dimension "A" can be calculated by adding 3-1/2" (89 mm) to the keyboard depth "B" and subtracting this sum from 16-1/2" (419 mm). See Figure 2.

© 2011 Ergotron, Inc. rev. 01/07/2019 DIM-033-SV Content is subject to change without notification

Americas Sales and Corporate Headquarters	EMEA Sales	APAC Sales	Worldwide OEM Sales
St. Paul, MN USA (800) 888-8458 +1-651-681-7600 www.ergotron.com sales@ergotron.com	Amersfoort, The Netherlands +31 33 45 45 600 www.ergotron.com info.eu@ergotron.com	Tokyo, Japan www.ergotron.com japansupport@ergotron.com	www.ergotron.com info.oem@ergotron.com

